



# Quick Start Guide

Model: MGF30L

Let's get your new 30 L Microwave ready to use!


This quick start guide contains basic instructions to get you started. For the full picture, please refer to the supplied manual which has comprehensive usage instructions, important safety advice and recipes.

## A Setting up Microwave

- 1 Make sure that all the packing materials are removed from the inside of the door. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
- 2 Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
- 3 For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must not be placed too close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
- 4 Do not operate the oven without glass turntable, roller support, and shaft in their proper positions.
- 5 Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
- 6 The socket must be readily accessible so that it can be easily unplugged in an emergency.
- 7 Do not use the Microwave outdoors.

### Installing the turntable

- Never place the glass turntable upside down. The glass turntable should never be restricted.
- Both glass turntable and turntable support must always be used during cooking.
- All food and containers of food must always place on the glass turntable for cooking.
- If glass turntable or turntable support crack or break, contact your nearest authorized service

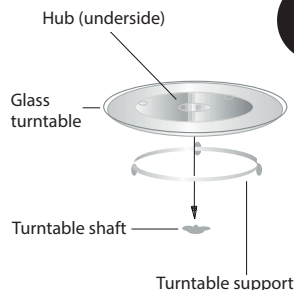

## B

8

## Control Panel



### Display screen

Cooking time, power, indicators and present time are displayed.

### Grill/Combi

Press to set grill and combination cooking program.

### Weight defrost

Press to program defrost program based on weight.

### Power level

Press to set microwave cooking power level.

### Jet defrost

Press to program defrost program based on time.

### Memory

Press to set multistage cooking program.

### Preset

Preset function allows you to put food into the oven and program it to start cooking at a later time.

### Number pads

Press to set clock, cooking time or enter food weight.

### Auto cook menus

Instant settings to cook popular foods.

### Clock

Press to set the oven clock of time.

### Stop/Cancel

Press to clear entry before setting a cooking program.

Press once to temporarily stop cooking or twice to cancel cooking.

### Quick Start

Press to start the oven quickly at full power.

### Start

Press to start cooking program

9

D

## Function settings

### Auto cook menus

Food or Beverage	Weight / Serving sizes
Beverages	200 ml/cup, 1-3 cups
Dinner Entree	250-500 g
Reheating	200-800 g
Potatoes	230±10 g/serving, 1-2 servings
Vegetables	200-600 g
Pizza	150-450 g
Chicken	800-1400 g
Fish	200-600 g
Sausage	100-500 g
Pork	200-600 g
Beef/Mutton	200-600 g

For Chicken, Sausage, Pork and Beef/ Mutton, oven will stop during cooking to let you turn over food and then close the door, press the "Start" to resume cooking. Be careful to handle with the very hot food in the oven.

For Beverage and Potato, parameters on screen are not weight but number of servings.

The result of auto cooking depends on factors such as fluctuation of voltage, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly using the regular mode as Auto cook cannot be adjusted.



## Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 112 534.

Well done, you made it! Now sit back and relax ... your new 30 L Microwave is automatically covered by a 3 year warranty.