Installation Steps


Please read this installation manual carefully before installation. Pay attention to the screw size, sort out the accessories and count the quantity before installation.

Packaging List:


r doraging List.					
A.eccentric lock lev	/er [®]	x4	1 base plate	2 left panel	3 right panel
B.eccentric lock head		x4			
C.partition nail	S	x4	·		
D.M5*50 screw	%	x12	4 back panel	5 baffle	6 laminate
E.tapping screw	*)	x16			
F.M6*30 screw	(((((((((((((((((((((((((((((((((((((((х6			
G.M6*20 screw	(*)))))))	x2	x1	x1	x1
H.M6*12 screw	(3)	x4	7 desktop board	8 curved pipe	9 partition plate
I.8mm rotating har	ndle	x2			
J.wheel		x4	x1	x1	x1
K.Q clamp		x2	10 stop strip	11 colui	mn square tube
L.screwdriver		x1		x1	x2
1					

Installation steps:


Step 1:Fix the wheel 【J】 to the back of the base plate 【1】 using screws 【E】

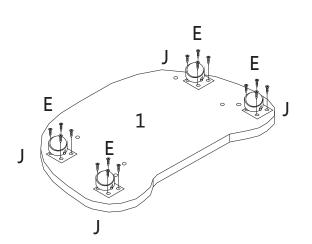


Step 2:Use screws [D] to connect the base plate [1] to the left and right panel [2] and [3] respectively.

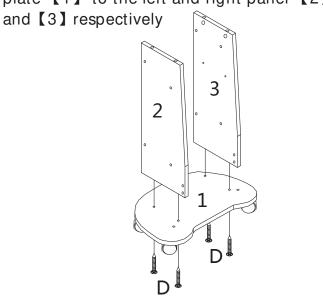


Step 3:Use screws [F] to connect the column square tube [11] to the base plate [1] and the left and right panel [2] [3]

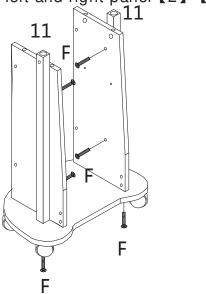



Step 5:Screw the eccentric lock lever [A] into the laminate, insert the assembled part into the left and right panel, place the eccentric lock head [B] into the holes, and

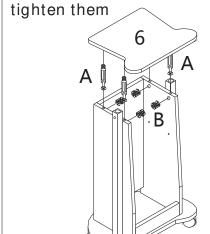

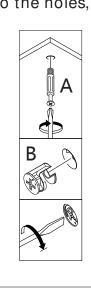


Step 7:Insert the assembled part into the square tube of the column square tube [11] as a whole and fasten it with the rotating handle [1]. Insert the partition nail [C] into the

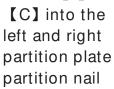


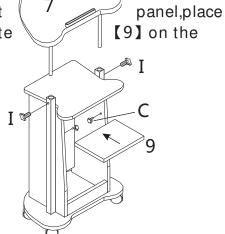

Step 4:Connect the left and right plate [1] [2] to the back pane [4] and baffle plate

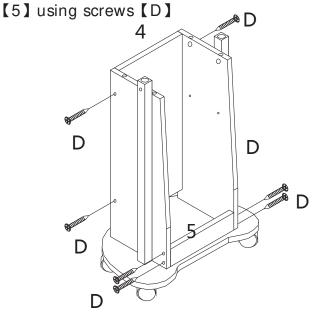

Step 6:Pass the Q clamp [K] through the curved pipe [8], use screws [H] to connect [K] to the desktop board [7], use screws [G] to pass through [7] to fix the stop strip [10]

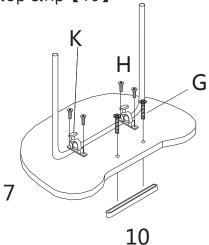

Step 8:The overall installation is completed, please check whether all screws and accessories are tightened

