

Assembly Instructions

42985075 3 SECTION WARDROBE


ATTENTION:

DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.
FOR INDOOR USE ONLY










MAXIMUM LOADING WEIGHT: 8KG FOR EACH CLOTHES RAIL, 8KG FOR TOP SHELF, 5KG FOR EACH MIDDLE SHELF, 15KG FOR BOTTOM SHELF.

1


Hardware list

	a	M5X40mm	12pcs		f	3pcs
	b	M6X28mm	20pcs		g	2pcs
	c		4pcs		h	2pcs
	d	M4X12mm	8pcs		i	2pcs
	e		8pcs			

2

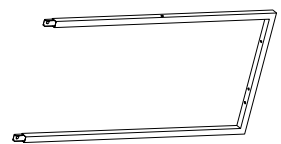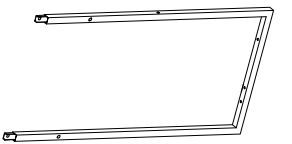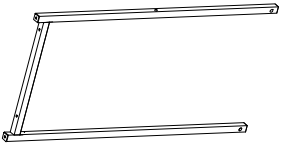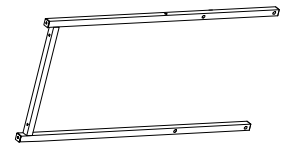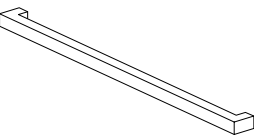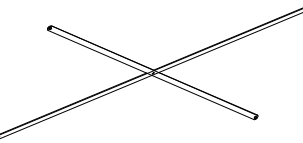		
A 1PC	B 3PCS	C 1PC
		
D 2PCS	E 2PCS	F 2PCS
		
G 2PCS	H 2PCS	I 2PCS



3

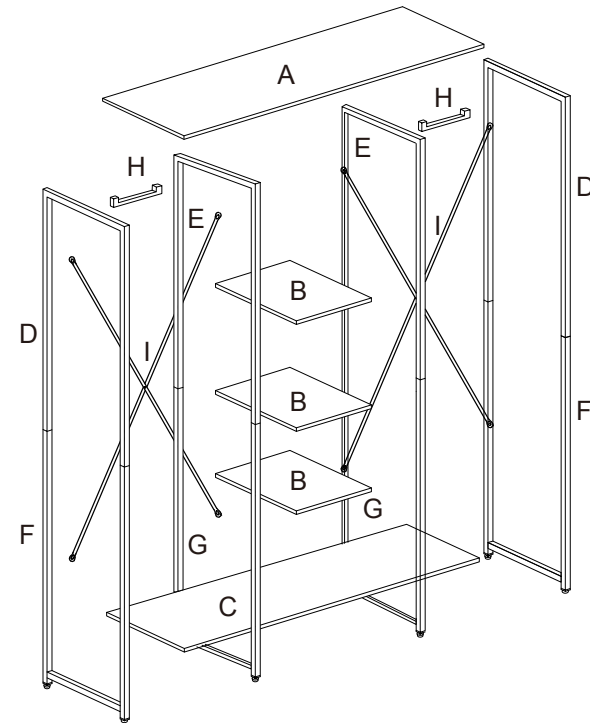

TOPPLING FURNITURE WARNING:


>IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
>PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
>REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.
>STABILITY OF TALL ITEMS MAY BE AFFECTED BY THICK PILE CARPET OR UNEVEN FLOORS.
>DO NOT PLACE UNANCHORED TELEVISIONS ON FURNITURE.
CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:
>CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON).

STEP 1

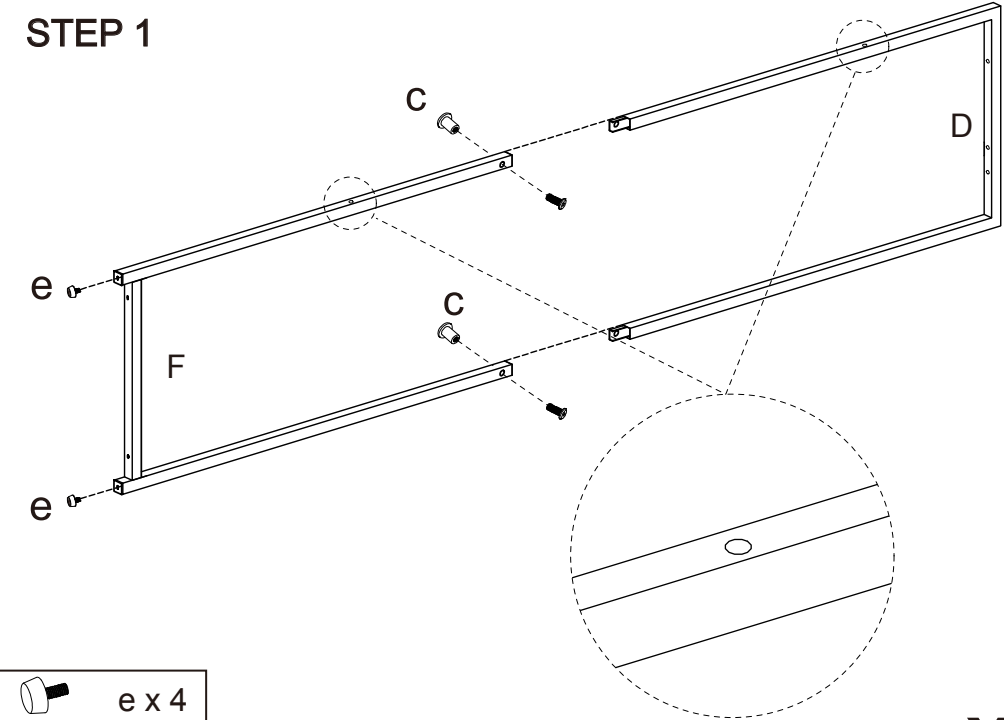


X 2

STEP 2

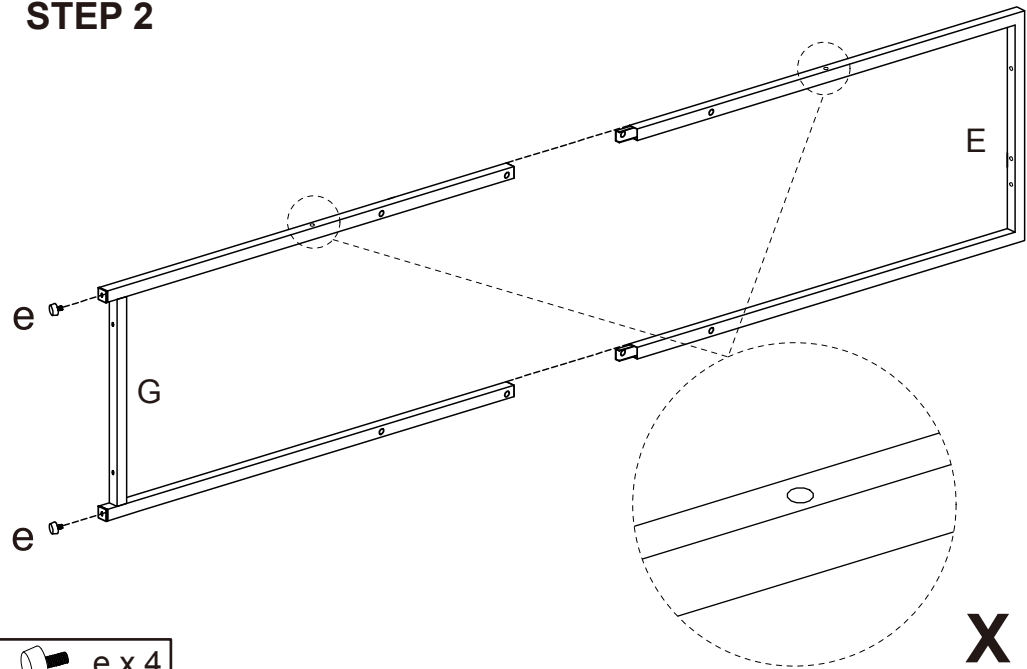


X 2

STEP 3

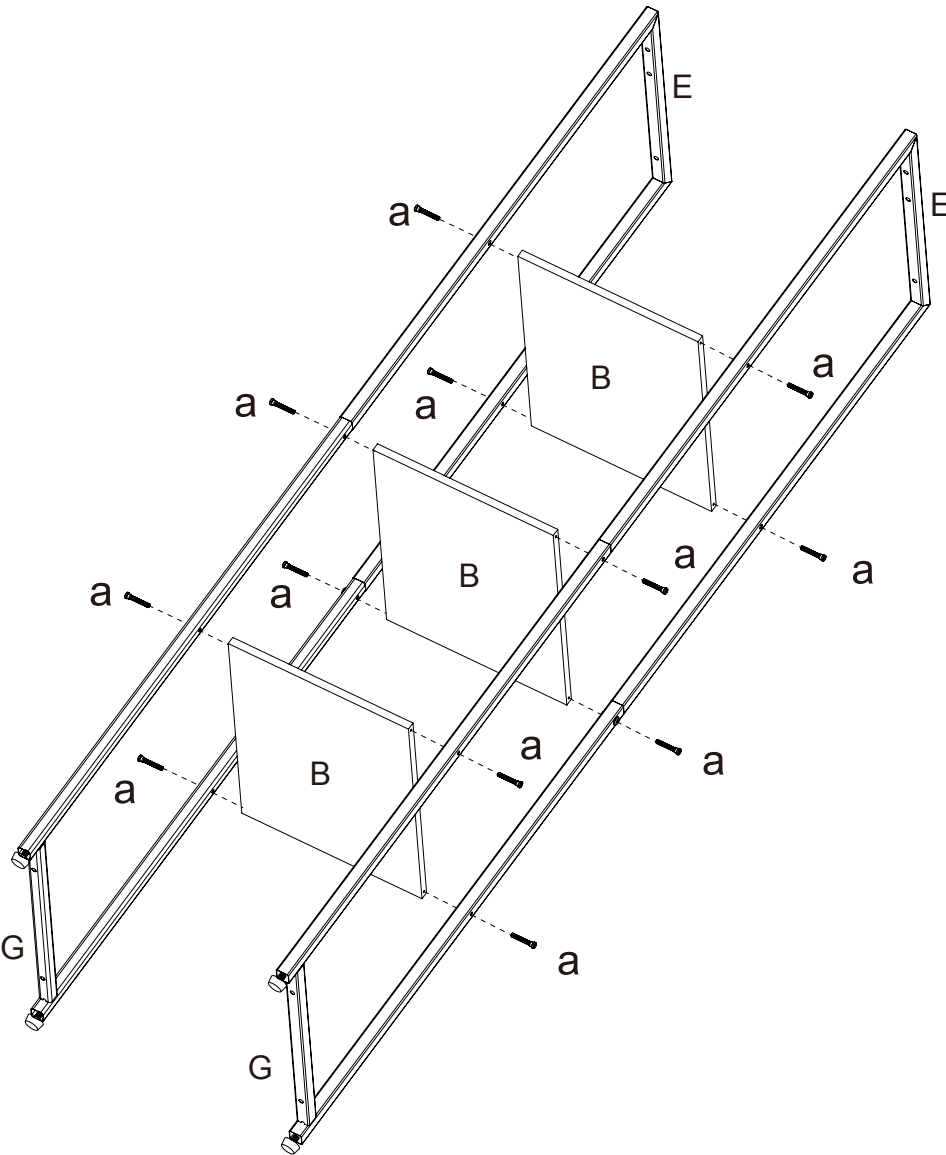


STEP 4

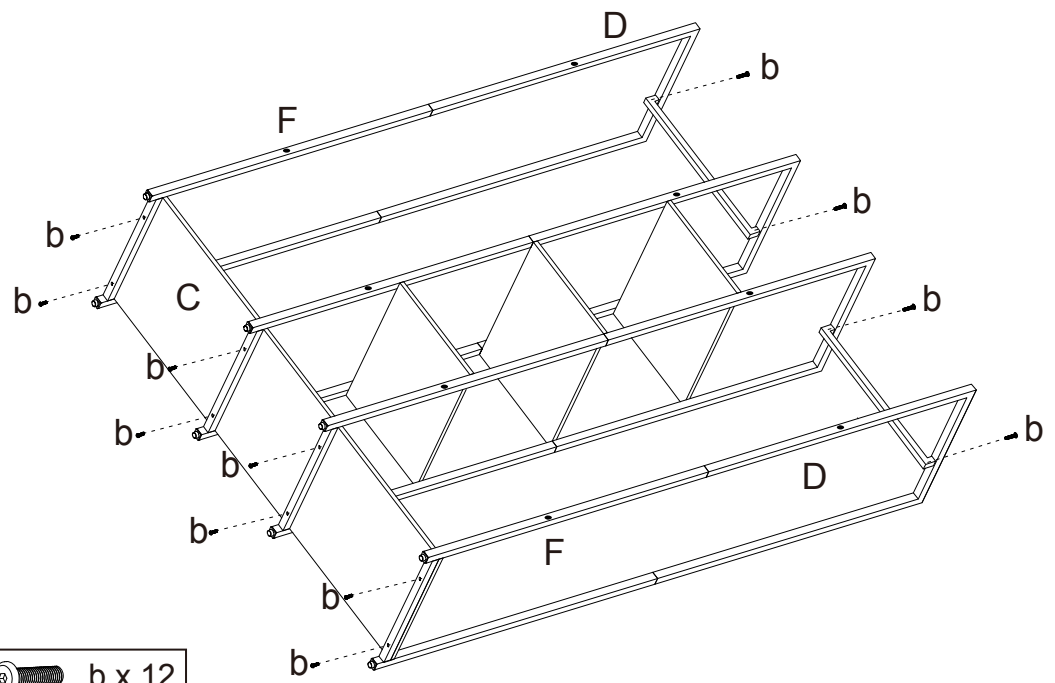


 b x 12

STEP 5

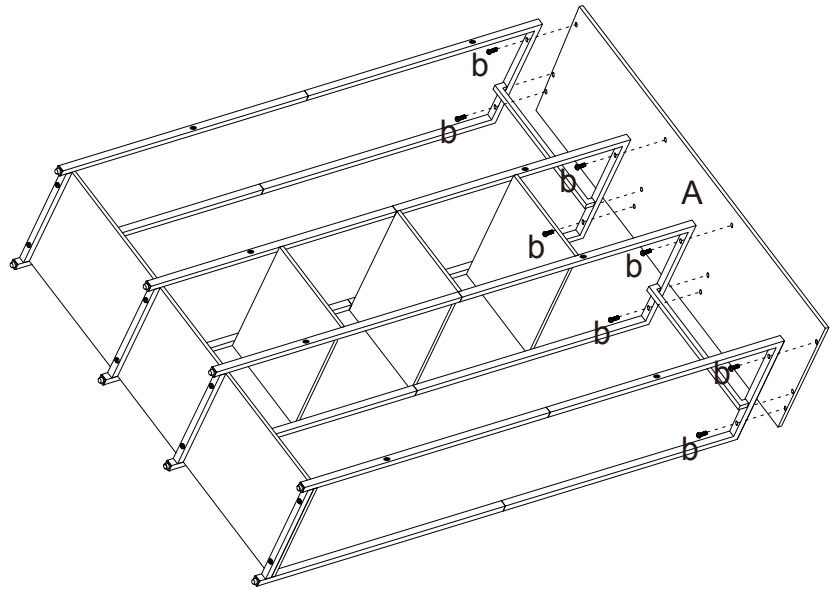




 b x 8

STEP 6

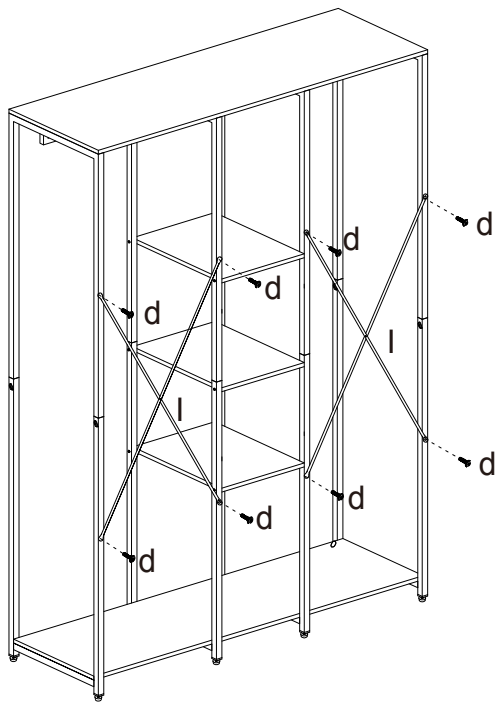

 d x 8

STEP 7

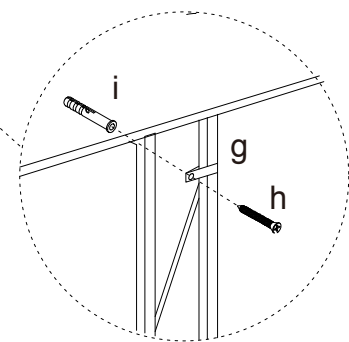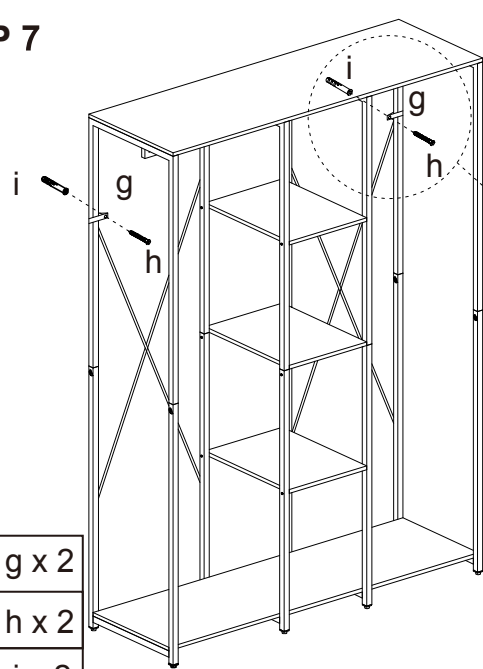

-  g x 2
-  h x 2
-  i x 2