

© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. App Store is a service mark of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC. Any other trademarks are for reference purposes.

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à [arlo.com/docs](https://www.arlo.com/docs).

(If this product is sold in Canada, you can access this document in Canadian French at [arlo.com/docs](https://www.arlo.com/docs).)

For regulatory compliance information including the EU Declaration of Conformity, visit www.arlo.com/about/regulatory/.



Arlo Technologies Intl. Ltd
Ground Floor, Building 3
University Technology Centre
Curraheen Road, Cork T12 EF21
Ireland

Arlo Technologies, Inc.
2200 Faraday Avenue, Suite 150
Carlsbad, CA 92008 USA

August 2019




201-50028-02



Set up your Arlo Pro 3 Camera

1. Insert the battery into your camera.

Leave the case off until the camera is added to your account.

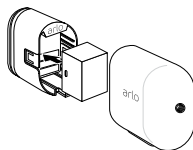

2. Use the Arlo app and follow the setup instructions to add your Pro 3 Wire-Free Camera.



What's in the box



Arlo Pro 3
Camera



Rechargeable
battery



Camera
mount



Charging cable

Need help?

We are here for you.

Visit www.arlo.com/support for quick answers and resources:

- How-to videos
- Troubleshooting tips
- The Arlo Support phone number for your location