


## INSTRUCTIONS

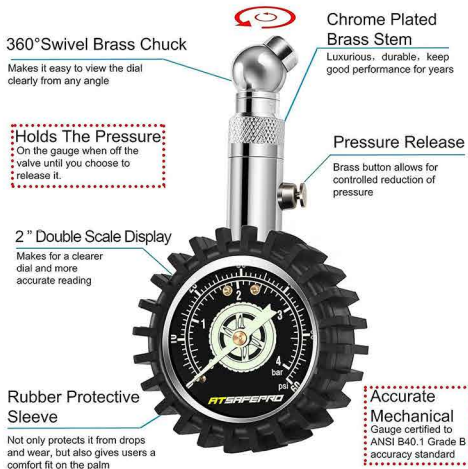

## STEPS

1. Remove cap from valve stem, choose one head to attach the valve stem according to its direction until the pressure is stable. Make sure to use the pressure gauge up to 60 PSI maximum.
2. Check the scale to see the pressure.
3. Disconnect the chuck from the valve.
4. The pressure will remain on the scale until you push it back.
5. If the pressure exceeding the standard, deflate it to recommended pressure then recheck.
6. If tire pressure is low, inflate to the recommended pressure then recheck.
7. Place tire pressure gauge back to the drawstring bag and store it in a safe, dust free area.

## NOTE

Weekly using the gauge to check the tire pressure make driving safer and smoother.