

User Manual

Data Logger

Logger1000A/Logger1000B



Contents

1	About this Manual	1
	1.1 Intended Use	1
	1.2 Target Group	1
	1.3 How to Use This Manual	1
	1.4 Symbol Explanations	1
2	Safety Instruction	3
3	Product Introduction	5
	3.1 Function Description	5
	3.1.1 Brief Product Introduction	5
	3.1.2 Networking Application	5
	3.2 Appearance	7
	3.3 Dimensions	8
4	Unpacking and Storage	9
	4.1 Scope of Delivery	9
	4.2 Identifying the Logger1000	10
	4.3 Checking upon Receiving	10
	4.4 Storage	10
5	Mechanical Installation	12
	5.1 Installation Location Selection	
	5.2 Installation Tools	12
	5.3 Installing Logger1000	13
	5.3.1 Wall-Mounted Installation	13
	5.3.2 Guide Rail-Mounted Installation	
	5.4 Installing Antenna	16
	5.5 Installing Power Box	17
6	Electrical Connection	19
	6.1 Safety Instructions	19
	6.2 Port Introduction	19
	6.3 Connection to PV Devices	20
	6.3.1 Connection to a single inverter	20

	6.3.2 Connection to multiple devices	23
	6.3.3 Connection to Smart Energy Meter	23
	6.3.4 Connection to Meteo Station	25
	6.4 Connection to Background	26
	6.5 Connection to Micro-SIM	27
	6.6 Connection to Power Box	27
	6.7 Cable Routing Requirements	29
7	Commissioning	30
	7.1 Inspection before Commissioning	30
	7.2 Commissioning Steps	30
8	Web Interface	33
Ŭ	8.1 Running Requirements	
	8.2 Login Steps	
	8.2.1 WLAN Login	
	8.2.2 Ethernet Login	
	8.3 Web Main Interface	
	8.4 Web Menu	
	8.5 Operation Procedure	
	8.6 Overview	
	8.6.1 General Information	37
	8.6.2 Current Alarms	37
	8.7 Device Monitoring	38
	8.7.1 RealTime Values	
	8.7.2 DC Data	38
	8.7.3 Initial Parameter	38
	8.7.4 Protection Parameter	39
	8.7.5 General Parameter	39
	8.7.6 Device Instruction	39
	8.7.7 Device Information	40
	8.8 Device Maintenance	40
	8.8.1 Device List	40
	8.8.2 Firmware Update	45
	8.8.3 Inverter Log	45
	8.8.4 AFCI Activation	46
	8.9 History Data	46
	8 10 System	46

	8.10.1 Running Information	46
	8.10.2 System Maintenance	46
	8.10.3 Remote Maintenance	47
	8.10.4 Message Export	48
	8.10.5 System Time	49
	8.10.6 iSolarCloud	50
	8.10.7 IEC104	50
	8.10.8 MODBUS	54
	8.10.9 Third-party portal	55
	8.10.10 Port Parameter	55
	8.10.11 MPLC	59
	8.10.12 About	59
9 (Grid Dispatching Function	60
	9.1 Function Description	60
	9.2 Interface Description	61
	9.2.1 Digital Control Interface	61
	9.2.2 Analog Control Interface	62
	9.2.3 DRM Control Interface	63
	9.3 Power Control	63
	9.3.1 Active Power	63
	9.3.2 Reactive Power	70
	9.3.3 Emergency Button	76
10	Device Maintenance	77
	10.1 Safety Instructions	77
	10.1.1 Safety Rules	77
	10.1.2 Five Safety Rules	77
	10.2 Maintenance	77
	10.3 Troubleshooting	78
11	Appendix	81
- •	11.1 Technical Data	
	11.2 Dry Contact Wiring Cable	
	11.3 Quality Assurance	
	11.4 Contact Information	83

About this Manual

This manual is valid for the following data loggers researched and manufactured by Sungrow Power Supply Co., Ltd.

- Logger1000A (4G version)
- Logger1000B (non-4G version)

The foregoing Loggers are referred to as the "Logger1000" for short unless otherwise specified.

1.1 Intended Use

This manual is intended to provide users with detailed information on the Logger1000 as well as installation, operation, and maintenance description.

1.2 Target Group

This manual is applicable to technical personnel who are responsible for the installation, operation and maintenance of the Logger1000 and to users who need to perform daily operation. Readers should have some electrical knowledge and be familiar with electrical principles and electrical components. This manual does not cover the electrical connections of the inverter and the Meteo Station or related safety instructions. For the details of the electrical connections of these devices, refer to the corresponding manuals.

1.3 How to Use This Manual

Read this manual carefully before performing operation on the device. This manual must be stored at hand and available at all times.

All rights reserved including the pictures, symbols, and markings used in this manual. Any reproduction or disclosure, even partially, of the contents of this manual is strictly prohibited without prior written authorization of SUNGROW. The content of the manual will be periodically updated or revised as per the product development. It is probably that there are changes in manuals for the subsequent module edition. If there any mismatch between the product and its manual, the actual product shall prevail and the manual of the latest version can be obtained from SUNGROW.

1.4 Symbol Explanations

This manual contains important safety and operational instructions that must be accurately understood and respected during the installation and maintenance of the equipment.

1 About this Manual User Manual

To ensure the optimum use of this manual, note the following explanations of the symbols used.

A DANGER

DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

A CAUTION

CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation which, if not avoided, could result in equipment or property damage.



NOTE indicates additional information, emphasized contents or tips to help you solve problems or save time.

2 Safety Instruction

This chapter mainly introduces safety instructions that need to be respected during the operation of Logger1000.

The Logger1000 has been designed and tested strictly according to international safety regulations. As electrical and electronic equipment, the Logger1000 must be installed, commissioned, operated, and maintained in strict accordance with related safety instructions.

Incorrect operation or work may cause:

- · injury or death to the operator or a third party;
- damage to the Logger1000 and other properties.

Therefore, the following safety instructions must be read and always kept in mind prior to any work. All detailed work-related safety warnings and notes will be specified at the critical points in corresponding chapter.

M WARNING

All operation and electrical work must only be performed by qualified personnel.

Before Installation

NOTICE

After receiving the device, please check if there is damage caused during transport. Contact SUNGROW or the forwarding company once any problem is detected.

The related operators must be familiar with the safety instructions in this manual and other safety regulations about the installation, operation and maintenance of the Logger1000.

Move, transport, install, operate, and maintain the Logger1000 correctly and appropriately.

During Installation

NOTICE

The Logger1000 can only be used as described in this manual. Altering the product without authorization or using spare parts not sold or recommended by SUNGROW may lead to fire, electric shock or other damages.

2 Safety Instruction User Manual

NOTICE

Disconnect all electrical connections and the upstream input switch and make sure the Logger1000 is voltage-free during installation.

NOTICE

Disconnect the upstream input switch and make sure the Logger1000 is voltagefree before electrical connections.

Maintenance and Replacement

M WARNING

The maintenance of the Logger1000 can only be performed by qualified personnel from service dept. of SUNGROW or other qualified personnel.

User can never maintain or replace the modules and other parts. Serious personal injury or property loss may follow if otherwise.

NOTICE

Never replace the internal components of the Logger1000 without authorization. SUNGROW shall not be held liable for any possible damage caused by ignorance of this warning.



3 Product Introduction

3.1 Function Description

3.1.1 Brief Product Introduction

The Logger1000 is a device used for data collection, power control, and protocol conversion for inverters and other PV equipment in the PV plant. The device is also integrated with communication gateway and plant O&M function.

The Logger1000 is featured as flexible networking, auxiliary maintenance, and easy operation.

Flexible networking

- Support of RS485, Ethernet, and WLAN communication
- Support of data collection from various environment sensors, Smart Energy Meters, Meteo Stations, inverters, and other equipment

Auxiliary maintenance

- · Support of batch inverter parameter setting and software upgrading
- · Support of remote desktop function, lower maintenance costs
- Support of grid control instruction and power factor control
- Support of local real-time monitoring, unnecessary to connect the Internet

Easy operation


- Auto search and allocation of inverter address
- Embedded web operation interface, support of mobile phone access, free download of the App

3.1.2 Networking Application


As shown in the figure below, the Logger1000 can be connected to iSolarCloud via an ethernet switch.



3 Product Introduction User Manual

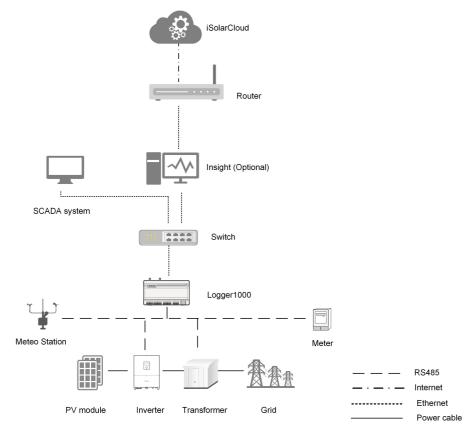

The Logger1000 can be connected to iSolarCloud via the router or connected to the iSolarCloud via the WLAN or 4G network.

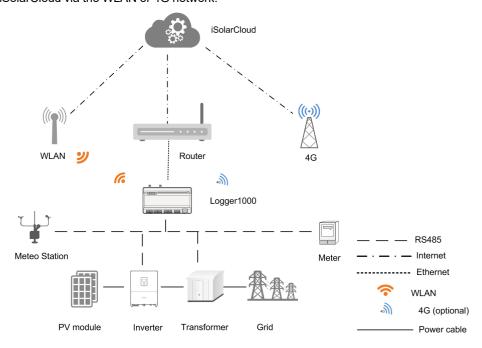

User Manual 3 Product Introduction

The Logger1000 supports various communication manners such as WLAN and 4G.

- The Logger1000 can be connected to various environment sensors, Smart Energy Meters, Meteo Stations, and inverters in the PV power generation system via an RS485 bus.
- Users can access the Web interface via mobile phone or PC, on which parameter configuration and remote on-line upgrading can be performed.
- The Logger1000 can transmit data to iSolarCloud and forward background instructions to downstream devices.
- The Logger1000 is equipped with grid dispatching function, including active power control, reactive power regulation, etc.

3.2 Appearance

Views of the Logger1000 are shown in the following figure.

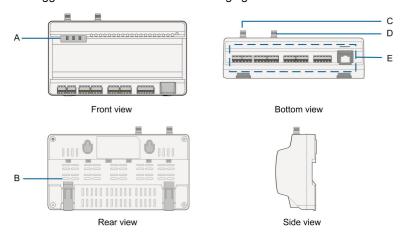


figure 3-1 Appearance

Item	Designation	Description	
^	1. 15. 4	Indicate the running state of the	
A Indicator		Logger1000	
В	Vent	-	
С	WLAN antenna mounting hole	-	
D*	4G antenna mounting hole	-	
Е	Wiring terminal	Refer to "table 6-1 Port description"	

Note: D* is 4G antenna mounting hole. The Logger1000A is provided with the hole while the Logger1000B is not. Specifically, refer to the actual product received. In the following, description is given by using the Logger1000A as an example.

3 Product Introduction User Manual


Indicator

Indicator (print)	LED color	LED status	Description
		Off	No external power supply
Dunning		Oli	connected
Running	Red/green	Slow flash (Green)	Normal running
indicator (RUN)		Slow flash (Red)	Device alarm
		Steady on (Red)	Logger1000 running fault
	Blue	Off	No data communication
4G indicator		Steady on	4G connected successfully
(4G) *		Slow flash	Data communication in
			process
	Blue	Off	No data communication
WLAN indicator (WLAN)		Steady on	WLAN connected
			successfully
		Slow flash	Data communication in
			process

Note: * Only the Logger1000A is equipped with the 4G indicator.

- Slow flash means that the indicator flashes once every second.
- Slow flash of the communication indicator indicates data communication in process. If there has been no data communication with iSolarCloud for 10s, the indicator will keep steady on.

3.3 Dimensions

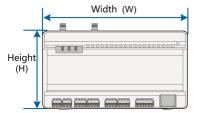

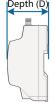


figure 3-2 Dimensions

Width (W)	Height (H)	Depth (D)
200mm	110mm	60mm

4 Unpacking and Storage

4.1 Scope of Delivery

Check the scope of delivery for completeness according to the packing list. The following items should be included.

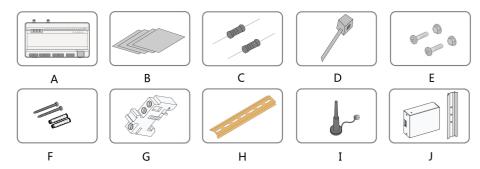



figure 4-1 Scope of delivery

Item	Designation	Description
Α	Logger1000	Logger1000
	Б	Quick User Manual, quality certificate, packing list,
В	Documents	product test report, and warranty card
		6x120Ω (Note: if there are more than 15 devices
0	Communication	connected on the RS485 bus, it is recommended
С	terminal resistor	to connect a 120Ω terminal resistor in parallel on
		the A and B lines at the head or tail end of the bus)
D	Nylon cable tie	Used to tie cables
F	Fastener assembly	4 sets, M4X16, used for wall-mounting to fasten
	l asteller assembly	the device on the metal surface
F	Expansion bolt	4 sets, ST4.8X19, used for wall-mounting to fasten
	Expansion bott	the device on the concrete wall
G	Terminal fastener	2 sets, E/UK-1201442, fixed on the guide rail to
	reminal lastener	prevent the Logger1000 from moving
Н	Guide rail	Length: 240mm
	WLAN antenna	The Logger1000A is provided with the 4G antenna
I		mounting hole while Logger1000B is not.
	4G antenna	Specifically, refer to the actual product received.
	Dowerboy	Converters the AC current into DC current Length
J	Power box	of supporting guide rail: 170mm

4 Unpacking and Storage User Manual

4.2 Identifying the Logger1000

The type and key technical parameters of the Logger1000 can be found on the nameplate. The nameplate is attached to the back of the Logger1000, shown by A in the figure below.

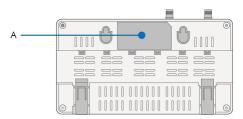

A WARNING

The nameplate contains important parameters. Ensure it is intact and clearly legible.

4.3 Checking upon Receiving

The Logger1000 is thoroughly inspected and packed before delivery, but damage may be still caused during transport. Check the following items carefully once receiving the Logger1000.

- Check the scope of delivery for completeness according to 4.1 Scope of Delivery
- Ensure that the device type is correct.
- Check the device thoroughly and ensure there are no visible damages.

If there are any problems, contact SUNGROW or the forwarding company.

M WARNING

Only undamaged Logger1000 can be installed and commissioned. Before installation, ensure that:

- The Logger1000 is intact without any damages.
- · Related documents, such as quick user manual, are enclosed.

4.4 Storage

If the Logger1000 is not to be installed immediately after receiving, observe the following requirements to store it properly:

- The Logger1000 should be store in its original packing case and placed in a wellventilated, dry, and tidy room.
- The storage carrier should be suitable for the weight of the Logger1000.

User Manual 4 Unpacking and Storage

 The storage environment should be well ventilated, dry, and without any accumulated water.

- Ambient temperature: -40°C to +85°C; relative humidity: 0~95%, no condensation.
- Take precautions to protect the device against damage due to harsh environment such as shock cooling, shock heating, and collision.
- Regularly inspect the Logger1000, usually at least once a week. Check the packing case for intactness and replace it immediately when necessary.
- Unpack and check the Logger1000 in powered on state if it has been stored more than half a year.

M WARNING

- The Logger1000 must be packed during storage!
- Never store the Logger1000 outdoors or in an environment directly exposed to sunlight!
- · No tilting or stacking!



After long-time storage, thoroughly check the Logger1000 and ensure it is undamaged before installation. If necessary, install the Logger1000 only after it has been tested by qualified personnel.


5 Mechanical Installation

5.1 Installation Location Selection

Selecting an optimal installation location for the Logger1000 is critical to safe operation, long service life, and sound performance.

Take the following requirements into account when selecting the installation location:

- With the ingress of protection IP 20, the Logger1000 can be installed only indoors.
- Ambient temperature range: -30°C to +60°C.
- The relative humidity should not exceed 95%. If otherwise, the internal components will be damaged.
- · Take anti-moisture and anti-corrosion measures.
- Ensure that enough space is reserved around the Logger1000. The installation location should be 1,500mm above the ground surface, and maintenance clearance of at least 500mm should be reserved. Minimum clearances are shown in the figure below.

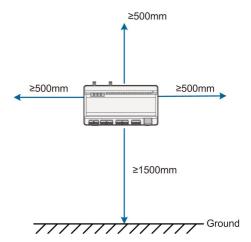

NOTICE

When there are external devices (such as Meteo Station) connected to the Logger1000, users should add corresponding communication SPD according to onsite condition.

5.2 Installation Tools

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site.

User Manual 5 Mechanical Installation



5.3 Installing Logger1000

The Logger1000 can be installed in the wall-mounting manner or guide rail-mounting manner, and users can select either one according to onsite condition.

5.3.1 Wall-Mounted Installation



Mount the Logger1000 onto the concrete wall or metal surface according to onsite conditions.


Mount the Logger1000 onto the wall via the wall-mounting holes (as shown in the figure below) on the back of it.




figure 5-1 Wall-mounting hole dimension

- step 1 Select an appropriate installation surface.
- step 2 Mark positions for drilling holes with a marker.

5 Mechanical Installation User Manual

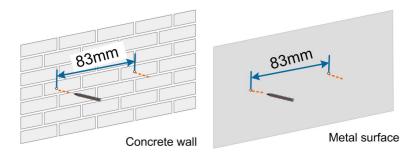

step 3 Drill the holes with a drill according to the marked positions.

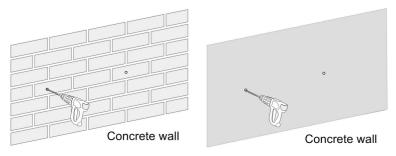


A DANGER

Avoid drilling holes in the utility pipes and/or cables attached to back of the wall!

NOTICE

Operation personnel should wear goggles and dust mask throughout the drilling process to avoid dust inhalation or contact with eyes.

step 4 Secure the expansion bolts into the holes with a rubber mallet.

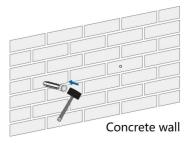




If the Logger1000 is installed onto the metal surface, skip performing this step.

step 5 Fix the screw or bolt on the installation surface, where the screw protrudes from the wall surface by about 5mm. Hang the Logger1000 onto the screws on the concrete wall or metal surface via the wall-mounting holes on the back of Logger1000.

User Manual 5 Mechanical Installation

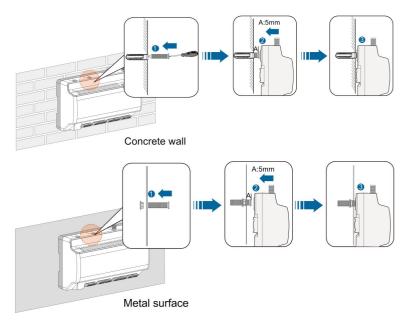

step 6 Check and ensure that the Logger1000 is firmly installed.


- - End

5.3.2 Guide Rail-Mounted Installation

Secure the Logger1000 via the rail buckles (as shown in the figure below) on the back of it.




- step 1 Install and secure the guide rail at the appropriate location.
- step 2 Slight press down the recessed part under the buckle of Logger1000 with a flat-head screwdriver or other similar tools to pull out the buckle outwards.

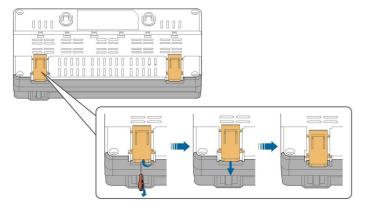


5 Mechanical Installation User Manual


step 3 Hook the Logger1000 into the guide rail from above and press down the lower part of the Logger1000 until it snaps into place.

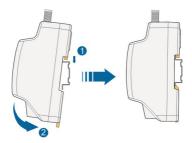

step 4 Push the buckle of the Logger1000 upwards to clamp the guide rail.

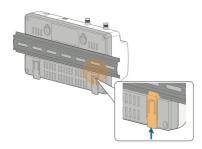

step 5 Secure the terminal fasteners on both ends of the guide rail, to prevent the Logger1000 from moving.

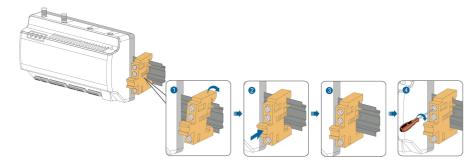

step 6 Check and ensure that the Logger1000 is firmly installed.

--End


5.4 Installing Antenna

The sucker antenna base should be placed on a metal surface outside the container to avoid impact on signal reception.

Antenna entry should be reserved on the container, and the entry hole size is 20mm.

Secure the sucker antenna base onto the surface outside the container, lead one end (with the nut) of the antenna through the drilled hole, and fix it onto the corresponding terminal of the Logger1000 clockwise, as shown in the figure below.

User Manual 5 Mechanical Installation

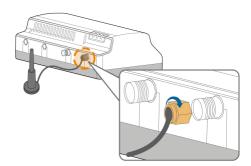


5.5 Installing Power Box



Mount the power box onto the concrete wall or metal surface according to onsite conditions.

Secure the power box via the buckles (as shown in the figure below) on the back of it.

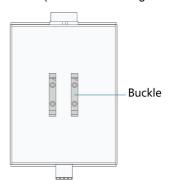


step 1 Install and secure the power box guide rail at the appropriate location.




The power box should be 200mm away from the Logger1000 to ensure that the power cable from the power box can be connected to the power input port of the Logger1000.

step 2 Tilt the power box and hook the buckle into the guide rail. Press down the power box until it snaps into place with an audible "Click" sound.

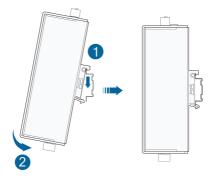

5 Mechanical Installation User Manual

step 3 The installation of the power box and Logger1000 is completed.

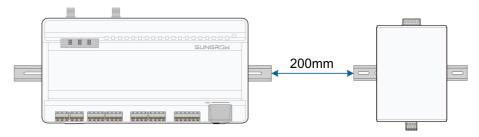

- - End

6 Electrical Connection

6.1 Safety Instructions

NOTICE

Incorrect cable connection may cause device damage or even personal injury.

NOTICE

All cables must be intact, well insulated, appropriately dimensioned, and firmly connected.

6.2 Port Introduction

External wiring terminals are located at the bottom of Logger1000, and the wiring area is shown in the figure below.

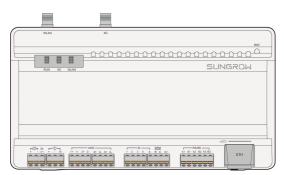


figure 6-1 Wiring area

table 6-1 Port description

Port	Function	Description
24V OUT	24V power output	24V±5%, the max. output current: 0.5A
DI	Converters Al into DI	Switch for enabling the AI/DI function
24V IN	24V power input	24V±3%
	Grounding	Connecting protective grounding cable
AI/DI	Compatible with AI/DI	Default AI input sampling: 0-10V or 4-
Al/Di	function	20mA
DI	Digital input	Digital signal input

6 Electrical Connection User Manual

Port	Function	Description
DRM	DRM (Demand Response Modes) function	Works together with the DI1~DI4 to achieve the DRM function
0V	Digital reference point	-
RS485	RS485 communication port	Support of 3 inputs of RS485
*	SIM card slot	Support of Micro-SIM card
ETH	Ethernet port	Can be connected to background master via devices such as Ethernet switch and router
WLAN	WLAN antenna	-
4G*	4G antenna	-
RST	Restart	Press it for 3s to restart

Note: * Only the Logger1000A is equipped with the SIM card slot and the 4G function.



For the RS485 ($A_1B_1 \sim A_3B_3$) ports, the communication distance should not exceed 1,000m.

6.3 Connection to PV Devices

Devices in the PV system that can be connected to the Logger1000 include the inverter, Meteo Station, Smart Energy Meter, etc.

6.3.1 Connection to a single inverter

The RS485 port of SUNGROW inverter is RS485 terminal block or RJ45 port.

6.3.1.1 RS485 terminal block connection


Communication cable specification:

Cable	Туре	Recommended cross- section
RS485 communication cable	Shielded twisted pair	0.75mm²~1.5mm²


Cable connection procedure:

- step 1 Lead the RS485 communication cable from the inverter to the wiring area of Logger1000.
- step 2 Strip the cable jacket and insulation layer with a wire stripper by about 15mm and 8mm to 10mm respectively.

User Manual 6 Electrical Connection

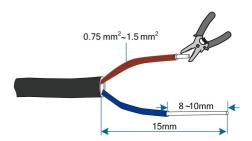

step 3 Connect the stripped cable to the RS485 ports of the Logger1000, as shown in the figure below.

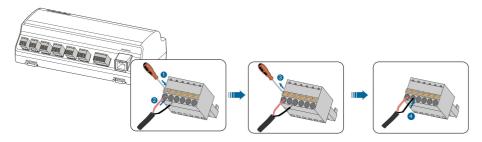

NOTICE

RS485A is connected to port A while RS485B is connected to port B.


NOTICE

The RS485 communication cable must be the shielded twisted pair with the shielding layer single-point grounded.



When a multi-core multi-strand copper wire cable is used, crimp an appropriate euro style terminal at the communication cable head and then connect it to the RS485 port of the Logger1000.

step 4 Connect the Logger1000 to the inverter.

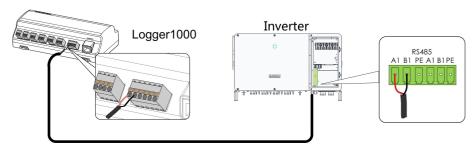

--End

6 Electrical Connection User Manual

6.3.1.2 RJ45 port connection


Communication cable specification:

Cable	Туре
RS485 communication cable	Shielded twisted pair Ethernet cable


Cable connection procedure:

- step 1 Lead the RS485 communication cable from the inverter to the wiring area of Logger1000.
- step 2 Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding RS485A/B signal cables out. Insert cord end terminals into signal cable RS485+ A and signal cable RS485- B, and crimp them with a crimper. Cut off the redundant signal cable and warp it with a heat-shrink tubing.


If the communication cable is Shielded Ethernet cable, white-green wire 3 is defined as RS485- B wire and the green wire 6 as RS485+ A wire.

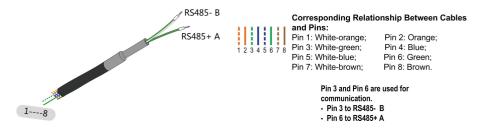

step 3 Connect the communication cable to the RS485 ports of the Logger1000, as shown in the figure below.

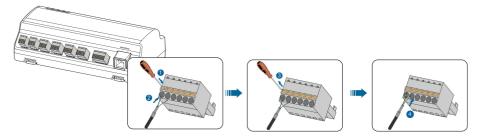

step 4 Connect the Logger1000 to the inverter.

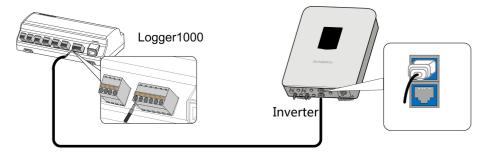


- - End

User Manual 6 Electrical Connection

6.3.2 Connection to multiple devices

Multiple inverters are connected to the Logger1000 in the RS485 daisy chain manner. If more than 15 inverters (14 inverters, for devices other than Logger1000) are connected on the RS485 bus, it is recommended to connect a 120Ω terminal resistor in parallel on the RS485A and RS485B lines at the head and tail end of the bus.

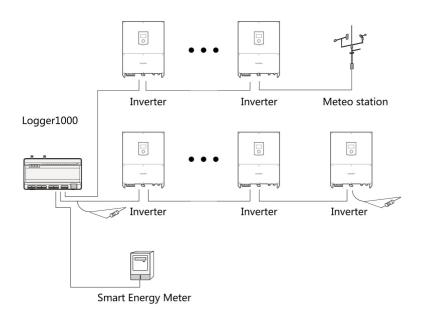

NOTICE

With an outdoor device connected to the Logger1000, it is recommended to connect an SPD to protect the Logger1000 from lightning damage.

- The Logger1000 allows for 3 inputs of RS485 buses and 30 devices at most.
- When the number of device types is less than or equal to the number of RS485 ports of Logger1000, it is recommended to connect different types of devices to different RS485 ports separately.
- The addresses of devices on each RS485 bus must be different from one another and within the address range set for the Logger1000 (address range of residential inverters and string inverters manufactured by SUNGROW: 1-247; address range of third-party devices: 1-255). Otherwise, communication error will occur.
- Serial port parameters of each device on the RS485 bus should be consistent with those
 of the Logger1000. The serial port parameters include baud rate, data bit, stop bit, and
 check bit.

6.3.3 Connection to Smart Energy Meter

It is recommended to use the Smart Energy Meter whose communication protocol complies with DL/T645-1997/2007 protocol or Modbus protocol. Logger1000 can be connected to the

6 Electrical Connection User Manual

Smart Energy Meter through RS485 port or Ethernet port. The recommended Smart Energy Meter types are as follows:

No.	Manufacture	Туре	Protocol Type	Wiring	
1	Sfere	PD194E/Z	_		
2	Acrel	PZ96-E3			
3	Acrel	DTSD1352	- Modbus RTU	" RS485 Connection"	
4	Weidmüller	EM 610			
5	SUNGROW	DTSU666			
6	Schneider	IEM3255			
7	Janitza	UMG604 , za UMG104	Madhua DTU	" RS485 Connection"	
			Modbus RTU Modbus TCP	" Ethernet	
				Connection"	

RS485 Connection

The following figure shows the connection between the Logger1000 and the Smart Energy Meter.



Connect the communication cable led from the Smart Energy Meter to the RS485 port of the Logger1000.




All devices on each RS485 bus support the same communication protocol.

If using Weidmüller or Janitza meters, it is necessary to connect the RS485 A/B port of the meter to the RS485 B/A port of the Logger1000.

Ethernet Connection

The following figure shows the connection between the Logger1000 and the Smart Energy Meter.

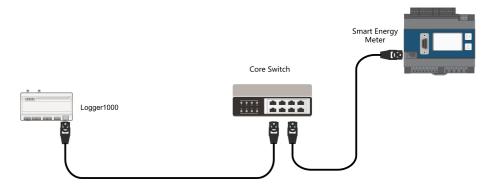

User Manual 6 Electrical Connection

- step 1 Prepare two appropriate Ethernet cables.
- step 2 Connect the cable led from the Smart Energy Meter to a port of the core switch.

step 3 Connect one end of the other Ethernet cable to another port of the core switch and the other end to the "ETH" port of the Logger1000.

If there is no core switch connected on site, connect the cable led from the Smart Energy Meter directly to the "ETH" port of the Logger1000.



The farthest effective transmission distance of the network cable is 100m, and it is recommended that the actual distance should be no more than 90m. CAT 5E cable or network cable with higher category is recommended.

- - End

6.3.4 Connection to Meteo Station


Meteo Station includes standard Meteo Station and discrete Meteo Station. The discrete Meteo Station consists of several sensors.

It is recommended to use Meteo Station complying with Modbus protocol. Meteo Station can be connected to Logger1000 through RS485 port or Al port. The recommended Meteo Station types are as follows:

No.	Туре	Wiring
1	PC-4	
2	PC-4 PRO	<u> </u>
3	WING-TRACKER	
4	WS601	
5	SMP10	" RS485 Connection"
6	RT1	<u> </u>
7	PVMet75	
8	PVMet200	
9	Si-RS485TC	-
10	TEMPER_SENSOR	— " Al Connection"
11	Meteo sensor	— Al Colliection

RS485 Connection

The following figure shows the connection between the Logger1000 and the Meteo Station.

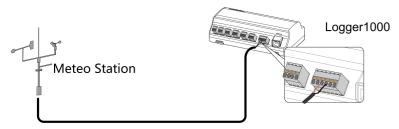

6 Electrical Connection User Manual


Connect the communication cable led from the Meteo Station to the RS485 port of the Logger1000.



If multiple inverters are connected to the Logger1000 together with the Meteo Station, the Meteo Station should be connected on the very end of the daisy chain.

Al Connection

The following figure shows the connection between the Logger1000 and the Meteo Station.

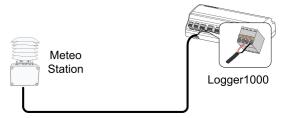

Connect the communication cable led from the Meteo Station to the Al port of the Logger1000.

6.4 Connection to Background

The Logger1000 can be connected to the background of the PV system via the network port, and the communication protocol is standard Modbus TCP or IEC104.

As a salve device, the Logger1000 can be accessed by multiple backgrounds and communicate by using the standard protocol. The following figure shows the connection between the Logger1000 and the background.

The Logger1000 can be connected to multiple monitoring background systems via the Ethernet switch or router, or it may be connected to the single monitoring background system via the network cable.

For example, the Logger1000 is connected to the background system via the Ethernet switch, and the wiring steps are as follows:

- step 1 Prepare an Ethernet cable of suitable length.
- step 2 Insert one end of the cable into the port of the Ethernet switch and the other end to the "ETH" port of the Logger1000.
- step 3 Set IP address of the ETH port to be within the same network segment as that of the background monitoring system.

User Manual 6 Electrical Connection

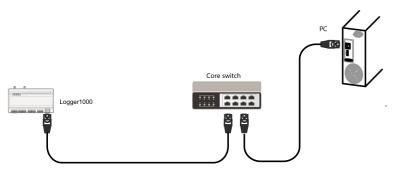


figure 6-2 Connection to PV background system


NOTICE

Default IP of the "ETH": IP12.12.12.12.

- - End

6.5 Connection to Micro-SIM

Micro-SIM card size: 12mmx15mm.

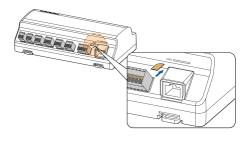



Support of hot plug of Micro-SIM.

6.6 Connection to Power Box

The Logger1000 supports DC24V power supply. Prepare two-core DC cable, three-core AC cable, and grounding cable before wiring. Power cable specifications are shown in the table below.


table 6-2 Power cable specification

Cable	Recommended cross-section	Length of cable jacket to be stripped off	Length of insulation to be stripped off
DC cable, AC cable	1mm ² ~1.5mm ²	15mm	8mm~10mm
Grounding cable	1mm ² ~1.5mm ²	8mm~10mm	-


6 Electrical Connection User Manual

Power cable wiring steps are as follows:

step 1 Strip the cable jackets and insulation layers of the DC cable, AC cable, and grounding cable with a wire stripper by appropriate length.

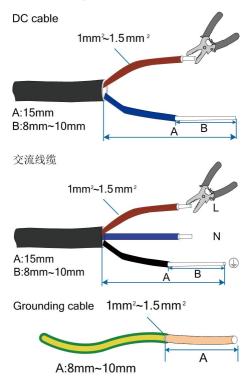

step 2 Insert the stripped DC cable into the "24V IN" and "24V OUT" ports of the Logger1000. Connect the DC cable led from the "24V OUT" port of the Logger1000 to other devices that need 24V DC power supply.

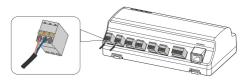


step 3 Connect the stripped grounding cable to the corresponding port of the Logger1000.



step 4 Connect the DC cable led from the "24V IN" port of the Logger1000 to the "DC 24V OUT" port of the power box. Connect the stripped AC cable to the "AC (100~277V)" port of the power box, and connect the other end of the AC cable to the 220V AC power.

User Manual 6 Electrical Connection

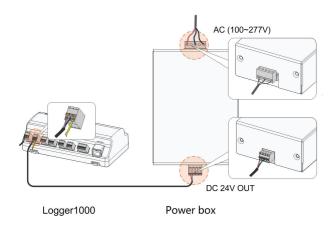

NOTICE

The power source should meet limited power source or PS2 requirements.

- - End

6.7 Cable Routing Requirements

Cables used in the system generally include power cables and communication cables.

The communication cable needs to be routed away from the power cable, and the cables need to form a right angle at the intersection. The communication cable needs to be as short as possible and keeps a distance from the power cable.

Power cables and communication cables should be routed in different cable trenches to avoid long-distance parallel cable routing of power cables and other cables, thereby reducing electromagnetic interference due to output voltage transient.

The distance between the power cable and communication cable should be greater than 200mm. When the cables meet with each other, the cross angle should be 90°, and the distance can be reduced accordingly.

The following table shows the recommended minimum distances between parallel shielded communication cables and power cables.

Parallel cable length (m)	Min. distance (m)
200	0.3
300	0.5
500	1.2

The communication cables should be routed as closely to the ground surface or supports (such as support beam, steel channel, or metal rail) as possible.

7 Commissioning

7.1 Inspection before Commissioning

No.	Inspection item	Result	
1	All cables are intact, well-insulated, and appropriately		
	dimensioned		
2	All cables are connected correctly and firmly		
	The polarity of the power supply cable is correct. The		
3	grounding cable is reliably grounded		

7.2 Commissioning Steps

No.	Step	Result
1	Inspection before commissioning	
2	Power on the Logger1000.	
3	Check whether the indicators of Logger1000 normally flash.	
	Connect the debugging PC to the "ETH" port of the Logger1000 via the network cable (default IP address of "ETH":	
4	12.12.12.12).	
	Log in the Web at 12.12.12.12 through the IE, Safari or Chrome browser.	
	Make sure the communication cable connecting the device and	
5	the Logger1000 is firmly in place, and connect the DC circuit	П
5 	breaker of the inverter to ensure the inverter is supplied with	Ш
	power.	
6	Set serial port parameters by referring to the "8.10.10.1	
	RS485" chapter, including the baud rate, check bit, data bit, and	
	stop bit.	
	The default setting is 9600bps, 8 data bit, 2 stop bit, and no	
	check bit.	

User Manual 7 Commissioning

No.	Step	Result	
	Set the devices connected to the Logger1000 through the		
	device management function. If the device connected for the		
	first time is SUNGROW string inverter, use "8.8.1 Device		
7	List" function to search the device whose address will be		
1	automatically allocated. For devices of other types, connect		
	them to the Logger1000 by referring to "8.8.1 Device List". For		
	the devices of other types, the communication address needs		
	to be preset.		
0	Enable the DHCP service of the router, so that the Logger1000		
8	automatically obtains the IP address via the DHCP function.		
	Set the iSolarCloud address if data needs to be uploaded to		
	cloud server.		
	The default iSolarCloud station is "China Station". Users in		
9	mainland China access the "China Station", users in Europe		
	access the "Europe Station", users in Australia access the "-		
	Australian Server", and users in other regions access the "-		
	International station".		
10	Check the data of SUNGROW string inverter for correctness on	П	
	the real-time information interface.	ш	
11	Create new plant via the iSolarCloud App and check the		
11 	iSolarCloud data for correctness.		

The auto search function is available for SUNGROW string inverters whose addresses are automatically allocated.



Devices of other types, such as Smart Energy Meter and transformer, can be connected to Logger1000 via the adding device function.

Addresses of the device connected to the same communication port should be different from each other.

Save the settings after operation, and otherwise the settings will not take effect.

7 Commissioning User Manual

Use the iSolarCloud App to create a new plant. Users can directly scan the QR code on the front label of the Logger1000 or manually input the S/N to add communication equipment. For details, refer to the Quick Guidance of iSolarCloud App. Scan the bottom QR Code to view or obtain the Quick Guidance of iSolarCloud App.





8 Web Interface

8.1 Running Requirements

Item	Parameter
Browser	IE11 or later, Chrome65 or later, and Safari11 or
	later
Min. resolution	1024*768

8.2 Login Steps



The Web interfaces provided in this document are for reference only, and the actual ones may differ.

Users of different types have different permissions. In the following, description is given by using the O&M permission as an example.

Users can log into the Logger1000 via the Ethernet or WLAN (recommended).

8.2.1 WLAN Login

step 1 Open the wireless network settings of the PC, search for the wireless network "SG-A1234567890" of the Logger1000, and connect the PC to the wireless network of the Logger1000 (without password).



"SG-A1234567890" is just used as an example. For actual wireless network, refer to the S/N on the label attached to the front side of the Logger1000.

The WLAN hotspot is always turned on, and cannot be turned off.

- step 2 Enter the IP address 11.11.11.1 of the Logger1000 in the PC address bar to enter the general user login interface.
- step 3 Click the button "Login" in the upper right corner, enter the default password "pw1111", and click "Login", to enter the O&M user interface.

- - End

User types include "general user" and "O&M user".

The general user can view basic information, real-time fault, and device monitoring information of the Logger1000.



In addition to all permissions of the general user, the O&M user has the permission to set and modify parameters of the Logger1000 and devices connected to the Logger1000.

In the following, description is given by using the O&M permission as an example.



After login for the first time, it is recommended to change the password as soon as possible. Click "O&M user" -> "Modify password" to change the password.

With the login password forgotten, contact SUNGROW and provide the device S/N as well as system time, to get the password.

8.2.2 Ethernet Login

step 1 The IP address of the PC connected to the Logger1000 is the same as that of the Logger1000. The IP address is 12.12.12.X. For example, the IP address of the PC can be set to 12.12.125, and the subnet mask is 255.255.255.0.



IP of Logger1000 is 12.12.12.12 by default, and subnet mask is 255.255.255.0.

- step 2 Connect the Logger1000 to the PC via the Ethernet.
- step 3 Enter the IP address 12.12.12.12 of the Logger1000 in the PC address bar to enter the general user login interface.
- step 4 Click the button "Login" in the upper right corner, enter the default password "pw1111", and click "Login", to enter the O&M user interface.
 - --End




User types include "general user" and "O&M user".

Users of different types have different permissions.

8.3 Web Main Interface

When the "O&M user" logs into the Web for the first time, the "Help" window pops up. Follow the prompts to perform operations such as time synchronization, device connection, and forwarding configuration.

The Web main interface is as follows:

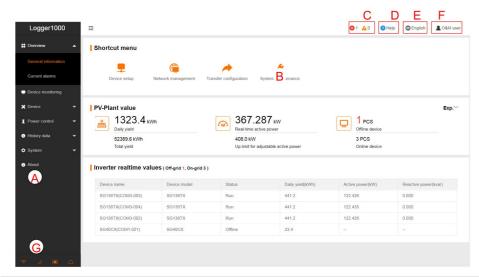


Item	Designation	Description		
Α	Navigation menu	Display main function modules of the Web		
В	Function display area	Display the current interface		
С	Alarm icon	Display the current alarm level and alarm number. Users can click the icons to enter the corresponding alarm interface		
D	Help	Display the basic configuration steps of the Logger1000		
E	Language menu	Click the button to select the desired language		
F	User	Display the current login user		
G	Information icon	: WLAN connection : Wireless connection : Ethernet Connection : Cloud access		

8.4 Web Menu

The Web has seven main function modules: "Overview", "Device Monitoring", "Device", "-Power Control", "History Data", "System", and "About".

The permissions of the O&M users are as follows:

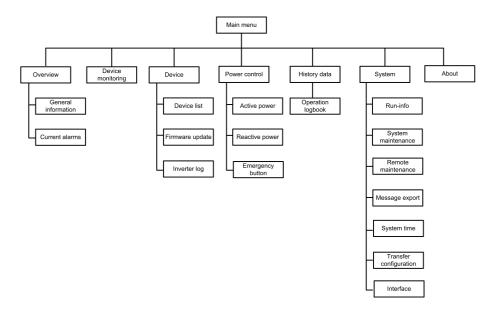

8.5 Operation Procedure

Perform the following operations before logging into the Logger1000 Web for the first time.

step 1 Complete the electrical connections.

Ensure that the Logger1000 has been correctly connected to other devices. Refer to the chapter "6 Electrical Connection".

step 2 Configure serial ports of the Logger1000.

After logging into the Web, first configure the serial ports of the Logger1000, to ensure that the Logger1000 can normally communicate with upstream devices. Refer to the chapter "8.10.10 Port Parameter".

step 3 Calibrate the system time.

Check whether the current system time is correct, and perform manual time synchronization or automatic time synchronization when necessary. Refer to the chapter "8.10.5 System Time".

step 4 Automatically search the device.

Devices that can be automatically searched, such as SUNGROW string inverter, can be added via the auto search function with addresses allocated automatically. Refer to the chapter "8.8.1 Device List".

- step 5 Add the device. Refer to the chapter "8.8.1 Device List".
- step 6 Configure forwarding service.


After all devices have been added, configure the forwarding service of the Logger1000, to ensure that the Logger1000 can forward the data to upstream devices. Refer to the chapter "8.10.6 iSolarCloud"~"8.10.9 Third-party portal".

- - End

8.6 Overview

8.6.1 General Information

Click "Overview" -> "General information" to enter the corresponding interface.

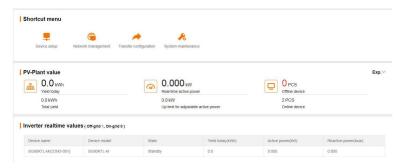

Shortcut menu

Device setup: support of auto search and add device functions. Click the menu to add, delete, modify, and view the device or perform auto search operation to search the device to which address will be automatically allocated. Refer to the chapter "8.8.1 Device List".

Network management: set Ethernet parameters. Refer to the chapter "8.10.10 Port Parameter".

Transfer configuration: transfer the data connected by the system to the background. Refer to the chapter "8.10.6 iSolarCloud"~"8.10.9 Third-party portal".

System maintenance: support of operations such as system upgrade, log export, and rebooting. Refer to the chapter "8.10.2 System Maintenance".

PV-plant value

Information such as today yield, total yield, real-time active power, and number of offline devices can be viewed.

Click the button "Exp." to view more information.

Inverter realtime values

Information on the inverter such as state, daily yield, active power, and reactive can be viewed.

8.6.2 Current Alarms

Click "Overview" -> "Current alarms" to view the device fault information.

Information such as device name, alarm name, alarm type, alarm time, fault code, and fault ID can be viewed.

8.7 Device Monitoring

Click "Device Monitoring" to enter the corresponding interface.

Device information such as real-time values, DC data, initial parameter, protection parameter, general parameter, device instruction and device information can be viewed on this interface.

8.7.1 RealTime Values

Realtime information such as power generation, device state, and active power can be viewed on this interface.

- step 1 Click "Device Monitoring" -> "Realtime Values" to view the corresponding information.
- step 2 Click the button " " to select the device type.

--End

8.7.2 DC Data

Click "Device Monitoring" -> "DC data" to view the corresponding information.

On this interface, voltage and current information of multiple inputs of MPPTs and strings can be viewed.

8.7.3 Initial Parameter

Click "Device monitoring" -> "Initial Parameter" to enter the corresponding interface and set initial parameters.

Select the meter, set "PT Transformation Ratio", "CT Transformation Ratio", "Meter Reverse Connection Enable" and "Access Type", click "Save".

When the meter cable is connected reversed, but it is not easy to change the wiring, the correct meter data can be obtained after opening the meter reversing enable switch.



The meter reversal function supports single-phase meters and three-phase meters. Note that only the reverse connection of three phases is supported, and the reverse connection of one or two of the three phases is not supported.

Select the inverter, initial parameters can be set in two manners: single setting and batch setting.

8.7.3.1 Single setting

- step 1 Select the desired country (region) and grid type.
- step 2 Click "Settings" to set initial parameters for the single device.

--End

8.7.3.2 Batch setting

- step 1 Select the desired country (region) and grid type.
- step 2 Click "Configure Synchronization".
- step 3 Select the desired devices in the pop-up device list, and click "Save" to achieve batch setting.

- - End

8.7.4 Protection Parameter

Click "Device monitoring" -> "Protection Parameters" to enter the corresponding interface and set protection parameters.

Protection parameters can be set in two manners: single setting and batch setting. For specific setting method, refer to "8.7.3 Initial Parameter".

8.7.5 General Parameter

- step 1 Click "Device monitoring" -> "General Parameters" to enter the corresponding interface and set general parameters.
- step 2 Select "Read-back", set register address, register number, and address type, and click the button "Read-back", to read the current value of the device.
- step 3 Select "Settings", set register address, data type, and set value, and click the button "Save".

 Parameters can be set for a single device.



For parameters that need to be set, refer to corresponding communication protocol of the inverter.

step 4 (Optional) Select "Settings", set the "Register Address", "Data Type" and "Set Value", and Click "Configure Synchronization". In the pop-up list of devices, check the devices that need to be set, and click "Save". You can set the parameters for multiple devices.

- - End

8.7.6 Device Instruction

Click "Device Monitoring" -> "Device Instruction" to enter the corresponding interface.

On this interface, users can boot/shutdown the device or reset all settings.

Device instruction can be set in two manners: single setting and batch setting. Take the boot operation as an example for explanation.

8.7.6.1 Single setting

- step 1 Select a device, click "Boot", and a dialog box pops up.
- step 2 Click "Yes" to start a single device.

- - End

8.7.6.2 Batch setting

- step 1 Select a device, click "Boot", and a dialog box pops up.
- step 2 Click "Configure Synchronization".
- step 3 Select the desired devices in the pop-up device list, and click "Save" to achieve batch setting.
- step 4 Click "Confirm" on the pop-up dialog box.

- - End

8.7.7 Device Information

Click "Device Monitoring" -> "Device Information" to view the corresponding information.

Parameter information such as device S/N, device model, and rated active power can be viewed.

8.8 Device Maintenance

8.8.1 Device List

The function module "Device list" is used for managing devices connected to the Logger1000 and configuring addresses for these devices. Devices can be automatically searched and added.

8.8.1.1 Auto search

The "Auto Search" function is used for SUNGROW string inverter to which addresses will be automatically allocated.

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click the button "Auto Search", and the corresponding window pops up. Select an interface type, and click "Search".
- step 3 After that, corresponding devices will be displayed.

- - End



Inverters without the SN do not support the automatic search function and device adding function.

Automatic address allocation pops up only when there is an actual address confrontation.



If one of the serial ports needs to enable the access of EyeW485, see "8.10.10.1 RS485" for specific operations. After the port type is selected, users can search for eligible devices with the array number and country/region.

8.8.1.2 Export

step 1 Click "Device" -> "Device List" to enter the corresponding interface.

step 2 Click the button " to export the device list.

- - End

8.8.1.3 Import

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click the button " to export the device list.
- step 3 After the device list is exported, the user can modify device names in batch.
- step 4 After the modification is completed, save the device list file in the .csv format.
- step 5 Click the button "F" to import the .csv file into the Web.
 - - End

8.8.1.4 Add device

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click "Add Device", select a device type in the pop-up window, and fill in the information required.
 - - End

8.8.1.5 Add the Third-party Meter (Import Files)

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click "Add Device", select "Meter" option in the "Device Type".
- step 3 Select the port (COM1/COM2/COM3/NET) that the meter is actually connected to in the "Port".
- step 4 Select "Others" option in the "Device Model".
- step 5 Select "Import Files" option in the "Configuration Method".
- step 6 Select the corresponding measuring point template in the "Configuration File". Or click the icon " ** "to import the configuration file.
- step 7 Enter the value of "Beginning Address" and the "Quantity of Device", click "Save".



Be aware of the number of device added in each port, the "Beginning Address" to be entered should bigger than the device address existed if they are in the same port.

- - End

8.8.1.6 Add the Third-party Meter (Custom)

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click "Add Device", select "Meter" option in the "Device Type".
- step 3 Select the port (COM1/COM2/COM3/NET) that the meter is actually connected to in the "Port".
- step 4 Select "Others" option in the "Device Model".
- step 5 Select "Custom" option in the "Configuration Method". Click "Next" to enter "Configure Measuring Point" the interface.

table 8-1 Parameter description

Parameter	Description		
Pyto Ordon	Refer to the communication protocol of the meter, parse		
Byte Order	the order of the read byte stream		
PT Transformation Ratio	Refer to the communication protocol of the meter, voltage		
P1 Transformation Ratio	transformation ratio		
CT Transformation Ratio	Refer to the communication protocol of the meter, current		
CT Transformation Ratio	transformation ratio		
Beginning Address	The beginning address of the device		
Quantity of Device	The number of the meter		
	The device address to be read when click "Read-Back",		
Debug Address	the range is [("Beginning Address"), ("Beginning Address"		
	+ "Quantity of Device"-1)]		
	Refer to the communication protocol of the meter, the		
Modbus Address	address of Modbus communication protocol, priority to		
Moubus Address	select the register address corresponding to the data type		
	of "Float"		
Pogistor Typo	Refer to the communication protocol of the meter, the		
Register Type	register type of the corresponding measuring point		
Data Tuna	Refer to the communication protocol of the meter, the data		
Data Type	type of the corresponding measuring point		
Bood Type	With or without framing when send messages at this point,		
Read Type	recommend to choose continuous type		
0 #: - :	Refer to the communication protocol of the meter, the		
Coefficient	coefficient that multiplied the value of the data read		
Read-back Value	The value of the selected measuring point read when		
Neau-Dack Value	clicking "Read-back"		



The user can select up to 21 objects for setting. Their corresponding parameters such as Modbus address please refer to the user manual of the connected meter.

step 6 Select the points to be measured, click "Read-back" to read the information from the meter in real time to check the correctness of parameter setting.



Only when the "Read-back Value" is consistent with the displayed value of the electric meter, the parameter setting of the measuring point is correct.

- step 7 When the "Read-back Value" is consistent with the displayed value of the electric meter, click "Save Template" to save the measuring point setting of this/these meter (s) as a template.
- step 8 Enter the template name in the pop-up prompt window and click "Confirm" on the prompt window to save the template.
 - 1

The template name should be a combination of numbers, letters, dashes and underscores starting with English letters, with a maximum length of 32 bits.

- step 9 Click "Confirm" on the measuring point configuring window to add the device and save the setting.
 - - End

8.8.1.7 Add the Third-party Meteo staion (Import Files)

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click "Add Device", select "Meteo Staion" option in the "Device Type".
- step 3 Select the port (COM1/COM2/COM3) that the meteo staion is actually connected to in the "Port".
- step 4 Select "Others" option in the "Device Model".
- step 5 Select "Import Files" option in the "Configuration Method".
- step 6 Select the corresponding measuring point template in the "Configuration File". Or click the icon " * "to import the configuration file.
- step 7 Enter the value of "Beginning Address" and the "Quantity of Device", click "Save".



The Modbus ID addresses of the devices connected in the same COM port of Logger1000 cannot be repeated.

- - End

8.8.1.8 Add the Third-party Meteo staion (Custom)

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click "Add Device", select "Meteo Staion" option in the "Device Type".
- step 3 Select the port (COM1/COM2/COM3) that the meteo staion is actually connected to in the "Port".

- step 4 Select "Others" option in the "Device Model".
- step 5 Select "Custom" option in the "Configuration Method". Click "Next" to enter "Configure Measuring Point" the interface.

table 8-2 Parameter description

Parameter	Description			
Byte Order	Refer to the device Modbus map, parse the order of the			
	read byte stream			
Beginning Address	The beginning address of the device			
Quantity of Device	The number of the device			
	The device address to be read when click "Read-Back",			
Debug Address	the range is [("Beginning Address"), ("Beginning			
	Address" + "Quantity of Device"-1)]			
Read Type	With or without framing when send messages at this			
Tread Type	point, recommend to choose continuous type			
Coefficient	Refer to the Modbus map of the device, the coefficient			
Coefficient	that multiplied the value			
Read-back Value	The value of the selected measuring point read when			
	clicking "Read-back"			



The user can select up to 13 objects for setting. For the corresponding parameters(such as register address, register type, etc.), please refer to the user manual of the connected meteo station.

- step 6 Select the points to be measured, click "Read-back" to read the information from the meteo station in real-time to check the correctness of parameter setting.
- step 7 After confirming that the read-back data is correct, then click "Confirm".
- step 8 Enter the template name in the pop-up prompt window and click "Confirm" on the prompt window to save the template.



The template name should be a combination of numbers, letters, dashes and underscores starting with English letters, with a maximum length of 32 bits.

- step 9 Click "Confirm" on the measuring point configuring window to add the device and save the setting.
 - --End

8.8.1.9 Edit device

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Click the button in the operation bar, to modify the name of the device connected to the Logger1000 and other parameters.

step 3 Click "Save".

- - End



The "Device Name" is named in the form device model (port number-communication address).

Take SG36KTL-M (COM1-7) as an example. SG36KTL-M is device type, COM1 is the communication port, and 7 is the communication address.

8.8.1.10 Delete device

After a device is deleted on site, the user can delete the device from the device list, to keep device consistency.

- step 1 Click "Device" -> "Device List" to enter the corresponding interface.
- step 2 Select the device to be deleted, click the button "Delete".
- step 3 Click "Confirm" in the pop-up window, to delete the device.
 - --End

8.8.2 Firmware Update

The firmware update function is used to upgrade the SUNGROW residential inverter and string inverter.

- step 1 Click "Device" -> "Firmware Update" to enter the corresponding interface.
- step 2 Click the button "Select a Firmware File". Select an upgrading file and import it to the system.

 Matching inverters will be detected.
- step 3 Select the device to be upgraded, and click "Upgrade".
- step 4 Complete firmware update to view current version, target version, start time, end time and other information.

- - End



The firmware file should be in the ".sgu" format.

Never interrupt the upgrade.

8.8.3 Inverter Log

- step 1 Click "Device" -> "Inverter Log" to enter the corresponding interface.
- step 2 Select the device running information, and click the button by to view the export progress.
- step 3 Click "Save" to store the exported log in the local.
- step 4 Click "Cancel" and then "Confirm" on the pop-up window, to cancel the current operation.

- - End

8.8.4 AFCI Activation

step 1 Click "Device" -> "AFCI Activation" to enter the corresponding interface.

step 2 Check the devices that need to self-checking, click "Self-checking" and then "Confirm" on the pop-up window.



The status of the self-checking device must be "Enable". If the self-checking status is "Disabled", you can click " " " to set the self-checking status to "Enable".

- step 3 The result column shows the self-checking status as "Self-testing", and after 7 ~ 8 seconds, the self-checking result will be displayed as "Self-checking Failure" or "Self-test pass".
- step 4 Click "Clear Fault" to bring up a dialog box showing the status of fault clearing.

--End

8.9 History Data

Click "History data" -> "Operation Log" to enter the corresponding interface.

On this interface, users can view history information.

8.10 System

8.10.1 Running Information

Click "System" -> "Run Information" to enter the corresponding interface.

Information such as mobile network signal strength, WLAN, Al voltage, DI status can be viewed.

8.10.2 System Maintenance

8.10.2.1 System upgrade

Users can upgrade Logger1000 on the Web interface.

- step 1 Click "System" -> "System Maintenance" to enter the corresponding interface.
- step 2 Click "System Upgrade", select the upgrade file, and export it to the system.
- step 3 Click "Upgrade" on the pop-up version information window. The system enters upgrade state.
 - --End



The upgrade file should be in the ".zip" format.

8.10.2.2 Log export

step 1 Click "System" -> "System Maintenance" to enter the corresponding interface.

- step 2 Click the button "Log Export" to enter the corresponding interface.
- step 3 Select the type of logs to be exported, and click "Confirm".

- - End

8.10.2.3 Rebooting

- step 1 Click "System" -> "System Maintenance" to enter the corresponding interface.
- step 2 Click "Rebooting" to enter the corresponding interface.
- step 3 A warning window will pop up, and click "Confirm" to continue the rebooting operation.

- - End

8.10.2.4 Reset all setting

- step 1 Click "System" -> "System Maintenance" to enter the corresponding interface.
- step 2 Click "Reset All Settings" to enter the corresponding interface.
- step 3 A warning window will pop up, and click "Confirm" to continue the reset all settings operation.

- - End



Restoring the factory settings refers to restoring all modified settings to the factory state and will not clear the data.

8.10.3 Remote Maintenance

step 1 Click "System" -> "Remote Maintenance" to enter the corresponding interface.



table 8-3 Parameter description

Remote maintenance switch state	Description		
Disabled	Not allow for remote maintenance on the Logger1000		
Enable	Allow for remote maintenance on the Logger1000		

- step 2 In case the remote maintenance switch is in the "Enable" state, the remote service address needs to be set.
 - · Users in mainland China select "Chinese Server",



- · Users in Europe select "European Server".
- Users in Australia select "Australian Server".
- · Users in other regions select the "International Server".



The remote maintenance address will change once the Logger1000 is restart.

- step 3 Click "Save" to enter the "Remote Access" interface.
- step 4 Enter the login password and click "Confirm".
- step 5 Access information is saved in the following two ways.
 - Click "Copy remote access information", and save the access information locally after successful copying.
 - Enter the email address and click "Send" to send the access information to the email address.
- step 6 Enter the access link in the URL field to enter the "Remote Maintenance" interface. Enter the device S/N and password, and click "Login" to perform remote maintenance.
 - --End

8.10.4 Message Export

step 1 Click "System" -> "Message Export" to enter the corresponding interface.



table 8-4 Parameter description

Parameter	Description	Range	
Deat		Serial port: COM1、COM2、COM3	
Port	-	Network port: ETH, WiFi, 4G	
Demotion	Export the message	1min ~ 10min	
Duration	recorded during the set time		

step 2 Set parameters, including interface, serial port, and duration, and click "Start" to start recording message. The recording automatically stops when the set time reaches, or the user may manually click the button "Stop" to stop recoding message.

step 3 Click "Export" to export the message.

- - End

8.10.5 System Time

Click the "System Time" to check whether the current system time is correct, synchronize the system time, and enable/disable "Inverter Timing".

Click "System" -> "System Time" to enter the corresponding interface.



Method of setting system time:

- When the option "Inverter Timing" is selected, SUNGROW inverter time will be synchronized with the time of Logger1000.
- When the clock source is set to "User Define", user can manually set the current system time and time zone in the following two manners:
 - Select "Use PC Time" to synchronize the time of the Logger1000 with the time of the PC.
 - Click the "Time Zone" pull-down-list and select the local time zone. Enter the "Date" and "Time" and click "Save" to manually set the time of the Logger1000.
- When the clock source is set to "NTP", time of all devices can be synchronized. Click the
 "Time Zone" pull-down-list and select the local time zone. Fill in the domain, set the time
 interval, and click "Save". In this way, the time of the Logger1000 is synchronized with
 the time of the server.
- The clock source is set to "IEC104". In this way, the Logger1000 and the background must use the IEC104 communication protocol, and otherwise, this manner is invalid.
- · The clock source is set to "iSolarCloud".
- · The clock source is set to "MODBUS-TCP".

It is recommended to select "User Define" during debugging.

It is recommended that the top priority should be given to the IEC104 and then the iSolarCloud.

NOTICE

Set the system time when using the Logger1000 for the first time.

8.10.6 iSolarCloud

step 1 Click "System" -> "Transfer Configuration" to enter the corresponding interface.

step 2 Click the button of to modify the forwarding configuration information of iSolarCloud.

- - End



The default iSolarCloud station is "iSolarCloud of China". Users in mainland China select "iSolarCloud of China", users in Europe select "iSolarCloud of Europe", users in Australia select "Australian Server", and users in other regions select the "iSolarCloud of International".

To ensure that the Logger1000 functions normally, the firewall network needs to open the following access rights.

Parameter	Parameter value			
	api.isolarcloud.com			
Destination address	api.isolarcloud.com.hk			
	api.isolarcloud.eu			
	• TCP: 19999			
	• TCP: 8443			
Destination port	• TCP:80			
	• TCP: 443			
	• UDP: 123			

8.10.7 IEC104

Configure the IEC104 forwarding service for the Logger1000 on this interface.

Server Mode

In the server mode, Logger1000 is used as a Server and connected to PC server to implement data transmission and instruction delivery.

Click "System" -> "Transfer Configuration" -> "IEC104" to enter the corresponding interface.



The local port is 2404.

· Client Mode

In the client mode, Logger1000 is used as a Client and connected to PC server to implement data transmission and instruction delivery.

- step 1 Click "System" -> "Transfer Configuration" -> "IEC104" to enter the "Server" tab by default.
- step 2 Click "Client" to enter the corresponding tab.

- - End

8.10.7.1 White list setting

When the option "Enable White List" is not selected, and the default IP address is "0.0.0.0", any background devices with valid IP address can access the Logger1000.

When the option "Enable White List" is selected, and specified IP address is entered, only the device with the specified IP address can access the Logger1000.

8.10.7.2 Generate Point Table

- step 1 Turn on the switch of local port 2404.
- step 2 Click "Generate Point Table", and default IEC104 point table will be automatically imported to configuration file.
 - --End

8.10.7.3 Edit IEC104 Forwarding Point Table

- step 1 Click "Export of Configuration Tools" to export the IEC104 forwarding point table.
- step 2 Open the sheet "Introduce" of the IEC104 forwarding point table, where data of five types (-telemetry, telesignalling, remote pulse, remote control, and remote regulating) are included.

table 8-5 Introduce tab parame	eters
--------------------------------	-------

Data Type	Description
YC	Telemetry
YX	Telesignalling
YM	Remote pulse
YK	Remote control
YT	Remote regulating

step 3 Open the sheet "Cfg Para" of the IEC104 forwarding point table to view and set the addresses of the five types of data. The addresses shown in the following table are default ones and can be modified according to actual situation.

table 8-6 Cfg Para tab parameters

Data Type	ΥX	YC	YM	YK	YT
Bngr Addr	1	16385	15221	15271	15000

step 4 Open the sheets such as inverter, Smart Energy Meter, Meteo Station, and Logger1000, to set corresponding measuring point data.

Data Type	DataID	State	Invert	Coefficie- nt	Uint	Data Name
YC	1	Υ	N	1000	W	Р
YC	2	Υ	N	1000	Var	Q
YX	3	Υ	Υ	1	NA	On-grid
YX	4	Υ	N	1	NA	Off-grid
YM	5	Υ	N	1	kWh	E-Daily
YK	6	Υ	N	1	NA	Power On / Off
YT	7	Υ	N	1	kW	P-Set
YT	8	Υ	N	1	Var	Q-Set

table 8-7 Description of parameter

Parameter	Value	Description
Data Type	-	Data type
Data ID	-	Data type
	Υ	Data is uploaded to the background via the
State*	ř	IEC104 communication protocol
	N	Data is not uploaded to the background
Invert*	Υ	Negate, 0 is 1, and 1 is 0, available for
		telesignalling only
	N	No negate, 0 is 0 and 1 is 1
Coefficient*	-	Coefficient, available for telemetry, remote
Coefficient*		pulse, and remote regulating only
		Unit, available for telemetry, remote pulse, and
Uint	-	remote regulating only
		NA indicates no unit
Data Name	-	Data name in multiple languages

Note: * indicates that the parameters should be set according to onsite conditions.

step 5 Open the sheet "Device List" of the IEC104 forwarding point table to sort the devices.

table 8-8 Device List tab parameters

No	DeviceType	ComID	CollectID	AccessID	Template Sheet	Reserved YX Addr	Reserved YC Addr	Reserved YM Addr	Reserved YK Addr	Reserved YT Addr
1	Plant			0	Plant	0	0	0	0	0
2	SG80KTL-M	COM1	1	1	SGINV-Old	0	0	0	0	0
3	SG80KTL-M	COM1	2	2	SGINV-Old	0	0	0	0	0
4	SG50KTL	COM2	1	3	SGINV-Old	0	0	0	0	0
5	SG50KTL	COM2	2	4	SGINV-Old	0	0	0	0	0

table 8-9 Description of parameter

Parameter	Description
	Sort devices, and only support moving the whole line for the
No.	device type corresponds one-to-one to its parameters in the
	same line
Device Type	Device type
	Number of COM port to which device connected,
Com ID*	corresponding to the port data of the "Device list" on the Web
	interface
	Collect device Modbus address, corresponding to
Collect ID*	communication address of the "Device list" on the Web
	interface
Access ID*	Background access address, corresponding to the forwarding
Access ID	address of the "Device list" on the Web interface
Template Sheet	Keep consistent with the that in the device sheet
Reserved YX Addr	Reserved telesignalling address
Reserved YC Addr	Reserved telemetry address
Reserved YM Addr	Reserved remote pulse address
Reserved YK Addr	Reserved remote control address
Reserved YT Addr	Reserved remote regulating address

Note: Export the excel from the "Device list" interface and copy the data in the exported excel.

- - End

8.10.7.4 Import IEC104 forwarding point table

- step 1 After editing the IEC104 forwarding point table, click "Export" -> "IEC104 CFG", so that a prompt window pops up, and then convert the excel file into xml file. The xml file and the excel file are at the same path.
- step 2 Click the button on the operation bar, and then click the button on the pop-up window, to import the xml file.
 - - End

8.10.7.5 Add Peer Port Information

- step 1 Configure point table, where reference can be made to 8.10.7.3 Edit IEC104 Forwarding Point Table".
- step 2 After editing the IEC104 forwarding point table, click "Export" -> "IEC104 CFG" in the menu bar, and the prompt window will pop up. Convert the excel file into .xml file, where the .xml file and the excel file are in the same path.
- step 3 Click "Add", to enter the "Advanced Settings" interface.

step 4 Enter domain and peer port, and select remote signaling measuring point type, remote signaling time mark, and upload with a change.

- step 5 Click configuration 6 to import .xml file.
- step 6 Click "Save".
 - --End

8.10.8 MODBUS

Configure the MODBUforwarding service for the Logger1000 on this interface.

8.10.8.1 Server Mode

In the server mode, Logger1000 is used as a Server and connected to PC server through Modbus TCP protocol to implement data transmission and instruction delivery.

- step 1 Click "System" -> "Transfer Configuration" -> "MODBUS" to enter the corresponding interface.
- step 2 For the white list setting, refer to "8.10.7.1 White list setting".
 - - End

8.10.8.2 Client Mode

In the client mode, Logger1000 is used a Client and connected to PC server through Modbus TCP protocol to implement data transmission and instruction delivery.

- step 1 Click "System" -> "Transfer Configuration" -> "MODBUS" to enter the "Server" tab by default.
- step 2 Click "Client" to enter the corresponding tab.
- step 3 Click "Add" to enter the "Advanced Settings" interface.
- step 4 Enter domain and peer port and click "Save".
 - --End

8.10.8.3 RTU Mode

In the RTU mode, Logger1000 is connected to PC server through Modbus RTU protocol to implement data transmission and instruction delivery.

- step 1 Click "System" -> "Transfer Configuration" -> "MODBUS" to enter the "Server" tab by default.
- step 2 Click "RTU" to enter the corresponding tab.
- step 3 Select serial port and enter delay time.
- step 4 Click ...
 - - End



【Serial Port】 is set to "Forwarding Is Prohibited" by default, in which case this port can only be used to collect data. If the logger is connected to a third-party device through a COM port for data forwarding, select the COM port in the drop-down list of 【Serial Port】. A maximum of two COM ports can be used for forwarding.

8.10.9 Third-party portal

Configure the third-party cloud forwarding service for the Logger1000 on this interface.

- step 1 Click "System" -> "Transfer Configuration" -> "Third-party Portal" to enter the corresponding interface.
- step 2 Turn on the switch.
- step 3 Click the button on the operation bar, so that an advanced setting window will pop up.
- step 4 Modify the configuration information and click "Save".



Set the FTP path and name it as "/FTP server directory".

For example, for the name "/SUNGROW", / is the root directory, and SUNGROW is the directory where data is stored on the FTP server.

- - End

8.10.10 Port Parameter

Set ports of the Logger1000 on this interface.

8.10.10.1 RS485

- step 1 Click "System" -> "Port Parameter" -> "RS485" to enter the corresponding interface.
- step 2 Click to modify baud rate, parity bit, and stop bit.
- step 3 Click "Save" to save the information.

- - End

When the Logger1000 is connected to a device via the serial port, the baud rate, parity bit, and stop bit of the serial port should be the same as those set for the connected device, so as to ensure normal communication between the Logger1000 and the connected device. The baud rate is 9,600bps, stop bit is 1, and there is no parity bit by default. If EyeW485 is enabled, set the baud rate of the corresponding COM port to 115,200.



8.10.10.2 EyeW485

Click **System** -> **Port Parameter** -> **EyeW485** to enter the corresponding interface, on which users can configure the master and slave nodes of the EyeW485 and send related operation instructions.

EveW485-H

On this interface, uses can set the **Country/Region**, **Frequency**, and **Array** of the master node.

table 8-10 EyeW485-H Parameter Description

Parameter	Description
Country/Region	Select the country/region.
Frequency	Click Select Measuring Point(s) to select the frequency point of the matched country/region.
Array	Select the array according to the color of the COM indicator on the slave node.

After finishing the configuration, click **Settings**.

The frequency point of master and slave nodes can be configured simultaneously if the networking between master and slave nodes is finished. Click **Select Measuring Point(s)** to enter the **Frequency** interface, check the frequency point of the matched country/region, click **Confirm**, and click **Configure Synchronization**.



If there are slave nodes that have not been successfully networked, users will be prompted with the slave node information (S/N and device address) after clicking **Configure Synchronization**. Click **Export** to save the information to local.

Parameters such as frequency of slave nodes that have not been successfully networked can be set on near-end devices.

EyeW485

On this interface, users can configure the frequency points and arrays of slave nodes, and can also view the information of slave nodes, such as S/N, device address, status, and signal.

Click to set the following parameters :

table 8-11 EyeW485 Parameter Description

Parameter	Description
Array ID	Select the array number (red, blue, and green are colors of the COM indicator of the slave node).
Frequency	Enter the frequency point in the input box (it must be consistent with the frequency point of the master node).

After finishing the configuration, click **Refresh** to refresh the current interface.

Operation Instructions

On this interface, users can perform the following operations.

table 8-12 Operation Instruction Description


Function	Description
One-touch Switch	Also known as "one-touch frequency hopping". The frequency points with required signal strength are randomly assigned to EyeW485 master and slave nodes.
Rebooting (EyeW485–H only)	Reboot the master node of EyeW485.
Reset All Settings (EyeW485–H only)	Restore factory settings of the master node of EyeW485.
Rebooting (EyeW485–H, EyeW485)	Reboot the master and slave nodes of EyeW485.

8.10.10.3 Ethernet

Perform Ethernet settings on this interface.

- step 1 Click "System" -> "Port Parameter" -> "Ethernet" to enter the corresponding interface.
- step 2 If auto IP allocation is "On", it is recommended to obtain the current IP address of the ETH port by connecting the WLAN module and logging into 11.11.11.1.
- step 3 If the parameter "Automatically obtain IP settings (DHCP)" is set to " • occor " fill in the information such as the IP address, subnet mask, and default gateway, and click the button to save the operation.

- - End

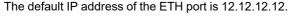



If both auto IP allocation and WLAN STA client are enabled, ensure that the Ethernet and the WLAN STA are at different network segment. Otherwise, it is probably that neither of the two networks is available.

8.10.10.4 Mobile network

Perform Mobile network setting on this interface.

step 1 Click "System" -> "Port Parameter" -> "Mobile Network" to enter the corresponding interface.

step 2 After modifying the APN, username and password, click to save the information.

- - End

8.10.10.5 WiFi

Perform WiFi setting on this interface.

Client

Client refers to a case in which the Logger1000 connect to another hotspot or router via the WLAN function.

Click "System" -> "Port Parameter" -> "WiFi" to enter the corresponding interface. Users will enter the client mode by default, and the WLAN switch is closed.

Hotspot

Hotspot mode means that the Logger1000 is used as an hotspot, and the PC or mobile phone can be connected to the Logger1000 via the WLAN function.

Click "System" -> "Port Parameter" -> "WiFi" to enter the corresponding interface. Click "-Hotspot" to enter the corresponding interface.

table 8-13 Description of hotspot parameter

Parameter	Description
SSID	Network name
Coourity	Null: without password
Security	WPA2: hotspot encrypted, password required



Changing of the WLAN hotpot password requires reconnection of the WLAN.

8.10.10.6 AI

- step 1 Click "System" -> "Port Parameter" -> "Al" to enter the corresponding interface.
- step 2 Select an input type, set the lower limit and upper limit, and click the button at to save the operation.

table 8-14 Description of AI parameter

Parameter	Default value	Range
Voltage lower limit (V)	0	0 ~ 10
Voltage upper limit (V)	10	0 ~ 10
Current lower limit (mA)	4	4 ~ 20
Current upper limit (mA)	20	4 ~ 20

- - End

8.10.10.7 DI

- step 1 Click "System" -> "Port Parameter" -> "DI" to enter the corresponding interface.
- step 2 Set the initial status to "NO" or "NC", and click the button to save the operation.
 - - End

8.10.11 MPLC

- step 1 Click "System"->"MPLC", select the MPLC to be set, and click on the right to enter the corresponding interface and set the following parameters:
 - 1 Band Num: Band1, default band. Band2, standby band.
 - 2 Array ID: Select the current array ID. The ID of adjacent arrays cannot be the same.
 - 3 Winding ID: Select the winding ID.
 - 1

Check whether the array ID and winding ID are correct. If not, the device may go offline.

- step 2 Click "Next" to set the slave node. Select the device to be set and click "Synchronization".
- step 3 Select the device to be restarted and click "Reboot". After the rebooting is complete, click "Next".
 - 1

The parameters set in Step 1 take effect only after click "Reboot" in Step 3.

- step 4 Click "Restart master node" and click "Confirm".
 - - End

8.10.12 About

Click "About" to enter the corresponding interface.

Information such as firmware information of the Logger1000 can be viewed.

Users can scan the QR code via the iSolarCloud App to add the Logger1000.

9 Grid Dispatching Function

Only installation personnel with some communication knowledge can perform operations described in this chapter.

9.1 Function Description

The Logger1000 not only serves as a communication management device of single PV array/plant, but also has the power regulation function. Multiple regulation manners can meet different regulation requirements. The Logger1000 can regulate the power output of the SUNGROW inverter, and the regulation mainly includes active power control and reactive power regulation.

The Logger1000 can control device power output according to the local preset instructions. In addition, it can receive regulation instructions via the remote communication (IEC104, MODBUS, and TCP), AI, and dry contact (DI).

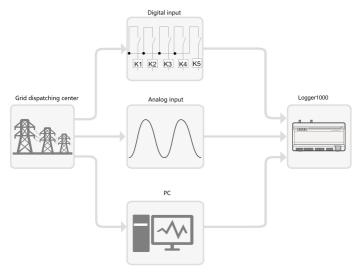


figure 9-1 Overall frame of power control function

The Logger1000 supports closed-loop power regulation. The regulation accuracy and real-time performance can be further improved by adding an Smart Energy Meter.

The Logger1000 supports fast instruction transfer channels (ms-level processing delay) while ensuring that the dispatching instructions are correctly transmitted to all inverters.

NOTICE

The corresponding power dispatching function is available only when the inverter supports active power control, power factor control, and reactive power regulation!

For details, refer to the inverter user manual or consult the local retailer.

9.2 Interface Description

The Logger1000 is equipped with digital control interfaces and analog control interfaces for receiving digital instructions and analog instructions sent by the grid dispatching center.

9.2.1 Digital Control Interface

The digital control interfaces are at the bottom of the Logger1000, and a sum of 5 digital input ports are provided, as shown in the figure below.

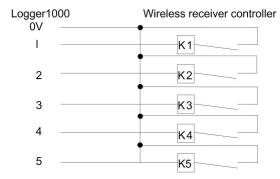


table 9-1 Digital control interface signal definition

Signal	Definition	
DI	Enabling switch for converting Al function to DI function	
1+ , 1- , 2+ , 2-	4 input dry contact channels	
3+ , 3- , 4+ , 4-	4 input dry contact charmers	
1,2,3,4,5	5 independent-input dry contact signal channel	
DRM	Works together with the DI1 to DI4 to achieve the DRM	
DRIVI	function	
0V	Input dry contact signal ground	


There are 4 ports at the bottom of the Logger1000 compatible with the AI/DI function. When the DI function of the "AI/DI" port is enabled, use a power cable to connect the "24V OUT+" port to "DI" port.

Wiring between the Logger1000 and the wireless receiver controller is as follows:




In Germany and some other European countries, the grid company uses the Ripple Control Receiver to convert the grid dispatching signal and send it in a dry contact manner, In this case, the plant needs to receive the grid dispatching signal in the dry contact communication manner.

Wiring of the active power dry contact is shown in the figure below:

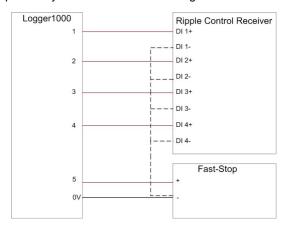

Wiring of the reactive power dry contact is shown in the figure below:

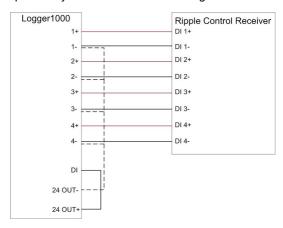

9.2.2 Analog Control Interface

The analog control interfaces are at the bottom of the Logger1000, and a sum of 4 analog input ports are provided, as shown in the figure below.

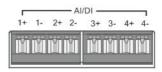



table 9-2 Analog control interface signal definition

Signal	Definition
1+ , 1- , 2+ , 2- , 3+ , 3- , 4+ , 4-	4 analog input channels

The Logger1000 supports 4 inputs of 4 ~ 20mA analog currents or 4 inputs of 0 ~ 10V analog voltage.


9.2.3 DRM Control Interface

The DRM control interface are located at the bottom of the Logger1000, as shown in the figure below.

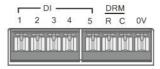

The DRM interface works together with DI1~DI4 to achieve the DRM function.

Wiring between the Logger1000 and the DRED is as follows:

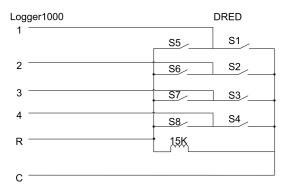

The DRM interface requires that the Logger1000can be connected to the DRED via the corresponding wiring terminal or RJ45 connector.

9.3 Power Control

Power regulation includes active power control and reactive power regulation.

9.3.1 Active Power

9.3.1.1 Disable

If the inverter needs to operate at full load, the active control mode should be set to "Disable".

step 1 Click "Power control" -> "Active power" to enter the active power interface.



step 2 Set the active control mode to "Disable" and click "Save".

--End

9.3.1.2 Remote power control

When the instruction source is IEC104 or MODBUS TCP protocol, set the active control mode to "Remote power control".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Remote power control".
- step 3 Set remote dispatching parameters. For specific parameter description, refer to the following table.

table 9-3 Parameter description

Parameter	Description	
Communication	Communication is abnormal, and specified dispatch output	
abnormality output (%)	value is delivered.	
	Open loop control: Remote monitoring background is	
	connected and active instruction of remote dispatching is	
	sent to the power output port of the inverter, thereby	
	achieving active power control.	
	Closed-loop control:	
Control method	 In case no Smart Energy Meter is selected, remote monitoring background is connected, active instruction of remote dispatching is used as target value, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for fast and accurate active power regulation. 	
	 In case a Smart Energy Meter is selected, remote monitoring background is connected, active instruction of remote dispatching is used as target value, active power of the meter needs to be collected and used as input parameter, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for anti- backflow or avoiding zero power feed-in. 	
	Unselected	
Select energy meter /	Select Smart Energy Meter / transformer involved in power	
transformer*	regulation	

Parameter	Description
	Adjustment accuracy
Error limit (%)*	If the ratio of the difference between the active power and
Error minit (70)	the target value to the rated power is within the set error
	range, the target value is reached.
	If the adjustment does not reach the set target value,
Adjustment ratio (%)*	increase or decrease adjustment value according to the set
	adjustment ratio, so as to reach the target value.
Control avala	Time interval of delivering dispatching instructions
Control cycle	Parameter range: 5~60s

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter / transformer" is settable.

step 4 After finishing parameter setting, click "Save" to save the operation.

- - End

9.3.1.3 Local Power Control

If active dispatching instruction or dispatching target value is used as dispatching input locally, the active control mode is set to "Local power control".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Local power control".
- step 3 Set local dispatching parameters. For specific parameter description, refer to the following table.

table 9-4 Parameter description

Parameter	Description
Communication abnormality output (%)	Communication is abnormal, and specified dispatch output value is delivered.
Control method	Open loop control: At the start time, the locally configured active instruction is sent to the power output port of the inverter, thereby implementing active power control.
	Closed-loop control:
	 In case no Smart Energy Meter is selected, at the beginning time, the active instruction configured locally is used as target value, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for fast and accurate active power regulation.
	 In case a Smart Energy Meter is selected, at the beginning time, active instruction configured locally is used as target value, active power of the meter needs to be collected and used as input parameter, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for anti-backflow or avoiding zero power feed-in.
Select energy meter*	Unselected
	Select Smart Energy Meter involved in power regulation
Wiring mode*	Direct connection: One Logger1000 is connected to all
	inverters, where all the inverters must be string inverters
	or central inverters.
	Cascade connection: Multiple Logger1000 are
	cascaded, and this Logger1000 is used as the host.
Start after communication recovery *	Enable: After the Smart Energy Meter recovers normal
	communication, the Logger1000 will deliver start
	instruction to the inverter.
	Disable: After the Smart Energy Meter recovers normal
	communication, the Logger1000 will not deliver start
	instruction to the inverter.
Start delay after communication recovery *	After the Smart Energy Meter recovers normal
	communication, the Logger1000 will deliver start
	instruction to the inverter.
	Parameter range: 0~120s

Parameter	Description	
	Enable: when feed-in power is detected, theLogger1000	
	will deliver start instruction to the inverter.	
	Disable: when feed-in power is detected,	
Feed-in stop *	theLogger1000 will not deliver start instruction to the	
	inverter.	
	Note: Never turn on the Enable switch arbitrarily!	
	Generally, keep it in Disable state.	
Control cycle	Time interval of delivering dispatching instructions	
Control cycle	Parameter range: 5~60s	
Q-Method	kW: set active power value	
Q-IVIEUTOU	%: set active power percentage	

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable.

step 4 Add local power control manner

Fill in "Start time" and "Percentage" (fixed value of active power), and click "Save".

- - End

Subsequent Operation

Delete local power control manner: select a local control manner that needs to be deleted, and click "Clear data".

9.3.1.4 Al Control

When using the analog signal at the Al port of the Logger1000 as the dispatching input, set the active control mode to "Analog input".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Analog input".
- step 3 Set Al control parameters. For specific parameter description, refer to the following table.

table 9-5 Parameter description

Parameter	Description		
Communication	Communication is abnormal, and specified dispatch output		
abnormality output (%)	value is delivered.		
	Open loop control: Active instruction controlled by AI is sent to the power output port of the inverter, thereby achieving active power control. Closed-loop control:		
Control method	 In case no Smart Energy Meter is selected, active instruction controlled by AI is used as target value, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for fast and accurate active power regulation. 		
	 In case a Smart Energy Meter is selected, active instruction controlled by AI is used as target value, active power of the meter needs to be collected and used as input parameter, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for anti-backflow or avoiding zero power feed-in. 		
	Unselected		
Select energy meter*	Select Smart Energy Meter involved in power regulation		
	Time interval of delivering dispatching instructions		
Control cycle	Parameter range: 5~60s		
Al port	Al1~Al4 available		
O Mathad	kW: set active power value		
Q-Method	%: set active power percentage		
Min.	Lower limit: 0.0		
Max	When "Q-Method" is set to "%", the upper limit is 100.0%		
Max.	When "Q-Method" is set to "kW", the upper limit is 999999 kW		
Step	The minimum difference value between two consecutive power dispatching instructions		

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable.

step 4 After finishing parameter setting, click "Save" to save the operation.

- - End

9.3.1.5 Digital Input

When using the digital signal at the DI port of the Logger1000 as the dispatching input, set the active control mode to "Digital input".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Digital input".
- step 3 Set DI control parameters. For specific parameter description, refer to the following table.

table 9-6 Parameter description

Parameter	Description		
Communication abnormality	Communication is abnormal, and specified dispatch output		
output (%)	value is delivered.		
Control method	Open loop control: Active instruction controlled by DI is sent to the power output port of the inverter, thereby achieving active power control. Closed-loop control: In case no Smart Energy Meter is selected, active instruction controlled by DI is used as target value, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for fast and accurate active power regulation.		
	 In case a Smart Energy Meter is selected, active instruction controlled by DI is used as target value, active power of the meter needs to be collected and used as input parameter, and active power compensation ratio is calculated and sent to the power output port of the inverter. Generally, this strategy is used for anti-backflow or avoiding zero power feed-in. 		
Coloot an annu mantant	Unselected		
Select energy meter*	Select Smart Energy Meter involved in power regulation		
Control evels	Time interval of delivering dispatching instructions		
Control cycle	Parameter range: 5~60s		
O M-411	kW: set active power value.		
Q-Method	%: set active power percentage.		

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable.

step 4 Add digital input manner.

Select the desired DI channel, fill in the "Percentage"(fixed value of active power), and click "Save".

- - End



Subsequent Operation

Delete digital input manner: select a digital input manner that needs to be deleted, and click "Clear data".

9.3.1.6 DRM mode

When using the digital signal at the DI port (DI1 ~ DI4) of the Logger1000 as the dispatching input, set the active control mode to "DRM mode".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "DRM mode" and click "Save".
 - - End

9.3.1.7 Country mode

If the dispatching input must be the national power dispatching instruction, the active control mode is set to "Country mode".

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Country mode".
- step 3 Select a country and PPC type, and click "Save".
 - --End

9.3.1.8 Scheduling Prohibited

Set the active control mode to "Scheduling prohibited" if the Logger1000 is prohibited to perform active dispatching on the inverter.

- step 1 Click "Power control" -> "Active power" to enter the active power interface.
- step 2 Set the active control mode to "Scheduling prohibited" and click "Save".
 - - End

9.3.2 Reactive Power

9.3.2.1 Disable

If the grid company does not need the power plant to adjust the voltage at the gridconnection point, and the inverter does not need to cooperate with the grid for reactive power compensation, the inverter keeps operating in the reactive-forbidden output state, and the Reactive control mode is set to "Disable".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the reactive control mode to "Disable" and click "Save".
 - - End

9.3.2.2 Remote Power Control

When the instruction source is IEC104 or MODBUS TCP protocol, set the "Reactive control mode" to "Remote power control".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the "Reactive control mode" to "Remote power control".
- step 3 Set remote dispatching parameters. For specific parameter description, refer to the following table.

table 9-7 Parameter description

Parameter	Description		
Communication	Communication is abnormal, and specified dispatch output		
abnormality output (%)	value is delivered.		
	Open loop control: Remote monitoring background is connected and active instruction of remote dispatching is sent to the power output port of the inverter, thereby		
	achieving active power control.		
Control method	Closed-loop control: Remote monitoring background is connected and reactive instruction of remote dispatching is used as target value, reactive power and power factor of the meter need to be collected and used as input parameters, and reactive power compensation ratio is calculated and sent to power output port of the inverter. Generally, this strategy is used for improving the power factor of the property boundary point.		
Select energy meter / transformer*	Unselected Select Smart Energy Meter / transformer involved in power regulation		
	Adjustment accuracy		
Error limit (%)*	If the ratio of the difference between the reactive power and the target value to the rated power is within the set error range, the target value is reached.		
Adjustment ratio (%)*	If the adjustment does not reach the set target value, increase or decrease adjustment value according to the set adjustment ratio, so as to reach the target value.		



Parameter	Description	
	Forward: The reactive power direction of the inverter array	
	displayed by the meter/transformer is the same as the actual	
Pagetive power direction*	reactive power direction.	
Reactive power direction*	Backward: The reactive power direction of the inverter array	
	displayed by the meter/transformer is opposite to the actual	
	reactive power direction.	
Comtral avala	Time interval of delivering dispatching instructions	
Control cycle	Parameter range: 5~60s	

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter / transformer" is settable.

step 4 After finishing parameter setting, click "Save" to save the operation.

- - End

9.3.2.3 Local Power Control

If reactive dispatching instruction or dispatching target value is used as dispatching input locally, the reactive control mode is set to "Local power control".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the "Reactive control mode" to "Local power control".
- step 3 Set local dispatching parameters. For specific parameter description, refer to the following table.

table 9-8 Parameter description

Parameter	Description	
Communication	Communication is abnormal, and specified dispatch output	
abnormality output (%)	value is delivered.	
	Open loop control: At the start time, the locally configured	
Control method	active instruction is sent to the power output port of the inverter,	
	thereby implementing reactive power control.	
	Closed-loop control: At the beginning time, reactive instruction	
	configured locally is used as target value, reactive power and	
	power factor of the meter need to be collected and used as	
	input parameters, and reactive power compensation ratio is	
	calculated and sent to power output port of the inverter.	
	Generally, this strategy is used for improving the power factor	
	of the property boundary point.	
Select energy meter*	Select Smart Energy Meter involved in power regulation	

Parameter	Description	
	Direct connection: One Logger1000 is connected to all	
	inverters, where all the inverters must be string inverters or	
Wiring mode*	central inverters.	
	Cascade connection: Multiple Logger1000 are cascaded, and	
	this Logger1000 is used as the host.	
Line reactive power	Common action for reactive mayor leaded in the line	
compensation*	Compensation for reactive power losses in the line	
<u> </u>	Time interval of delivering dispatching instructions	
Control cycle	Parameter range: 5~60s	
O.M. II.	PF: set the power factor as the target value	
Q-Method	%: set reactive power percentage.	

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable. When selecting an energy meter, the Logger used must be the one manufactured by SUNGROW.

step 4 Add local power control manner

Fill in "Start time" and "Percentage"(PF), and click "Save".

- - End

Subsequent Operation

Delete local power control manner: select a local power control manner that needs to be deleted, and click "Clear data".

9.3.2.4 Al Control

When using the analog signal at the AI port of the Logger1000 as the dispatching input, set the reactive control mode to "Analog input".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the reactive control mode to "Analog input".
- step 3 Set Al control parameters. For specific parameter description, refer to the following table.

table 9-9 Parameter description

Parameter	Description		
Communication abnormality output (%)	Communication is abnormal, and specified dispatch output value is delivered.		
	Open loop control: Reactive instruction controlled by AI is sent to power output port of the inverter, thereby achieving active power control.		
Control method	Closed-loop control: Reactive instruction controlled by AI is used as target value and reactive power and power factor of the meter need to be collected and used as input parameters, and reactive power compensation ratio is calculated and sent to power output port of the inverter. Generally, this strategy is used for improving the power factor of the property boundary point.		
Select energy meter*	Select Smart Energy Meter involved in power regulation		
Control cycle	Time interval of delivering dispatching instructions Parameter range: 5~60s		
Al port	Al1~Al4 available		
Q-Method PF: set the power factor as the target value %: set reactive power percentage			
When "Q-Method" is set to "%", the parameter ranges -100.0% to 100.0%. Min. / Max. When "Q-Method" is set to "PF", the parameter ranges -0.8 or 0.8 to 1.			
Step The minimum difference value between two consecutive dispatching instructions			
Hysteresis range** When the parameter "Q-Method" is set to PF, dispatching maintains to be PF±1			

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable.

step 4 After finishing parameter setting, click "Save" to save the operation.

- - End

^{**} Only when the control method is set to "Open loop control" and the Q-Method to "PF" or when the control method is set to "Closed-loop control", a Smart Energy Meter is selected, and the Q-Method is set to "PF", the parameter "Hysteresis range" is settable.

9.3.2.5 Digital Input

When using the digital signal at the DI port of the Logger1000 as the dispatching input, set the reactive control mode to "Digital input".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the reactive control mode to "Digital input".
- step 3 Set DI control parameters. For specific parameter description, refer to the following table.

table 9-10 Parameter description

Parameter	Description	
Communication	Communication is abnormal, and specified dispatch output	
abnormality output (%)	value is delivered.	
	Open loop control: Reactive instruction controlled by DI is	
	sent to power output port of the inverter, thereby achieving	
	active power control.	
	Closed-loop control: Reactive instruction controlled by DI is	
	used as target value and reactive power and power factor of	
Control method	the meter need to be collected and used as input	
	parameters, and reactive power compensation ratio is	
	calculated and sent to power output port of the inverter.	
	Generally, this strategy is used for improving the power	
	factor of the property boundary point.	
Select energy meter*	Select Smart Energy Meter involved in power regulation	
Control cycle	Time interval of delivering dispatching instructions	
	Parameter range: 5~60s	
O Mathad	PF: set the power factor as the target value	
Q-Method	%: set reactive power percentage	

Note: *Only when the control method is set to "Closed-loop control", the parameter "Select energy meter" is settable.



The open-loop control has the "PF" Q-Method, and the closed-loop control has the "PF" Q-Method only when the meter is selected.

step 4 Add digital input manner

Select the desired DI channel, fill in the "Percentage "(PF), and click "Save".

- - End

Subsequent Operation

Delete digital input manner: select a digital input manner that needs to be deleted, and click "Clear data".

9.3.2.6 Country Mode

If the dispatching input must be the national power dispatching instruction, the active control mode is set to "Country mode".

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the reactive control mode to "Country mode".
- step 3 Select a country, PPC type, and instruction type, and click "Save".
 - --End

9.3.2.7 Scheduling prohibited

Set the reactive control mode to "Scheduling prohibited" if the Logger1000 is prohibited to perform reactive dispatching on the inverter.

- step 1 Click "Power control" -> "Reactive power" to enter the reactive power interface.
- step 2 Set the reactive control mode to "Scheduling prohibited" and click "Save".

- - End

9.3.3 Emergency Button

In inverters need to be stopped in batch, select the button "Emergency button".

Click "Power control" -> "Emergency button" to enter the corresponding interface.

Parameter	Description	
	Enable: The emergency button is turned on, and inverters are	
	stopped in batch.	
Emergency button	Note: When the emergency button is recovered, and inverters are	
	still in standby mode.It is required to boot the inverters manually	
	via logger or other approaches.	
DI port	Associated with DI5 channel	

10 Device Maintenance

Due to the effect of ambient temperature, humidity, dust and vibration, the inner components of the Logger1000 will be aging and worn out. To ensure the system safety and maintain the efficiency of the Logger1000, it is necessary to carry out routine and periodic maintenance. All measures, which can help the Logger1000 to keep good working conditions, are within the maintenance scope.

10.1 Safety Instructions

10.1.1 Safety Rules

M WARNING

Only qualified personnel can perform the work described in this chapter.

Do not leave any screws, washers or other metallic parts inside the Logger1000 to avoid damages to the Logger1000.

M WARNING

Wait at least 5 minutes after the Logger1000 stops and then perform operations on it.

10.1.2 Five Safety Rules

Respect the following five rules thought the maintenance or service process to ensure personnel safety.

- Disconnect the Logger1000 from all the external connections and internal power supplies.
- Ensure that the Logger1000 will not be inadvertently connected.
- Ensure that the Logger1000 is voltage free with a multimeter.
- · Connect necessary grounding cables.
- Cover the electrical components with insulation cloth during operation.

10.2 Maintenance

Recommended routine maintenance work is shown in the following table.

10 Device Maintenance User Manual

Item	Method		
	Check to make sure there is no strong EMC interference device around the Logger1000		
Working environment	 Check to make sure there is no hot source around the Logger1000. 		
	Check to make sure there is no corrosive materials around the Logger1000		
Hardware maintenance	 Check to make sure the power supply voltage is normal Check to make sure the cables are connected firmly Check to make sure the grounding cable is grounded properly 		
System cleaning	Clean the enclosure, circuit board and the components Check the heat dissipation hole and the ensure it is not covered		
Terminal and cable connection	Check if the screws of the control terminals are loose. Refasten them with screwdriver if necessary; Check if the connection copper bar or screws are discoloring. Visually check the wiring layout and the device terminal connection		
Software maintenance	 Log in Web to check the device communication situation Log in Web to check the parameter setting of the Logger1000 Log in Web to check the software version of the Logger1000 		

10.3 Troubleshooting

MARNING

The grounding cable must be grounded reliably. Otherwise, electric shock can cause personal injury!

The common faults and troubleshooting is shown in the table below. If the problem still cannot be removed by following the instruction in this manual, please contact SUNGROW.

User Manual 10 Device Maintenance

Fault	Cause	Corrective measures
Power-on fault	The power supply terminal of the Logger1000 has no power connection Power source failure Logger1000 fault	 Connect the power cable to the power supply terminal of the Logger1000 Replace the power source Contact SUNGROW
Cannot find any device	 The RS485 port is not connected to any devices or the connection cable is loose or connected reversely. The RS485 communication parameters are set incorrectly. The devices that do not support automatic search are not manually added, such as Meteo Station and Smart Energy Meter. The address of the manually added device is inconsistent with the actual device address Device does not operate normally. 	 1. Check the RS485 communication cable connection; reconnect and tighten the cable if necessary. 2. Check the RS485 communication parameter setting; and make sure the Baud rate and the communication address setting are correct. 3. Manually add the devices such as Meteo Station and Smart Energy Meter. 4. Check the device address setting. 5. Check the device operation status.

10 Device Maintenance User Manual

Fault	Cause	Corrective measures
The Logger1000 displays the device state as disconnection	1. Communication cable between the device and the Logger1000 is loose or disconnected. 2. The device operates abnormally 3. The device is removed or its configuration is changed	1. Check the cable connection between the device and Logger1000; and reconnect and tighten the cable if necessary. 2. Power on the device if the device connection is correct 3. Check if there is a device replaced. If so, research or add the device manually. If the device is removed, conduct the "Device List" operation
Cannot communicate with the background	 The network between the Logger1000 and the background is failed. Network parameter setting is incorrect. The forwarding protocol configuration is incorrect. 	through the "Delete". 1. Check if the Ethernet port of the Logger1000 is connected to the PC or router correctly. 2. Check if the network parameter is set correctly. 3. Check if the forwarding protocol is set correctly.

11 Appendix

11.1 Technical Data

Communication	
Max. number of devices	30 at most
Communication ports	
RS485 interface	3
Ethernet	1 x RJ45, 10/100/1000Mbps
Digital input	5, Max. 24VDC
Analog input	4, support 4 ~ 20mA or 0 ~ 10VDC
Wireless Communication	
	LTE(FDD): B1, B3, B5, B8
	LTE(TDD): B38,B39, B40, B41
	TD-SCDMA: B34, B39
4G Communication	CDMA: BC0
	GSM: 900/1800 MHz
	WCDMA: B1, B8
	802.11 b/g/n/ac; HT20/40/80MHz; 2.4GHz/
WLAN communication	5GHz
Power Supply	
DC input	24VDC, max. current: 1.2A
DC output	24VDC, 0.5A
Power consumption	<10W
Ambient Conditions	
Operating temperature	-30°C ~ +60°C
Storage temperature	-40°C ~ +80°C
Relative air humidity	≤95% (no condensation)
Elevation	≤4000m
Protection class	IP20
Mechanical Parameters	
Dimensions (W x H x D)	200 x 110 x 60 mm
Weight	500 g
Mounting type	Top-hat rail mounting/ wall mounting



11 Appendix User Manual

11.2 Dry Contact Wiring Cable

The wiring cable used for each Logger1000 dry contact needs to meet the requirements in the following table.

Dry contacts	Specification requirements	
	Use outdoor UV rated twisted pair with a shielding layer.	
RS485	The recommended cable diameter is 0.75~1.5mm².	
	The maximum wiring distance should be less than 1000m.	
	The recommended cable diameter is 0.75mm ² .	
Al	The recommended maximum wiring distance is 10m.	
-	The recommended cable diameter is 0.75mm².	
DI	The recommended maximum wiring distance is 10m.	
Ethernet	Use cat5e or higher specification network cable.	
Ethernet	Communication distance should be less than 100m.	
	The recommended cable diameter is 4~10mm².	
PLC	The maximum wiring distance is 100m.	
	Cable withstand voltage to ground must be greater than 1000V	

11.3 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

Conditions

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

Exclusion of Liability

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- · The device is damaged during transport.
- · The device is incorrectly installed, refitted, or used.
- The device operates in harsh environment, as described in this manual.

User Manual 11 Appendix

• The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.

- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.

Software licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

11.4 Contact Information

In case of questions about this product, please contact us.

We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Fault code/name
- · Brief description of the problem

For detailed contact information, please visit: https://en.sungrowpower.com/contactUS.

