




Quick guide


smart SILENO free



What's in your box

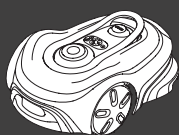


Robotic lawn mower

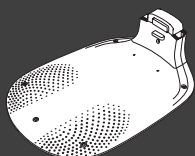

Charging station
baseplate



Charging top &
charging module

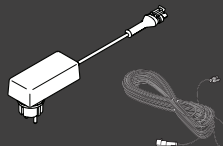

Power supply &
low-voltage cable



Screws & allen
key to attach the
charging station



GARDENA smart Gateway,
LAN-cable & power supply



Installation aid

What else you need



Mobile device
Use the app to control and make
settings for your robotic lawn mower

Getting started with the GARDENA robotic lawn mower

For more information, read the operator's manual supplied with the product.



Before the installation


For an easy installation make sure that the grass is not higher than 4 cm when you install the robotic lawn mower.

Good to know: The robotic lawn mower is rainproof and does not need a garage or other shelter.

Criteria for placing the charging station:

- On level ground.
- Near an electrical outlet.
- Obstacle-free 6 m space in front of the charging station.
- The docking point will be placed in front of the charging station and needs to have unimpeded sky view.

To connect the charging station

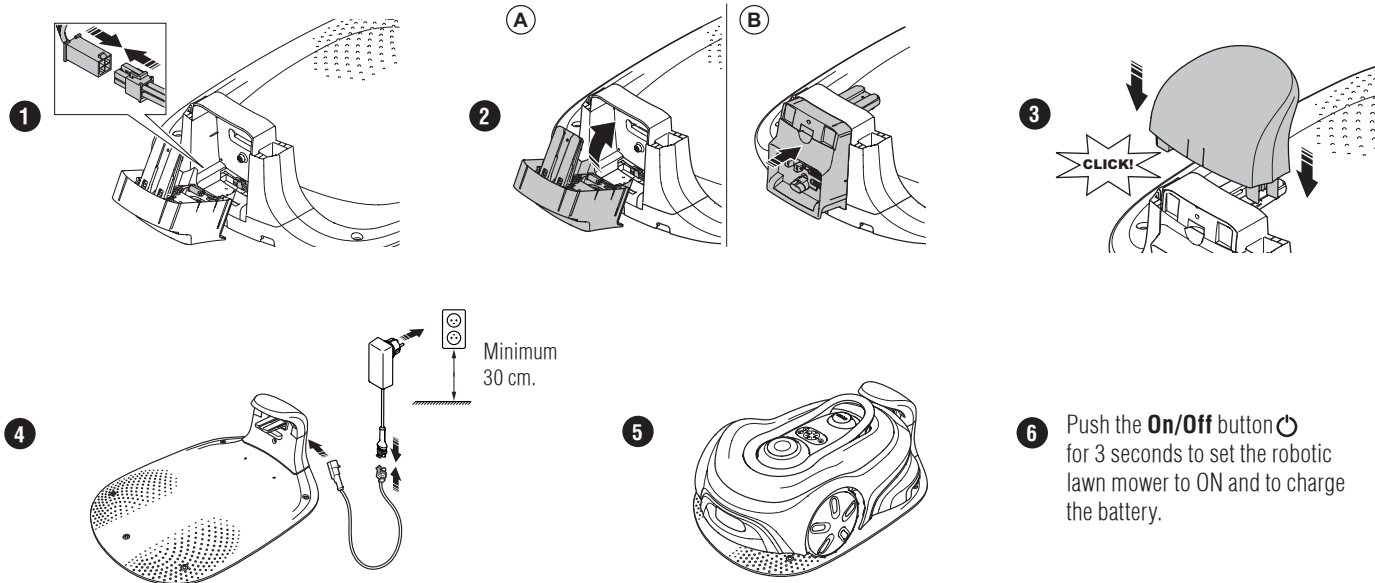

To download and pair with the GARDENA smart system App

- Install the GARDENA smart Gateway and read the instruction for the GARDENA smart system.
- Use the QR code or visit your app store to download the GARDENA smart system App.
- Open the app and register as a user.
- Select "Include product" on the overview page in the app.
- Push the On/Off button for 3 seconds to set the robotic lawn mower to ON.
- Enter the factory PIN code 1234 with the keypad on the robotic lawn mower.
- Push the Connectivity button on the robotic lawn mower to enable the pairing operation mode.
- Follow the instructions and enter the factory pin code 1234. Change to a new pin code in the app's settings.




System description

The system contains a robotic lawn mower, a charging station and the GARDENA smart Gateway. For installation of virtual boundaries, the product uses satellites and correction data to navigate. The correction data is received through the GARDENA smart Gateway.


To make an installation the product is operated with Remote control in the GARDENA smart system App. Waypoints are added to make a map in the app. The virtual boundary is installed around an area to specify where the product can operate. The product only cuts grass in the mowing areas. The No-go zones are areas where the product cannot enter. The product uses the docking point in front of the charging station to navigate to and from the charging station.

Connectivity overview

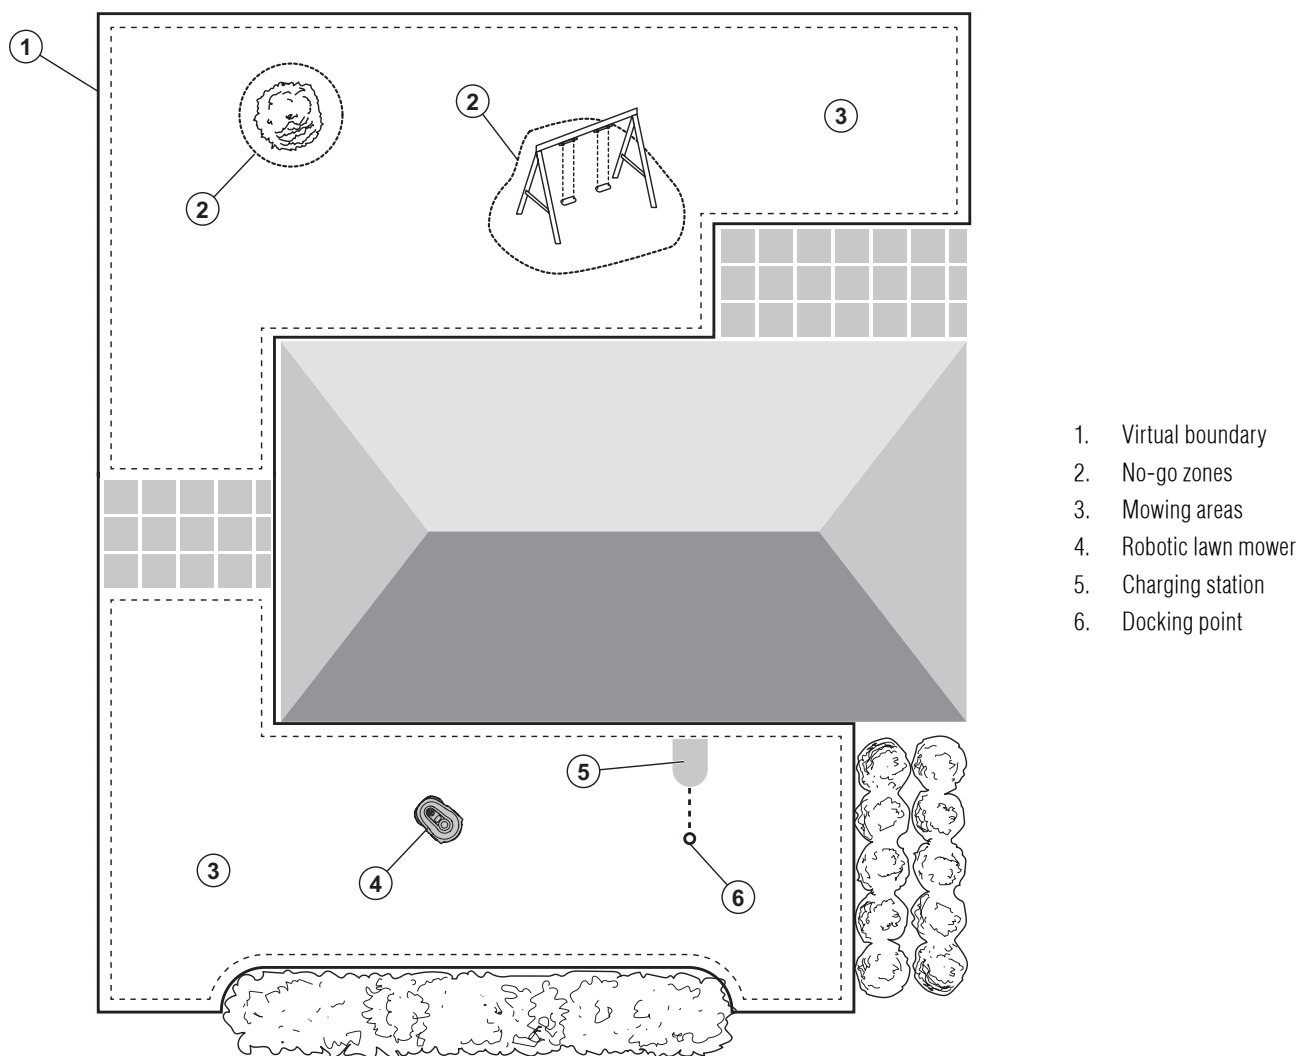


Operating modes for the robotic lawn mower and LED status lights


Start the robotic lawn mower with the app or use the **On/Off** button  and enter the PIN code on the robotic lawn mower. Push the **Start** button  and then the **OK** button  Push the **STOP** button to stop the robotic lawn mower. There are 4 light modes on the LED indicator: the light flashes quickly (A) the light is solid (B), the light is out (C), and the light pulsates (D).




While the robotic mower is parked, you may set it to idle and select a different operating mode by pushing the **STOP** button.

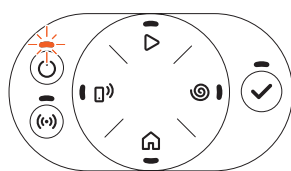


Standby.

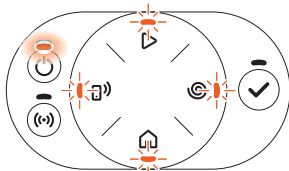


Waiting for PIN code.

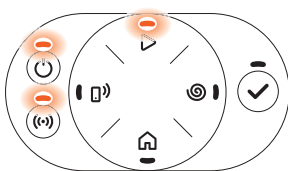


Cutting according to the set Schedule or in operating mode Override schedule.

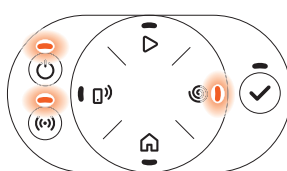


Cutting, in operating mode SpotCut.

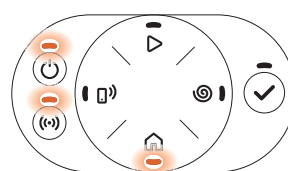


Parked until the next schedule or Parked until further notice.

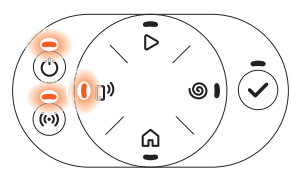


The product operates remotely by the app.

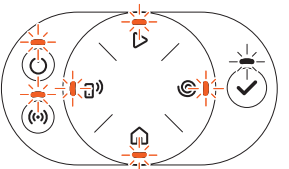

Error.

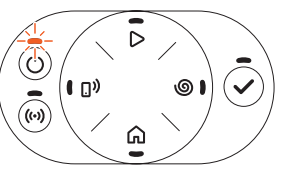

Error after 3 minutes.

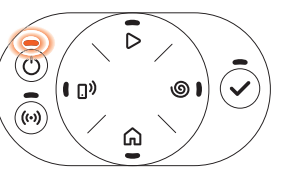

Charging.

❏ Learn more about operating modes and error messages in the operator's manual.

GARDENA smart system



Download the GARDENA smart App

Download on the
App Store

GET IT ON
Google Play

The right to make changes without prior notice is reserved.
Copyright © 2025 GARDENA Manufacturing GmbH. All rights reserved.
www.gardena.com

1144054-26



2024-12-16



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by GARDENA is under license.

App Store and Apple logo are trademarks of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.

gardena.com