

[Home](#) » [MASTECH](#) » **MASTECH MS8250D Digital Multimeter True Rms User Guide**

- 1 Safety instructions
- 2 Contents
- 3 Specifications
- 4 Assembly Instructions
- 5 1 YEAR LIMITED WARRANTY
- 6 Documents / Resources
- 7 Related Posts

The special attention should be paid when using the test and measurement instrument because the improper usage may cause electric shock and damage the equipment.

- Use proper measurement category (CAT), voltage, and amperage rated probes, test leads, and adapters for the measurement.
- Do not use or store the device around explosive gas, vapor, or under high temperature and humidity.
- When handling the test probes and crocodile clips, keep your fingers behind the physical guard.
- Examine the measuring test leads (if present) before use. Any element of which the insulation is deteriorated (even partially), replace them with proper functional test leads.
- Connect the common test lead before the live test lead and remove the live test lead before the common test lead.
- Before measuring current, make sure the instrument fuses available and disconnect the power supply to the circuit test
- Remove the batteries if the device is not used for an extended period of time, or if stored in temperatures above 45 °C. If the batteries are not removed, battery leakage can damage the device.


Contents



Specifications

Range	Resolution	Accuracy
V~ 660mV 6.6V/66V 660V/1000V	0.1mV 1mV/10mV 0.1V/1V	±(1.5%+5) ±(1.2%+5) ±(1.0%+3)
V= 660mV 6.6V/66V/660V/1000V	0.1mV 1mV/10mV/0.1V/1V	±(0.8%+3) ±(0.5%+5)
A~ 660μA/6600μA/66mA/660mA 10A	0.1μA/1μA/10μA/0.1mA 10mA	±(1.5%+5) ±(3.0%+5)
A= 660μA/6600μA/66mA/660mA 10A	0.1μA/1μA/10μA/0.1mA 10mA	±(1.0%+5) ±(2.0%+5)
R 660Ω/6.6kΩ/66kΩ/660kΩ/6.6MΩ 66MΩ	0.1Ω/1Ω/10Ω/0.1kΩ/1kΩ 10kΩ	±(0.8%+5) ±(1.5%+5)
C 6.6nF 66nF/660nF/6.6μF/66μF/660μF 6.6mF/66mF	1pF 10pF/0.1nF/1nF/10nF/0.1μF 1μF/10μF	±(4.0%+5) ±(3.0%+3) ±(4.0%+5)
Hz 66Hz/660Hz/6.6kHz/66kHz 660kHz/6.6MHz/66MHz	0.01Hz/0.1Hz/1Hz/10Hz 0.1kHz/1kHz/10kHz	±(1.5%+5) ±(1.5%+5)
Hz% 0.1%~99.9%	0.1%	±(2.0%+5)

Assembly Instructions

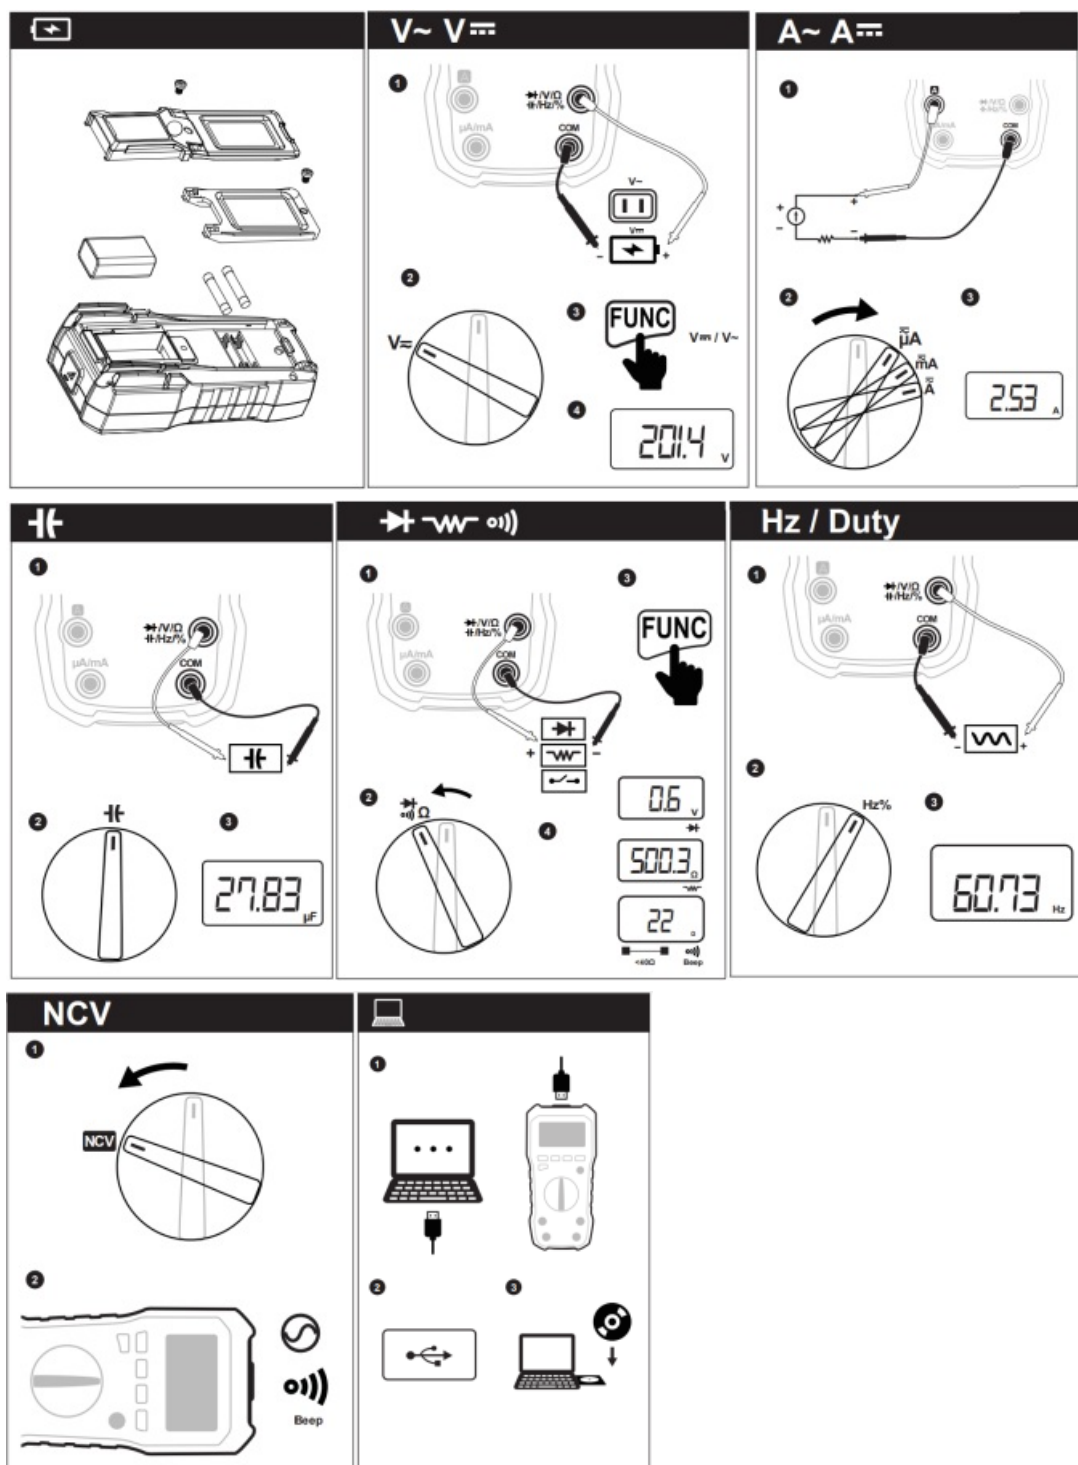

1 YEAR LIMITED WARRANTY

EMEA

MGL EUMAN S.L.

C/ Picu Castiellu, Parcelas i1-i4 33163,
Argame Morcín, Asturias, Spain

Tel: +34 985-08-18-70

Email: cs.emea@mgl-intl.com

USA

MGL AMERICA, INC.

2810 Coliseum Centre Drive,

Ste. 100 Charlotte,

North Carolina 28217 USA

Tel: +1 833-533-5899

Email: cs.na@mgl-intl.com

UNITED KINGDOM

MGL GROUP U.K. LIMITED

14 Weller St, London, SE1 1QU, UK

Tel: +34 985-08-18-70

Email: cs.uk@mgl-intl.com

MEXICO & LATAM

MGL LATAM S.A DE CV

Colonia Industrial Vallejo Del.

Azcapotzalco 02300,

Mexico D.F

Tel: +1 833-533-5899

Email: cs.latam@mgl-intl.com



Documents / Resources



[MASTECH MS8250D Digital Multimeter True Rms](#) [pdf] User Guide
MS8250D, Digital Multimeter True Rms