



MAX PROP Automatic Feathering Patented Propeller Instruction Manual

[Home](#) » [MAX PROP](#) » MAX PROP Automatic Feathering Patented Propeller Instruction Manual 



INSTRUCTION MANUAL



MAX PROP® PROPELLER
EASY / WHISPER / ANTISHOCK model
Automatic feathering patented propeller

PART ONE

MAX PROP® EASY / WHISPER / ANTISHOCK MODEL PROPELLER INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Contents

1 INTRODUCTION

2 CHECKS TO BE CARRIED OUT BEFORE INSTALLING THE PROPELLER ON THE PROPELLER SHAFT

3 HOW TO INSTALL THE PROPELLER ON THE PROPELLER SHAFT

4 CHECKS TO BE CARRIED OUT BEFORE LAUNCHING THE BOAT

5 WARNINGS FOR THE USE OF THE PROPELLER

6 PROPELLER MAINTENANCE

7 HOW TO PULL THE PROPELLER OFF THE PROPELLER SHAFT

8 A. THE IMPORTANCE OF THE PROPELLER PITCH

9 B. HOW TO CHANGE THE PITCH OF THE PROPELLER

10 C. HOW TO ESTABLISH THE PITCH VARIATION

11 GENERAL SALES TERMS AND CONDITIONS FOR MAX PROP® PROPELLERS

12 Documents / Resources

12.1 References

INTRODUCTION

Thank you for choosing a MAX PROP® feathering propeller, EASY/ WHISPER / ANTISHOCK model. This instruction manual is used to answer your questions about installing and operating the propeller. Before installing the propeller on the boat, it is essential to read it carefully.

The propeller is supplied already assembled with the theoretical optimal forward pitch and the theoretical optimal backwards pitch, based on the data provided by the customer at the time of the order, so that it can be mounted directly on the propeller shaft.

Please note that the propeller does not and must not be opened for any reason.

Opening the propeller will void warranty. All operations that the user must or wishes to perform (maintenance and possible pitch adjustment) are performed by acting exclusively on the external surface of the propeller body.

CHECKS TO BE CARRIED OUT BEFORE INSTALLING THE PROPELLER ON THE PROPELLER SHAFT

a. Without inserting the key, check that the conical part of the propeller shaft fits perfectly with the conical part of the hole in the hub.

b. Check that the direction of rotation of the propeller matches the direction of rotation of your propeller shaft. Please note that in order to understand the direction of rotation of the propeller shaft, you need to look at the propeller shaft from the stern towards the bow. If the propeller shaft turns clockwise when shifting into forward gear, the rotation is right-handed. On the contrary, if the propeller shaft turns counter-clockwise when shifting into forward gear, the rotation is left-handed. In order to check the direction of rotation of the propeller, you need to look at the propeller from the stern to the bow.

If, by rotating the propeller clockwise, the blades push the water towards the stern, that is, they make the boat move forward, the propeller is righthanded.

On the contrary, the propeller is left-handed.

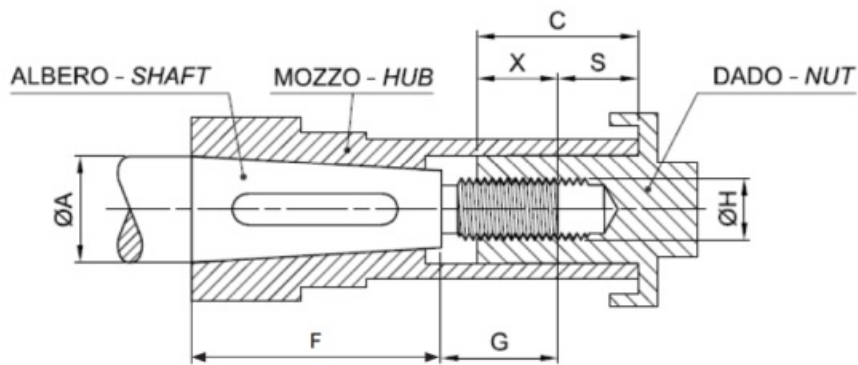


fig. 1

c. Check the screwing length of the nut (refer to fig.1 where the screwing length is indicated with "X"). To check this we suggest inserting the propeller onto the conical end of the propeller shaft and pushing it against the cone of the shaft (carry out this operation without inserting the key). When the propeller is against the shaft cone, measure the distance between the end of the shaft and the end of the hub (indicated in the figure with "S"). The length "X" is obtained by subtracting the length "S" from the length of the nut "C". The length "X" must be less than "G" and it is recommended that "X" is greater than 0,8 times the thread diameter indicated with "ØH".

d. Verify that the key is of the appropriate size:

1. check that the width of the key is neither too large nor too small. To check this, insert the key into the respective seats, into the hub and into the shaft.
2. Check that the thickness of the key is not too small. The key must protrude from the propeller shaft
3. check that the thickness and length of the key are not too large. To check this we suggest to insert the propeller onto the propeller shaft without inserting the key. Mark with a tip the precise position where the propeller hub locks onto the tapered shaft. Then remove the propeller and insert it again after inserting the key into its seat on the propeller shaft. The following situations can occur:

- The hub reaches the identical position traced previously. In this case the dimensions of the key are correct.
- The hub does not reach the previously traced position. In this case the dimensions of the key must be reduced as follow: If the hub cone fits perfectly with the shaft cone, the thickness of the key must be reduced. If the two cones do not match and the propeller "dashes" on the shaft, the length of the key must be reduced. It may happen that both the thickness and the length of the key need to be reduced.

HOW TO INSTALL THE PROPELLER ON THE PROPELLER SHAFT

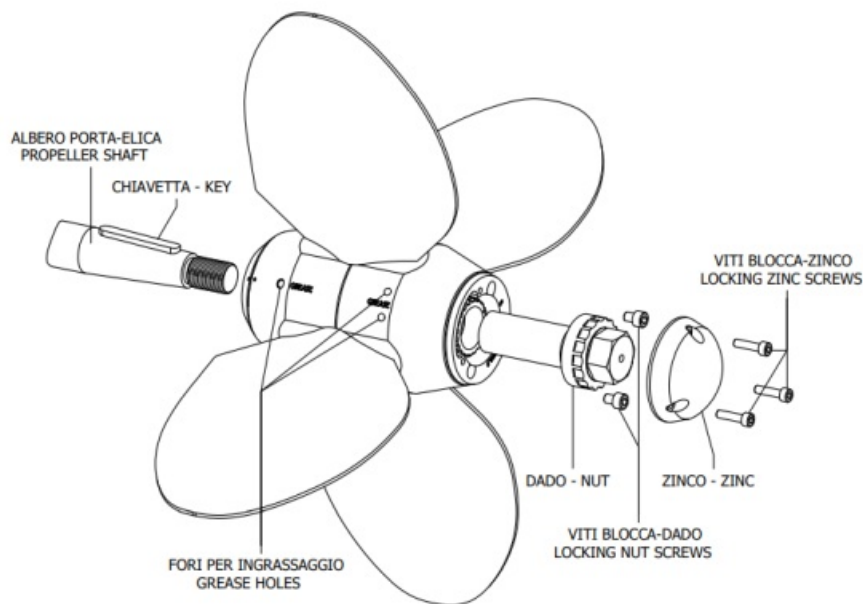


fig. 2

- Insert the already assembled propeller onto the propeller shaft (refer to fig. 2).
- Insert the nut into its seat, screw it in and lock it by using the two locking nut screws that must be inserted in their seats and then tighten. The nut tightening torque must not be too high (approximately 20/30 Nm for propeller shafts smaller than 35 mm and approximately 30/40 Nm for propeller shafts larger than 35 mm). This is to prevent (in the event of any irregularities in the machining of the propeller shaft) the stem and the head of the nut from being forced and jammed inside their seat, thus making it difficult to unscrew when the propeller is removed. To ensure that the above does not occur, it is recommended (after screwing the nut to abutment and before inserting the two locking nut screws) to unscrew the nut a few turns in order to ensure that it rotates freely in both the screwing and unscrewing directions. Then return the nut to the abutment position and secure it with the two locking nut screws.

CHECKS TO BE CARRIED OUT BEFORE LAUNCHING THE BOAT

- Check that the propeller body is free to rotate with respect to the propeller shaft, so that the blades can move freely from the forward position to the reverse position and vice versa. To verify that this happens, hold the propeller body and the propeller shaft separately with your hands. It is important that, during rotation, the blades do not touch your hands. For greater clarity, video instructions are available at the following address <https://max-prop.it/download/?lang=en>
- Check that the propeller is full of very fluid grease and that the grease seeps out of the propeller. If this is not the case, proceed as indicated in paragraph 5.d.
- Ensure protection of the propeller against galvanic corrosion by applying appropriate zinc anodes which must be in electrical contact with the bronze.

WARNINGS FOR THE USE OF THE PROPELLER

- The reverse gear must always be engaged starting from the forward gear position. Therefore, before engaging the reverse gear, the forward gear must be engaged for a moment.
- In order to have the propeller blades feathered, the rotation of the propeller shaft must be blocked, even for a few seconds, while the boat moves forward with a speed of at least 5-6 knots and the propeller blades are arranged in the forward position (if the blades are arranged in the reverse position the propeller does not feather). If the inverter is mechanical, it is sufficient to stop the engine leaving the forward gear engaged.
- If the inverter is mechanical, bear in mind that when the boat is sailing only (with the engine off), the propeller shaft must be left free to rotate by placing the gear in neutral. It is important NOT to sail with the gear engaged. This rule always applies, and becomes essential on fast boats, such as catamarans.

d. During motor navigation, bear in mind that if the engine is turbocharged and is run at low RPM for a long time, the turbine tends to get dirty. It may happen that when accelerating, the engine will not be able to pick up all the revolutions. This drawback is due solely to the engine and not to an excessive propeller pitch. To avoid this it is necessary, every two hours or so, to put the engine in neutral and let it reach maximum RPM for a few seconds. This procedure is expressly suggested by all marine engine manufacturers.

PROPELLER MAINTENANCE

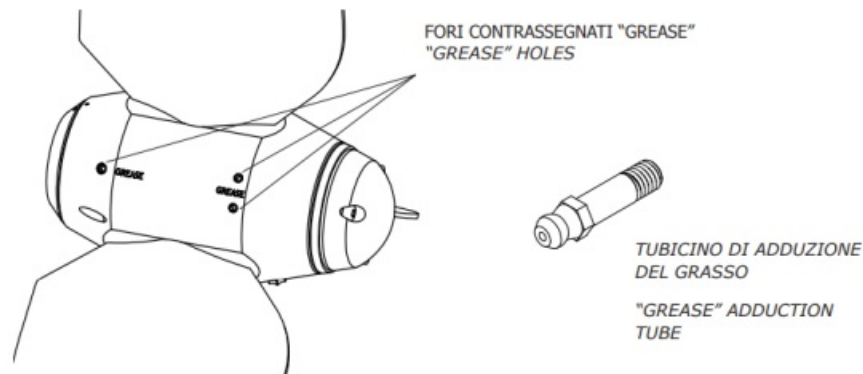


fig. 3

a. The propeller is delivered filled with fluid grease. On average, once a year it is recommended to top up the propeller body with fluid grease. Proceed as follows, referring to figure 3:

- Fill the propeller body completely with fluid grease through the designated holes marked "grease" (see fig. 3).
- Start with a first hole of your choice
- Remove the locking threaded grub screw from the hole.
- Screw the grease inlet tube into the hole (the tube is supplied with the propeller).
- Start injecting grease into the propeller body by applying pressure. Keep the injection pressure applied until the injected grease begins to seep out of the propeller body both through its joints and the surfaces of the elements which, during operation, must rotate with respect to the propeller body (blades and hub). At this point the sector relating to the first hole is full of grease.
- The grease must be fluid and must drip to ensure that, even without the thrust of the grease pump, it will keep seeping from the propeller body, ensuring the lubricating effect on the surfaces that must rotate relatively to one another.
- Remove the grease inlet tube and close the hole by re-tightening the locking grub screw.
- Repeat the same operation on each of the other holes marked "grease" so as to ensure that each sector of the propeller body inside is completely filled with grease.
- All the above operations are performed by acting exclusively on the external surface of the propeller body.

b. The propeller must be protected against galvanic corrosion by applying the appropriate zinc anode, which is supplied with the propeller.

- The zinc anode must be fixed in its seat (obtained outside the propeller body) using the appropriate screws, supplied with the propeller.
- On average once a year the zinc anode, even if it has not corroded, must be replaced with a new anode.
- The zinc anode must be in electrical contact with the bronze of the propeller. If the contact surfaces between zinc and bronze are encrusted, it is advisable to clean them by using an abrasive cloth.

HOW TO PULL THE PROPELLER OFF THE PROPELLER SHAFT

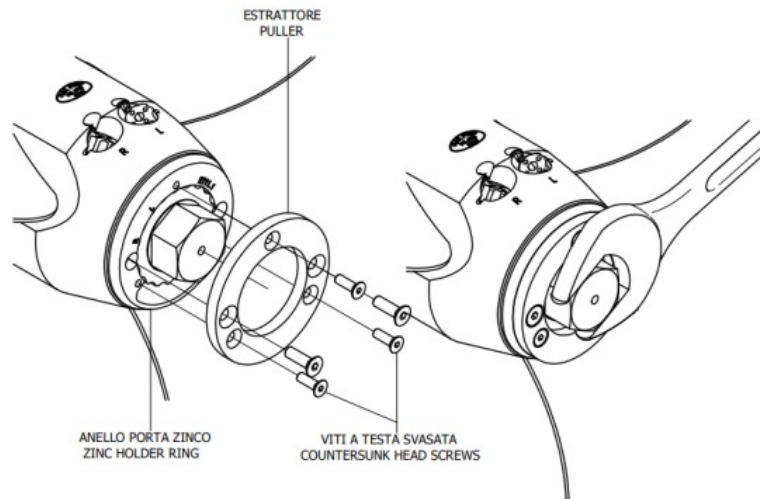


fig. 4

Please proceed by referring to fig. 4:

- Remove the zinc.
- Remove the two locking nut screws.
- Please check that the nut is free to come loose and check which direction of rotation causes the unscrewing of the nut (in most cases, the nut will unscrew if it is rotated counter-clockwise).
- Screw the nut back in until it is moved again to abutment against the propeller.
- Fasten the puller (consisting of a perforated washer) to the zinc-holding ring by using special countersunk head screws.
- In each threaded hole of the zinc-holding ring, a countersunk head screw for locking the puller must be inserted. Check that all screws work together to hold the puller pressed against the zinc-holding ring. To do this, the longer countersunk head screws must be screwed into the holes where the locking nut screws were housed, whereas the shorter countersunk screws must be screwed into the holes where the locking zinc screws were housed.
- It is very important to check that each countersunk head screw for locking the puller, is neither too long nor too short. Each screw must be tightened into its own threaded hole for a length not less than its own diameter. The same screw, when fully screwed (and tightened against the puller) must NOT touch the bottom of its threaded hole.
- Gently unscrew the nut, ensuring that all countersunk head screws work together to bear the load necessary for pull the propeller out. That is, all countersunk head screws hold the puller pressed against the zinc-holding ring.
- Gradually increase the nut unscrewing torque. It is recommended not to exceed 100-200 Newton/metre (which corresponds to a load of 10-20 kg on a lever that is one metre long) and to apply the unscrewing force with pauses in between.
- After each pause and before reapplying the load for unscrewing the nut, it is important to check that all countersunk head screws for securing the puller have not loosened. In the event of loosening, each screw must be retightened against the puller.
- When the unscrewing of the nut has tensioned all screws, use a plastic mallet to tap the propeller body. These taps will cause the propeller hub to detach from the propeller shaft.

PART TWO

POSSIBILITIES OFFERED BY YOUR

MAX PROP® EASY / WHISPER / ANTISHOCK MODEL

A. THE IMPORTANCE OF THE PROPELLER PITCH

As is known, the function of the propeller is to transform the power supplied by the engine into thrust for the boat. The most important parameter, which determines the level of propeller performance, is the pitch. In fact, even small changes in pitch involve changes in the navigation speed. The second important parameter is the diameter which, however, has less influence than the pitch. In fact, a small change in the propeller diameter, with the same pitch, does not involve any change in the navigation speed. All the other characteristics of the propeller have negligible influence compared to the pitch and diameter.

The MAX PROP® EASY / WHISPER / ANTISHOCK model propeller is supplied with the two optimal theoretical pitches already set based on the requests and the data provided by the customer at the time of ordering. In any case, an innovative device patented by Max Prop® offers, if the user so wishes, the possibility of easily and precisely varying the forward pitch and the reverse pitch, independent of each other. For convenience, all propeller pitches are “improperly” expressed in degrees.

B. HOW TO CHANGE THE PITCH OF THE PROPELLER

In the body of MAX PROP® EASY / WHISPER / ANTISHOCK model propeller are inserted two screws/rods and two grub screws that prevent the rotation of the two screws/rod (see fig. 5). A screw/rod is used to adjust the change in forward gear pitch. A screw/rod is used to adjust the change in the reverse gear pitch.

Each of the two pitches is changed by simply varying the depth of penetration into the propeller body of the respective screw/rod.

Eight grooves are carved in the head of each screw/rod for housing the locking grub screw. This grub screw must be removed before starting the pitch change operation and must be reinserted when the operation is completed.

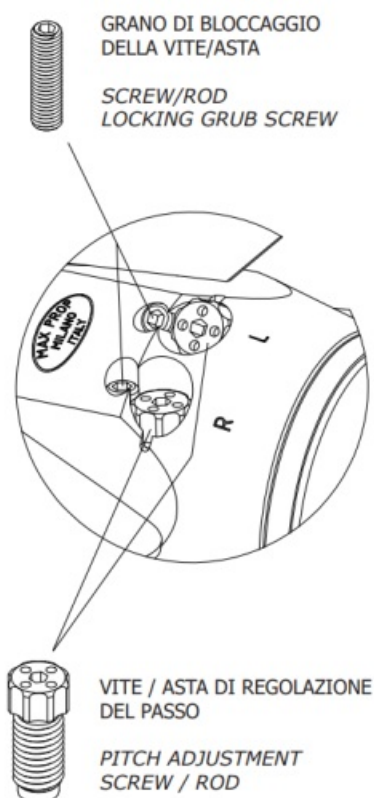


fig. 5

FORWARD

If the propeller is right-handed, the forward gear pitch is changed by operating on the screw/rod inserted in the threaded hole “R” (right). If the propeller is left-handed, the forward gear pitch is changed by operating on the screw/rod inserted in the threaded hole “L” (left). In case of doubts in understanding the direction of rotation of the propeller shaft, see section 2.b.

The forward gear pitch increases if the depth of penetration into the propeller body of the respective screw/rod is increased. On the contrary, the forward gear pitch decreases if the depth of penetration into the propeller body of the respective screw/rod is decreased.

If the screw/rod, already inserted and set in its seat, is rotated clockwise by an angle of 45° (which corresponds to a gap between two adjacent grooves formed on the head of each screw/rod), the forward gear pitch will increase by half a degree (0.5°). Conversely, if the screw/rod, already inserted and set in its seat, is rotated counter-clockwise by an angle of 45°, the forward gear pitch will decrease by half a degree (0.5°).

BACKWARD

If the propeller is right-handed, the reverse gear pitch is changed by operating on the screw/rod inserted in the threaded hole "L" (left). If the propeller is left-handed, the reverse gear pitch is changed by operating on the screw/rod inserted in the threaded hole "R" (right). In case of doubts in understanding the direction of rotation of the propeller shaft, see section 2.b.

The reverse gear pitch increases if the depth of penetration into the propeller body of the respective screw/rod is decreased. On the contrary, the reverse gear pitch decreases if the depth of penetration into the propeller body of the respective screw/rod is increased.

If the screw/rod, already inserted and set in its seat, is rotated clockwise by an angle of 45° (which corresponds to a gap between two adjacent grooves formed on the head of each screw/rod), then the reverse gear pitch will decrease by half a degree (0.5°). Conversely, if the screw/rod, already inserted and set in its seat, is rotated counter-clockwise by an angle of 45°, the reverse gear pitch will increase by half a degree (0.5°).

C. HOW TO ESTABLISH THE PITCH VARIATION

In most cases it is not important to know the absolute value of the forward pitch and the reverse pitch already set, it is instead important to establish the possible variation you may wish to make.

The user must first establish what is the target cruising RPM, and, consequently, what is the maximum RPM that the engine must reach at maximum acceleration.

- If the engine does not reach the decided maximum RPM, the pitch must be decreased.
- If the engine exceeds the decided maximum RPM, the pitch must be increased.

If you rotate the forward screw/rod clockwise by one groove, you obtain that at the same navigation speed, the engine RPM decreases by approximately 2.5%, and at the same engine RPM, the navigation speed increases by approximately 2.5%.

On the contrary, if you rotate the forward screw/rod counterclockwise by one groove, you obtain that, at the same navigation speed, the engine RPM increases by approximately 2.5%, and at the same engine RPM, the navigation speed decreases by approximately 2.5%.

GENERAL SALES TERMS AND CONDITIONS FOR MAX PROP® PROPELLERS

1. These general sales terms and conditions apply to all Max Prop propellers' sales agreements and to all relations arising out of, inherent in or, in any way, consequent to them.
2. As soon as the goods are ready, Max Prop s.r.l. gives notice to the customer who must take care of the collection.
 - 2.a. Place of delivery, with consequent transfer of all liabilities and risks to the purchaser, is seller's Ex-Works (EXW) at the workshop of Max Prop s.r.l. located in Milan, at Viale Carlo Espinasse no. 101, and the goods will always travel under the responsibility of the purchaser, at their own risk. Therefore, by delivering the goods to the carrier, Max Prop s.r.l. cannot be held in any way responsible for any damage that may occur due to loading, mislaying, theft, damage, loss or delay in the delivery of the goods.
 - 2.2. At the customer's request, if Max Prop s.r.l. ships the goods via the carrier, which must in any case be indicated by the customer, it shall always act on behalf of the customer, and the customer shall be responsible for any inherent and consequent liability due to transport. In this case, the cost of the goods will include the shipping cost. This cost never comprises any kind of transport risk insurance. In the event that the customer wishes to insure the goods, the customer shall take care of this, at its own expense. In the event of mislaying, theft, damage, loss of the goods during transport or in the event of delayed delivery, the purchaser may exclusively take action against the forwarding agent and/or the carrier appointed, with express exemption of Max Prop s.r.l. from any related liability.
3. The propellers sold by Max Prop s.r.l. are warranted for a period of 12 (twelve) months from delivery. Any

defects found by the customer must be reported, under penalty of voiding the warranty, within and no later than 8 (eight) days from delivery by means of a written communication. The repair or replacement of the goods under warranty, as set out at point 5 below, does not extend the warranty validity period, which remains set at 12 (twelve) months from the first delivery of the goods.

4. The warranty does not cover parts subject to wear and tear and damages resulting from improper use of the goods, as well as all cases in which the defect is due to any cause other than and not related to manufacturing. The goods under warranty must not be subjected by the customer to any repair work on their own or by third parties, unless expressly authorised and agreed with Max Prop s.r.l., under penalty, at fault, of exclusion and voiding of the warranty.

- 4.1. The components of each propeller must not be modified by the customer in any way and for any reason.

- 4.2. The components of each single propeller, none excluded, are not interchangeable between one propeller and the other.

- 4.3. The propeller must be used in strict accordance with the instructions provided in the manual, paying particular attention to the warnings.

- 4.4. Failure to comply with points 4.1, 4.2 and 4.3 shall result in the exclusion and voiding of the warranty.

- 4.5. Likewise, the warranty is void if the defect has nevertheless occurred due to the customer's failure to comply with the requirements regarding the assembly, operation and maintenance of the item as set out in the instruction manual.

5. In the event that the goods are recognised by Max Prop s.r.l. as actually different or flawed due to manufacturing or material defects, the customer will only be entitled to repair or replacement of the original propeller parts free of charge. The warranty is therefore limited solely and exclusively to the repair or replacement of the faulty propeller free of charge, with the express exclusion of any other liability of Max Prop srl for any direct, indirect, financial and non-financial damages (none excluded) to property or persons.

Max Prop srl will not, under any circumstances and for any reason whatsoever, pay any indemnity, compensation and/or refund of any kind, not even in part. This warranty replaces and excludes all other warranties, expressed or implied, that are required by law.

6. In the case referred to in the previous point, any repairs under warranty will be carried out by Max Prop s.r.l. at its workshop located in Milan, at Viale Carlo Espinasse no. 101.

The customer will be responsible for sending the propeller intact and complete with all its parts to this workshop. Until the receipt of the goods by Max Prop s.r.l., the risk of mislaying, theft, damage, loss of the goods or delay in delivery lies entirely with the customer. Once the goods have been received, Max Prop s.r.l., having verified the actual existence of the defect and the absence of causes for the exclusion of the warranty, will decide at its sole discretion whether or not to proceed with a repair or replacement of the propeller.

7. These general sales terms and conditions are integral and substantial part of any purchase agreement stipulated with Max Prop srl.

8. These general sales terms and conditions and related sales agreements are governed by the Italian law. Any disputes arising out of, relating to or in any way resulting from this agreement, its interpretation, application and performance shall fall under the exclusive jurisdiction of the Court of Milan, to the exclusion of any other court.

9. The official and binding text of these general sales terms and conditions is only that which is written in Italian. Any translations into other languages are merely a matter of courtesy.

It is therefore established that, in case of any divergence, only the Italian text will have value to any effect of law.

10. The purchaser acknowledges and agrees that the sale price of the propeller has also been determined in consideration of the acceptance by the purchaser of these general sales terms and conditions. By accepting


this agreement, the purchaser excludes and in any case waives any kind of exception, dispute, request and/or claim.



manufactured by: MAX PROP®
viale Carlo Espinasse, 101 – 20156 Milano – ITALY
tel. +39 02 33 404 325 – skype: maxprop1
www.maxprop.it – info@maxprop.it



Documents / Resources

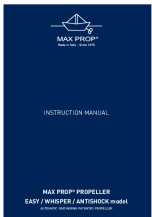	<p>MAX PROP Automatic Feathering Patented Propeller [pdf] Instruction Manual Automatic Feathering Patented Propeller, Feathering Patented Propeller, Patented Propeller, Propeller</p>
--	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.