



Mesqool CR01001eM Extra Loud Dual Alarm Clock with Vibration User Manual

[Home](#) » [Mesqool](#) » Mesqool CR01001eM Extra Loud Dual Alarm Clock with Vibration User Manual 

Mesqool CR01001eM Extra Loud Dual Alarm Clock with Vibration User Manual



Contents

1 LOCATION OF CONTROLS

2 POWER RESOURCES

3 TIME SETTING

4 ALARM SETTING

5 DIMMER

6 DST

7 USB CHARGING

8 Vibrator


9 Contact our expert

10 Documents / Resources

10.1 References

11 Related Posts

LOCATION OF CONTROLS

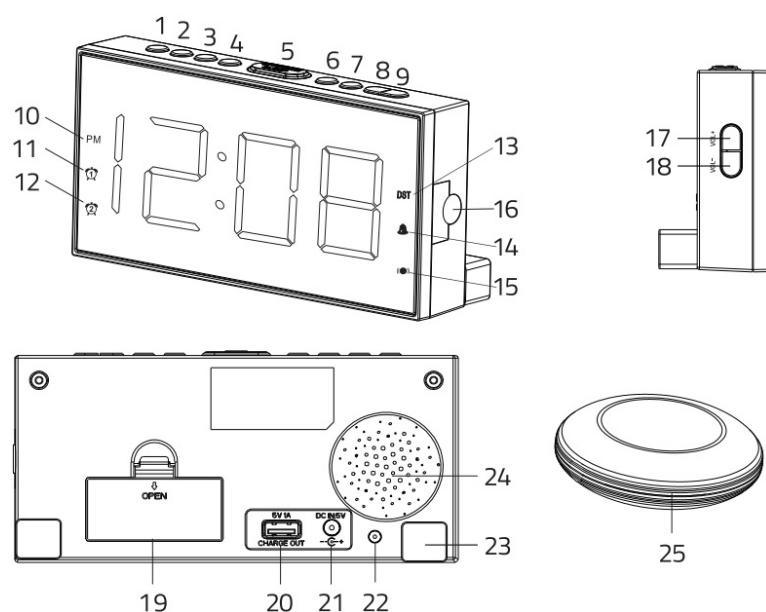

1. Set Time & 12/24H Button
2. Hour Button
3. Minute Button
4. Dimmer & DST Button
5. OK & SNOOZE Button
6. Alarm Pause Button
7. Alarm OFF Button
8. Alarm 1 Button
9. Alarm 2 Button
10. PM Indicator
11. Alarm 1 Indicator
12. Alarm 2 Indicator
13. DST Indicator
- Note:** Batteries are not included
14. Bell Indicator
15. Vibrator Indicator

15. Bell & Vibrator Toggle Button
16. Volume + Button
17. Volume – Button
18. Battery Compartment
19. USB Port
20. DC Jack
21. Vibrator Insert Port
22. Holder (x 2pcs)
23. Speaker
24. Vibrator

POWER RESOURCES









Insert the two included holders into the back of the clock to avoid it being knocked over.

1. Install 2pcs 1.5V “AAA” size batteries to the proper terminals in the battery compartment to memorize the time setting in case of power outage.

NOTE: Batteries(not included) don't support time display but can memorize time & alarm setting and trigger an alarm in case of AC power failure.





2. Connect the adapter line to DC jack, then plug into a 100~240V AC wall power outlet.



TIME SETTING

1. Press  button once, display  starts flashing.
2. Press  button to set the hour press  button to set the minute.
3. Press  button or  button to save time or wait for 5 seconds to confirm automatically.
4. To change 12H/24H time format Hold press  button to switch 24H time format. Hold press  button again to switch 12H time format.

ALARM SETTING

Set the Alarm

1. Press  button, the alarm indicator  will light up, the display – starts flickering.
2. Press  button to set the hour, press  button to set the minute.



3. Press  button or  button to save alarm time or just wait for another 5 seconds to confirm automatically or.



4. Push  or  button to adjust alarm volume.

Setting ALARM 2 is the same as ALARM 1.









Turn off Alarm

When alarm goes off:


1. Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
2. Press  button to turn off today's alarm.

The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours

3. Cancel Alarm

- Press  button to turn off alarm 2 permanently, corresponding indicator  turn off. Press  button again to turn off alarm 1 permanently, corresponding indicator  will turn off.
- If alarm 1 goes off, then press  button, just turn off alarm 1 permanently.  indicator will turn off.
- If alarm 2 goes off, then press  button, just turn off alarm 2 permanently.  indicator will turn off.

DIMMER


Repeatedly press  button to adjust the brightness of display for your preference.

There are 5 levels, The sequence is as follows:


3-4-5-4-3-2-1-2-3.....

DST



Hold press  button to switch to DST function.
DST indicator will turn on.




Hold press  button again to turn off DST function.
DST indicator will turn off.

USB CHARGING


Plug charging cable into device such as phone or tablet.
Device can charge your phone or tablet at the same time.



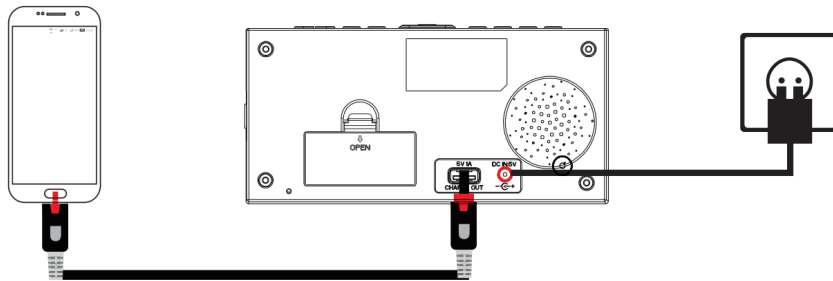



The maximum charge currents 1 Ampere.

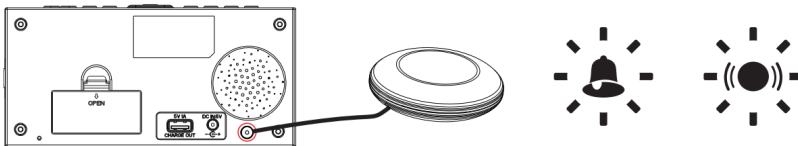

Vibrator

1. Insert the vibrator plug into the vibrator jack of the machine, the bell indicator and the vibrator indicator will light up, indicating that the bell and the vibrator will be effective at the same time.



2. Press **BUZZ/VIB** button, the ring indicator  goes off, and the vibrator indicator  stays on, which means that when the alarm goes off, the vibrator will take effect, but the bell will not sound.
3. Press **BUZZ/VIB** button again, the ring indicator  goes on, and the vibrator indicator  goes off, which means that when the alarm goes off, the bell will sound, but the vibrator will not shake.
4. Press **BUZZ/VIB** button again, the ring indicator  and the vibrator indicator  goes on, which means that when the alarm goes off, the bell and the vibrator will be effective at the same time.


2-3-4 will continue to loop.

Contact our expert

Amazon.ca: support-ca@mesqool.com
Amazon.com: support-us@mesqool.com



Documents / Resources

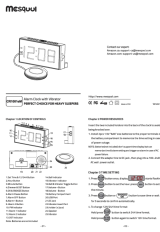	<p>Mesqpool CR01001eM Extra Loud Dual Alarm Clock with Vibration [pdf] User Manual CR01001eM Extra Loud Dual Alarm Clock with Vibration, CR01001eM, Extra Loud Dual Alarm Clock with Vibration, Dual Alarm Clock with Vibration, Alarm Clock with Vibration, Clock with Vibration</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.