




## mesqool CR01001F Alarm Clock with Time Projection User Manual

[Home](#) » [Mesqool](#) » mesqool CR01001F Alarm Clock with Time Projection User Manual 

# Mesqool

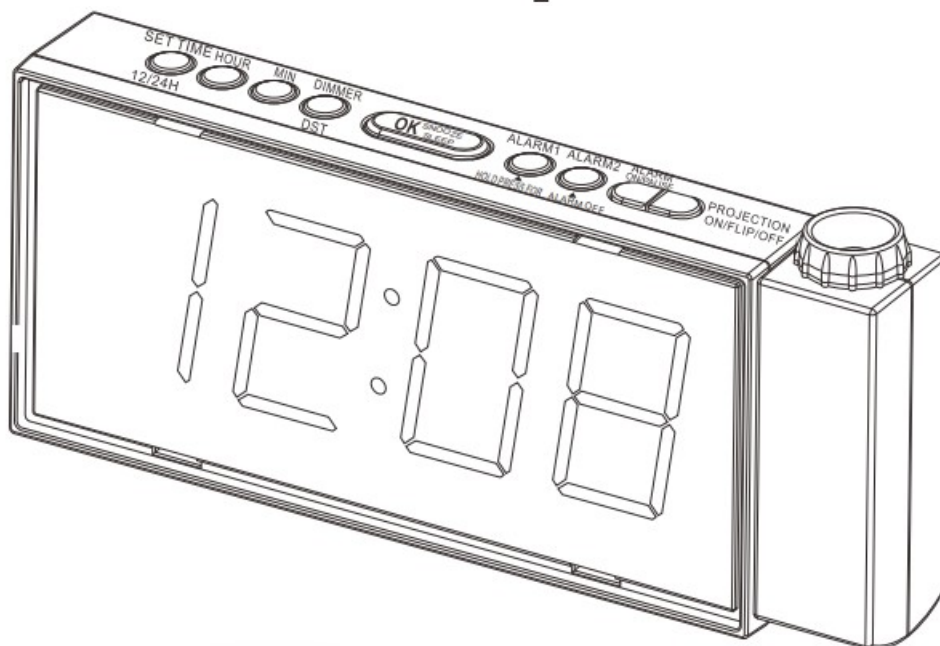


**CR01001F**  
**Alarm Clock with Time Projection**  
**CREATE YOUR PERFECT SLEEP ENVIRONMENT**

## Contents

- 1 Chapter 1 LOCATION OF CONTROLS
- 2 Chapter 2 POWERING ON
- 3 Chapter 3 TIME SETTING
- 4 Chapter 4 ALARM SETTING
- 5 Chapter 5 PROJECTION MODE
- 6 Chapter 6 PROJECTION DIMMER
- 7 Chapter 7 DIMMER & DST
- 8 Chapter 8 USB CHARGING
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

## Chapter 1 LOCATION OF CONTROLS

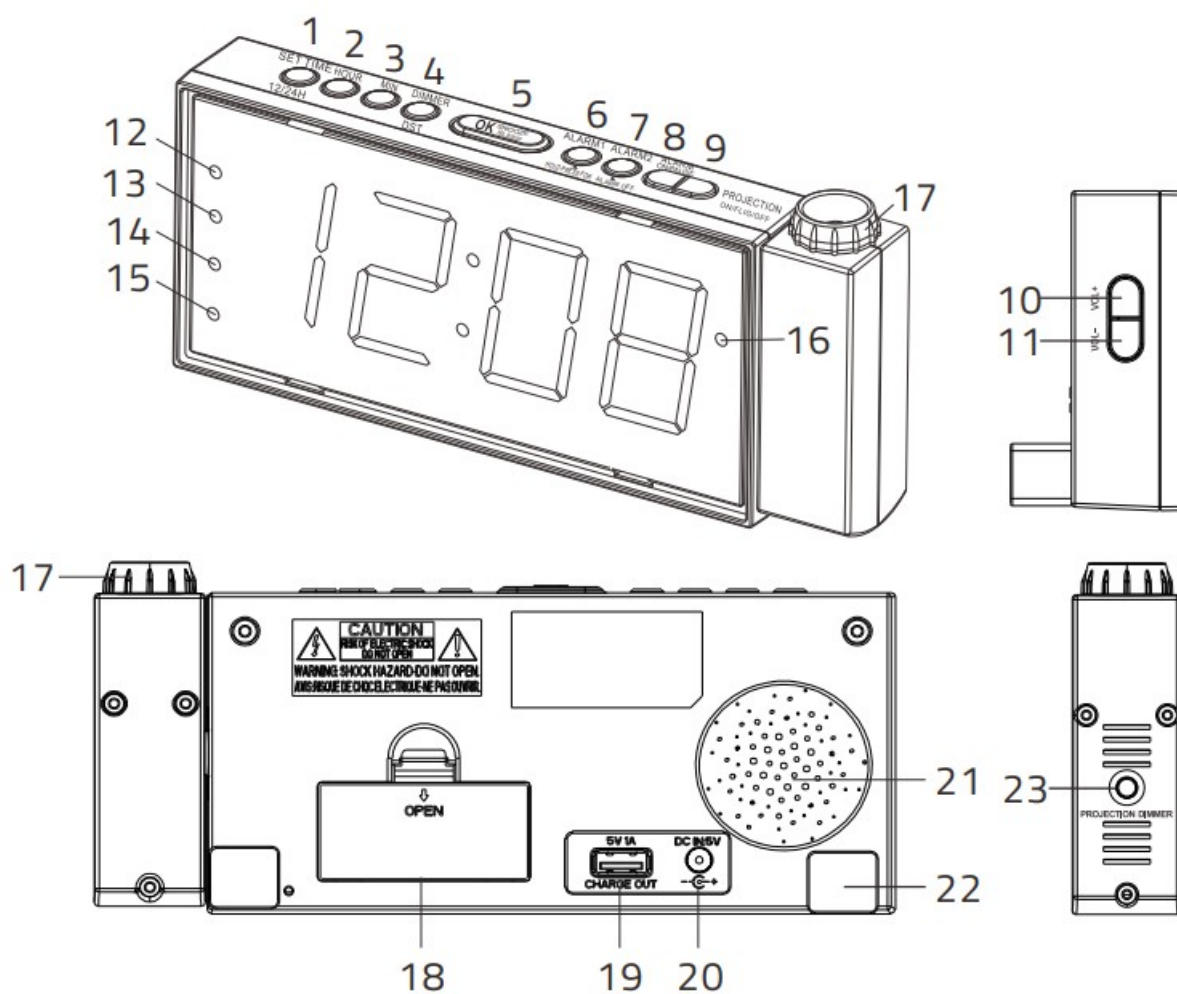

- 1.SET TIME BUTTON
- 2.HOUR BUTTON
- 3.MINUTE BUTTON
- 4.DIMMER/DST BUTTON
- 5.SNOOZE/OK BUTTON
- 6.ALARM 1
- 7.ALARM 2
- 8.ALARM ON/PAUSE
- 9.PROJECTION ON/FLIP/OFF
- 10.VOLUME+ BUTTON
- 11.VOLUME- BUTTON
- 12.AM INDICATOR


- 13.PM INDICATOR
- 14.ALARM 1 INDICATOR
15. ALARM 2 INDICATOR
16. DST INDICATOR
17. FOCUS RING
18. BATTERY COMPARTMENT
19. USB PORT
20. DC JACK
- 21.SPEAKER
- 22.HOLDER ( x 2pcs)
23. PROJECTION DIMMER

## Chapter 2 POWERING ON





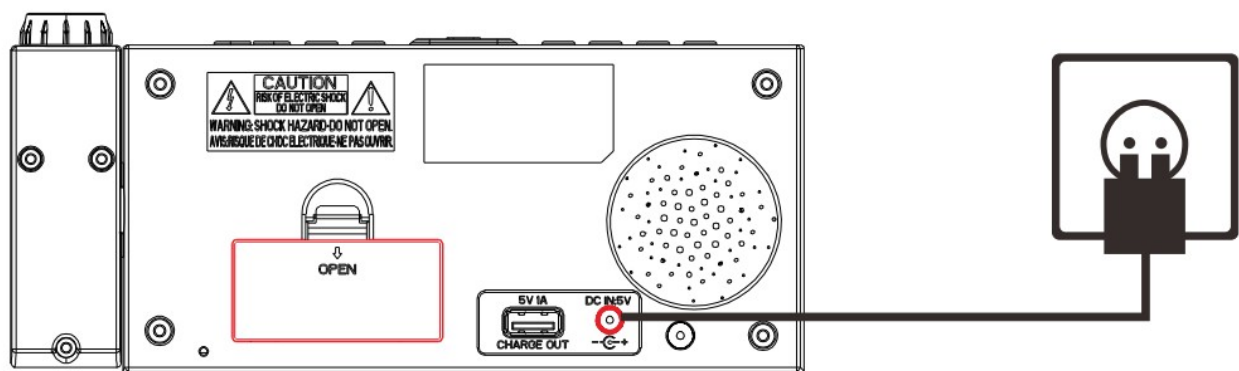

1. Install 2pcs 1.5V “AAA” size batteries to the proper terminals in the battery compartment to memorize the time/alarm setting in case of power outage.

**Note:** Without AC power in, batteries don't support time display ,but alarm will still goes off.








2. Connect the adapter line to DC jack , then plug into a 100~240V AC wall power outlet.



## Chapter 3 TIME SETTING

1. Press  button once, display  starts flashing.
2. Press  button to set the hour. press  button to set the minute.
3. Press  button to save time or wait for another 10 seconds to confirm automatically.
4. To change 12H/24H time format Hold press  to change 12H/24H time format.

## Chapter 4 ALARM SETTING

1. Press  button, the alarm indicator  will light up, the display  starts flickering.
2. Press  button to set the hour, press  button to set the minute.
3. Press  button or  button to save alarm time or just wait for another 10 seconds to confirm automatically.


5. Press  button to save volume setting.


When alarm goes off:

- #### 4. Cancel Alarm

Hold press  button until the alarm indicator  will disappear from the display, the alarm will never goes off.

## Chapter 5 PROJECTION MODE

3. Press  once again to turn off projection.

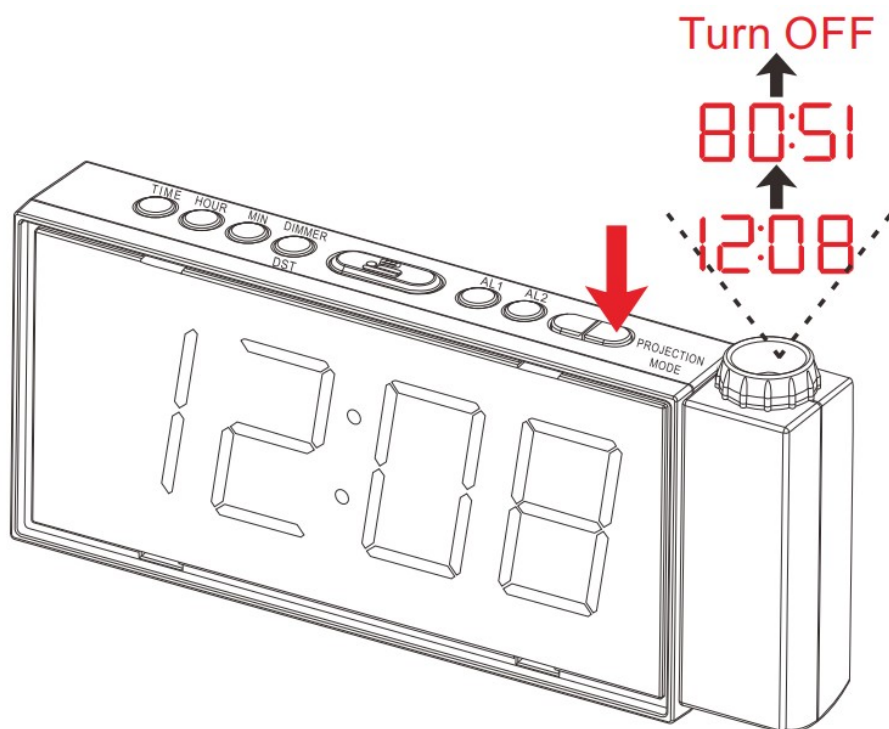

**Note:**


1. Best projection distance is 1.5 to 3.0 meters (4.92 to 9.84 feet).

2. Projector is a common LED light. So the projector is not visible in bright environment.




4. Rotate focus ring to adjust clarity of projection image.


**Note:** if projection is fuzzy, please rotate the focus ring (17) to adjust angle for clear image.

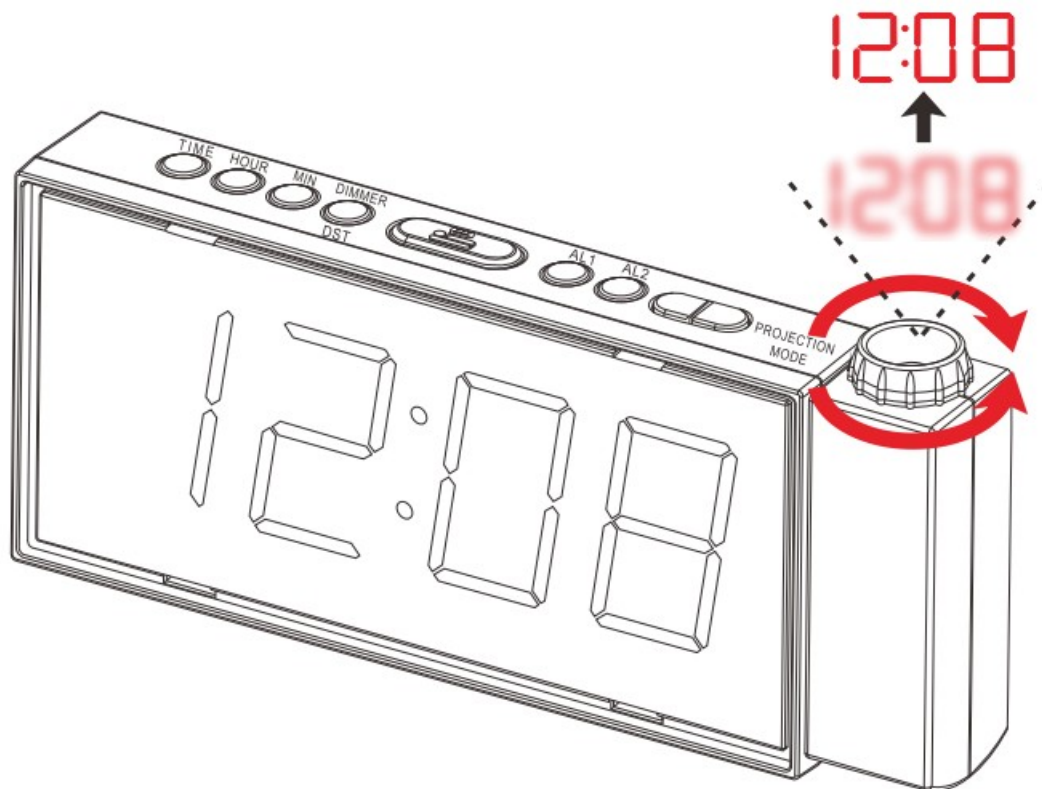


## Chapter 6 PROJECTION DIMMER

Press  button to adjust the brightness of projection for your preference.


## Chapter 7 DIMMER & DST

Repeat press  button to adjust the brightness of display for your preference.

Hold press  button to switch DST function.

## Chapter 8 USB CHARGING

Our projection clock has a USB Charger Port, which can charge both your phone or tablet at the same time. The maximum charge current is 1 Ampere.

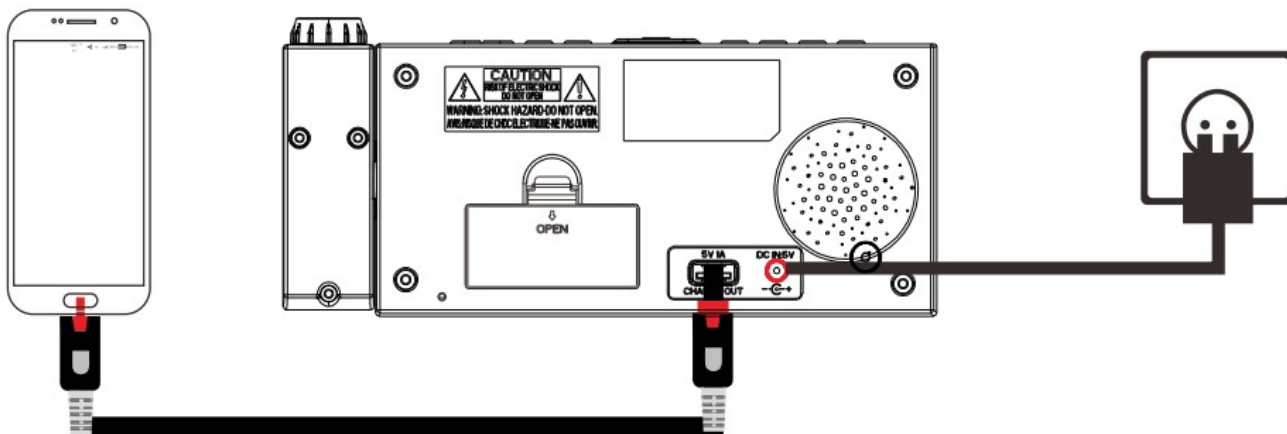

# Mesqool

Contact our experts

[support@mesqool.com](mailto:support@mesqool.com)

<http://www.mesqool.com>



Made in China  
Version 3.0

## Documents / Resources

	<p><a href="#">mesqool CR01001F Alarm Clock with Time Projection</a> [pdf] User Manual CR01001F Alarm Clock with Time Projection, CR01001F, Alarm Clock with Time Projection, Clock with Time Projection, Time Projection, Projection</p>
--	---

## References

- [Mesqool | Home](#)
- [User Manual](#)