



Contents [[hide](#)]

- [1 Mesqool CR1028EM Upgraded Simple Loud Alarm Clock](#)
- [2 Locations of Controls](#)
- [3 Package Lists](#)
- [4 Time Setting](#)
- [5 Alarm Setting](#)
- [6 Night Light](#)
- [7 Charging Other Devices](#)
- [8 Warranty Service](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)


Mesqool

Mesqool CR1028EM Upgraded Simple Loud Alarm Clock



Locations of Controls

1.

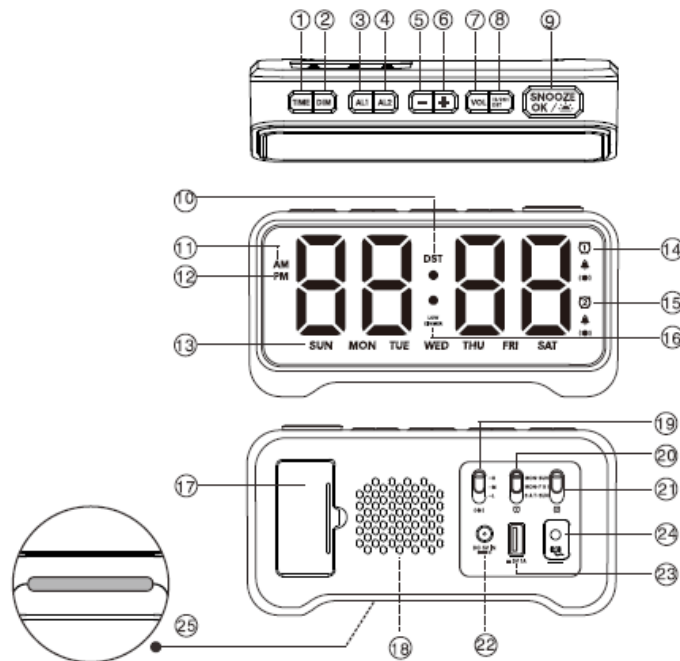


Set Time

2. Dimmer
3. Alarm 1
4. Alarm 2
5. — button
6. + button
7. Volume
8. /241-1 DST
9. Snooze/ OK/Night Light
10. DST Indicator
11. AM Indicator
12. PM Indicator
13. Week Display
14. Alarm 1 Indicator
15. Alarm 2 Indicator
16. LOW Dimmer Indicator
17. Battery Compartment
18. Speaker
19. Vibration Intensity
20. Day Selection for Alarm 1
21. Day Selection for Alarm 2
22. DC Jack

- 23. USB Output Port
- 24. Vibrator Insert Port
- 25. Night Light

Package Lists


- 1x Alarm Clock
- 1x Adapter(DC 5V/2A)
- 1x Bed Shaker(Length:1
- 1x Cable(Length:1.5M/5ft)
- 1x User Manual .8M/6ft)

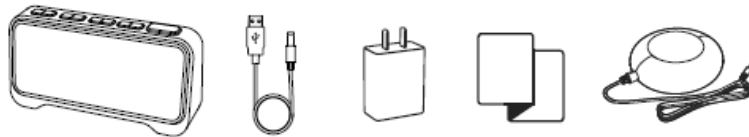

Installation Notes

1. Connect the power cord to the DC jack, and plug into a 100-240V AC wall power outlet.
2. Install 2pcs 1.5V “AAA” batteries to the proper terminals in the battery compartment to memorize the time setting and the alarm will ring in case of power outage.

Note: Batteries are not included and don't support time display or any other functions.

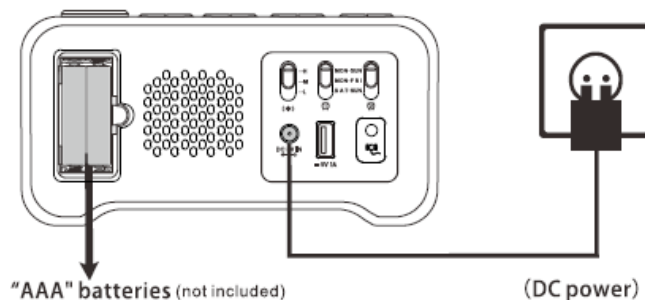

Time Setting

1. Press the “TIME” button to enter the time setting mode. The week digits will start flashing. Use the “+” and “-” buttons to select the day of a week.
2. Press the “TIME” button again to enter the hour setting mode. The hour digits will start flashing. Use the “+” and “-” buttons to adjust the hour display.

3. Press the “TIME” button again to enter the minute setting mode.

The minute digits will start flashing.



Use the “+” and “-” buttons to adjust the minute display.

4. Press the “TIME” button to confirm the time, or wait for another 10 seconds to confirm automatically.



Alarm Setting

Set the Alarm


1. Slide the Period Range switch for Alarm 1 on the back to choose the period range.
Press “AL 1” button the alarm 1 indicator will light up.
2. Press “AL 1” button again, the hour digits will start flashing.
3. Use the “+” and “-” buttons to set the hour.
4. Press the “AL 1” button once more, the minute digits will start flashing. Use the “+” and “-” buttons to set the minute.
5. Press the “AL 1” button again to save the alarm settings, the   icon starts flashing.

6. Repeat-press” – “or” + “button • to choose the 3 wake-up modes “Single Buzzer” or “Single vibrator” or” Buzzer+ vibrator”, and press the “AL 1” button again to confirm your choice.



Set the Wake up Mode

1. Wake up by buzzer sound only: only buzzer indicator lights up.
2. Wake up by bed shaker only: only vibrator indicator lights up
3. Wake up by both buzzer and bed shaker: both buzzer indicator and vibrator indicator light up.

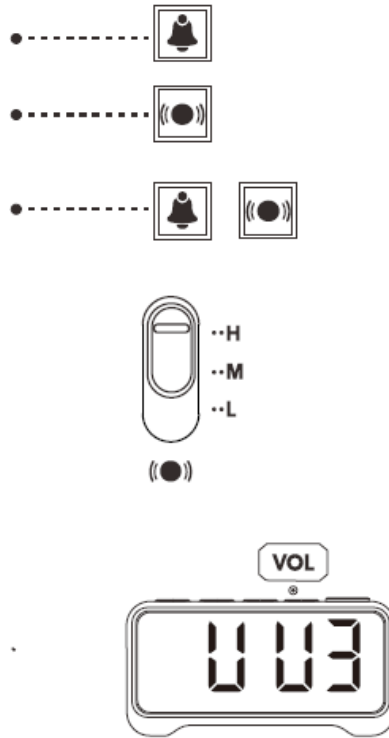

Set the Vibration Intensity Plug in the vibrator and slide the Vibration Intensity switch on the back to adjust the 3-level strength of the bed shaker. **Set the Volume**

Repeat-press the “Vol” button to adjust alarm volume

Turn off Alarm & Snooze Mode

1. When the alarm goes off, press the “SNOOZE/OK/LIGHT” button, the alarm icon will be flashing and alarm will stop temporarily and ring again after 9 minutes. (SNOOZE mode can be recycled 9 times)
2. During the alarm ringing, press the “AL 1” or “AL2” button to turn off the alarm for the current day. The alarm will ring again the next day.
3. If there is no operation after the alarm goes off, the alarm will automatically stop after 60 minutes and ring again the next day

Cancel Alarm

Hold press the “AL 1” button for 3 seconds until the alarm 1 indicator disappears from the display, it will never ring.


Note: The setting method for Alarm 2 is the same as Alarm 1.




12/24H Time & DST Setting

1. Short press the “12/24H DST” button to switch the 12H/24H time format.
In the 12-hour format, an AM/PM icon will be displayed.

2.

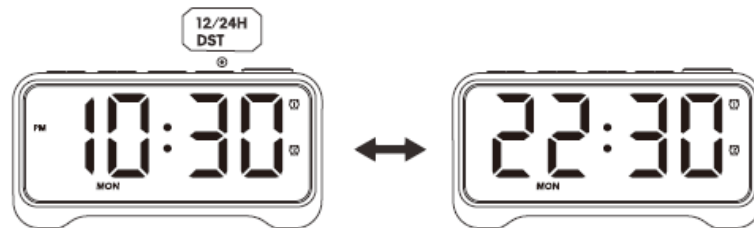

Hold press the ” 12/24H DST” button to turn on or off the DST function.

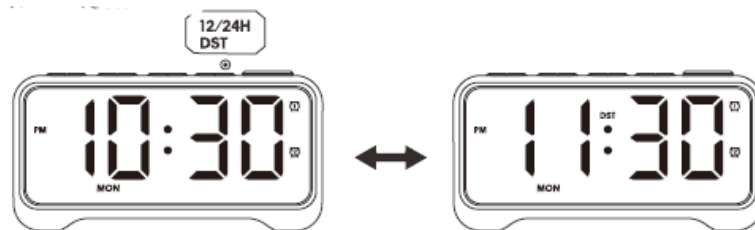


Night Light

- When there is no alarm clock ringing, press the “SNOOZE/OK/LIGHT” button to turn on the night light.
- Repeat-press it to adjust the brightness: High-Medium-Low-OF F.

Brightness Setting


1. Display screen brightness (default L04). Repeat-press the “DIM” button to adjust the brightness of the digits display. It cycles through levels L01 to LOS.
2. When in L01 level, icon appears, the icon will disappear after 20s of display if no operation.

Press “DIM” button once more, the icon will display again.

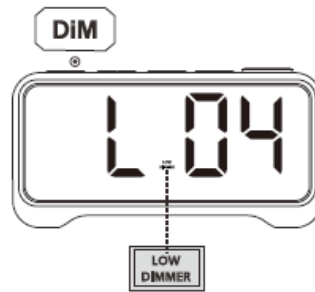

Charging Other Devices

This alarm clock has a USB port, you can charge your mobile device at the same time (charging cable not included), the maximum charging current is 1 Ampere.

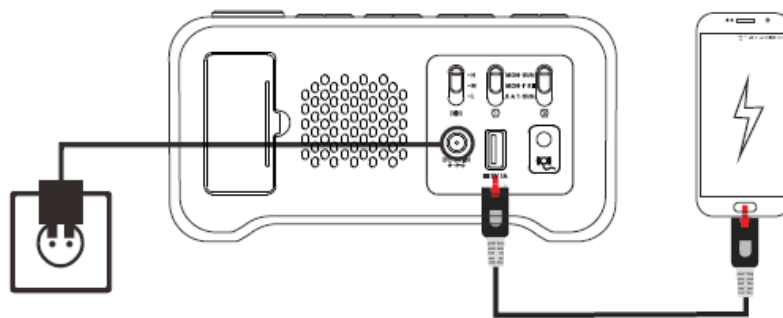

Warranty Service

- **45-Day Full Refund**

If you are unsatisfied with the product or encounter any issues, please contact us promptly for a full refund or technical support.


- **18-Month Warranty**

Within 18 months, if the product has any quality issues, please contact us for a replacement or partial refund.

- **Lifetime Free Customer Support**

We provide lifelong free customer support. If you have any questions or concerns, please don't hesitate to reach out to us.

Documents / Resources

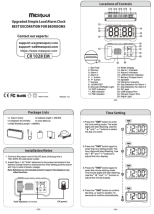

[Mesqool CR1028EM Upgraded Simple Loud Alarm Clock \[pdf\]](#) Instruction Manual
CR1028EM Upgraded Simple Loud Alarm Clock, CR1028EM, Upgraded Simple Loud Alarm Clock, Simple Loud Alarm Clock, Loud Alarm Clock, Alarm Clock

References

- [User Manual](#)

■ Mesqool

◆ Alarm Clock, CR1028EM, CR1028EM Upgraded Simple Loud Alarm Clock, Loud Alarm Clock, Mesqool, Simple Loud Alarm Clock, Upgraded Simple Loud Alarm Clock

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.