

Milesight

Milesight EM400-MUD  
Multi Functional  
Ultrasonic Distance  
Sensor



# Milesight EM400-MUD Multi Functional Ultrasonic Distance Sensor User Guide

[Home](#) » [Milesight](#) » Milesight EM400-MUD Multi Functional Ultrasonic Distance Sensor User Guide 

## Contents

- [1 Milesight EM400-MUD Multi Functional Ultrasonic Distance Sensor](#)
- [2 Product Usage Instructions](#)
- [3 Product Introduction](#)
- [4 Hardware Introduction](#)
- [5 SIM Installation \(NB Version Only\)](#)
- [6 Operation Guide](#)
- [7 Communication Settings](#)
- [8 Advanced Settings](#)
- [9 Maintenance](#)
- [10 Installation](#)
- [11 Communication Protocol](#)
- [12 NB Version](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)
- [14 Related Posts](#)



**Milesight EM400-MUD Multi Functional Ultrasonic Distance Sensor**



## Specifications

- Product Name: Multifunctional Ultrasonic Distance Sensor
- Model: EM400-MUD
- Waterproof Rating: IP67
- Operating Modes: Standard, Trash Bin, Parking Lot
- Additional Sensors: 3-axis accelerometer, temperature sensor
- Communication: Milesight IoT Cloud compatible

## Product Usage Instructions

### Safety Precautions

It is essential to follow the safety precautions to ensure proper operation and longevity of the device:

- Do not disassemble or remodel the device.
- Change the default password (123456) for security purposes during initial configuration.
- Avoid placing the device near naked flames or in extreme temperatures.
- Ensure both batteries are new when installing to maximize battery life.
- Avoid subjecting the device to shocks or impacts.

### Declaration of Conformity

The EM400-MUD complies with CE, FCC, and RoHS requirements. Any unauthorized copying of information in this guide is prohibited.

### Contact Information

For technical support, contact Milesight at:

- Email: [iot.support@milesight.com](mailto:iot.support@milesight.com)
- Support Portal: [support.milesight-iot.com](https://support.milesight-iot.com)
- Telephone: 86-592-5085280

### Revision History

Refer to the revision history for updates and version information.

## Frequently Asked Questions (FAQ)

- **Q: Can the EM400-MUD be used indoors?**

- A: While the device is suitable for outdoor applications, it can also be used indoors depending on the specific use case.

- **Q: How do I change the operating mode of the sensor?**

- A: To change the operating mode, refer to the Operation Guide section in the user manual for detailed instructions on selecting between standard, trash bin, and parking lot modes.

**Multifunctional Ultrasonic  
Distance Sensor  
EM400-MUD  
User Guide**

**Safety Precautions**

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- The device must not be disassembled or remodeled in any way.
- In order to protect the security of the device, please change the device password when first configuration.  
Default password is 123456.
- The device is not intended to be used as a reference sensor, and Milesight won't should responsibility for any damage which may result from inaccurate readings.
- Do not place the device close to objects with naked flames.
- Do not place the device in where the temperature is below/above the operating range.
- Make sure both batteries are newest when install, or battery life will be reduced.
- The device must never be subjected to shocks or impacts.


**Declaration of Conformity**

EM400-MUD is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



**Copyright © 2011-2023 Milesight. All rights reserved.**

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

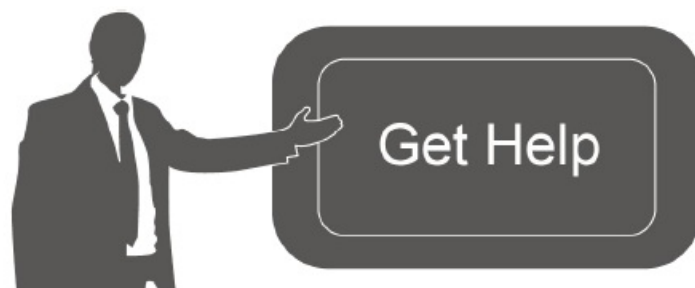

For assistance, please contact

Milesight technical support

- **Email:** [iot.support@milesight.com](mailto:iot.support@milesight.com)
- **Support Portal:** [support.milesight-iot.com](http://support.milesight-iot.com)
- **Tel:** 86-592-5085280
- **Fax:** 86-592-5023065
- **Address:** Building C09, Software Park III, Xiamen 361024, China

## Revision History

Date	Doc Version	Description
March 30, 2023	V 1.0	Initial version
June 15, 2023	V 1.1	Add EM400-MUD NB/Cat M Version

## Product Introduction

### Overview

EM400-MUD is a multifunctional ultrasonic distance sensor with small blind spot. Besides a wide measuring range, EM400-MUD is equipped with three pre-set modes including standard mode, trash bin mode, and parking lot mode for different applications.

With IP67 waterproof rating and internal damp-proof coating, it is suitable for outdoor applications. Besides, EM400-MUD is equipped with a 3-axis accelerometer and temperature sensor to detect the tilt status of devices. Compliant with Milesight IoT Cloud, users know the container status and fill-in level in real-time via browser and mobile App remotely.

### Features

- 3-450 cm wide detection range with small blind zone
- Equipped with three pre-set modes for different applications
- Equipped with NTC thermistor for the detection and alarm of trash burning
- Built-in 3-axis accelerometer sensor to monitor device tilt status
- Damp-proof coating inside and IP67 waterproof enclosure for outdoor applications
- Built-in two 9000 mAh replaceable batteries and work for 10 years without replacement
- Equipped with NFC for one touch configuration, support card emulation mode
- Equipped with GNSS positioning (NB version only)
- Function well with standard LoRaWAN® gateways and network servers (LoRaWAN® version only)
- Compatible with Milesight IoT Cloud (LoRaWAN® version only)

## Hardware Introduction

### Packing List



1 × EM400-MUD

Device



2 ×

Mounting Kits



1 ×

Warranty Card




1 ×



Quick Guide

If any of the above items is missing or damaged, please contact your sales representative.

## Hardware Overview

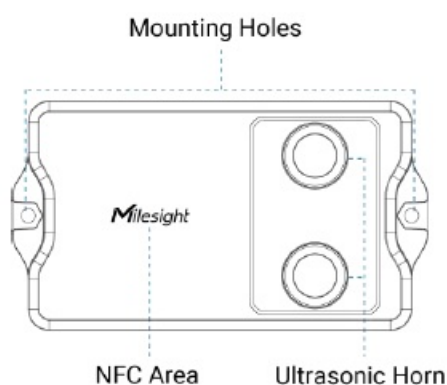

## Dimensions (mm)

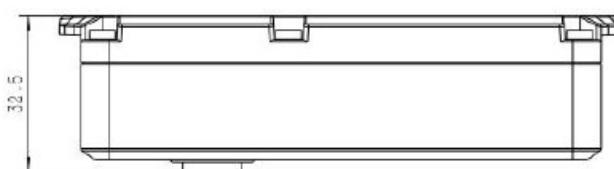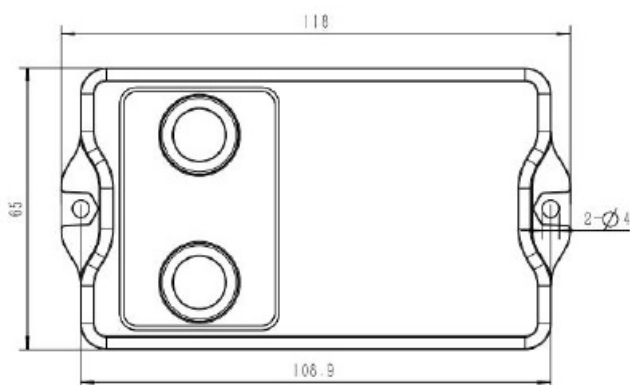

## Power Button

EM400-MUD can be switched on/off via NFC. Besides, users can use power button to switch on/off and reset the device manually.


Function	Action	LED Indication
Switch On	Press and hold the button for more than 3 seconds.	Off → On
Switch Off	Press and hold the button for more than 3 seconds.	On → Off
Reset	Press and hold the button for more than 10 seconds.	Quickly Blinks
Check On/Off Status	Quickly press the power button.	<b>Light On:</b> Device is on
		<b>Light Off:</b> Device is off

## SIM Installation (NB Version Only)

Release the screws and back cover, insert the SIM card (3FF), then replace the back cover to the device and fix the screws.

### Note

1. PSM (Power Saving Mode) is required for the SIM card.
2. The device does not support hot plugging (also called hot swapping), please reboot the device after inserting the SIM card.
3. When a new SIM card is inserted to the device for the first time, it will take about 2 minutes to register to network; next time the registration time will be shorten to 30s.
4. When the device does not send data, the device will go to sleep mode and the network status will be unregistered.

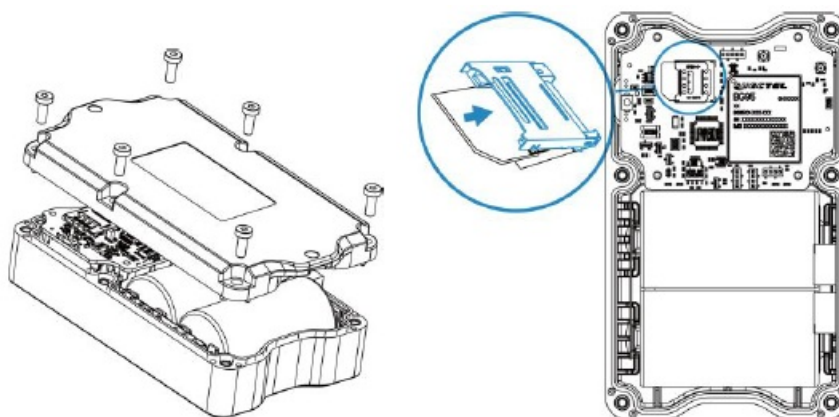


## Operation Guide

### NFC Configuration

EM400-MUD can be configured via NFC.

1. Download and install “Milesight ToolBox” App from Google Play or App Store.
2. Enable NFC on the smartphone and open “Milesight ToolBox” App.
3. Attach the smartphone with NFC area to the device to read the basic information.

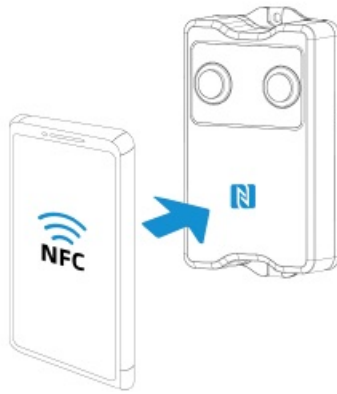

4. Basic information and settings of devices will be shown on ToolBox if it's recognized successfully. You can switch on/off, read and write the device by tapping the button on the Apps. In order to protect the security of devices, password validation is required when configuring via unused phone. Default password is 123456.

Status	Setting	Maintenance
SN	6329C42865570081	
Model	EM400-MUD-915M	
PN	B045-2	
Device EUI	24E124329C428655	
Firmware Version	V1.1-a4	
Hardware Version	V1.0	
Device Status	ON <input checked="" type="checkbox"/>	

## Note

1. Ensure the location of smartphone NFC area and it's recommended to take off phone case.
2. If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
3. EM400-MUD can also be configured by dedicated NFC reader provided by Milesight IoT.

## Basic Settings

Go to Device > Setting > General Settings of ToolBox App to change the reporting interval, etc.

### Device Mode

Parking Lot Mode ▼

Collecting Interval  20  s


Reporting Interval  1080  min

Installation Height  3  m

Tilt & Distance Switch  ☐

Parameters	Description
Device Mode	Select from Standard Mode, Bin Mode or Parking Lot Mode.
Reporting Interval	<p>Reporting interval of transmitting data to server.</p> <p><b>LoRaWAN® Version</b></p> <ul style="list-style-type: none"> <li>• <b>Standard Mode:</b> 10 minutes as default, range: 1~1080 minutes;</li> <li>• <b>Bin mode:</b> 20 minutes as default, range: 1~1080 minutes;</li> <li>• <b>Parking Lot Mode:</b> 1080 minutes as default. If the sensor detects the</li> </ul>
	<p>occupancy status change, it will report immediately.</p> <p><b>NB Version</b></p> <p><b>Standard Mode/Bin Mode:</b> 30 minutes as default, range: 1~1440 minutes.</p>
Collecting Interval	<p>Collecting interval of measuring distance on Parking Lot Mode. Default:</p> <p>20s; Range: 1~600s</p>

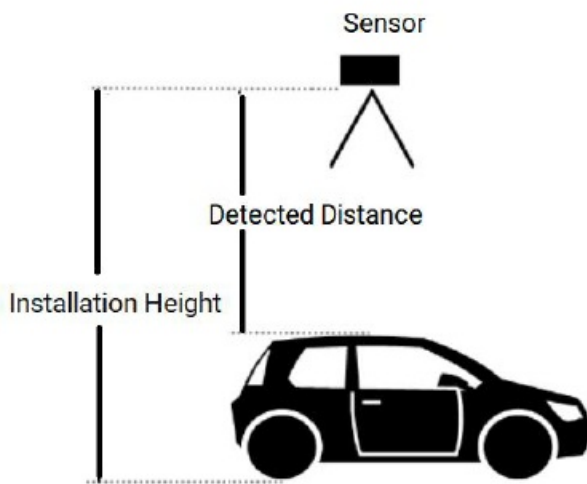

Installation Height	<p>Set the installation height between device and ground when in Parking Lot Mode. Default: 3m; Range: 0.030~4.500m</p> <p>Threshold Distance Value (<math>\Delta</math>) is 1m as default, triggering logic is as below:</p> <ul style="list-style-type: none"> <li>• <b>Installation Height</b> – Detected Distance &gt; <math>\Delta</math>, the sensor will report occupied immediately.</li> <li>• <b>Installation Height</b> – Detected Distance &lt; <math>\Delta</math>, the sensor will report vacant immediately.</li> </ul> 
Tilt & Distance Switch	When detecting that the offset angle is greater than 20 degrees, turn off the distance sensor.
Change Password	Change the password for the ToolBox App or software to access this device.
<b>NB Version Only</b>	
Cumulative Numbers	Store this number of periodic packets to report together.
Positioning Settings	Enable GNSS positioning. When the device is on motion status, it will only upload positioning data instead of distance data.
The duration of Motion	When device is detected to move beyond this duration, it will upload a GNSS data packet.
The duration of stationary	When device is detected to stop moving beyond this duration, it will upload a GNSS data packet.
Motion Report Interval/Min	The interval to report GNSS data during the motion.

## Communication Settings

### LoRaWAN Settings (LoRaWAN® Version Only)

Go to Device > Setting > LoRaWAN Settings of ToolBox App to configure join type, App EUI, App Key and other information. You can also keep all settings by default.

Device EUI

24E124329C425039

\* APP EUI

24e124c0002a0001

\* Application Port

-

85

+

Join Type

OTAA

\* Application Key

\*\*\*\*\*

LoRaWAN Version

V1.0.3

Work Mode

Class A

RX2 Data Rate

DR0 (SF12, 125 kHz)

RX2 Frequency

505300000

Confirmed Mode ⓘ ☐

Rejoin Mode ☒

Set the number of detection signals sent ⓘ

32

ADR Mode ⓘ ☒

Spreading Factor ⓘ

SF10-DR2 ▼

TXPower

TXPower0-19.15 dBm ▼

Parameters	Description
Device EUI	Unique ID of the device which can also be found on the label.
App EUI	Default App EUI is 24E124C0002A0001.
Application Port	The port used for sending and receiving data, default port is 85.
Join Type	OTAA and ABP mode are available.
Application Key	Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823.
Device Address	DevAddr for ABP mode, default is the 5th to 12th digits of SN.
Network Session Key	Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Application Session Key	Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
LoRaWAN Version	V1.0.2, V1.0.3 are available.
Work Mode	It's fixed as Class A.
RX2 Data Rate	RX2 data rate to receive downlinks.
RX2 Frequency	RX2 frequency to receive downlinks. Unit: Hz
Channel	Enable or disable the frequency to send uplinks.

--	--

\* Support Frequency

EU868

<input checked="" type="checkbox"/>	<input type="button" value="-"/>	868.1	<input type="button" value="+"/>
<input checked="" type="checkbox"/>	<input type="button" value="-"/>	868.3	<input type="button" value="+"/>
<input checked="" type="checkbox"/>	<input type="button" value="-"/>	868.5	<input type="button" value="+"/>
<input type="checkbox"/>	<input type="button" value="-"/>	863	<input type="button" value="+"/>

If frequency is one of CN470/AU915/US915, enter the index of the channel that you want to enable and make them separated by commas.

### Examples

- **1, 40**: Enabling Channel 1 and Channel 40
- **1-40**: Enabling Channel 1 to Channel 40
- **1-40, 60**: Enabling Channel 1 to Channel 40 and Channel 60 All: Enabling all channels
- **Null**: Indicates that all channels are disabled

\* Support Frequency

AU915

Enable Channel Index [i](#)

8-15

Index	Frequency/MHz <a href="#">i</a>
0 - 15	915.2 - 918.2
16 - 31	918.4 - 921.4
32 - 47	921.6 - 924.6
48 - 63	924.8 - 927.8
64 - 71	915.9 - 927.1

Spread Factor

If ADR is disabled, the device will send data via this spread factor.

Confirmed Mode

If the device does not receive ACK packet from network server, it will resend data once.

Rejoin Mode	<p>Reporting interval <math>\leq 35</math> mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval or 2*reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p>Reporting interval <math>&gt; 35</math> mins: the device will send a specific number of</p>
-------------	---

	LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network.
Set the number of packets sent	<p>When rejoin mode is enabled, set the number of LinkCheckReq packets sent.</p> <p><b>Note:</b> the actual sending number is <b>Set the number of packets sent + 1</b>.</p>
ADR Mode	Allow network server to adjust datarate of the device.
Tx Power	Transmit power of device.

### Note

1. Please contact sales for device EUI list if there are many units.
2. Please contact sales if you need random App keys before purchase.
3. Select OTAA mode if you use Milesight IoT cloud to manage devices.
4. Only OTAA mode supports rejoin mode.

### Application Mode Settings (NB Version Only)

Go to Device > Setting > Application Mode Settings of ToolBox App to configure the application mode and server information.

Application Mode

MQTT

Broker Address

112.48.19.183

Port

18226

Client ID

6748D11290120003

User Credentials



TLS



Parameters	Description
Application Mode	Select from AWS, TCP, UDP, and MQTT.
<b>AWS</b>	
Server Address	Fill in the AWS server domain name which the data sends to.
CA File	Import the CA.crt file.
Client Certificate	Import the client certificate.

Client Key	Import the client key.
<b>TCP/UDP</b>	
Server Address	Fill in the TCP/UDP server address (IP/domain name).
Server Port	Fill in the TCP/UDP server port. Range: 1-65535.
<b>MQTT</b>	
Broker Address	Fill in MQTT broker address to receive data.
Port	Fill in MQTT broker port to receive data.
Client ID	Client ID is the unique identity of the client to the server, it must be unique when all clients are connected to the same server.

## User Credentials

Enable	Enable user credentials.
Username	The username used for connecting to MQTT broker.
Password	The password used for connecting to MQTT broker.

## TLS

Enable	Enable the TLS encryption in MQTT communication.
Protocol	It's fixed as TLS v1.2.
CA File	Import the CA.crt file.
Client Certificate	Import the client certificate.
Client Key	Import the client key.

## Advanced Settings

### Calibration Settings

Go to Device > Setting > Calibration Settings to enable calibration. EM400-MUD supports two calibration types.

- **Numerical Calibration:** users can define calibration value to correct every distance.

## Calibration Settings



### Distance



#### Numerical Calibration

Current Value: 3.164 m

Calibration Value

m

Final Value: 3.164 m

- **Measure Outlier Calibration:** users can define either outlier range or value. When the device distance value exceeds the outlier range (or range) comparing to last value, the device will measure the distance again.

### Measure Outlier Calibration



Maximum Range: 4.5 m

Outlier Range / % 

Outlier Value / m 

## Threshold Settings

Go to Device > Setting > Threshold Settings to enable the threshold settings and input the distance threshold. EM400-MUD will detect whether the distance reaches the threshold according to collecting interval. If threshold is triggered, it uploads the current data once instantly.

Note: threshold setting is only for bin mode and standard mode.

### Distance



Over / m

Below / m

Collecting Interval



1



min

Threshold Dismiss Report 



Parameters	Description
Collecting Interval	Collecting interval to detect distance, this should be smaller than or equal to reporting interval.
Threshold Dismiss Report	When the collected value changes from outside the threshold to within the threshold, a threshold release packet will be reported.

## Maintenance

### Upgrade

1. Download firmware from Milesight website to your smartphone.
2. Open Toolbox App, go to Device > Maintenance and click Browse to import firmware and upgrade the device.

### Note

1. Operation on ToolBox is not supported during a firmware upgrade.
2. Only Android version ToolBox supports the upgrade feature.




### Backup


EM400-MUD supports configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and frequency band.

1. Go to Template page on the App and save current settings as a template. You can also edit the template file.
2. Select one template file which saved in the smartphone and click Write, then attach to another device to write configuration.



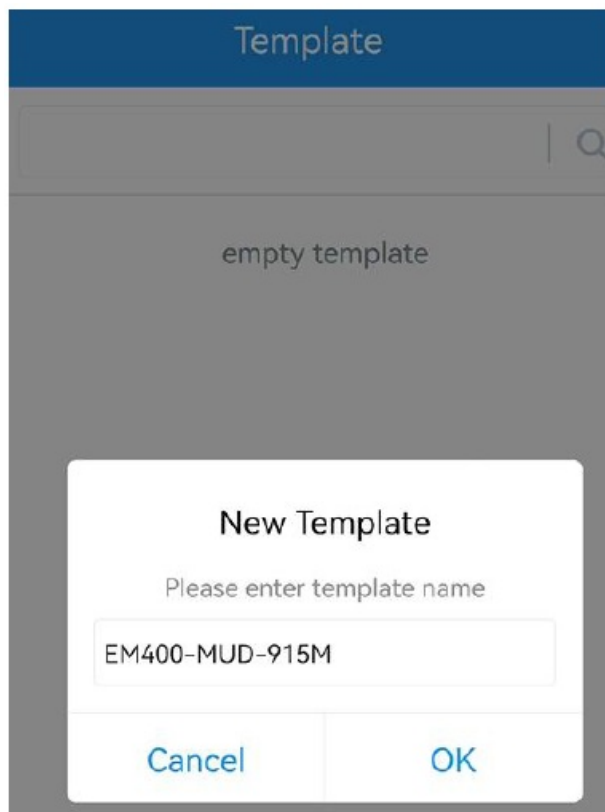

**Note:** Slide the template item left to edit or delete the template. Click the template to edit the configurations.

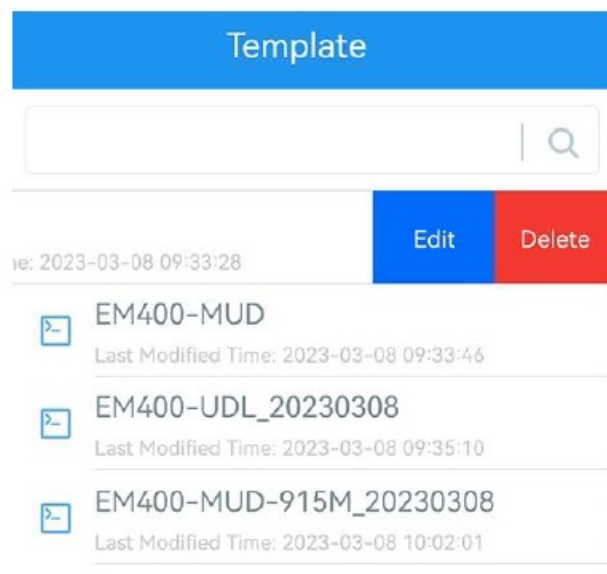

### Reset to Factory Default


Please select one of following methods to reset device:

- **Via Hardware:** Hold on power button (internal) for more than 10s.
- **Via ToolBox App:** Go to Device > Maintenance to click Reset, then attach smartphone with NFC area to device to complete reset.


Status	Setting	Maintenance
SN	6329C42865570081	
Model	EM400-MUD-915M	
Firmware Version	V1.1-a4	
Hardware Version	V1.0	
Manual Upgrade		
<a href="#">Browse</a>		
Restore Factory Default		
<a href="#">Reset</a>		

## Installation

1. Drill two holes on the container cover according to the location of device mounting holes.
2. Put the device under container cover and align the holes in order to perfectly screw the bolts into the holes from the other side of the cover.

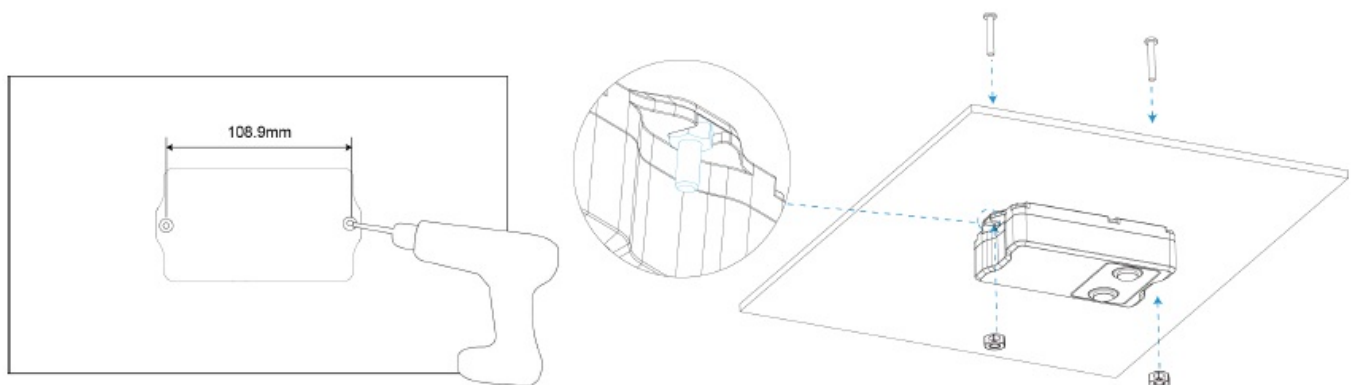


Besides, the device can also be fixed by two M4 mounting screws and wall plugs.

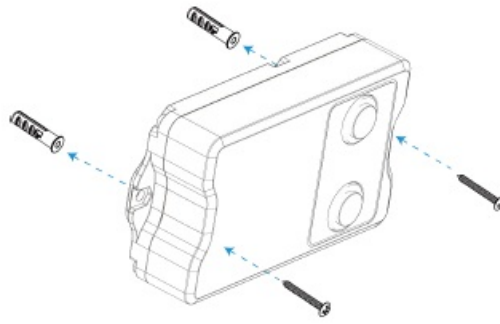

## Installation location

- In order to provide the best data transmission, please ensure the device is deployed within the signal range of the LoRaWAN® gateway or base station and keep it away from metal objects and obstacles.
- The device must be placed in a horizontal position above the detected object so that it has a clear path to the object.
- The device should be installed at least 30cm away from the side-wall without obstructions blocking the ultrasonic signal. If the device needs to be installed on the side wall, please ensure the ultrasonic horn is away from the side wall.

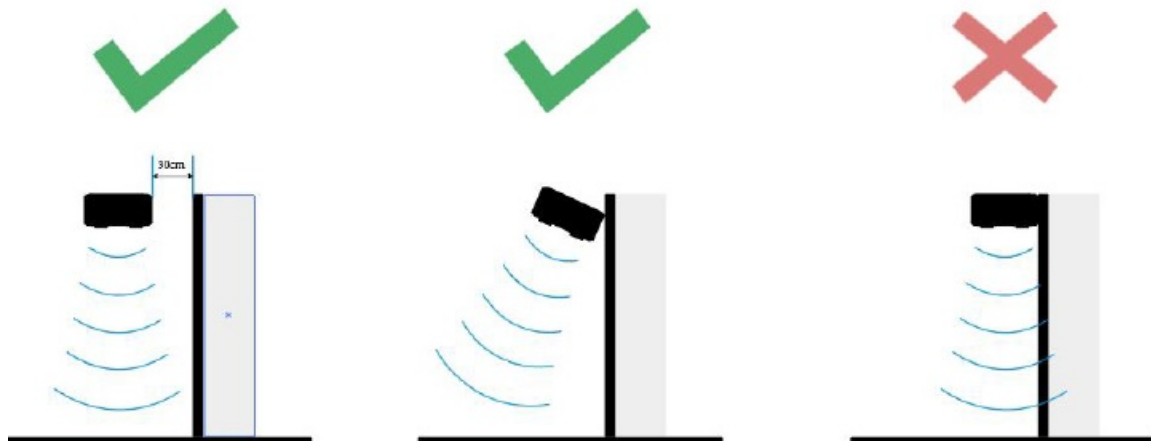

- When EM400-MUD is in waste bin mode, place the device in the center of waste bin mode and here are some recommended sizes of waste bins: when the height is 88cm, the minimum radius should be 24cm.

## Communication Protocol

For decoder examples please find files on <https://github.com/Milesight-IoT/SensorDecoders> .

### LoRaWAN® Version

All data are based on following format (HEX), the Data field should follow little-endian

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel 3	...
1 Byte	1 Byte	N Bytes	1 Byte	1 Byte	M Bytes	1 Byte	...

## Uplink Data

Channel	Type	Description
ff	01(Protocol Version)	01=>V1
	09 (Hardware Version)	01 40 => V1.4
	0a (Software Version)	01 14 => V1.14
	0b (Power On)	Device is on
	0f (Device Type)	00: Class A, 01: Class B, 02: Class C
	16 (Device SN)	16 digits
01	75(Battery Level)	UINT8, Unit: %
03	67 (Temperature)	INT16, Unit: °C
04	82 (Distance)	INT16, Unit: mm
05	00 (Device Position)	00: Normal (horizontal offset angle < 20°) 01: Tilt (horizontal offset angle ≥ 20°)
83	67(Temperature)	Temperature (2 Bytes) + Alarm Status(1 Byte) Temperature: unit — °C Alarm Status: <ul style="list-style-type: none"> <li>• 00 -Alarm dismiss</li> <li>• 01 -Alarm</li> </ul>
84	82(Distance)	Distance (2 Bytes) + Alarm Status (1 Byte) Distance: unit — mm Alarm Status <ul style="list-style-type: none"> <li>• 00 -Alarm dismiss</li> <li>• 01 -Alarm</li> </ul>

### Examples

Device information: report once whenever join the network.

ff0bff ff0101 ff166329c42503920003 ff090100 ff0a0101 ff0f00					
Channel	Type	Value	Channel	Type	Value
ff	0b (Power On)	ff (Reserved)	ff	01 (Protocol Version)	01 (V1)
Channel	Type	Value	Channel	Type	Value
ff	16 (Device SN)	6329c425 03920003	ff	09 (Hardware version)	0100 (V1.0)
Channel	Type	Value	Channel	Type	Value
ff	0a(Software version)	0101 (V1.1)	ff	0f (Device Type)	00 (Class A)

**Periodic uplink:** report according to reporting interval.

017564 0367f800 04820101 050000					
Channel	Type	Value	Channel	Type	Value
01	75 (Battery)	64 => 100%	03	67 (Temperature)	f8 00 => 00 f8 = 248 * 0.1 =24.8 °C
Channel	Type	Value	Channel	Type	Value
04	82 (Distance)	01 01 => 01 01 =257mm =0.257m	05	00 (Device Position)	00=Normal

**Distance Threshold:** report when distance reaches the threshold or returns back to normal value.

8482330701		
Channel	Type	Value
84	82 (Distance)	Distance: 33 07 =>07 33 = 1843mm = 1.843m  <b>Alarm Status:</b> 01= Alarm

**Temperature Threshold:** report when the abrupt change of temperature is greater than 5 °C.

8367220101		
Channel	Type	Value
83	67 (Temperature)	Temperature: 22 01 =>01 22 = 290 * 0.1 = 29°C  <b>Alarm Status:</b> 01= Alarm

### Downlink Commands

EM400-MUD supports downlink commands to configure the device. Application port is 85 by default.

Channel	Type	Description
ff	10 (Reboot)	ff (Reserved)
	03 (Set Reporting Interval)	2 Bytes, unit: s
	71 (Set Device Mode)	00 = Standard Mode; 01 = Bin Mode; 02 = Parking Lot Mode
	3e (Set Tilt & Distance Switch)	00 = Disable; 01 = Enable
	56 (Set Ultrasonic Distance Sensor)	00 = Disable; 01 = Enable
	06 (Set Threshold Alarm)	9 Bytes, CTRL(1B)+Min(2B)+Max(2B)+00000000(4B) CTRL:

		Bit2~Bit0  00- disable 001-below 010-above 011-within below or above Bit5~Bit3:  01- Standard Mode 010-Bin Mode Bit6=0  Bit7:  0 – disable threshold dismiss report 1 – enable threshold dismiss report
	70 (Set Height Threshold in Parking Lot Mode)	2 Bytes, unit: mm
	77 (Set Installation Height)	2 Bytes, unit: mm

### Example

Set reporting interval as 20 minutes.

ff03b004		
Channel	Type	Value
ff	03 (Set Reporting Interval)	b0 04 => 04 b0 = 1200s = 20 minutes

Reboot the device.

ff10ff		
Channel	Type	Value
ff	10 (Reboot)	ff (Reserved)

Set the device as standard mode.

ff7100		
Channel	Type	Value
ff	71 (Set Device Mode)	00 = Standard Mode

Enable "Tilt & Distance Switch" feature.

ff3e01		
Channel	Type	Value
ff	3e (Set Tilt & Distance Switch)	01 = Enable

When the distance is below 20cm or above 80cm, the sensor will send threshold alarm.

ff3e 8c c800 2003 0000 0000		
Channel	Type	Value
ff	06 (Set Threshold Alarm)	CTRL: cc=10 001 100 100=below or above 001=standard mode 10=enable threshold dismiss report <b>Min:</b> c8 00 => 00 c8 = 200 mm = 20 cm <b>Max:</b> 2003 => 03 20 = 800 mm = 80cm

Set the height threshold in parking lot mode as 0.03m.

ff701e00		
Channel	Type	Value
ff	70 (Set Height Threshold in Parking Lot Mode)	1e 00 => 00 1e =30mm =0.03m

Set the installation height as 4.5m.

ff779411		
Channel	Type	Value
ff	77 (Set Installation Height)	94 11 => 11 94 =4500mm =4.5m

## NB Version

### AWS/MQTT Topics

When the device is connected to AWS/MQTT server, the bi-directional communication uses different topics.

Topic	Content
em/[SN]/status	Receive periodic reports, threshold alarms, etc.
em/[SN]/cmd/update	Send downlink commands
em/[SN]/cmd/update/accepted	Receive success ACK of downlink commands  <b>Note:</b> users need to send downlink command to enable ACK feature first.

### Uplink Data

All data are based on following format (HEX)

Start	ID	Packet Length	FLAG	Frame Counter	Protocol Version	Software Version	Hardware Version
02	0001	2 Bytes	00	0000	01	4 Bytes	4 Bytes
SN	IMEI	IMSI	ICCID	Signal	Data Length	Data1	...
16 Bytes	15 Bytes	15 Bytes	20 Bytes	1 Byte	2 Bytes	N Bytes	..

### Example



02 0001 005f 00 0000 01 30313031 30313030

36373438443131323930313230303033 383638353038303631393234353133

343630303833383833383036363836

3839383630346238313032326330343536363836 10 000E

01750103677D000482FDFF050000

Type	Content
Start	02
ID	0001
Packet Length	00 5f=95 bytes
FLAG	00
Frame Counter	0000
Protocol Version	01=V1
Software Version	30 31 30 31 => 0101=V1.1
Hardware Version	30 31 30 30 => 0100=V1.0
SN	36 37 34 38 44 31 31 32 39 30 31 32 30 30 30 33=>6748d11290120003
IMEI	38 36 38 35 30 38 30 36 31 39 32 34 35 31 33 =>868508061924513
IMSI	34 36 30 30 38 33 38 38 33 38 30 36 36 38 36 => 460083883806686
ICCID	38 39 38 36 30 34 62 38 31 30 32 32 63 30 34 35 36 36 38 36 => 898604b81022c0456686
Network Signal	10=>16 asu
Data Length	0e=>14 Bytes
Data	See details below

Data part is based on Channel+Type+Data, the Data field should follow little-endian

Channel	Type	Description
01	75(Battery Level)	UINT8, Unit: %
03	67 (Temperature)	INT16, Unit: °C
04	82 (Distance)	INT16, Unit: mm
05	00 (Device Position)	00: Normal (horizontal offset angle < 20°) 01: Tilt (horizontal offset angle ≥ 20°)

06	88 (Location)	Byte 1-4: latitude*1000000 Byte 5-8: longitude*1000000 Byte 9: motion status, 20=unknown, 21=start moving, 22=in motion, 23=stop moving <b>Note:</b> If the device fails to get GNSS data, the latitude or longitude will show FFFFFFFF.
83	67(Temperature)	Temperature (2 Bytes) + Alarm Status(1 Byte) Temperature: unit — °C Alarm Status: 00 -Alarm dismiss 01 -Alarm
84	82(Distance)	Distance (2 Bytes) + Alarm Status (1 Byte) Distance: unit — m Alarm Status: 00 -Alarm dismiss 01 -Alarm

### Examples

**Periodic uplink:** report according to reporting interval\*cumulative numbers (30 mins\*12 by default) when the device is stationary.

017564 0367f800 04820101 050000					
Channel	Type	Value	Channel	Type	Value
01	75 (Battery)	64 => 100%	03	67 (Temperature)	f8 00 => 00 f8 = 248 * 0.1 =24.8 °C
Channel	Type	Value	Channel	Type	Value
04	82 (Distance)	01 01 => 01 01 =257mm =0.257m	05	00 (Device Position)	00=Normal

**GNSS uplink:** report when positioning setting is enabled and the device is in motion.

050001 068873c177019cff080722					
Channel	Type	Value	Channel	Type	Value
05	00 (Device	01=Tilt	06	88(Locati on)	Latitude: 73c17701=>01 77 c1 73=24625523/1000000=24.62

	Position)				5523  Longitude: 9cff0807=>07 08 ff 9c=11803 0236/1000000=118.  030236  22=in motion
--	-----------	--	--	--	---

**Distance Threshold:** report when distance reaches the threshold or returns back to normal value. If the threshold triggering time is close to periodic report time, it will send with periodic uplink.

8482330701		
Channel	Type	Value
84	82 (Distance)	Distance: 33 07 =>07 33 = 1843mm = 1.843m  01= Alarm

**Temperature Threshold:** report once when the abrupt change of temperature is greater than 5 °C.

8367220101 0688FFFFFFFFFFFFFFFF20					
Channel	Type	Value	Channel	Type	Value
83	67 (Temperature)	Temperature: 22 01 =>01 22 = 290 * 0.1 = 29 °C 01= Alarm	06	88(Location)	Latitude/longitude : FFFFFFFF 20=unknown

### Downlink Commands

EM400-MUD supports downlink commands to configure the device. Note that it can only receive downlink commands within the 10s after sending uplink packets.

Channel	Type	Description
ff	10 (Reboot)	ff (Reserved)
	03 (Reporting Interval)	4 Bytes, unit: s
	71 (Device Mode)	00 = Standard Mode; 01 = Bin Mode
	3e (Tilt & Distance Switch)	00 = Disable; 01 = Enable
	a0 (Position Setting)	00 = Disable; 01 = Enable
	58 (Duration of Motion and Stationary)	<b>5 Bytes,</b> <b>Byte 1:</b> duration of motion, unit: s <b>Byte 2-5:</b> duration of stationary, unit: s
	8e (Motion Report Interval)	5 Bytes, <b>Byte 1:</b> 00 = Disable; 01 = <b>Enable</b> <b>Byte 2-5:</b> report interval, unit: s

	9e (Cumulative Numbers)	2 Bytes,  Byte 1: 00 = Disable; 01 = Enable Byte 2: Cumulative numbers
	9f (ACK of Downlink Command)	00 = Disable; 01 = Enable
	06 (Set Threshold Alarm)	9 Bytes,  CTRL(1B)+Min(2B)+Max(2B)+00000000 (4 B)  CTRL:  Bit2~Bit0:  000-disable 001-below 010-above 011-within  100-below or above Bit5~Bit3:  001-Standard Mode 010-Bin Mode Bit6=0  Bit7:  0 – disable threshold dismiss report 1 – enable threshold dismiss report

### Example

Set reporting interval as 20 minutes.

ff03b0040000		
Channel	Type	Value
ff	03 (Set Reporting Interval)	b0 04 00 00 => 00 00 04 b0 = 1200s = 20 minutes

Reboot the device.

ff10ff		
Channel	Type	Value
ff	10 (Reboot)	ff (Reserved)

Set the device as standard mode.

ff7100		
Channel	Type	Value
ff	71 (Set Device Mode)	00 = Standard Mode

When the distance is below 20cm or above 80cm, the sensor will send threshold alarm.


ff3e 8c c800 2003 0000 0000		
Channel	Type	Value
ff	06 (Set Threshold Alarm)	<b>CTRL:</b> cc=10 001 100 100=below or above 001=standard mode 10=enable threshold dismiss report <b>Min:</b> c8 00 => 00 c8 = 200 mm = 20 cm <b>Max:</b> 2003 => 03 20 = 800 mm = 80cm

Set duration of motion to 50s and duration of stationary to 180s.

ff5832b4000000		
Channel	Type	Value
ff	58(Duration of Motion and Stationary)	Duration of motion: 32=50s Duration of stationary: b4 0 0 00 00=00 00 00 b4=180s

- **Tel:** +33 477 92 03 56
- **Email :** [contact@rg2i.com](mailto:contact@rg2i.com)
- [www.rg2i.com](http://www.rg2i.com)
- 14 rue Edouard Petit 42000 St-Etienne

## Documents / Resources

	<a href="#">Milesight EM400-MUD Multi Functional Ultrasonic Distance Sensor</a> [pdf] User Guide EM400-MUD, EM400-MUD NB-Cat M Version, EM400-MUD Multi Functional Ultrasonic Distance Sensor, EM400-MUD Multi Functional Ultrasonic Distance Sensor, EM400-MUD, Multi Functional Ultrasonic Distance Sensor, Functional Ultrasonic Distance Sensor, Ultrasonic Distance Sensor, Distance Sensor, Sensor
---	---

## References

-  [Support : IoT Support](#)
-  [GitHub - Milesight-IoT/SensorDecoders](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.