



Mircom MIX-M500MAP Monitor Module Installation Guide

[Home](#) » [Mircom](#) » Mircom MIX-M500MAP Monitor Module Installation Guide 

Contents

- [1 Mircom MIX-M500MAP Monitor Module](#)
- [2 SPECIFICATIONS](#)
- [3 BEFORE INSTALLING](#)
- [4 COMPATIBILITY REQUIREMENTS](#)
- [5 MOUNTING](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mircom MIX-M500MAP Monitor Module



SPECIFICATIONS

- Normal Operating Voltage: 15 to 32 VDC
- Maximum Alarm Current (LED on): 5.0mA (LED on)
- Average Operating Current: 400 μ A, 1 communication every 5 seconds, 47k
- EOL EOL Resistance: 47K Ohms
- Maximum IDC wiring resistance: 40 Ohms
- Maximum IDC Voltage: 11 Volts
- Maximum IDC Current: 400 μ A
- Temperature Range: 32°F to 120°F (0°C to 49°C)
- Humidity: 10% to 93% Non-condensing
- Dimensions: 4 1/2" H x 4" W x 1 1/4" D (Mounts to a 4" square by 2 1/8" deep box.)
- Accessories: SMB500 Electrical Box

BEFORE INSTALLING

This information is included as a quick reference installation guide. Refer to the control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Dis-connect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.


GENERAL DESCRIPTION

The MIX-M500MAP Monitor Module is intended for use in intelligent, two-wire systems, where the individual address of each module is selected using the built-in rotary decade switches. It provides either a 2-wire or 4-wire fault tolerant initiating circuit for normally open contact fire alarm, supervisory, or security devices. The module has a panel controlled LED indicator.

COMPATIBILITY REQUIREMENTS

To ensure proper operation, these modules shall be connected to listed compatible system control panels only.

FIGURE 1. CONTROLS AND INDICATORS:

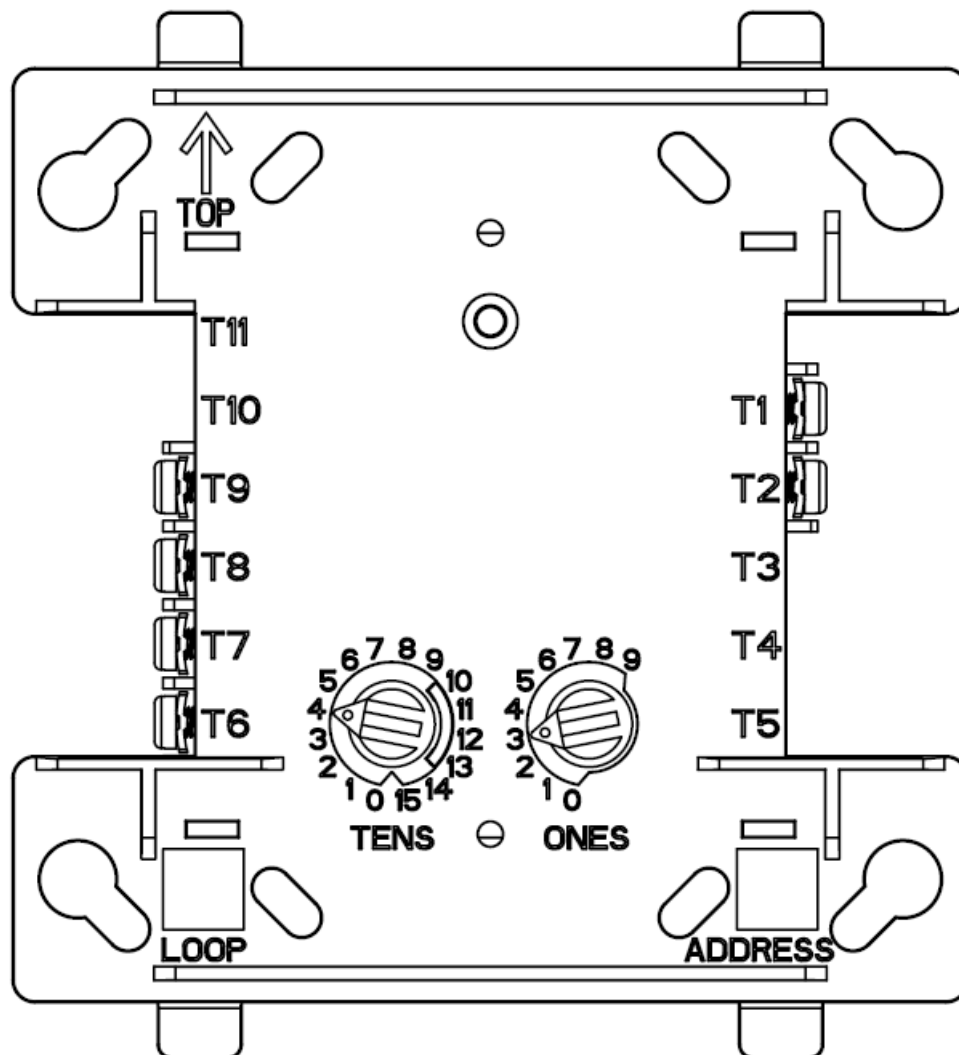


MOUNTING

The MIX-M500MAP mounts directly to 4-inch square electrical boxes (see Figure 2). The box must have a minimum depth of $2\frac{1}{8}$ inches. Surface mounted electrical boxes (SMB500) are available from System Sensor.

FIGURE 2. MODULE MOUNTING:

FIGURE 2. MODULE MOUNTING:

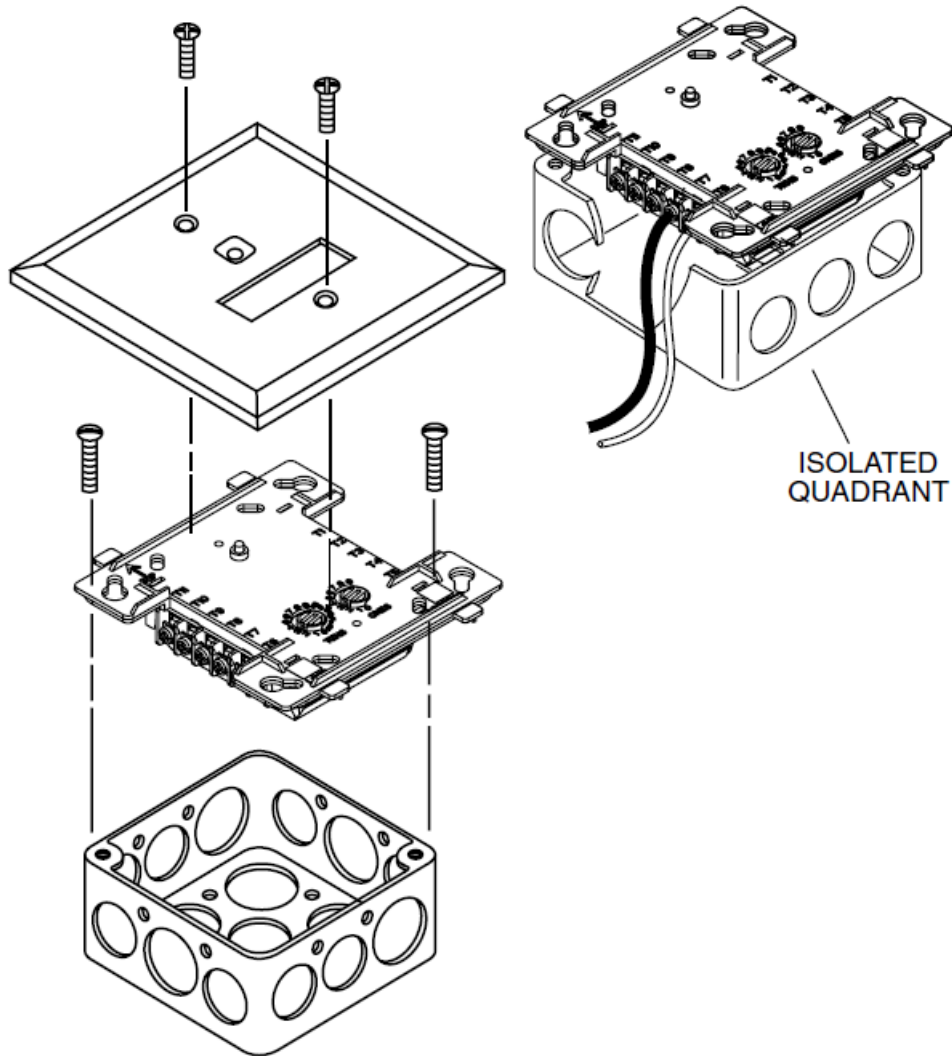

WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations. This module is intended for power limited wiring only.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. Set the address on the module per job drawings.
3. Secure module to electrical box (supplied by installer), as shown in Figure 2.

FIGURE 3. TYPICAL 2-WIRE INITIATING CIRCUIT CONFIGURATION, NFPA STYLE B:


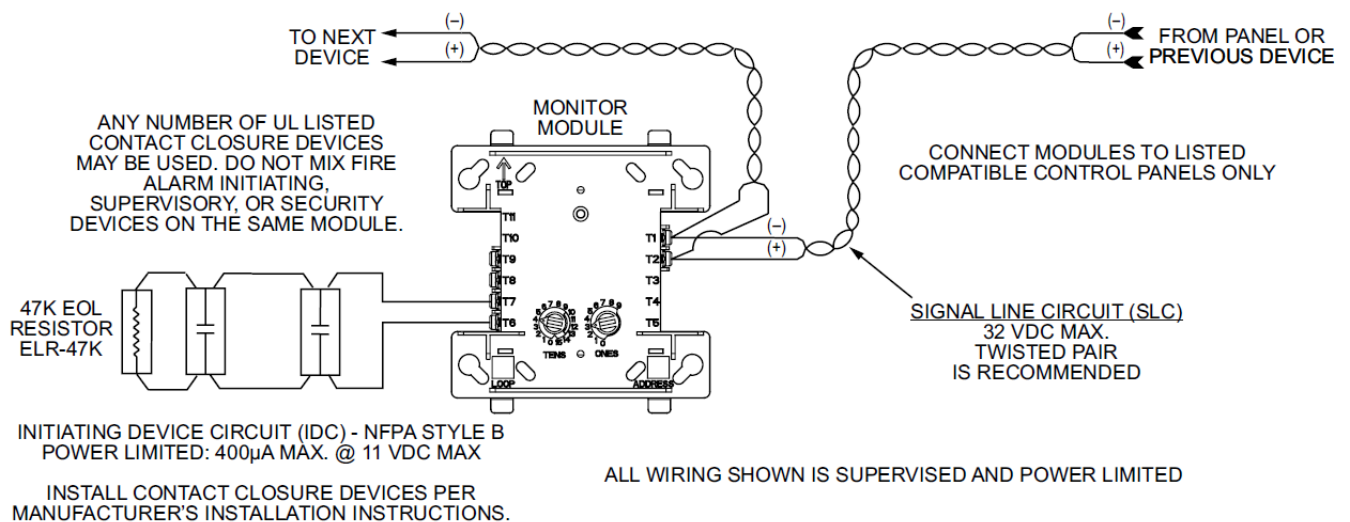


FIGURE 4. TYPICAL 4-WIRE FAULT TOLERANT INITIATING CIRCUIT CONFIGURATION, NFPA STYLE D:



firealarmresources.com

Documents / Resources

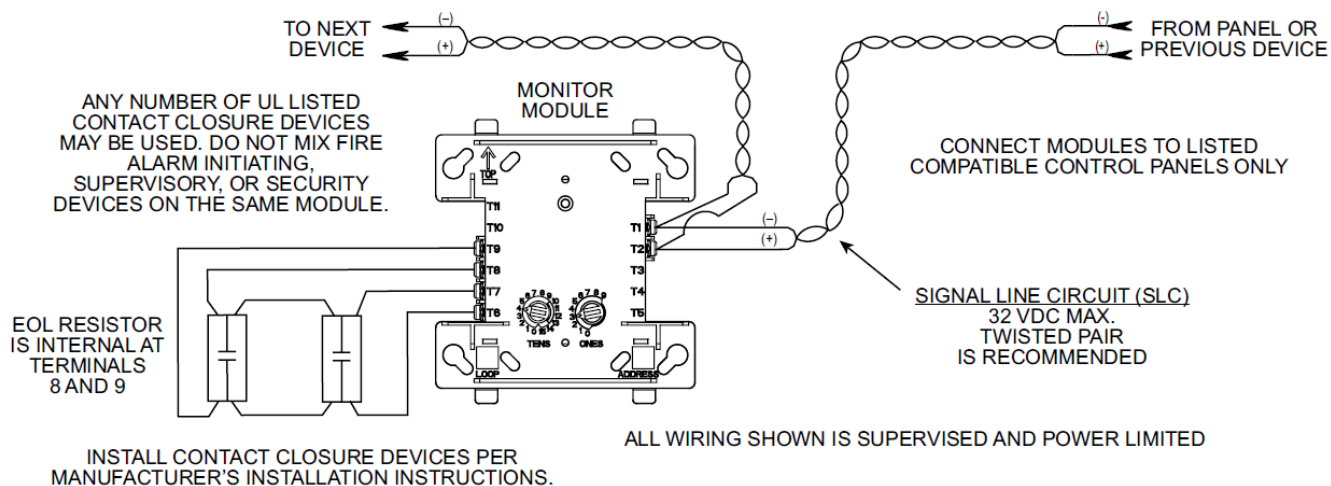

[Mircom MIX-M500MAP Monitor Module](#) [pdf] Installation Guide
MIX-M500MAP Monitor Module, MIX-M500MAP, Monitor Module, Module

References

- [Fire Alarm Resources | Download fire alarm documents](#)