



moby-System Barton Multi Positions Stroller User Manual

[Home](#) » [moby-System](#) » moby-System Barton Multi Positions Stroller User Manual 

moby-System Barton Multi Positions Stroller



THE STROLLER IS NOT SUITABLE FOR CHILDREN UNDER 6 MONTHS Please keep for future reference

Contents

1 MULTI POSITIONS STROLLER

2 Baby stroller Barton

3 Care and Maintenance

4 To Fold Stroller

5 To Open Canopy

6 To Secure Child

7 Brakes

8 To Fold Stroller

9 To Adjust Backrest

10 To Open Front Bar

11 Documents / Resources

11.1 References

MULTI POSITIONS STROLLER



Baby stroller Barton

Thank you for purchasing a baby stroller Barton. We invite you to familiarize yourself with our full offer.

Moby-System team

ATTENTION: Read the user manual carefully before unfolding and using the stroller.

Care and Maintenance

- **TO CLEAN STROLLER FRAME.** use only household soap and warm water. NO BLEACH or detergent.
- **FROM TIME TO TIME CHECK YOUR STROLLER.** for loose screws, worn parts, torn material or stitching.
- **EXCESSIVE EXPOSURE TO SUN OR HEAT.** could cause fading or warping of parts.
- **IF STROLLER BECOMES WET.** open canopy and allow to dry thoroughly before storing.
- **WHEN USING YOUR STROLLER AT THE BEACH.** completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies

WARNINGS

Failure to follow these warnings and the instructions could result in serious injury or death.

Avoid serious injury from falling or sliding out:

- ALWAYS use seat belt to restrain child.
- Snugly adjust seat belt around child.
- NEVER leave child unattended, even when sleeping.
- Always keep child in view.
- DO NOT allow child to climb on stroller or stand in seat.

Avoid strangulation:

- Place shoulder belts under seat pad when not used to restrain child.
- DO NOT place items with a string around child's neck, suspend string from this product, or attach strings to toys.

Avoid pinch injury:

- Keep fingers clear of hinged joints when folding and unfolding stroller.
- Make sure stroller is LOCKED in the use position before placing child in stroller.
- When making adjustments, always ensure child's body parts are clear of any moving parts.

Avoid burns:

- DO NOT place hot liquids in parent organizer.

WARNINGS

Avoid serious injury to your child:

- DO NOT allow child to sit or stand in storage basket.

- Keep parent organizer out of child's reach.
- ALWAYS remove child and fold stroller before going up or down stairs or escalators.
- ALWAYS use caution when maneuvering the stroller up or down curbs or on uneven surfaces.
- ALWAYS apply brakes when parking the stroller.
- DO NOT run ,jog, or skate with this stroller. Stroller is for use when walking only. Running, jogging, or skating can cause loss of control and tip over.
- Discontinue use of stroller when it becomes damaged or broken.

Avoid injury from stroller tipping over:

- DO NOT overload stroller as it can become unstable.
- DO NOT carry extra children, parcels or goods in or on stroller.
- DO NOT add package – carrying accessories or hang items from stroller. NEVER place purses, shopping bags, or places on stroller handle or canopy.
- DO NOT place more than 5 lbs.(2.25kg) in storage basket.
- DO NOT place more than 0.5 lbs. (0.225 kg) in parent organizer, zippered pouch and side pockets.

To Fold Stroller

1. Release storage clip.



1

2. Open out the stroller.



2

3. Push the footplate down fully to engage the lock by using foot.



3

4. Assemble front wheels, Insert the front bar into the axle sheath of the front wheel until hear a click .



4



WARNING

Ensure that all locking devices are engaged before use.

To Open Canopy

1. Extend canopy and press down on side hinges to lock open



1


2. Pull up the side hinges to fold the canopy



2


To Secure Child

1. Insert both fasteners securely into clasp

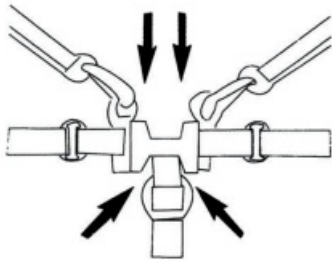

1

2. Squeeze fastener prongs and pull apart

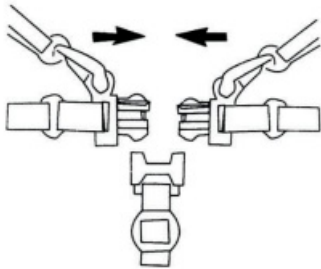

2



WARNING

Avoid serious injury from falling or sliding out, always use the crotch strap in combination with the waist belt and shoulder straps.


Brakes

1. Lock



1


2. Unlock

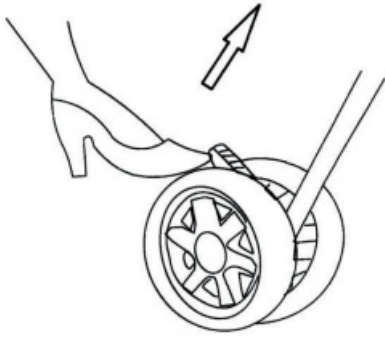

WARNING

Always check that brake is on by trying to push stroller and use brakes when stopped.

To Fold Stroller

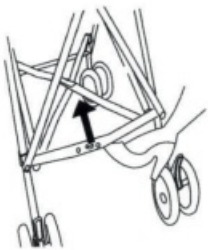

1



2




3

CAUTION

It is recommended that the harness is fastened before folding the stroller

To Adjust Backrest

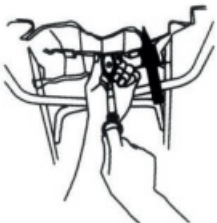

1




2


CAUTION

When adjusting the position of backrest, it is recommended that the child does not sit on stroller.

To Open Front Bar

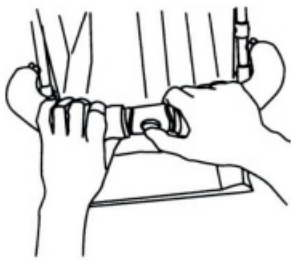

1

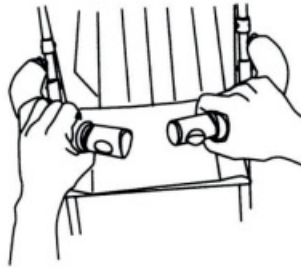

2

CAUTION

Always lock the front bar when child sits on stroller.

Warnings!

1. READ THE INSTRUCTIONS CAREFULLY AND KEEP IT THEM FOR THE FUTURE.
2. Never leave your child unattended.
3. Use seat belts.
4. The stroller is suitable for children who can sit up unaided.
5. This seat is not suitable for children under 6 months of age.
6. Make sure all locking devices are turned on before use.
7. To avoid injury, make sure the child is moved away, when this product is unfolded or folded.
8. Do not let your child play with the stroller.
9. Always use the fastening system.
10. Keep bags and packaging away from children.
11. This product is not suitable for running and roller skating.




max 15 kg

EN 1888-1+A1:2022



Moby-System

Documents / Resources

	<p>moby-System Barton Multi Positions Stroller [pdf] User Manual Barton Multi Positions Stroller, Barton, Multi Positions Stroller, Positions Stroller, Stroller</p>
---	--

References

- [User Manual](#)