


MONK MAKES 00096 BBC MICRO:BIT Plant Monitor Instructions

[Home](#) » [MONK MAKES](#) » MONK MAKES 00096 BBC MICRO:BIT Plant Monitor Instructions 

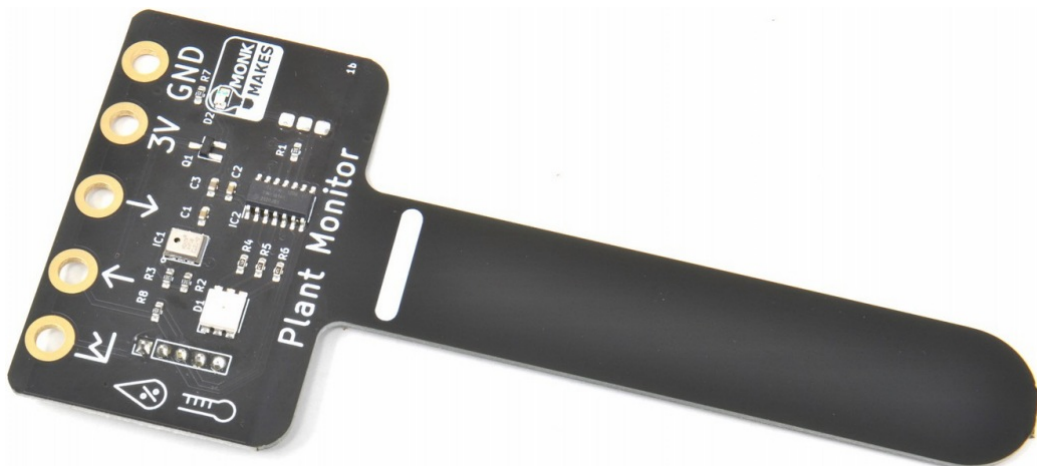

00096 BBC MICRO: BIT Plant Monitor
Instructions



Contents

- [1 WARNING](#)
- [2 INTRODUCTION](#)
- [3 USING THE PLANT MONITOR](#)
- [4 MICRO:BIT](#)
- [5 TROUBLESHOOTING](#)
- [6 SUPPORT](#)
- [7 MONK MAKES](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)


WARNING

Only the prong of the Plant Monitor below the white line should be allowed to get wet. If the top of the board gets wet, disconnect it from everything, dry it using a paper towel and then leave it the thoroughly dry out before trying to use it again.

INTRODUCTION

The MonkMakes Plant Monitor measures soil moisture, temperature, and relative humidity. This board is compatible with the BBC micro: bit, Raspberry Pi, and most microcontroller boards.

- Superior capacitive sensor (no electrical contact with soil)
- Alligator/crocodile clip rings (for use with BBC micro: bit and Adafruit Clue etc.)
- Ready soldered header pins for Arduino and other microcontroller boards.
- Easy to use UART serial interface
- Additional analog output for moisture only
- Built-in RGB LED (switchable)

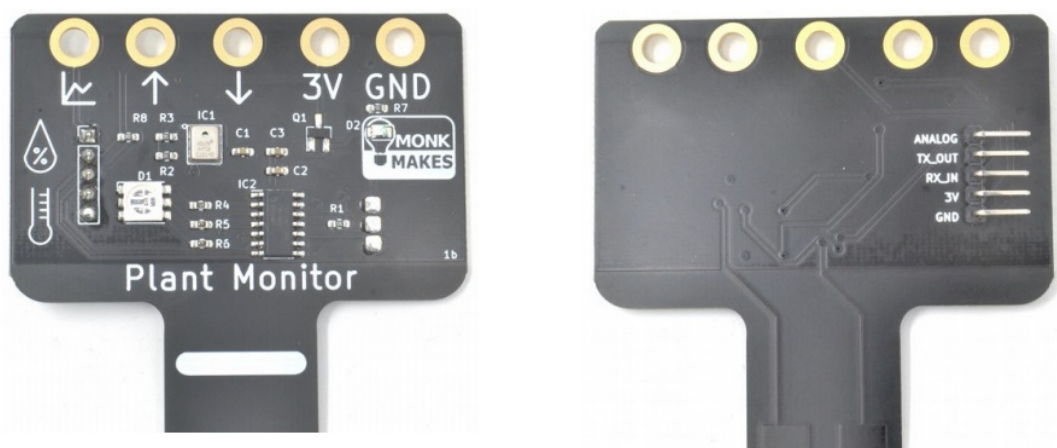

USING THE PLANT MONITOR

The plant monitor should be placed as shown below.



The front side of the prong should be as close to the edge of the pot as possible.

The sensing all takes place from the far side of the prong.


The electronics should be facing out of the pot and the prong of the Plant Monitor pushed into the dirt as far as the white line (but no deeper).

It's a good idea to attach the alligator clip leads to connect to the Plant Monitor before positioning it in the plant pot.

Once powered up, the plant monitor will immediately start displaying the level of wetness using the built-in LED. Red means dry, and green means wet. Before you put the Plant Monitor in the pot, try gripping the prong in your hand and the moisture of your body should be enough to alter the LED's color.

MICRO:BIT

To make full use of wetness, temperature, and humidity readings from the Plant Monitor, connect it up as shown below.

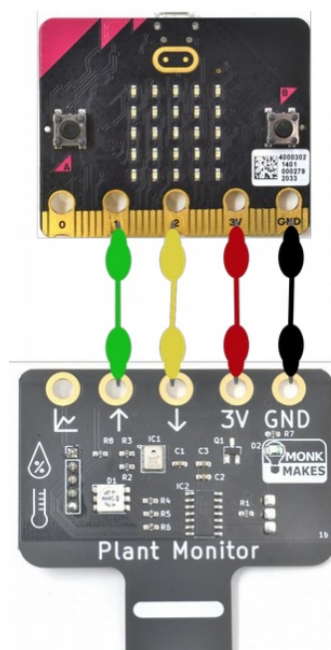


The red and black leads provide power from the micro: bit to the Plant Monitor and the yellow and green leads send serial data to and from the Plant Monitor.

There is a Make code extension for the Plant Monitor that makes it easy to write code and the best way to get started is to load the example project from here:

https://makecode.microbit.org/_XK0cdj3u49Yg

When you download this project onto your micro: bit it will show the wetness using the bar graph block. Pressing


button A will show the temperature in degrees C and pressing button B, the relative humidity as a percentage.
Here's the code:

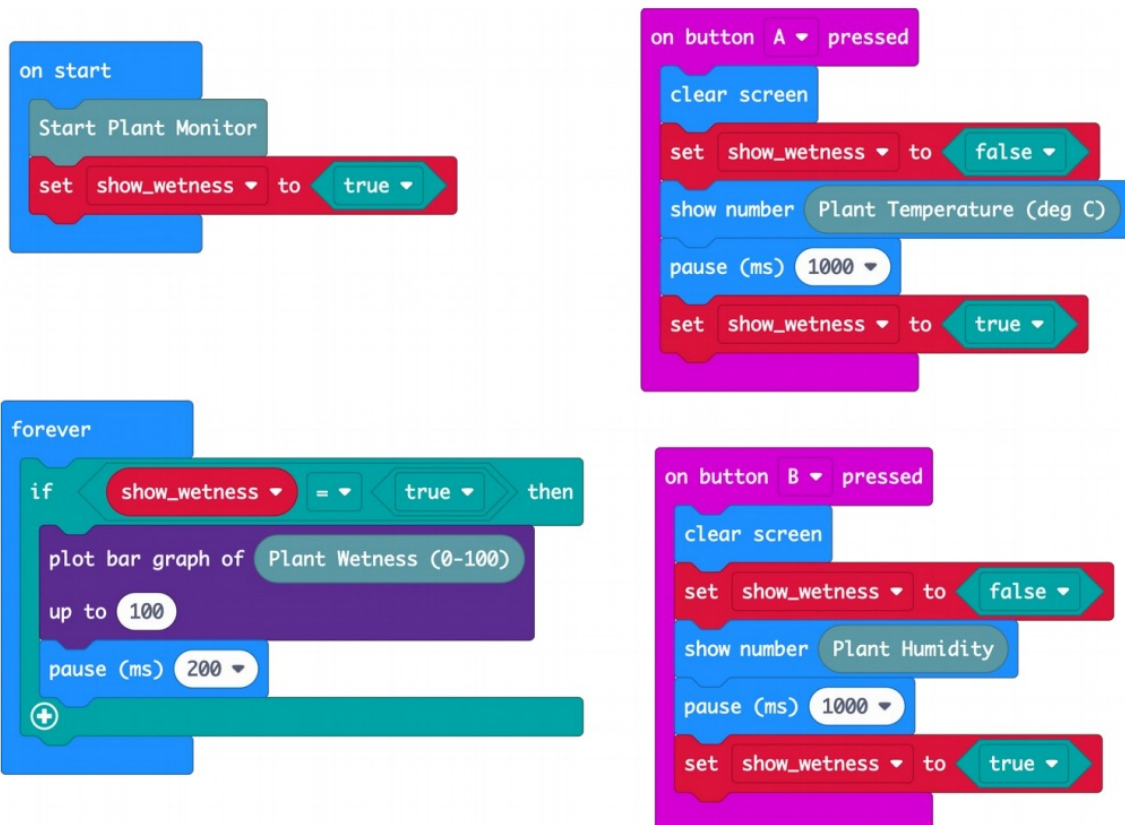

The on-start block must contain the block **Start Plant Monitor**, which initiates communication between the micro:bit and the Plant Monitor. The variable `show_wetness` is used to switch the displaying of the bar graph on and off, otherwise, it will try and draw the bar graph over the top of the temperature and humidity readings.


The forever block uses the block `Plant Wetness` and displays it as a bar graph as long as `show_wetness` is true. When button A is pressed, the screen is cleared and `show_wetness` set to false, and then the temperature is displayed. After a pause for you to read the temperature, `show_wetness` is set to true again so that the bar graph continues refreshing.

The button B code is much the same, except that the relative humidity is displayed rather than the temperature. You can see the Plant Monitor extension in the Palette – it has an icon of a tree.

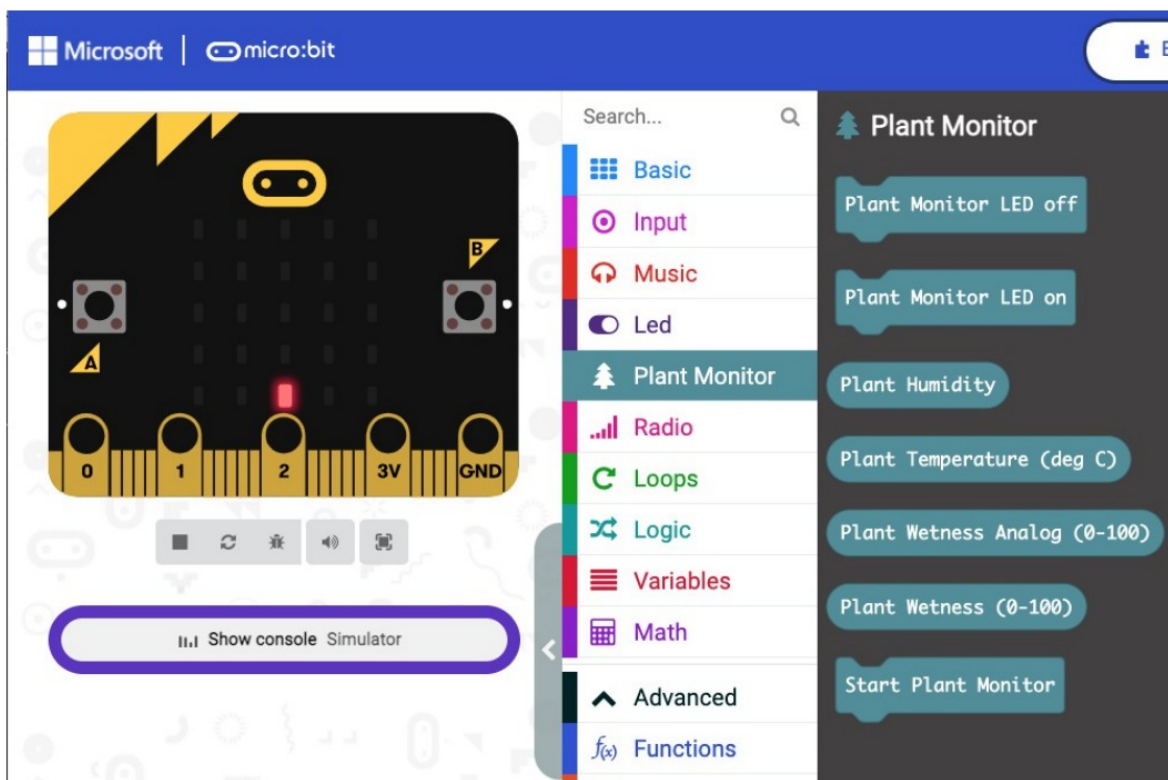

As well as the `Start Plant Monitor`, `Plant Humidity`, and `Plant Temperature` blocks, there are also blocks that turn the LED on and off.

The Plant Wetness Analog block allows you to measure the wetness using the Plant Monitor's analog output pin. This is useful if you want to use the Make code plotting facility, as this is not possible using the serial interface. To use the analog interface, connect your micro: bit like this:

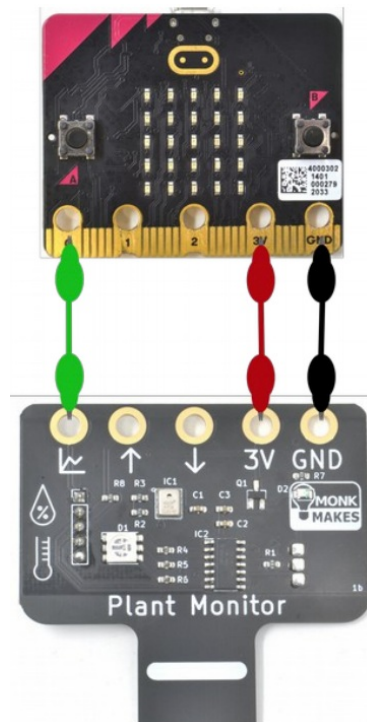

As before, power is supplied by the micro: bit, but this time, micro: Bit pin 0 is used to connect to the analog output of the Plant Monitor.


Connecting the Plant Monitor in this way only measures wetness, but it does mean that because the serial interface of the micro: bit is not used, it can be used to send serial data back to Makecode's plotting feature. Try out the project here:

https://makecode.microbit.org/_YEL61KA0cKDd

The code for this is really quite minimal.



If you have your micro: bit paired to the Make code editor in your browser, then as soon as the program has uploaded, you should see an option Show Console Device appear. Clicking on this will show a real-time plot of the wetness reading.

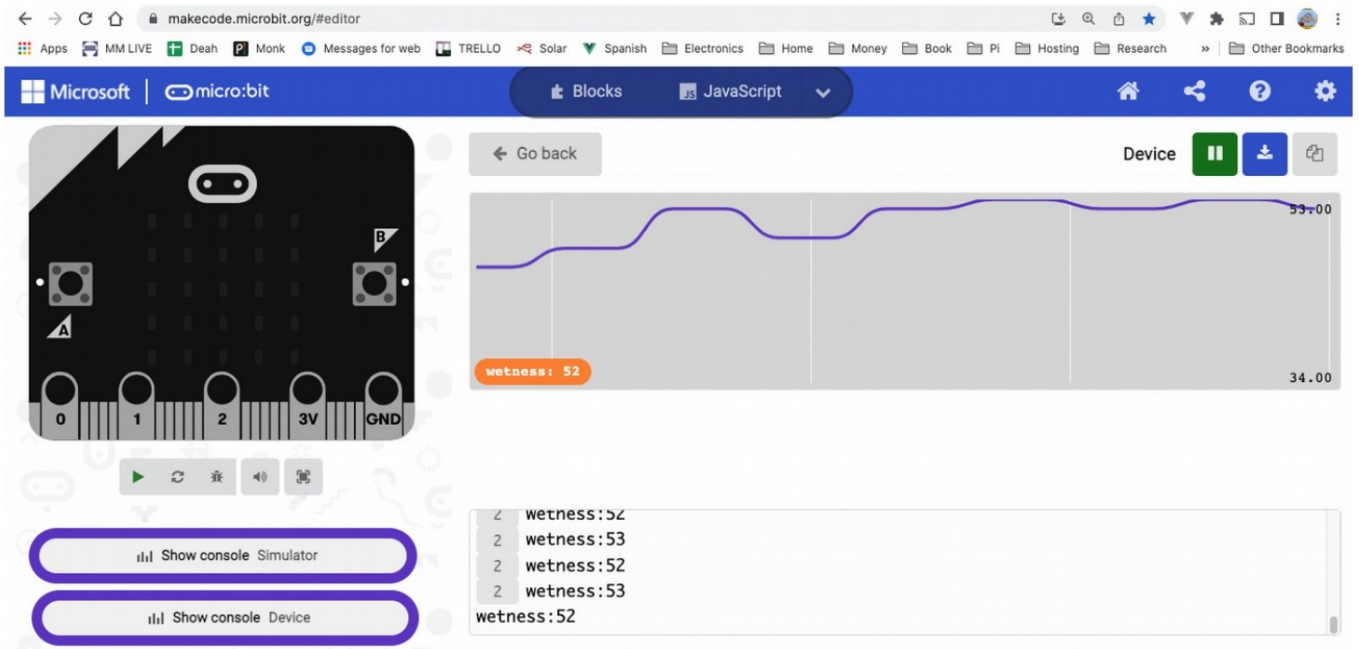

TROUBLESHOOTING

Problem: When I first connect power to the PlantMonitor, the LED cycles through colors. Is this normal?

Solution: Yes, this is the Plant Monitor doing a self-test as it starts up.

Problem: The LED on the Plant Monitor does not light at all.

Solution: Check the power connections to the Plant Monitor. Alligator leads can become faulty. Try changing the leads.

SUPPORT




You can find the Product's information page here: <https://monkmakes.com/pmon> including a datasheet for the product.

If you need further support, please email support@monkmakes.com.


MONK MAKES

As well to this kit, MonkMakes makes all sorts of kits and gadgets to help with your electronics projects. Find out more, as well as where to buy here:

<https://monkmakes.com> you can also follow MonkMakes on Twitter @monkmakes.

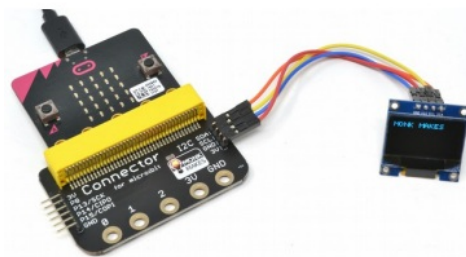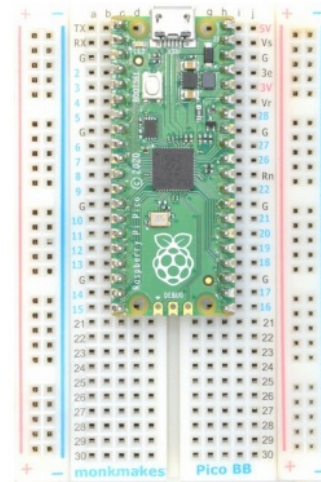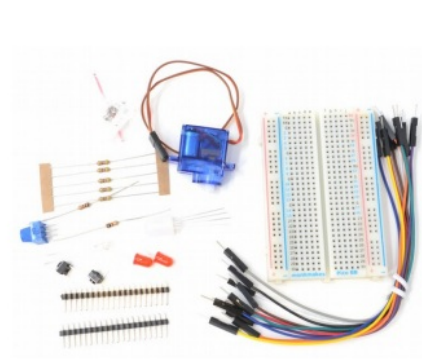

Documents / Resources

 	<p>MONK MAKES 00096 BBC MICRO:BIT Plant Monitor [pdf] Instructions</p> <p>00096, BBC MICRO BIT Plant Monitor, 00096 BBC MICRO BIT Plant Monitor, MICRO BIT Plant Monitor, Plant Monitor</p>
---	--