


MONKi
MONKi MK-TO2
Order Table



MONKi MK-TO2 Order Table Instruction Manual

[Home](#) » [MONKi](#) » MONKi MK-TO2 Order Table Instruction Manual 

Contents

- [1 MONKi MK-TO2 Order Table](#)
- [2 When Charging](#)
- [3 How to Operate](#)
 - [3.1 Precautions Before Use](#)
 - [3.2 How to install](#)
 - [3.3 How to Operate](#)
 - [3.4 Frequently Asked Questions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

MONKi

MONKi MK-TO2 Order Table



Product Specifications

- Brand: MONKi
- Product Name: Table Order
- Main Unit Dimensions: [Insert dimensions here]
- Battery Pack Capacity: [Insert capacity here]

Product Usage Instructions

Precautions Before Use

Read all precautions before using the product. If you encounter any inconvenience or malfunction during use, contact an authorized dealer or customer service. For warranty repairs within the warranty period, present the product warranty certificate included in this manual.

When Charging

- Replace the damaged adapter cord immediately to avoid risk.
- Avoid handling power plugs with wet hands.
- Avoid bending the adapter cord excessively or placing heavy objects on it. Avoid plugging multiple power plugs into a single outlet simultaneously.

When Using

- Do not spray water directly onto any part of the product during cleaning.
- Gently wipe the product's surface with a soft, dry cloth.
- Avoid using chemicals or cleaning solutions that may damage the surface.
- If you notice smoke or unusual odor, disconnect the adapter and battery pack, and contact customer service.
- Avoid dropping or subjecting the product to impact.

How to Install

Assembling the stand

Refer to the provided images to connect the stand to the main body by following the instructions.

Detaching the battery pack

Hold both sides of the battery pack with your hands and pull it forward to detach.

How to Operate

Before Starting

Detach the battery pack from the main unit, then reattach it to reset and initiate functionality.

Powering On

Press and hold the power switch to turn the power on.

Powering Off

While the power is ON, press and hold the power switch to display the power-off popup on the LCD screen. Touch 'Power Off' to turn off the power.

Precautions Before Use

- Read all precautions before using the product.
- If you encounter any inconvenience or malfunction during use, contact an authorized dealer or customer service.
- For warranty repairs within the warranty period, present the product warranty certificate included in this manual.
- The following information is provided to ensure the safe and proper use of the product and to prevent accidents and property damage. Please adhere to these guidelines at all times.

When Charging

- If the adapter cord is damaged, replace the adapter immediately to avoid risk.
- Avoid pulling on the adapter cord or handling the power plug with wet hands.
- Prevent damage by not bending the adapter cord excessively or placing heavy objects on it.
- Do not plug multiple power plugs into a single outlet simultaneously.

When Using

- Do not spray water directly onto any part of the product during cleaning.
- Gently wipe the product's surface with a soft, dry cloth.
- Avoid using chemicals or cleaning solutions, as they may damage the surface and cause paint to peel.
- If you notice smoke or an unusual odor, disconnect the adapter and battery pack, and contact customer service.
- Avoid dropping or subjecting the product to impact. Keep it away from heavy vibrations or magnetic fields.


- Do not handle the product or adapter with wet hands. If moisture or foreign substances enter the product or adapter, discontinue use and contact customer service.
- Keep the product away from direct sunlight and heat sources, such as heaters.
- Avoid using the product in areas with high humidity, dust, soot, or extreme temperatures.
- Do not place heavy objects on the product.
- Never disassemble, repair, or modify the product.

Precautions

Miscellanies

- Please use the battery pack after fully charging it.
- Use the original packaging when moving the product to ensure its safety.


What's Included

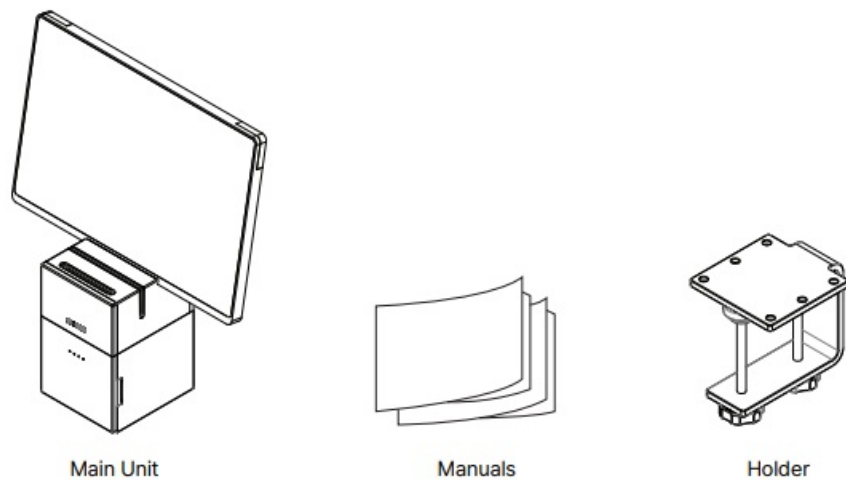

The images of this product are for illustrative purposes only and may differ from the actual product.


Names of the Parts

Main Unit

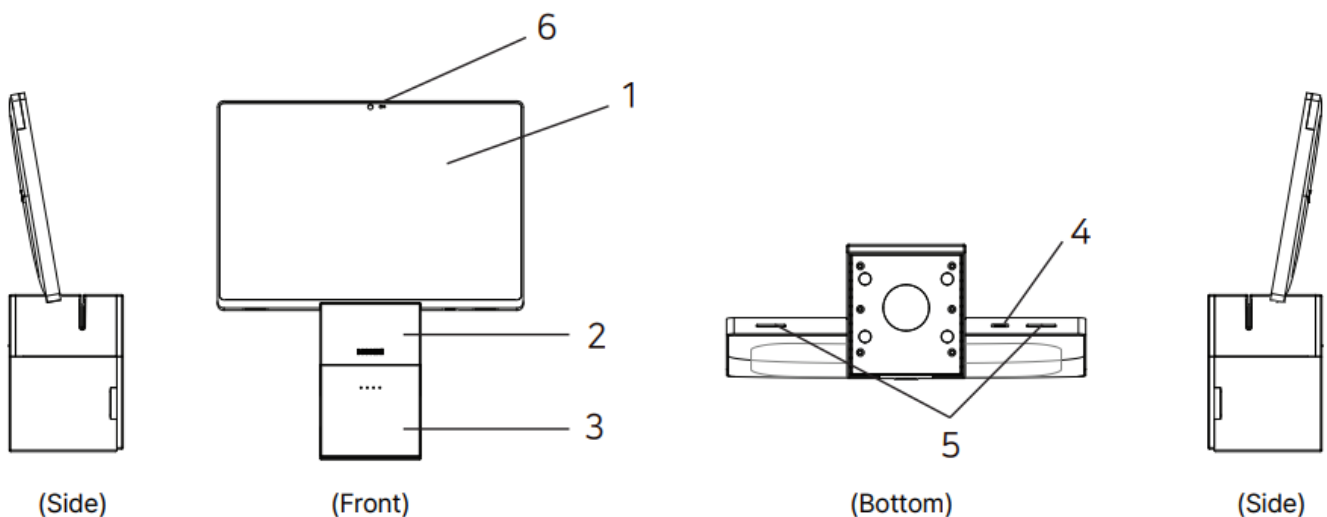

- LCD Screen
- Card Reader
- Battery Pack
- Power Button
- Speaker
- Camera

Battery Pack

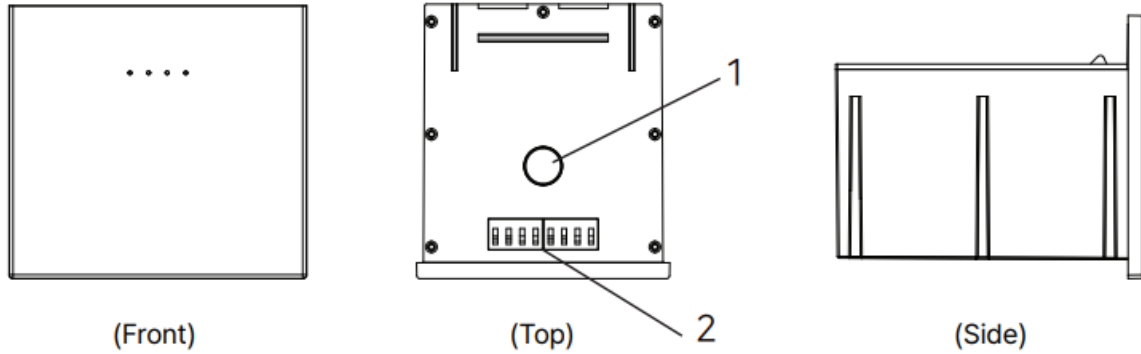


- Power Button
- Connector to Main Unit

How to install


Assembling the stand

- Refer to the left image below to connect the stand to the main body by inserting the screw from the bottom of the stand upward.
- As shown in the right image below, insert the table into the '■'-shaped gap of the stand then tighten the long screw at the bottom of the stand to secure it to the table.

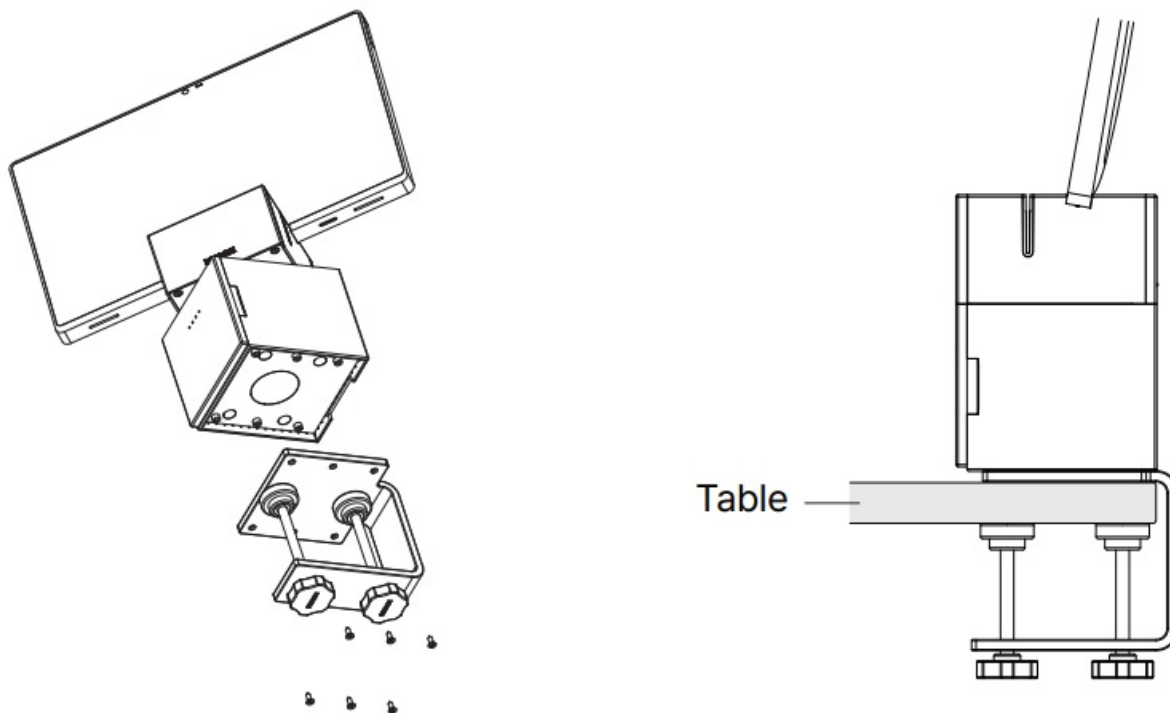

Detaching the battery pack

- Hold both sides of the battery pack with your hands and pull it forward to detach the battery pack.

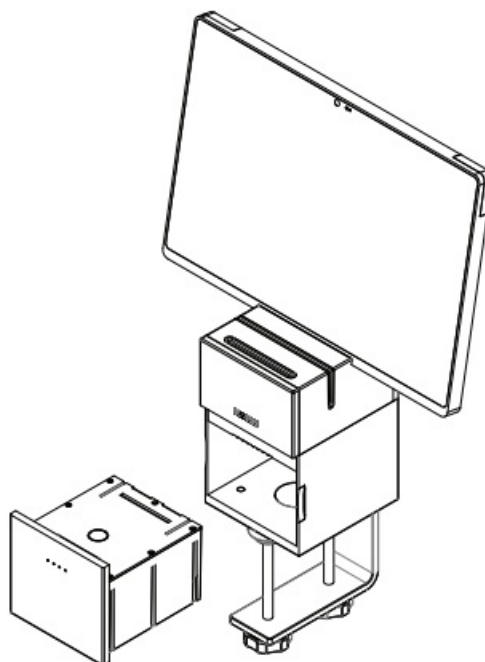

How to Operate

Before Starting

- Before use, detach the battery pack from the main unit, then reattach it.
- This will reset the battery pack and initiate its functionality.

Powering On

- Press and hold the power switch to turn the power on.

Powering Off

- While the power is ON, press and hold the power switch to display the power-off popup on the LCD screen. Touch 'Power Off' to turn off the power. Removing the battery pack while the power is ON may cause file or system damage. Only detach the battery pack to power off the device if the system is malfunctioning or experiencing abnormal behavior, such as freezing.

Charging

- Be sure to connect a 5V DC, 2A adapter to the USB Type C connector on the back of the main unit only when the power is OFF; this will charge the battery pack.
- If a 5V DC, 2A adapter is connected to the USB Type C connector on the back of the main unit while the power is ON, the adapter will supply power instead of the battery pack (the battery pack will not be charged).

Check battery pack capacity.

- When the battery pack is detached from the main unit or charger, the battery pack's capacity display LED is off. In this state, pressing the power switch on the top of the battery pack will display the current capacity on the LED for approximately 30 seconds. Pressing the power switch again within 30 seconds will turn off the LED.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver. — Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter. Radiation Exposure Statement To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with a minimum distance of 20cm from your body.

Frequently Asked Questions


Q: Can I use cleaning solutions on the product?

A: No, avoid using chemicals or cleaning solutions as they may damage the surface.

Q: How do I reset the battery pack?

A: Detach the battery pack from the main unit and reattach it before use to reset it.

Documents / Resources

	MONKi MK-TO2 Order Table [pdf] Instruction Manual MK-TO2, MK-TO2 Order Table, Order Table, Table
---	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.