



neptronic TM100N T Series Line Voltage Actuators Instruction Manual

[Home](#) » [neptronic](#) » neptronic TM100N T Series Line Voltage Actuators Instruction Manual 

Contents

- [1 neptronic TM100N T Series Line Voltage Actuators](#)
- [2 Features](#)
- [3 Dimensions](#)
- [4 Mechanical Installation](#)
- [5 Input Signal and Feedback setup](#)
- [6 PC Board](#)
- [7 Stroke adjustment – No control signal change](#)
- [8 Programming – Change of control signal& PWM pulse setting](#)
- [9 Enabling or disabling PWM mode](#)
- [10 Zero and span calibration](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



neptronic®

neptronic TM100N T Series Line Voltage Actuators




Features

- Clutch for manual adjustments.
- Maintenance free.
- Position indicator.
- Control signal fully programmable.
- Brushless DC driven motor.
- Fail safe by EnerdriveSystem1 (on model 160 & 180).
- Auxiliary switches (on model 120 & 180).

Technical Data	TM100N	TM120N	TM160N	RM100N	RM120N	RM160N	RM180N
Auxiliary switches	No	Yes (2)	No	No	Yes (2)	No	Yes (2)
Fail safe – <i>Enerdrive</i>	No		Yes	No		Yes	
Power consumption	20 VA		45 VA Peak , 20 VA	30 VA		50 VA Peak, 30 VA	
Torque	180 in.lb. [20 Nm] at rated voltage			360 in.lb. [40 Nm] at rated voltage			
Running time through 90°	40 to 50 sec torque dependent						
Power supply	28 to 32 Vdc or 22 to 26 Vac, 110 to 130 Vac 50/60Hz						
Feedback	4 to 20 mA or 2 to 10 Vdc adjustable						
Electrical connection	18 AWG [0.8 mm2] minimum						
Inlet bushing	2 inlet bushing of 7/8 in [22.2 mm]						
Control signal	Analog, Digital or PWM programmable (factory set with analog control signal)						
Angle of rotation	0 to 90 degrees, electronically adjustable (factory set with 90° stroke)						
Direction of rotation	Reversible, Clockwise (CW) or Counterclockwise (CCW) (factory set with CW direction)						
Operating temperature	0°F to 122°F [-18°C to 50°C]						
Storage temperature	-22°F to 122°F [-30°C to 50°C]						
Relative Humidity	5 to 95 % non condensing.						
Weight	5 lbs. [2.3 kg]			8 lbs. [3.5 kg]			
Warning: Do not press the clutch when actuator is powered							

Dimensions

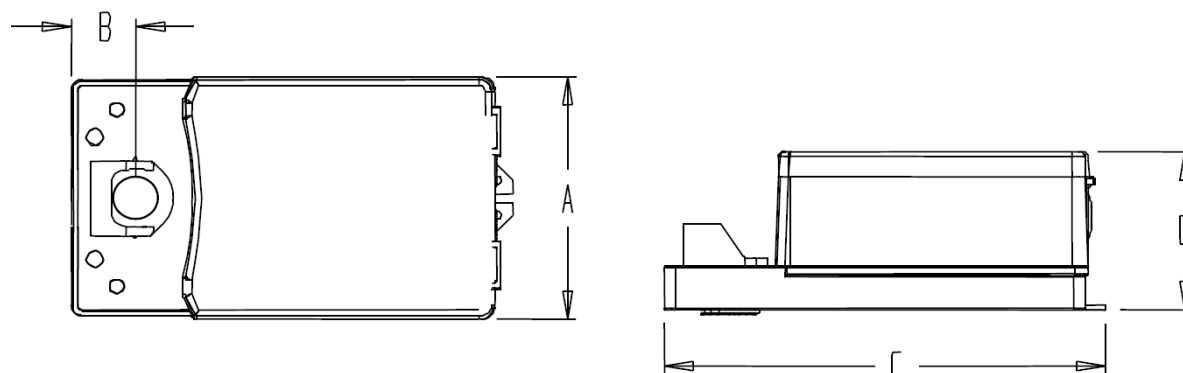


Caution

We strongly recommend that all Neptronic® products be wired to a separate transformer and that transformer shall service only Neptronic® products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

When multiple actuators are wired on a single transformer, polarity must be observed. Long wiring runs create voltage drop which may affect the actuator performance.


Mechanical Installation

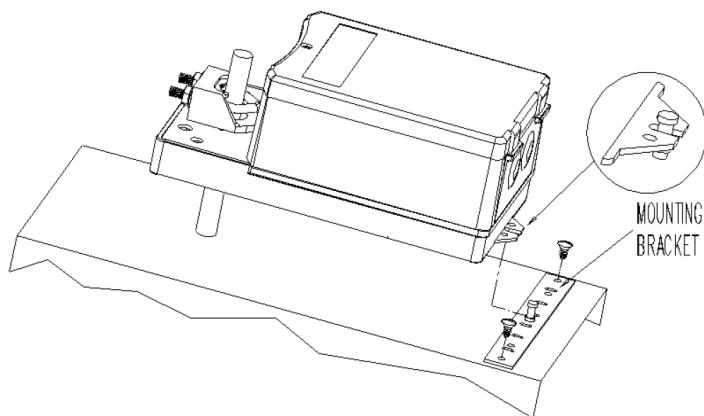


1. Manually close the damper blades and positioned the actuator at 0° or 90°.
2. Slide the actuator onto the shaft.
3. Tighten the nuts on the “U” bolt to the shaft with a 10mm wrench to a torque of 150 in.lb. [17 Nm].
4. Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator.
The bracket pin must be placed in the mid distance of the slot.
5. Fix the bracket to the ductwork with #8 self-tapping screws.

Wiring Diagrams

Analog line voltage




Analog low voltage

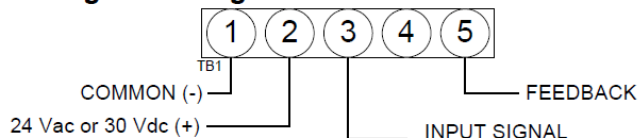


Digital signal from internal source

Digital – 3 wire / 2 position

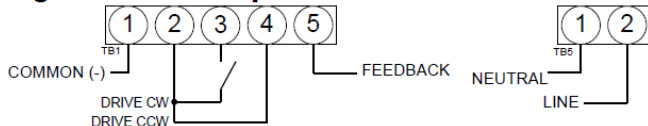


Digital – 4 wire / 3 point floating

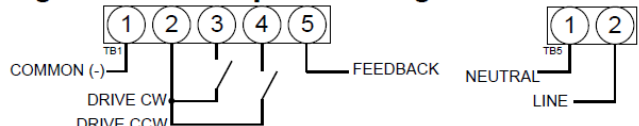


Digital signal

Digital – 3 wire / 2 position

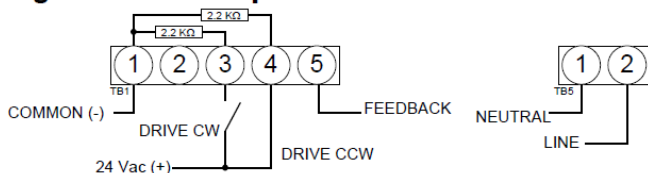

Digital – 4 wire / 3 point floating

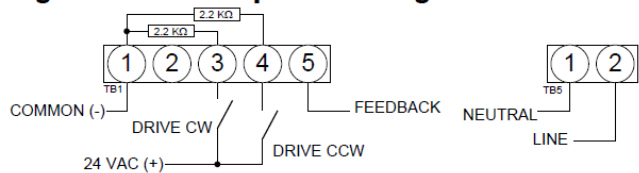

Special consideration for Digital control


In this mode, the actuator is sensitive to induced electrical voltages from external sources. To prevent such interference, if the signal on pins 4 and 3 on TB1 are from an external 24 Vac source, install a resistor 2.2kohm, 0.5W between pins 4 and 1 and another of 2.2kohms, 0.5W between pins 3 and 1 of TB1. These resistors are

included.

Input Signal and Feedback setup

	Input Signal	Feedback
Analog Mode	Input Signal is set with Dipswitch # 3 DS1-3 at OFF = 2 – 10Vdc (default setting) DS1-3 at ON = 4 – 20mA	Feedback is set with Dipswitch #4 DS1-4 at OFF = 4 – 20mA (default setting) DS1-4 at ON = 2 – 10Vdc
Digital & PWM Mode	No Input Signal Setting ! DS1-3 MUST be at OFF	

PC Board

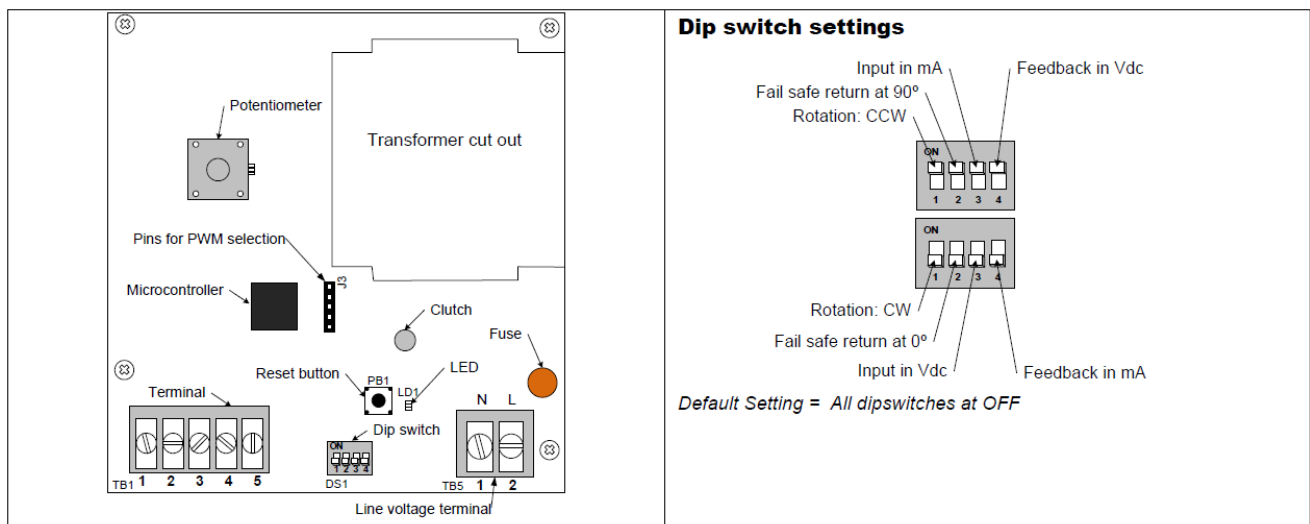

Stroke adjustment – No control signal change

1. Apply power and, WAIT FOR LED TO BE OFF (around 10 seconds).
2. Press and release the reset button to start the auto-stroke process.

The LED should be illuminated.

- **First option:**

The actuator will then travel in both directions to find its limit and position itself according to the demand.
The LED will extinguish, the process is complete.

- **Second option:**

When the desired start position is reached, press and release the reset button. The actuator will now go the end position. (you can also press and release the reset button when it reaches the end position)
The LED will extinguish, the process is complete.

Programming – Change of control signal& PWM pulse setting

1. Remove power and put all dip switches “OFF”. (factory preset).
2. Apply power and, within 10 seconds, press and release the reset button. The LED should be blinking.
3. Select the control signal with dip switches:

	Digital or Analog Modes	PWM Mode
Move switch No1 "ON" and then "OFF" .	Digital (On/Off or 3 point floating)	5 sec. pulse (factory preset)
Move switch No2 "ON" and then "OFF" .	Analog (Default)	25 sec. pulse

4. Stroke adjustment

see the stroke adjustment section above.


Enabling or disabling PWM mode

1. Remove power supply to actuator
2. Install jumper between pin 3 & 4 of J3
3. Select the desired action using the dipswitches (DS1):

DS1-1	DS1-2	Action
OFF	ON	Enable PWM Mode
ON	OFF	Disable PWM Mode

4. Re-apply power supply to actuator
5. Wait 5 seconds
6. Remove power supply to actuator
7. Remove jumper between pin 3 & 4 of J3, re-install it between pin 4 & 5.
8. Re-apply power supply to actuator

PWM is factory preset at 5 sec. pulse, refer to programming section above to change pulse setting.

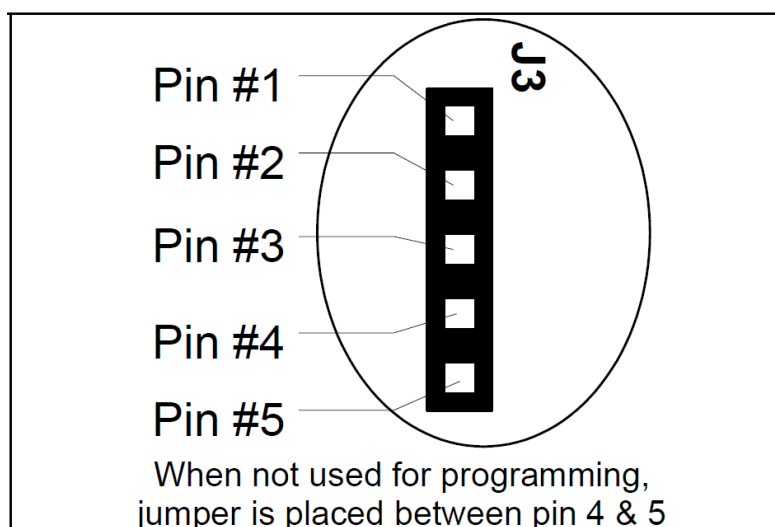


Zero and span calibration

This feature is applicable to analog control signal only.

- 1. Remove power and put all dip switches “OFF”. (factory preset).
- 2. Apply power and, **within 10 seconds** press and **hold** the reset button until the LED blinks once. The Zero and span calibration process then
- 3. Release the reset button. The LED is now constantly
- 4. Apply new minimum It can be any value between 0 to 7 Vdc, with an external 0 to 10 volt supply (ex: MEP).
- 5. Press and release the reset button to memorize the new minimum voltage. The LED
- 6. Apply new maximum It can be any value between 3 to 10 Vdc, this value should be greater than the new minimum value.
- 7. Press and release the reset button to memorize the new maximum voltage. The LED The Zero and span calibration process is complete.

Note: To reset zero and span to 2 to 10 Vdc (factory value). You just have to re-select the analog control signal mode, see Programming.


Wiring Diagrams for auxiliary switches (on model 120& 180)

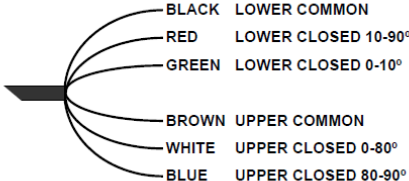

BLACK	LOWER COMMON
RED	LOWER CLOSED 10-90°
GREEN	LOWER CLOSED 0-10°
BROWN	UPPER COMMON
WHITE	UPPER CLOSED 0-80°
BLUE	UPPER CLOSED 80-90°

Auxiliary switch rating:
5 Amp resistive, 250 Vac

Documents / Resources



[neptronic TM100N T Series Line Voltage Actuators](#) [pdf] Instruction Manual
TM100N, TM120N, TM160N, RM100N, T Series Line Voltage Actuators, Line Voltage Actuators, T Series Actuators, Actuators