

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# **Netzer VLX-60 Two Plate Ring Absolute Encoder User Manual**

[Home](#) » [Netzer](#) » Netzer VLX-60 Two Plate Ring Absolute Encoder User Manual

Contents [hide](#)

[1 Netzer VLX-60 Two Plate Ring Absolute Encoder](#)

## [2 Preface](#)

### [2.1 Version 3.0; January 2022](#)

## [3 ESD protection](#)

## [4 Product overview](#)

### [4.1 Overview](#)

### [4.2 Installation flow chart](#)

### [4.3 Encoder mounting](#)

## [5 Unpacking](#)

### [5.1 Standard order](#)

## [6 Electrical interconnection](#)

### [6.1 Setup mode over NCP](#)

### [6.2 Electrical connection and grounding](#)

## [7 Software installation](#)

### [7.1 Minimum requirements](#)

### [7.2 Installing the software](#)

## [8 Mounting verification](#)

### [8.1 Starting the Encoder Explorer](#)

### [8.2 Mechanical installation verification](#)

## [9 Calibration](#)

### [9.1 'Push-Button' calibration](#)

### [9.2 Auto-calibration](#)

### [9.3 Full manual calibration](#)

### [9.4 CAA calibration](#)

### [9.5 Setting the encoder zero point](#)

### [9.6 Jitter test](#)

## [10 Operational Mode](#)


## [11 Mechanical drawings](#)

## [12 Documents / Resources](#)

## [13 Related Posts](#)



**Netzer VLX-60 Two Plate Ring Absolute Encoder**

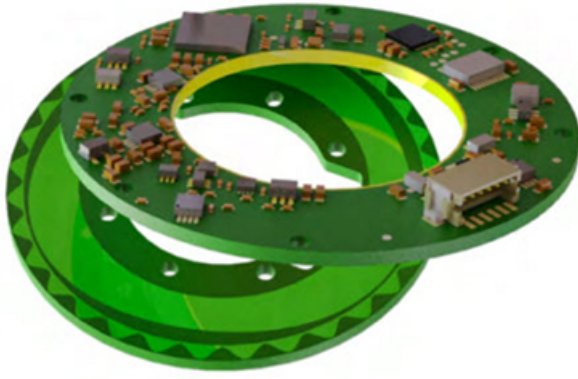

## Preface

Version 3.0; January 2022

- Applicable documents
- VLX-60 Electric Encoder data sheet

## ESD protection

As usual for electronic circuits, during product handling do not touch electronic circuits, wires, connectors or sensors without suitable ESD protection. The integrator / operator shall use ESD equipment to avoid the risk of circuit damage.

## ATTENTION

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES

## Product overview


### Overview

The VLX-60 absolute position Electric Encoder™ is a revolutionary position sensor originally developed for industrial environment applications. Currently it performs in a broad range of applications, including high-end robotics, survey & mapping systems medical machines other industrial automation applications.


The Electric Encoder™ non-contact technology relies on an interaction between the measured displacement and a space/time modulated electric field.

The VLX-60 Electric Encoder™ is semi-modular, i.e., its rotor and stator are separate.


1. Encoder stator
2. Encoder rotor

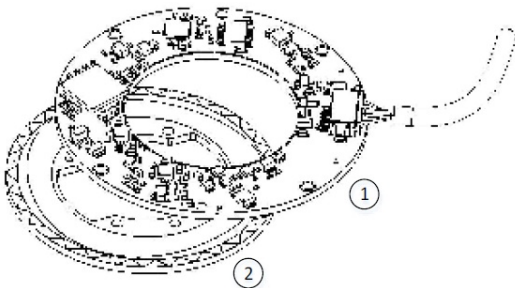

## Installation flow chart

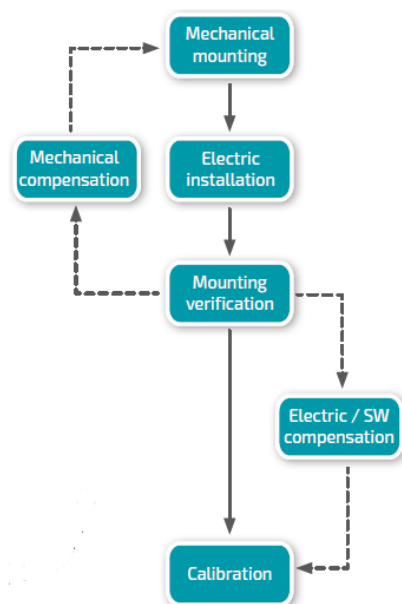


## Encoder mounting

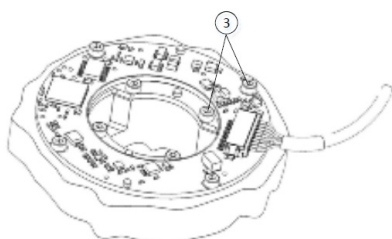

Typical encoder installation includes:


- Encoder Stator & Rotor mounting screws (3) Socket Head Cup Screw 8 x M2
- Encoder Stator & Rotor mounting dowel pins (4), 4 x M2

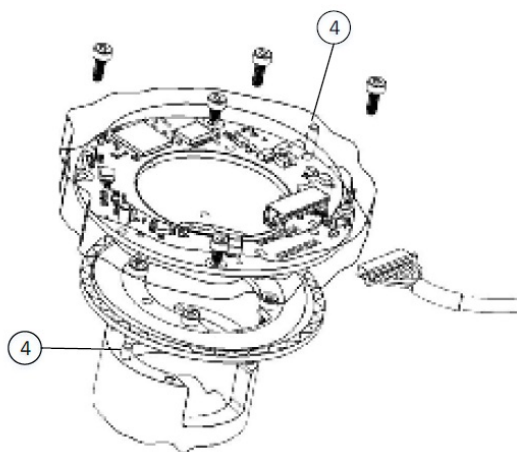


## Encoder stator / Rotor relative position

For proper performance the air gap should be 0.6 mm +/- 0.1mm

The optimal recommended amplitude values are middle of the range according to those shown in the Encoder Explorer software and vary according to the encoder type.

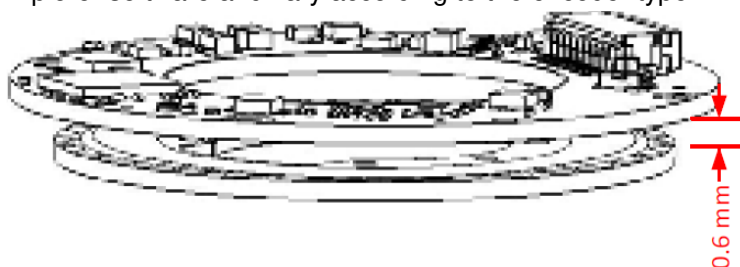

Verify proper rotor mounting with the Encoder Explorer tools “Signal analyzer” or “Mechanical installation

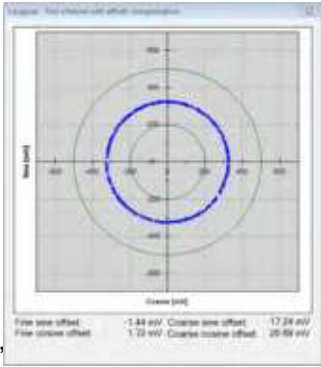

verification.”

**Note:** for more information please read paragraph 6

Unpacking

Standard order

The package of the standard VLX-60 contains the encoder Stator & Rotor.

Optional accessories:

- 1. CB-00088-250, 250mm connection harness
- 2. CB-00088-500, 500mm connection harness
- 3. CNV-00003, RS-422 to USB converter (with USB internal 5V power supply path).
- 4. NanoMIC-KIT-01, RS-422 to USB converter. Setup & Operational modes via SSi /BiSS interface.  
Interconnection – connector HRS DF13-10S-1.25



Accessories - cables (optional)

SSi / BiSS	Remarks
CB-00088-250	AWG30, 250 mm
CB-00088-500	AWG30, 500 mm

- 5. DKIT-VLX-60-SG-CH, Mounted SSi encoder on rotary jig, RS-422 to USB converter and cables.
- 6. DKIT-VLX-60-IG-CH, Mounted BiSS encoder on rotary jig, RS-422 to USB converter and cables.


Electrical interconnection

This chapter reviews the steps required to electrically connect the encoder with digital interface (SSi or BiSS-C).

Connecting the encoder

The encoder has two operational modes:

Absolute position over SSi or BiSS-C:

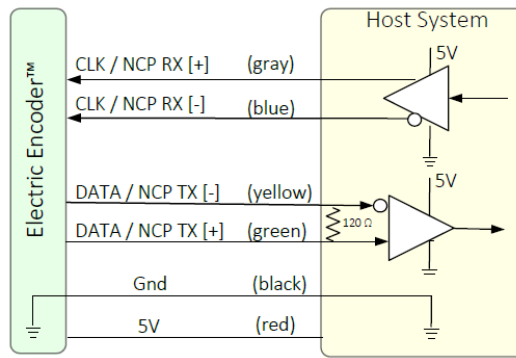

This is the power-up default mode

### SSi / BiSS interface wires color code

Clock +	Grey	Clock
Clock –	Blue	
Data –	Yellow	Data
Data +	Green	
GND	Black	Ground
+5V	Red	Power supply

### Setup mode over NCP

#### (Netzer Communication Protocol)

This service mode provides access via USB to a PC running Netzer Encoder Explorer application (on MS Windows 7/10). Communication is via Netzer Communication Protocol (NCP) over RS-422 using the same set of wires. Use the following pin assignment to connect the encoder to a 9-pin D-type connector to the RS-422/USB converter CNV-0003 or the NanoMIC.

### Electric encoder interface, D Type 9 pin Female

Description	Color	Function	Pin No
	Gray	Clock / RX +	2
SSi Clock / NCP RX	Blue	Clock / RX –	1
	<u>Yellow</u>	Data / TX –	<u>4</u>
<u>SSi Data / NCP TX</u>	<u>Green</u>	Data / TX +	<u>3</u>
<u>Ground</u>	<u>Black</u>	<u>GND</u>	<u>5</u>
Power supply	Red	+5V	8

### Electrical connection and grounding

The encoder does NOT come with specified cable and connector, however, do observe grounding consideration:

1. The cable shield does not connect to the power supply return line.
2. Ground the host shaft to avoid interference from the host system, which could result in encoder internal noise.

**Note:** 4.75 to 5.25 VDC power supply required



Connect Netzer encoder to the converter, connect the converter to the computer and run the Electric Encoder Explorer Software Tool

## Software installation

The Electric Encoder Explorer (EEE) software:

- Verifies Mechanical Mounting Correctness
- Offsets Calibration
- Sets up general and signal analysis

This chapter reviews the steps associated with installing the EEE software application.

### Minimum requirements

- Operating system: MS windows 7/ 10,(32 / 64 bit)
- Memory: 4MB minimum
- Communication ports: USB 2
- Windows .NET Framework, V4 minimum

### Installing the software

- Run the Electric Encoder™ Explorer file found on NetZero website: Encoder Explorer Software Tools
- After the installation you will see Electric Encoder Explorer software icon on the computer desktop.
- Click on the Electric Encoder Explorer software icon to start.

## Mounting verification

### Starting the Encoder Explorer

Make sure to complete the following tasks successfully:

- Mechanical Mounting
- Electrical Connection
- Connecting Encoder for Calibration
- Encoder Explore Software Installation

### Run the Electric Encoder Explorer tool (EEE)

Ensure proper communication with the encoder: (Setup mode by default).

1. The status bar indicates successful communication.
2. Encoder data displays in the encoder data area. (CAT No., Serial No.)
3. The position dial display responds to shaft rotation.



Perform mounting verification & rotation direction selection before calibration to ensure optimal performance.

It is also recommended to observe the installation at the [Tools – Signal Analyzer] window.


### Mechanical installation verification

The Mechanical Installation Verification provides a procedure that will ensure proper mechanical mounting by collecting raw data of the fine and coarse channels during rotation.

4. Select [Mechanical Mounting Verification] on the main screen.



5. Select [Start] to initiate the data collection.
6. Rotate the shaft in order to collect the fine and coarse channels data.

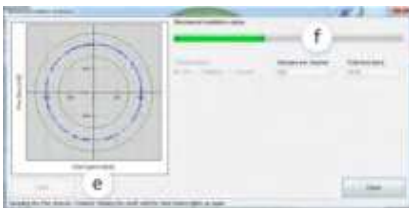

7. At the end of a successful verification, the SW will show “Correct Mechanical Installation.”



8. If the SW indicates “Incorrect Mechanical Installation,” correct the mechanical position of the rotor, as presented in paragraph 3.3 – “Rotor Relative Position.”



## Calibration

The VLX-60 provides several options for calibration:

### ‘Push-Button’ calibration

After installation, this simple calibration is available without connecting to a PC or to the Encoder Explorer software. Simply connect a 5V power supply to the encoder and the calibration process can be started.

### Procedure:

1. Upon power connection the LED should continuously blink green which means the encoder is ready for calibration
2. Press the Push-Button for 5 seconds
3. Rotate continuously for about 10-20 seconds while the LED blinks alternately red & green.
4. When the LED is showing constant green the calibration is successful.
5. If the LED blinks red that means the calibration, process failed.

Refer to this troubleshoot table:

No. of blinks	Calibration step with error	Recommendation
1, 2 or 3	Noisy electrical environment	<ol style="list-style-type: none"> <li>1. Improve grounding</li> <li>2. Repeat calibration process</li> </ol>
7 or 8 or 9	Incorrect Mechanical installation resulting in out of limits amplitude	<ol style="list-style-type: none"> <li>1. Check Amplitudes via Encoder Explorer.</li> <li>2. Correct the mechanical installation</li> <li>3. Repeat calibration process</li> </ol>
10	No alignment between Coarse and Fine amplitudes	Rotation speed too high for calibration process. Repeat calibration process at lower speed

**Note:** Refer to Netzer if problem persists

### Auto-calibration

Auto-calibration option enabled.

Refer to document: Auto-calibration-feature-user-manual-V01

### Full manual calibration


After successfully completing the Mounting Verification procedure:

1. Select [Calibration] on the main screen.




2. Start the data acquisition while rotating the shaft.  
The progress bar (c) indicates the collection progress.  
Rotate the axis consistently during data collection-covering the working sector of the application end to end-by default the procedure collects 500 points over 75 seconds. Rotation speed is not a parameter during data collection. Data collection indication shows for the fine/coarse channels, a clear “thin” circle appears in the center (d) (e) with some offset.



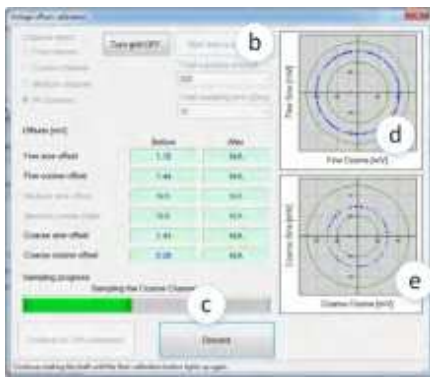

Offset compensated fine / Coarse channel

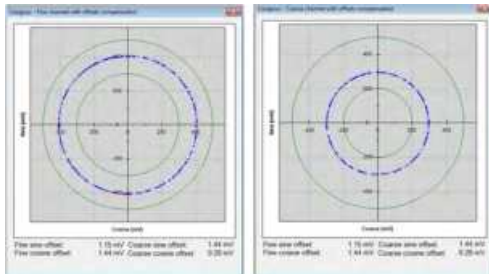

## CAA calibration

The following calibration aligns the coarse/fine channel by collecting data from each point of both channels.

Select [Continue to CAA Calibration]

In the CAA angle calibration window, select the relevant option button from the measurement range options (a):

- Full mechanical rotation – shaft movement is over 10deg – recommended.
- Limited section – define operation of the shaft in a limited angle defined by degrees in case of <10deg
- Free sampling modes – define the number of calibration points in the total number of points in the text box. The system displays the recommended number of points by default. Collect a minimum of nine points over the working sector.
- Click the [Start Calibration] button (b)
- The status (c) indicates the next required operation; the shaft movement status; the current position, and the next target position to which the encoder should be rotated.
- Rotate the shaft/encoder to the next position and click the [Continue] button (c)
  - the shaft should be in STAND STILL during the data collection.

Follow the indication/interactions during the cyclic process for positioning the shaft → stand still → reading calculation.
- Repeat the above step for all defined points. Finish (d).
- Click the [Save and Continue] button (e).

The last step saves the offsets CAA parameters, completing the calibration process.




## Setting the encoder zero point

The zero position can be defined anywhere in the working sector. Rotate the shaft to the desired zero mechanical position.


Go into “Calibration” button at the top menu bar, press “Set UZP”.

Select “Set Current Position” as zero by using the relevant option, and click [Finish].


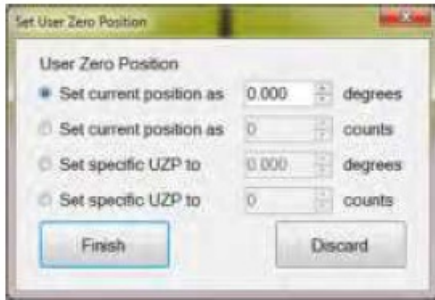


## Jitter test

Perform a jitter test to evaluate the quality of the installation; the jitter test presents the reading statistics of absolute position readings (counts) over time. Common jitter should be up  $\pm 3$  counts; higher jitter may indicate system noise.

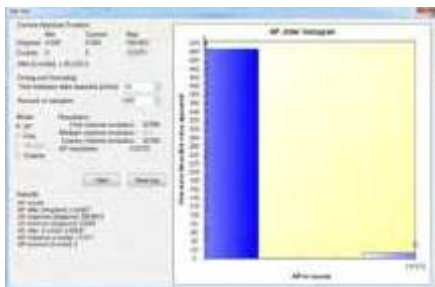

In case the reading data (blue dots) are not evenly distributed on a thin circle, you may experience “noise” in your

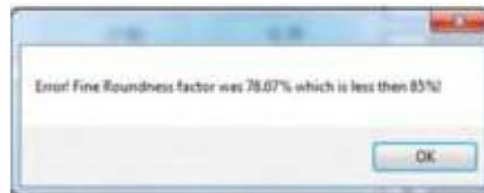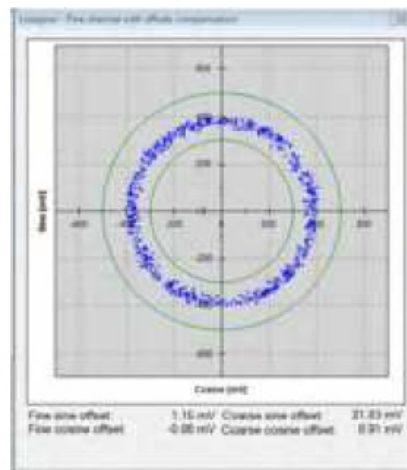

installation (check shaft/stator grounding).

## Operational Mode

### SSi / BiSS

Operational mode indication of the SSi / BiSS Encoder interface available by using the NanoMIC.

For more information read about NanoMIC on Netzer website

The operational mode presents the “real” SSi / BiSS interface with 1MHz clock rate.

### Protocol SSi



### Protocol BiSS



## Mechanical drawings

