



NORM Reversible Stick Rake Instruction Manual

[Home](#) » [NORM](#) » NORM Reversible Stick Rake Instruction Manual 



Reversible Stick Rake
Instruction Manual



Contents

- 1 INTRODUCTION
- 2 SAFETY DEFINITIONS: TERMS AND SYMBOLS
- 3 SAFETY INSTRUCTIONS
- 4 PREDELIVERY
- 5 ASSEMBLY INSTRUCTIONS
- 6 OPERATING INSTRUCTIONS
- 7 MAINTENANCE AND CARE
- 8 RISK ASSESSMENT
- 9 PARTS
- 10 PARTS LIST
- 11 APPENDICES
- 12 WARRANTY
- 13 Documents / Resources

INTRODUCTION



Stick Rake

Congratulations on purchasing a Norm Engineering Pty Ltd attachment. We have designed this stick rake for a long, productive, and safe life. Your attachment will provide you with years of service provided regular maintenance and correct usage is applied,






This manual offers a guide on how to safely assemble, mount, operate and maintain your stick rake. While the manual attempts to cover most situations, there are many unforeseen risks and events that are not included due to the capability of the stick rake. On this basis the owner and/or operator must determine if this attachment is suited for a particular purpose.

Norm Engineering Pty Ltd can accept no responsibility or liability for how you operate your equipment: we can only provide warning notes and safety precautions in relation to the standard operation of the stick rake.


The illustrations and data used in this manual were current at the time of printing but due to possible engineering and/or production changes, this product may vary slightly. Norm Engineering Pty Ltd reserves the right to redesign and/or change components as may be necessary without notification.


SAFETY DEFINITIONS: TERMS AND SYMBOLS

We will use the ANS| Z535.4-2011(R2017) standard for the definitions of signal words as described in conjunction with colours red, orange, and yellow. These are used with the Safety Alert Symbol:

- **Signal word:** Are defined as the words used in the signal word panel. The signal words for hazard alerting signs are “DANGER”, “WARNING”, and “CAUTION”. Safety notice signs use the signal word “NOTICE”. Safety instruction signs use signal words that are specific to the situation.
-  **DANGER:** Indicates a hazardous situation, which, if not avoided, will result in death or A serious injury. This signal word is to be limited to the most extreme situations. (White letters on a red background)
-  **WARNING:** Indicates a hazardous situation, which, if not avoided, could result in death or serious injury. (Black letters nan orange background)
-  **CAUTION:** Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury. (Black letters on a yellow background)
-  **NOTICE:** Indicates information considered important, but not hazard-related (e.g, messages relating to property damage). (White letters on a blue background)
-  **SAFETY INSTRUCTIONS:** Indicates a type of safety sign, where specific safety-related instructions or procedures are described. More definitive signal words are encouraged, where practical (e.g., SAFE SHUTDOWN PROCEDURE, SAFE OPERATING PROCEDURE). (White letters on a green background)

SAFETY INSTRUCTIONS

 **WARNING** Obey all the safety instructions listed in this section and throughout this manual. Failure to follow instructions could result in death or serious injury.

 **NOTICE** Before attempting any type of assembly operation, maintenance, or other work on or near this product:

- READ and COMPLETELY UNDERSTAND:
 - o This manual,
 - o The manuals provided with the power unit being used with this attachment.
- Read and understand all safety signs associated with the equipment being used
- Know all your controls and know how to quickly stop all power unit movement, the attachment movement and the engine in case of an emergency.

SAFETY IS YOUR RESPONSIBILITY AS THE OPERATOR OF THE EQUIPMENT

Inappropriate and/or irresponsible use of a stick rake may cause serious injury and trauma. The operator must have all relevant industry competencies, qualifications, certificates and/or licenses.

The operator must understand their responsibilities under the relevant acts and regulations of the governing body. Failure to comply with your legal obligations under the act may result in prosecutions against you.

As the equipment operator you are responsible to familiarise yourself, and anyone else who will assemble, operate, maintain, or work around this product with the safety information contained within this manual. You must make certain that all operators and maintenance personnel have a complete understanding of the full and exact contents of this manual and those of the power unit.

There are usually specific precautions and steps in the power unit operating manual to be taken to ensure your safety prior to engaging the attachment.

Conduct a job site survey during the planning phase of any construction project o identify potential hazards and

develop and implement appropriate control measures to protect workers.

Accidents are preventable if the equipment operator is careful and responsible.

No accident prevention program can be successful unless there is a wholehearted commitment and cooperation of the person who is directly responsible for the operation of the equipment. Make sure anyone who will be installing, maintaining, repairing, removing, and for storing this product applies the Workplace Health and Safety Act requirements. This includes ensuring that the person has been instructed in the safe operation of this product and of the power unit to which this attachment is likely to be attached.

Know and follow good work practices, some of these include:

- To optimise the physical environment such as having a well-lit, level surface that is clean and dry to work on.
- Use properly grounded, test and tagged electrical outlets and tools.
- Use the right tool for the job at hand
- Make sure that your tools are in good condition for performing the required function.
- When using tools, wear the protective equipment specified by the tool manufacturer (hardhat, safety glasses, work gloves, protective shoe...)
- When the attachment has been out in the sun, remember to wear protective gloves as the metal will be hot to touch,
- Before starting, know the job duration, job complexity, and best procedure
- Ensure workers have the capacity to do the job.
- Check that all hazards have been identified and control measures implemented.
- Clear communication so everyone present knows what is happening.
- Clear emergency stop procedure so there is no confusion in an emergency
- Ensure the use of tyre stoppers and securing framework to stop the plant and plant attachment moving during maintenance.

3.1 IMPORTANT POINTS

When your power unit is used during any type of assembly, operation, maintenance, or other work on or near this product:

- Before leaving the operator's station or before beginning any type of work on this product, lower this product to the ground, apply your power unit's parking brake, stop the engine, remove the starter key, wait for all moving parts to stop and then relieve all pressure in the hydraulic lines. Refer to your power unit's operating manual for instructions on preparing the equipment for hitching up an attachment and relieving hydraulic pressure in lines.
- Know your power unit's safe lifting and operating capacity and the weight of this product. (Check the parent machines operator manuals for safe operating limits)
- Only allow the operator to be around the power unit or this product when either is in motion. Ensure work area is clear of all personnel.
- Apply all safety guidelines in relation to the operator and the equipment.
- Only operate controls from the operator's station.
- Maintain operator presence at all times when the engine is running, or the product is raised on the power unit.
- Reduce speeds when additional weight and width need to be considered especially over rough ground,
- Consider the operating environment if dust is a concern reduce the machine speed
- Whilst in motion keep the product close to the ground and under control

PREDELIVERY

The following steps should be performed when fitting this attachment to a power unit for the first time. Failure to perform these checks may lead to damage of the attachment, the power unit and be a risk to safety. Warranty claims that

arise as a result of skipping these steps may be challenged.

4.1 CHECK PICKUP FIT

Perform '5.1 Hitching Up the Stick Rake' to check how the attachment fits the coupler. Check for the following:

- Do the pins lock?
- Is it Snugfit?

4.2 CHECK RANGE OF MOTION

Carefully go through the attachment and parent machines full range of motion together. If unexpected contact occurs, contact Norm Engineering to discuss. Due to the capabilities of this product some contact with the machine may be

unavoidable. In this case place the warning sticker provided on the attachment and inform the owner/operator.



ASSEMBLY INSTRUCTIONS

⚠ WARNING Obey all instructions listed in this section of the manual. Failure to follow the instructions listed below could lead to serious injuries.

For any assistance with the following processes, please contact Norm Engineering.

5.1 HITCHING UP THE STICK RAKE

⚠ DANGER All safety precautions pertaining to both the power unit and the stick rake need to be followed. Sufficient planning should be made prior to any work commencing in case of an emergency situation.

Step one: Before beginning any work on this product, lower the product to the ground on a firm level surface that is large enough to accommodate this product, the power unit and all workers involved in the hitching up the stick rake.

Step two: Refer to your power unit's operating manual for instructions on hitching up this attachment. Visually inspect to ensure the attachment is fully engaged to the power unit hitch.


Step three: Engage the locking mechanism. A visual inspection should be performed to confirm all locking systems are secured. Give the stick rake a few short sharp movements close to the ground to ensure it is engaged.

5.2 REMOVING THE STICK RAKE

⚠ DANGER All safety precautions pertaining to both the power unit and the stick rake need to be followed. Sufficient planning should be made prior to any work commencing in case of an emergency situation.

Step one: Remove the machine from anywhere near other personnel and onto a firm level surface large enough to safely accommodate this product, the power unit and all workers involved in removing the stick rake.

Step two: Rest the stick rake on the ground.

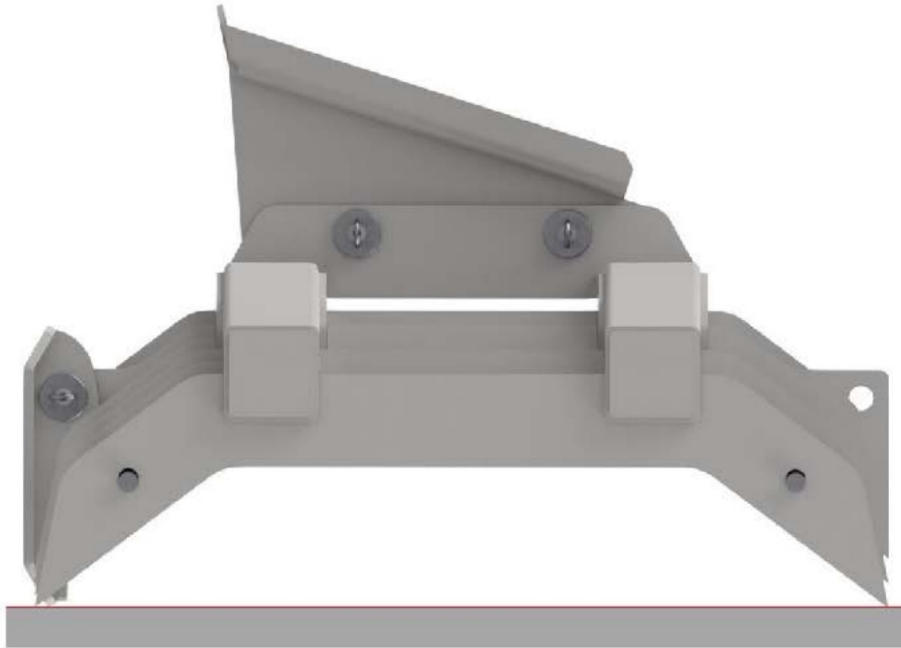

Step three: Disengage the locking mechanism. A visual inspection should be performed to make sure the stick rake is fully disengaged.

Step four: Refer to your power unit's operating manual for instructions on removing the attachment and confirm the hitch is fully disengaged from the stick rake. Store safely.


Step five: Store safely.

OPERATING INSTRUCTIONS

⚠ DANGER When using the stick rake, ensure all personnel wear appropriate personal protective equipment at all times. All personnel must stand well clear of the stick rake during operation. Contact with the attachment, parent machine or flying debris and dust could cause injury to personnel working in the vicinity of the machine.

6.1 SPECIFIED OPERATIONS AND LIMITATIONS

The stick rake was designed to collect loose objects while sieving loose soil. The stick rake is to be operated along ground level and in loose soil.

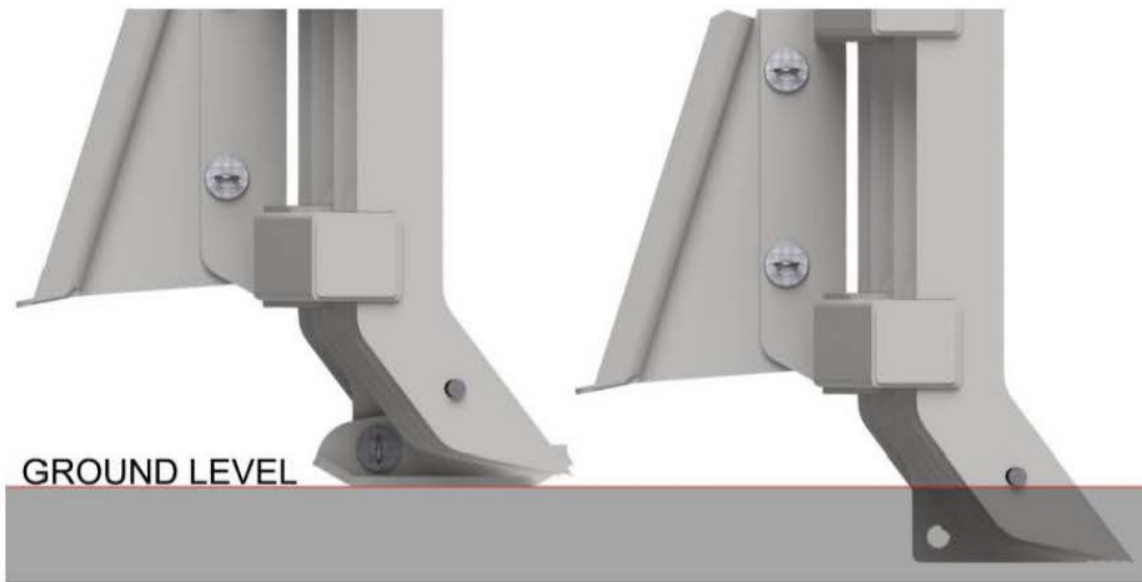

- **⚠ DANGER** NEVER use the stick rake as a lift rig point.
- NEVER use the stick rake to lift or carry people.
- **⚠ WARNING** MISUSE may damage the attachment or lead to injury and trauma.
- DON'T use the stick rake as a lashing point to pull objects.
- ENSURE the correct sized stick rake is selected for your power unit.
- **⚠ CAUTION** ENSURE you travel at a slower speed appropriate to prevent causing damage if an unseen obstacle is hit.

6.2 ROTATING PICKUP & FEET

The stick rake has a removeable and reversible pickup plate. This allows different tyne spacing to be used and also extends the life of the attachment.


Step one: Park your power unit on a level surface and lower this product onto preplaced blocking. It must be sufficient to support the attachment.

Step two: Follow '5.2 Removing the Stick Rake' and power unit operating manual for safe disengagement of the attachment.

Step three: Remove the four stick rake quick pins.

Step four: Rotate the pickup plate.

Step five: Secure the stick rake quick pins.

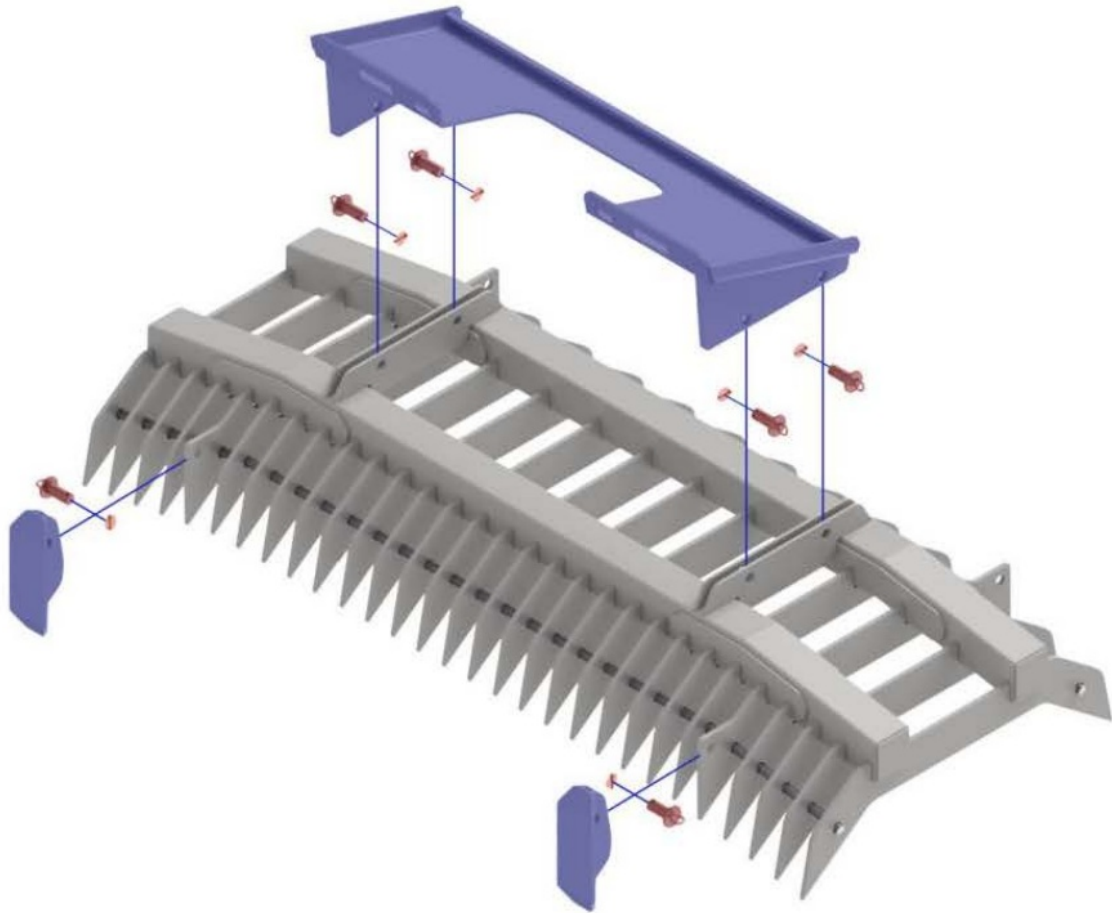

The stick rake has removeable feet. These feet allow the stick rake to slide across the top of the ground. By removing the stick rake quick pins on the feet, they can be removed, and the stick rake side can be used in loose soil.

MAINTENANCE AND CARE

⚠ WARNING Before commencing maintenance, place the attachment on level ground. Ensure enough area to perform maintenance on the attachment. Follow '5.2 Removing the Stick Rake'.

⚠ WARNING After maintenance is complete, follow '5.1 Hitching Up the Stick Rake'.

7.1 HYDRAULICS

Read and understand all safety requirements prior to beginning any maintenance to any hydraulic connections. It is imperative that if there are any fittings, repairs etc. required these must be conducted by a fully certified and qualified hydraulics fitter.

7.2 PRIOR TO USE

Prior to use, the stick rake shall be visually inspected to verify the attachment is in an operational state. The inspection will check for:

- Signs of wear, including corrosive and abrasive wear.
- Markings are legible.
- Welds are not damaged, cracked or worn.
- All fasteners are in place and correctly torqued.
- Inspect the wear in the tynes.

7.3 ROUTINE INSPECTION (EVERY 12 WEEKS)

Routine inspections should include but is not limited to the following:

- Pins and bushes should be inspected for signs of excessive wear and replaced before the wear damages the structure of the stick rake.
- Inspect the attachment for wear, particularly around the tynes, and seek advice on repairs if wear is excessive.
- Check to ensure attachment markings are legible.

RISK ASSESSMENT

Assessment Team: Norman Pesch, John Pesch, Sam Ramsden

Date of Assessment: 28/04/2022

Location: Brisbane

Attachment: Stick Rake

Intended use: Clean Up

Manufacturer: Norm Engineering Pty Ltd

Contact Person: Norman Pesch

Weight: 145-423kg

Construction material: Steel

Air Operated: NO

Hydraulic Operated: NO

Manually operated: YES

NOTE: When assessing Risk, you MUST consider the following

Inherent Risk:

(Risk before ANY controls). |.e., Before guarding / safety features are fitted.

Residual Risk:

(Risk after controls are fitted). |e., after guarding / safety features are fitted.

Non Standard Operating Risk:

(Cleaning, Maintenance). |.e., What other risks can these tasks create.

Predictable Misuse:

|e., What risks could occur due to misuse of the attachment.

HAZARD INFORMATION

The plant must be assessed against the hazards listed for the probability of harm to operators working in close proximity and the environment,

Probability	Consequence
A – Common or repeating occurrence	1 – Catastrophic — Fatalities
B – Known to occur or “It has happened”	2 – Major — Major injury, LTI
C – Could occur, “I’ve heard of it happening”	3 — Moderate — Minor Injury
D – Not likely to occur	4 – Minor — First &id, slight injury
E – Practically impossible	5 – Insignificant – Minimal risk of injury

	A	B	C	D	E	
1	H	H	H	S	S	H = High
2	H	H	S	S	M	S = Significant
3	H	H	S	M	L	M = Medium
4	H	S	M	L	L	L = Low
5	S	S	M	L	L	

Entanglement:

Can anyone's hair, clothing gloves, necktie, jewellery, rags, and other materials become entangled with moving parts of plant, or materials in motion?

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Crushing:

Can anyone be crushed due to falling, uncontrolled or unexpected movement of plant attachment or its load, lack of capacity to allow, stop or immobilise the plant, tipping or rolling over, parts of plant attachment collapsing, contact with moving parts during testing, inspection, maintenance, cleaning, or repair, thrown of, under or trapped between plant and materials or fixed structures?

People in close proximity to the plant and plant attachment during operation could be crushed if the operator is not being sufficiently observant, or control over the plant is lost.

Yes	No	A	<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	High	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input checked="" type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input checked="" type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Cutting, Stabbing, Puncturing:

Can anyone be cut, stabbed, or punctured by coming in contact with moving plant or parts, sharp or flying objects, work pieces ejected, work pieces disintegrated, or other factors not mentioned?

Plant attachment has sharp edges by design for digging into the ground.

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input checked="" type="checkbox"/>	Medium	<input checked="" type="checkbox"/>
		D	<input checked="" type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Striking:

Can anyone be struck by moving objects due to plant or work pieces being ejected or disintegrated, mobility, uncontrolled or unexpected movement of the plant or other factors?

People in close proximity to the plant and plant attachment during operation could be seriously hurt if they came into contact with the plant, or plant attachment if the operator is not being sufficiently observant, or control over the plant is lost.

Yes <input checked="" type="checkbox"/>	No <input type="checkbox"/>	A	<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	High Significant Medium Low	<input checked="" type="checkbox"/>
		B	<input type="checkbox"/>	2	<input type="checkbox"/>		<input type="checkbox"/>
		C	<input checked="" type="checkbox"/>	3	<input type="checkbox"/>		<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>		<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		<input type="checkbox"/>

Slipping, Tripping, Falling:

Can anyone using the plant or in the vicinity of the plant, slip, trip or fall due to the working environment or other factors? poor housekeeping, dust on the floor around machines, slippery or uneven work surfaces or lack of guardrails.

People standing on the plant or plant attachment could slip or fall from it.

Yes <input checked="" type="checkbox"/>	No <input type="checkbox"/>	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High Significant Medium Low	<input type="checkbox"/>
		B	<input type="checkbox"/>	2	<input type="checkbox"/>		<input type="checkbox"/>
		C	<input checked="" type="checkbox"/>	3	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>		<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		<input type="checkbox"/>

Shearing:

Can anyone's body parts be cut off between two parts of the plant, or between a part of the plant and a work piece or structure? For example, on a metal guillotine can a finger get under the guard.

Yes <input type="checkbox"/>	No <input checked="" type="checkbox"/>	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High Significant Medium Low	<input type="checkbox"/>
		B	<input type="checkbox"/>	2	<input type="checkbox"/>		<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>		<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>		<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		<input type="checkbox"/>

Friction:

Can anyone be burnt due to contact with moving parts or surfaces of the plant, or material handled by the plant? For example, on the grinder is there more than 1 mm gap between the tool rest and the wheel?

Yes <input type="checkbox"/>	No <input checked="" type="checkbox"/>	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High Significant Medium Low	<input type="checkbox"/>
		B	<input type="checkbox"/>	2	<input type="checkbox"/>		<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>		<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>		<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		<input type="checkbox"/>

High Pressure Fluid:

Can anyone come into contact with fluids, under high pressure, due to plant failure or misuse of the plant?

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Electrical:

Can anyone be injured by electrical shock or burnt due to damaged or poorly maintained leads or switches, water near electrical equipment, working near or contact with live electrical conductors, lack of isolation procedures or the actors not mentioned? | For example, are any switches broken, is there a red emergency stop? Can each machine be locked off for repairs?

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Dust:

Can anyone suffer ill health or injury due to exposure to dust?
 For example, cutting, living silica
 Lack of vision — External influences causing the dust.
 Plant operation causing the dust.
 Depending on the operation location of the plant and plant attachment dust could be nuisance.

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	B	<input type="checkbox"/>	2	<input checked="" type="checkbox"/>	Significant	<input checked="" type="checkbox"/>
		C	<input checked="" type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Noise:

Can anyone suffer hearing discomforts while the plant is in use? For example, the plant is noisy, and it is difficult to hear.

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	B	<input type="checkbox"/>	2	<input checked="" type="checkbox"/>	Significant	<input checked="" type="checkbox"/>
		C	<input checked="" type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		

Vibration:

Can anyone suffer injury due to the vibration of the plant?

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>	High	<input type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Low	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>		


Environmental:

Can the plant operation cause an environmental issue? For example – pollution, waste materials, noise.

Yes	No	A	<input type="checkbox"/>	1	<input type="checkbox"/>		
<input type="checkbox"/>	<input checked="" type="checkbox"/>	B	<input type="checkbox"/>	2	<input type="checkbox"/>	High	<input type="checkbox"/>
		C	<input type="checkbox"/>	3	<input type="checkbox"/>	Significant	<input type="checkbox"/>
		D	<input type="checkbox"/>	4	<input type="checkbox"/>	Medium	<input type="checkbox"/>
		E	<input type="checkbox"/>	5	<input type="checkbox"/>	Low	<input type="checkbox"/>

Risk Evaluation

Overall risk category of plant:



Risk Controls

Most Desirable

- Elimination – The best way to eliminate the risk is to remove the hazard.
- Substitution – Substitute the hazardous plant with a safer part, alternative process.
- Engineering Controls – Design modification, installation of guarding, automation/ventilation
- Isolation -Isolate the plan, barricades, crossing, bunting, etc.
- Administrative Controls – Permits, clearances, lock out systems, certification.
- PPE -Short term control measure.

Least Desirable

Hazard	Controls
Crushing, Striking	<p>Isolation — Ensure the operating and maintenance manual provided with the plant attachment recommends the operator of the plant always follows SOP. The operator must make everybody working in the vicinity of the attachment aware of the dangers and before moving the plant ensure people are a safe distance away.</p> <p>PPE — The use of the correct PPE for the worksite will minimize the damage caused by an incident. A hard hat, steel cap boots and tough worksite clothes as an example.</p> <p>PPE — The use of high visibility PPE will help reduce the case of incidents occurring from impaired vision or operator distraction.</p>
Cutting, Stabbing, Puncturing	<p>Isolation — Ensure the operating and maintenance manual provided with the plant attachment recommends the operator of the plant always follows SOP. The operator must make everybody working in the vicinity of the attachment aware of the dangers and before moving the plant ensure people are a safe distance away.</p> <p>PPE — The use of the correct PPE for the worksite will minimize the risk of cutting when working in and around the attachment. Gloves and tough work clothes will reduce the risk associated with touching or bumping into sharp edges on the attachment whilst it is not in operation.</p>
Slipping, Tripping, Falling	<p>Isolation — The plant attachment has NOT been designed to stand on unless entering or exiting the plant. This will be stated in the operating and maintenance manual. It is the responsibility of the operator to ensure that no persons stand on the plant attachment.</p> <p>PPE — Wearing the correct work boots will reduce chances of slipping.</p>
Dust	<p>Isolation and Administrative Controls — To reduce the hazards associated with dust, the manual should instruct the operator to consider their working environment and operate in a manner to reduce the risk of dust being kicked up. This can be managed by operating at a sensible speed.</p> <p>PPE — If the environment is such that the dust cannot be sufficiently controlled, the onsite supervisor should ensure all workers are wearing the correct PPE.</p>

Any Modification to Plant Attachment Voids Risk Assessment

Purchaser and User are required to conduct their own risk assessment to identify hazards prior to use.

This risk assessment does not necessarily cover all possible hazards associated with this product and should be utilized in conjunction with the purchasers and users individual risk assessments to identify all environmental, health, and safety risks associated with specific tasks, locations, and personnel

PARTS

QUALITY BACKUP

We manufacture 90% of our parts inhouse.

This means we can get your parts to you... quickly.

9.1 ORDERING PARTS

For ordering parts contact either your dealer or Norm Engineering directly.

Contact details are included at the front of this manual. To assist, note the details of your stick rake in the spaces provided under Section 9.1.1

Reference information.

9.1.1 REFERENCE INFORMATION

Always refer to the model and serial number when ordering parts or requesting from you dealer. The serial number for this product is located on the identification place of your stick rake

Model Number

Make

Serial Number:

Date Purchased:


PARTS LIST

When ordering replacement parts, please include the following information:

- The machine make and model
- The serial number on the attachment
- The item number, as indicated by the following figures and tables.
- Parts with a part number of “ ∴ ” indicate a component that varies dependent on machine make and model. A serial number and item number is essential if ordering these parts.

STICK RAKE PARTS LIST

Item	Part Number	QTY	Description	Diagram
1	∴	1	REVERSIBLE STICK RAKE	1
2	∴	1	REVERSIBLE PICKUP	1
3	SR0078	2	STICK RAKE FEET	1
4	PI311	6	STICK RAKE QUICK PIN	1

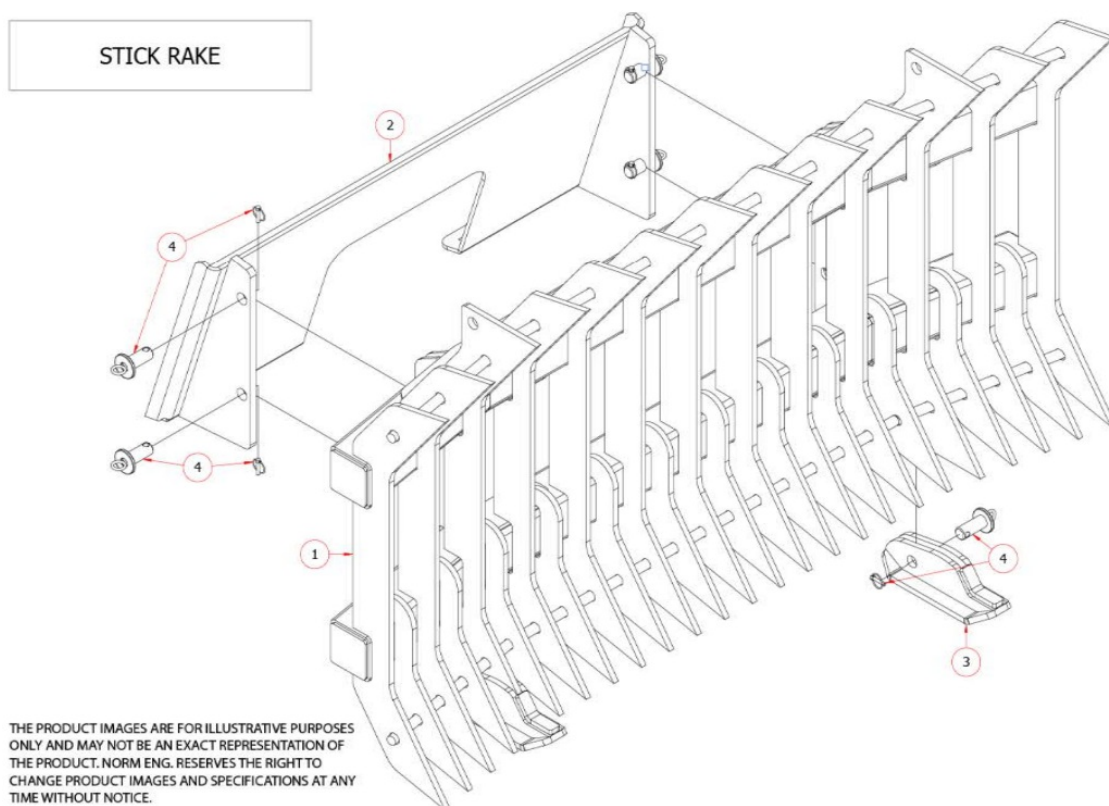

APPENDICES

11.1 SAFETY SIGN LOCATIONS

Item	Description
1	Warning I Attachment can contact machine
2	Danner I Read the manual



ITEM 1



ITEM 2

Instructions

- Keep all safety signs clear and legible
- Replace all missing, illegible, or damaged safety signs.
- When replacing parts which have safety signs attached make sure the replacement part has the safety sign.

WARRANTY

12.1 DEFINITION

“**Dealer**” means a dealer that purchases products directly from Norm Engineering Pty Ltd

“**End consumer**” means a consumer that purchases products either directly from Norm Engineering Pty Ltd or directly from a “dealer” as defined above.

“**Products**” includes goods and services

12.2 WARRANTY

Norm Engineering Pty Ltd welcomes you as a purchaser of its products. All Norm Engineering products are

designed to ensure the highest standards, reliability, and performance.

Norm Engineering Pty Ltd warrants hydraulic cylinders against defects in manufacture for a period of twelve months from date of sale by the dealer or Norm Engineering Pty Ltd to the end consumer. The warranty in relation to hydraulic cylinders ceases upon the occurrence of damage to the piston rod of the hydraulic cylinder.

No warranty applies to hoses, tubes, and fittings in relation to any of the products.

Norm Engineering Pty Ltd warrants all its other products against defects in manufacture for a period of twelve months from the date of sale by the dealer or Norm Engineering Pty Ltd to the end consumer.

Norm Engineering Pty Ltd will, subject to the terms of this warranty, in relation to defective goods:

- a) replace the defective goods at no cost to the end consumer; or
- b) repair the defective goods at no cost to the end consumer; or
- c) pay the cost of having the defective goods repaired.

Norm Engineering Pty Ltd will, subject to the terms of this warranty, in relation to defective services:

- a) supply the services again to the end consumer at no cost to the end consumer; or
- b) pay the cost of having the service supplied again to the end consumer.

Warranty claims may be sent either to Norm Engineering Pty Ltd., P.O. Box 178, Mt Ommaney, Qld. 4074 or to the dealer.

All warranty periods shall commence from the date of sale by Norm Engineering

Pty Ltd or the dealer to the end consumer. It is the end consumer's responsibility to establish the date of sale of the product to the end consumer by the dealer.

The end consumer may establish the date of sale by producing to Norm

Engineering Pty Ltd the dated contract of sale between the end consumer and the dealer with its warranty claim.

If the end consumer is not able to establish the date of sale of the product to the end consumer by the date of its warranty claim, the warranty period shall be deemed to commence from the date of sale of the product by Norm Engineering Pty Ltd to the dealer.

This warranty will not apply if the end consumer does not use the product in accordance with Norm Engineering Pty Ltd's recommendation.

This warranty will not apply if the end consumer does not use products applied or fitted to any machine, equipment or plant, in accordance with Norm Engineering Pty Ltd's operating recommendation for the product.

This warranty does not apply to any loss or damage caused through consequential neglect. Unless the end consumer indicates to Norm Engineering Pty Ltd prior to purchasing the product that it intends to use the product for a particular purpose, there is no implied warranty that the product will fit for that particular purpose. Ask Norm Engineering for clarification of the intended use is not included in the manual.

Only a dealer authorised in writing, or issued with an order number, by Norm Engineering Pty Ltd may carry out warranty repairs. Prior written approval must be obtained from Norm Engineering Pty Ltd before warranty repairs are carried out. Norm Engineering Pty Ltd will not recognise any warranty claim for reimbursement of repair costs unless the repairs have been carried out by an authorised dealer with prior written approval from Norm Engineering Pty Ltd to carry out the repairs.

Norm Engineering Pty Ltd limits its liability, as follows:

1. Pursuant to Section 68A of the Trade Practices Act 1974, this clause applies in respect of any of the goods or services supplied under this contract which are not of a kind ordinarily acquired for personal, domestic, or household use or consumption, provided that this clause will not apply if the end consumer establishes that reliance on it would not be fair and reasonable
2. Liability for breach of a condition or warranty implied into this contract by the Trade Practices Act 1974 other than a condition implied by Section 69 is limited!
 - a) In the case of goods, to any one of the following as determined by Norm Engineering Pty Ltd:
 - i. the replacement of goods
 - ii. the repair of the goods
 - iii. the payment of the cost of having the goods repaired, excluding travelling and freight charges.
 - b) In the case of services, to any one of the following as determined by Norm Engineering Pty Ltd
 - i. the supplying of the services again; or
 - ii. the payment of the cost of having the services supplied again

Expenses incurred by the end consumer in connection with making a warranty claim shall be borne by the end

consumer unless otherwise agreed by Norm Engineering Pty Ltd

To the extent permitted by law, all implied conditions, and warranties in the contract of sale between Norm Engineering Pty Ltd and the end consumer are hereby excluded.

The benefits conferred by this warranty on the end consumer are in addition to all other legal rights and remedies that the end consumer has in respect of the products.

Contracts of sale for products, and this warranty are submitted to the exclusive jurisdiction of the courts of Queensland

Notes:



DEALER:.....
STATE:.....SIGNED:.....
END CONSUMER:
NAME: ADDRESS:.....
STATEPOSTAL CODE:.....
PHONE:SIGNED:.....
DATE OF SALE TO THE END CONSUMER:
DESCRIPTION OF PRODUCTS:.....
SERIAL NO:
DELIVERY DOCKET NO:
DELIVERY DATE:.....


NOTE: THIS FORM ISTO BE COMPLETED BY THE DEALER AND RETURNED TO: NORM ENGINEERING –
POBOX 178
MT OMMANEY, BRISBANE, QUEENSLAND, AUSTRALIA, 4074



MANUFACTURER OF EARTHMOVING ATTACHMENTS I VERSION: 1.0C
REVERSIBLE STICK RAKE
OPERATING Ft MAINTENANCE MANUAL
BRISBANE PH: 07 3376 3177
FAX: 07 3376 3201 787 BOUNDARY
ROAD DARRA OLD 4076
SALES@NORMENG.COM
AU • 07 3376 3177
• WWW.NORMENG.COM.AU
MELBOURNE PH:
03 9775 1965

FAX: 03 9786 9102 2/45
FRANKSTON GARDENS DRIVE
CARRUM DOWNS VIC 3201

Documents / Resources

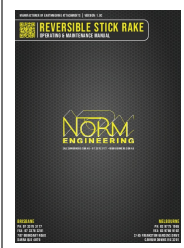

[NORM Reversible Stick Rake](#) [pdf] Instruction Manual
Reversible Stick Rake, Reversible, Stick Rake, Rake

Manuals+