



**TRX Series  
II 3 Zone  
Control  
Module**



# NTI TRX Series II 3 Zone Control Module Instruction Manual

[Home](#) » [NTI](#) » NTI TRX Series II 3 Zone Control Module Instruction Manual

## Contents

- [1 NTI TRX Series II 3 Zone Control Module](#)
- [2 Overview](#)
- [3 Specifications](#)
- [4 Installation](#)
- [5 Troubleshooting](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)



## NTI TRX Series II 3 Zone Control Module



## Overview

The N-Link (3-Zone Control Module) is a specialized, NTI accessory product that enables the control of up to (3) additional heating zones when installed with compatible NTI boilers:

- **For TRX Series II, FTVN Series II, and Compass Series boilers**—which each include integrated zone controls for up to (2) distinct heating zones—the N-Link enables (3) additional heating zones for a combined total of up to (5) controllable heating zones.
- **For TFTN Series boilers**—which include integrated zone controls for up to (3) distinct heating zones—the N-Link enables (3) additional heating zones for a combined total of up to (6) controllable heating zones.

The N-Link’s unique communication with compatible NTI boilers allows ALL heating zones to be controlled via the boiler’s integrated HMI, including each heating zone’s parameters. Unlike other, more rudimentary zone controllers, the N-Link maintains awareness of each heating zone’s specific requirements during heating demands and can therefore serve multiple, different heating zones within a residential or commercial application more effectively.

## Specifications

### High-Voltage I/O

Table 2-1: High-Voltage Barrier Connections

Connection		Description
MAIN POWER INPUT (120VAC)	LINE	Line (L1) input for 120VAC power supply
	NEUTRAL	Neutral (L2) input for 120VAC power supply and 120VAC zone loads (e.g. 120VAC zone pumps)
ZONE OUTPUTS (120VAC or 24VAC)	ZONE 1/4	– Activate on CH demand from respective THERMOSTAT INPUT (or NTI Room Sensor configured to respective zone); output voltage sourced from ZONE INPUT
	ZONE 2/5	
	ZONE 3/6	– Deactivate (following overrun time) on DHW demand – Each circuit is protected by a dedicated 5A fuse (slow-blow)
120VAC or 24VAC	120V	Jumper to ZONE INPUT for 120VAC zone outputs (e.g. zone pumps)
	ZONE INPUT	Jumper to required voltage supply for zone outputs (e.g. to 120V for 120VAC zone pumps or R (24V) for 24VAC zone valves)
	R (24V)	Jumper to ZONE INPUT for 24VAC zone outputs (e.g. zone valves)
24VAC RETURN	COMMON	– Return/Neutral leg of 24VAC power supply – Connection point for Return/Neutral leg of optional 24VAC loads (e.g. zone valves) – Complete circuit protected by single 2A blade fuse (fast-blow)

### Low-Voltage I/O


Table 2-2: Low-Voltage PCB Connections

Connection			Description
THERMOSTAT INPUTS	ZONE 1/4	R	<ul style="list-style-type: none"><li>– Circuit closure between <i>R</i> and <i>W</i> initiates CH demand and activates output for the respective zone (see <b>Table 2-1</b>)</li><li>– R = 24VAC output; W = 24VAC input; C = common</li><li>– Protected by single 2A blade fuse (fast-blow)</li><li>– For 2-wire devices, connect <u>only</u> to <i>R</i> and <i>W</i> (do <u>NOT</u> connect to <i>C</i>)</li></ul>
		W	
		C	
	ZONE 2/5	R	
		W	
		C	
	ZONE 3/6	R	
		W	
		C	
ALRM (Alarm)			<ul style="list-style-type: none"><li>– Dry contacts (NO); close during a lockout or other alarm condition; may be connected to BMS</li><li>– Maximum capacity = 2A (MAX) at 24VAC</li></ul>
EBUS		B	<ul style="list-style-type: none"><li>– Connection point for external BUS devices (e.g. NTI Room Sensors, NTI boilers, NTI SENSYS, other N-Links, etc.)</li><li>– B = (+) input; T = (-) or GND input</li></ul>
		T	
		B	
		T	

## Installation

### Wall-Mounting

1. Select a suitable location near the boiler to secure the N-Link to the wall.
2. Position the N-Link against the wall and mark the position of the (2) keyholes at the top corners of the mounting flanges [A].
3. Install (2) fasteners of the appropriate type into these marked positions and mount the N-Link via the (2) keyholes [A]:
  - For 16" stud spacing or plywood installation, use appropriately sized wood screws
  - For drywall or masonry installation, use appropriately sized drywall or masonry screws and anchors
4. Secure the N-Link by installing (2) additional fasteners through the bottom screw holes [B].

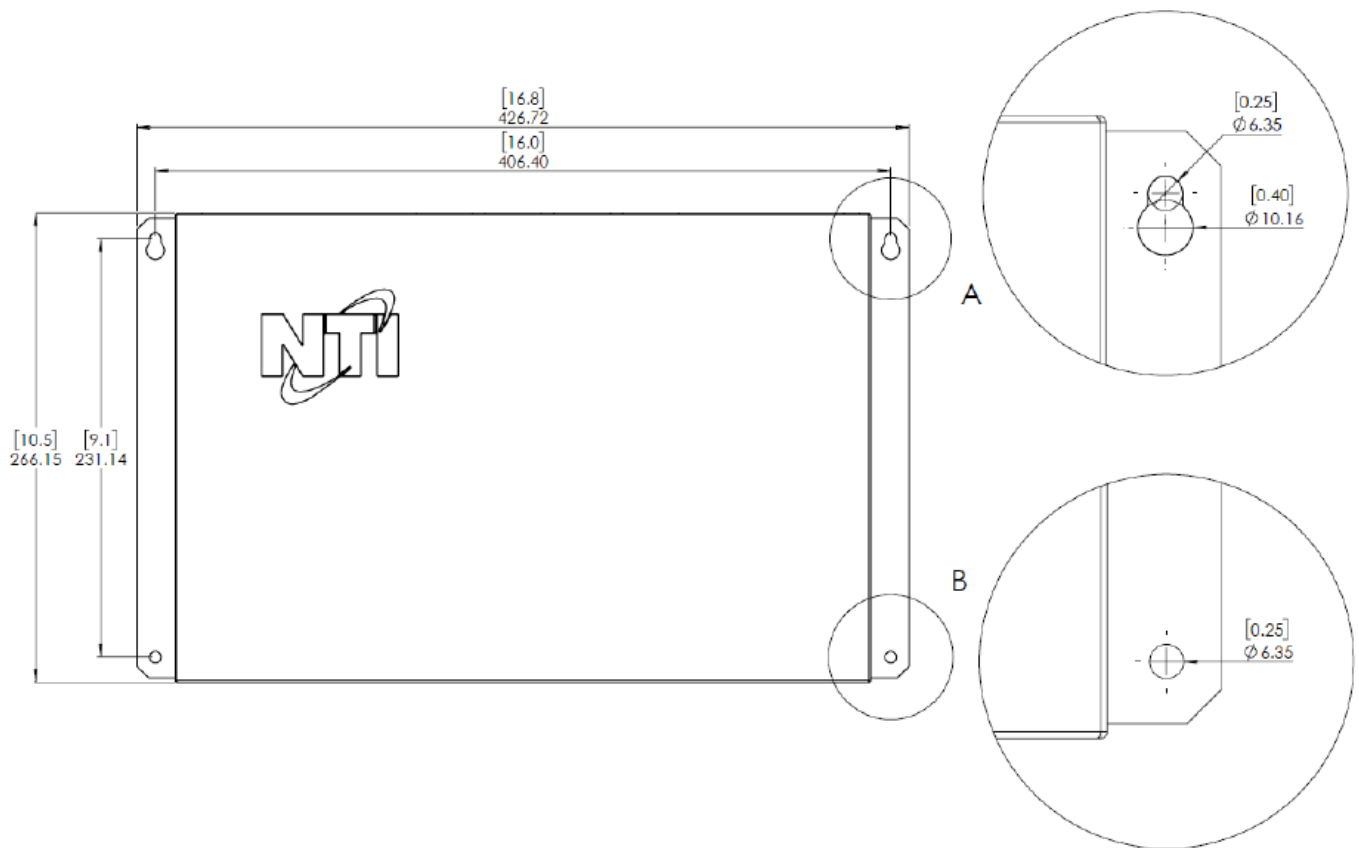



## Field-Wiring

1. To remove the N-Link's protective cover panel, loosen the (4) screws in the slotted cut-outs along its top and bottom edges, then gently slide it towards you (away from the wall).
2. For the low-voltage wiring, there are (4) cut-outs at the top of the N-Link with (3) provided plastic plugs, which—if needed—must be removed and replaced with strain-reliefs suitable for 18-22AWG wiring.
3. For the high-voltage wiring, there are (4) cut-outs at the bottom of the N-Link, with (3) provided plastic plugs, which—if needed—must be removed and replaced with strain-reliefs suitable for 14-18AWG wiring.

## Zone Pumps (120VAC)

- Wire the “hot” connection for up to (3) zone pumps to barrier position(s): ZONE 1/4, ZONE 2/5, and ZONE 3/6, respectively
- Wire the “return” connection for up to (3) zone pumps to barrier position(s): NEUTRAL
- Jumper between barrier position(s): ZONE INPUT and 120V
- Connect to the boiler via its BUS connector, respecting the polarity: B-B, T-T

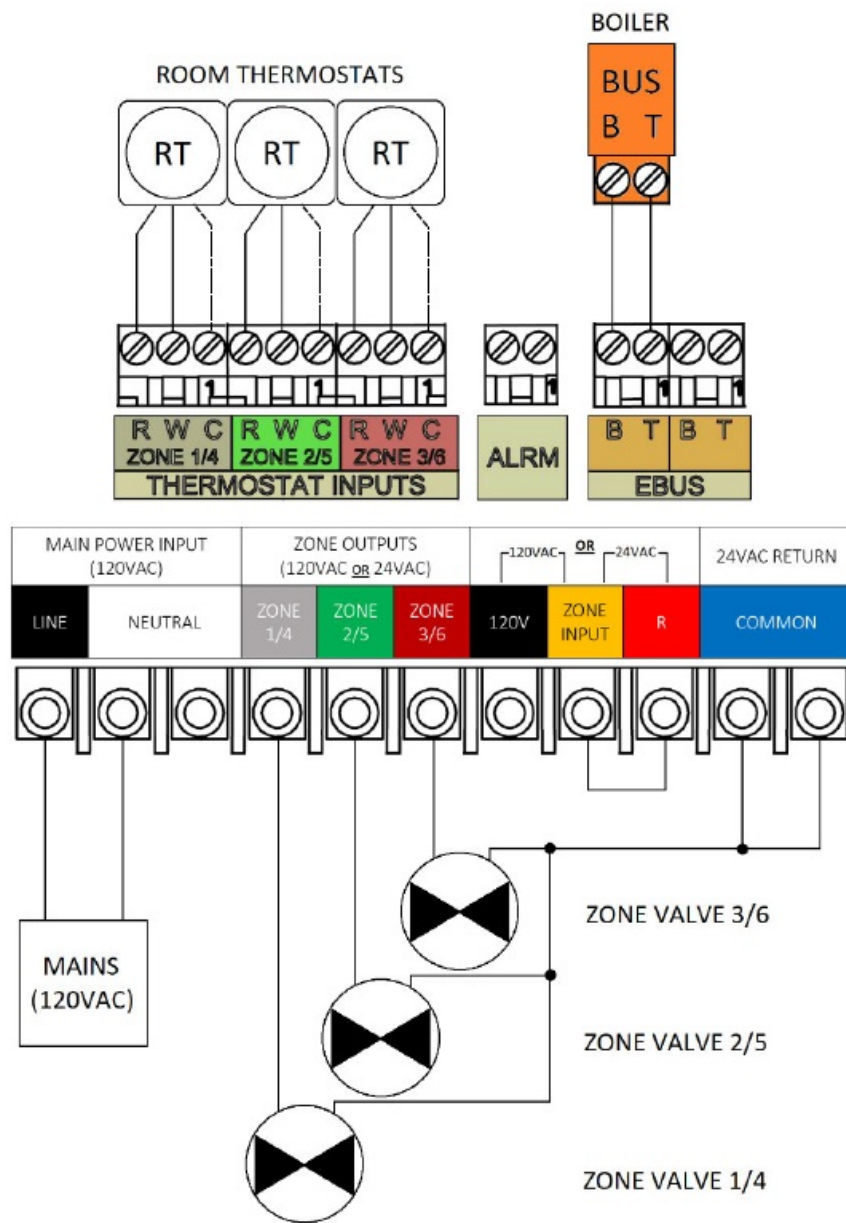

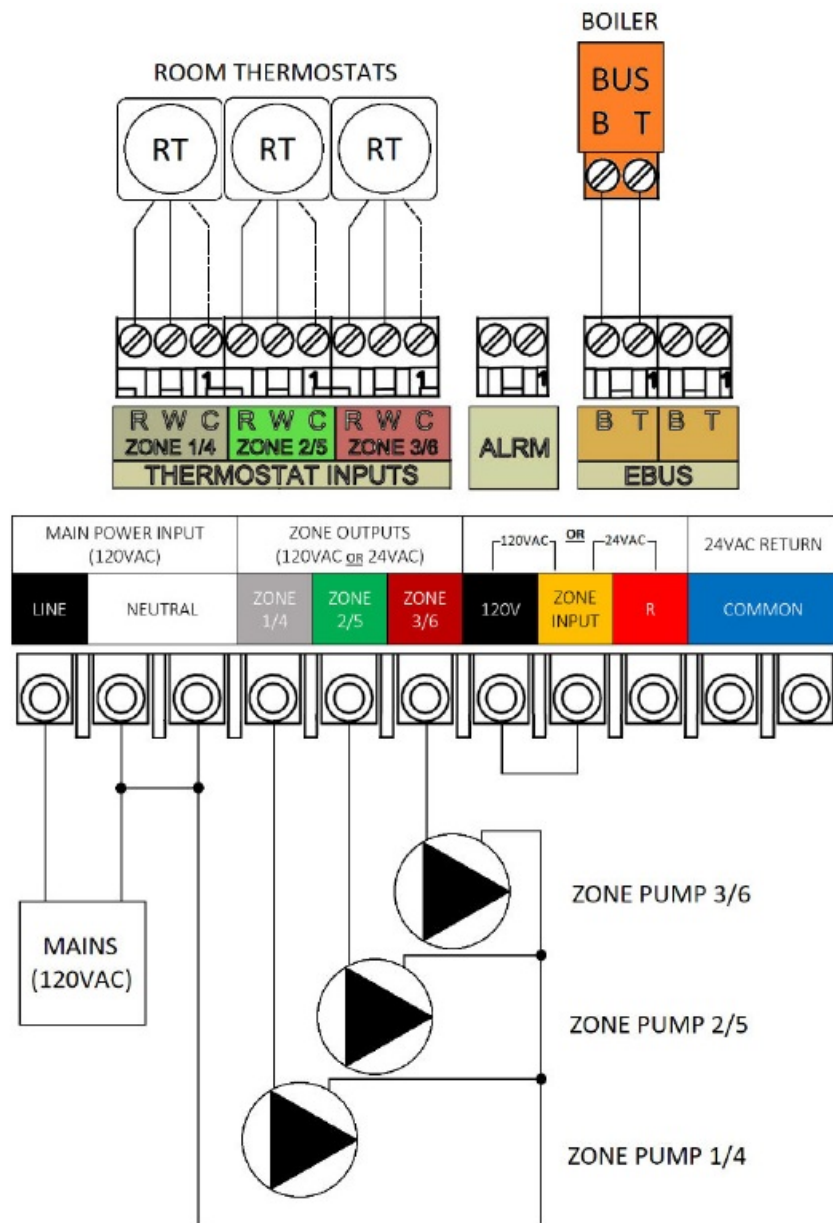

### Zone Valves (24VAC)


- Wire the “hot” connection for up to (3) zone valves to barrier position(s): ZONE 1/4, ZONE 2/5, and ZONE 3/6, respectively
- Wire the “return” connection for up to (3) zone valves to barrier position(s): COMMON
- Jumper between barrier position(s): ZONE INPUT and R
- Connect to the boiler via its BUS

### NTI Room Sensors

- If preferred, you can use up to (3) NTI Room Sensors with the N-Link instead of thermostats by connecting them via the EBUS connector—again, respecting the polarity: B-B, T-T
- Refer to the NTI Room Sensor instructions to assign the desired zone address for each zone (i.e. zone 1/4, 2/5, 3/6)

### Dip Switches

- When connecting the N-Link to a compatible NTI boiler, ensure both dip switches on the N-Link's zone control PCB (C3Z-NA) are toggled to the "OFF" position to assign it to control zones 4, 5, and 6...
  - For TRX Series II, FTVN Series II, and Compass Series boilers, the boiler will manage zones 1 and 2 by default, with zone 3 left absent.
  - For TFTN Series boilers, the boiler will manage zones 1, 2, and 3 by default.

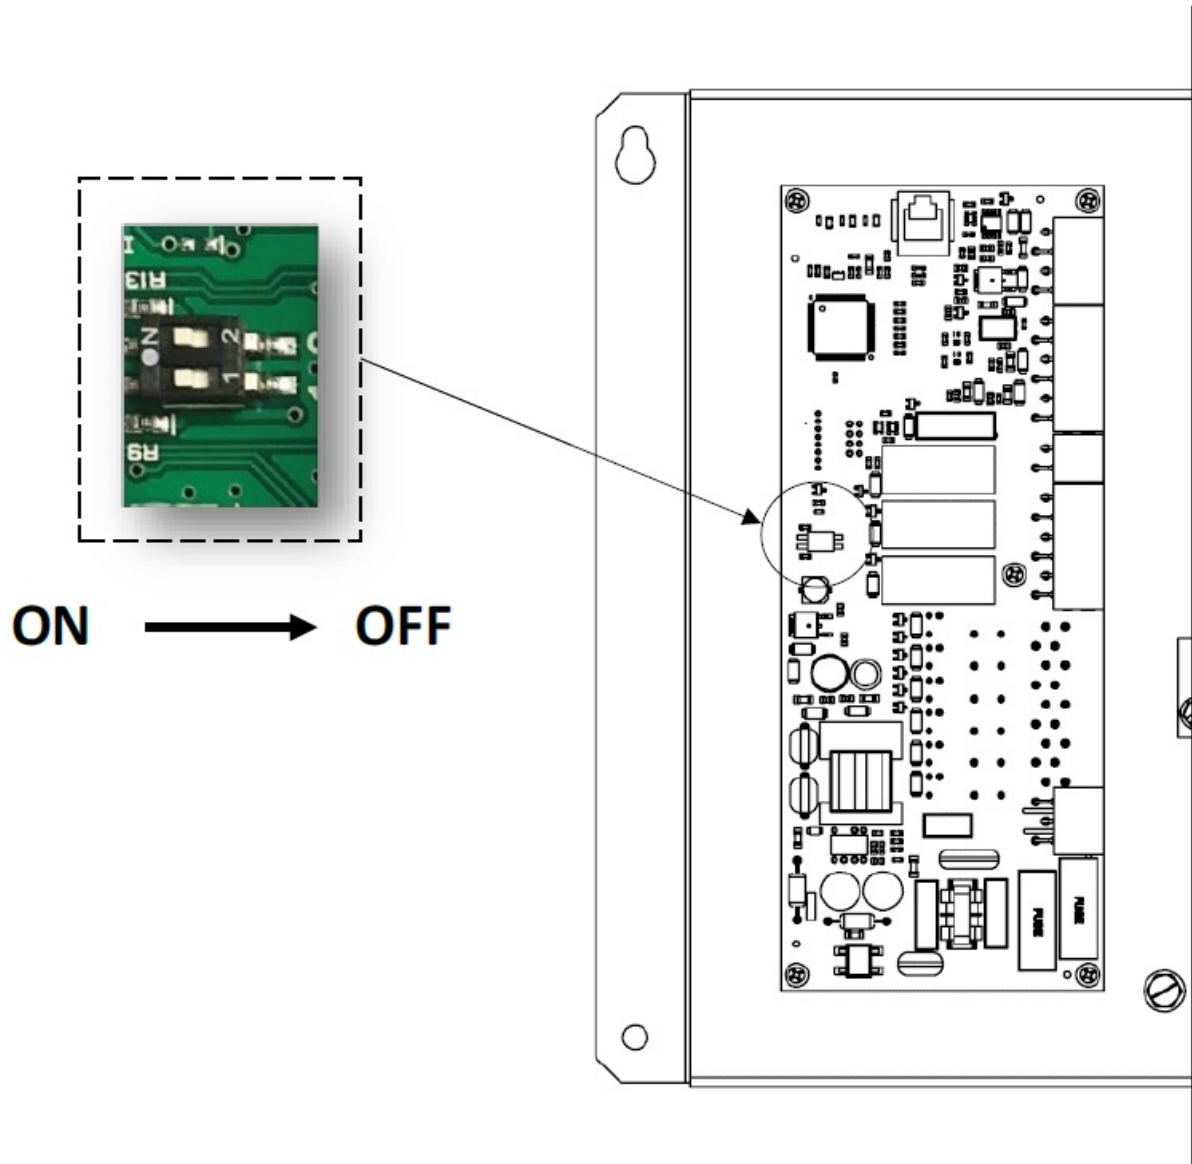

## Troubleshooting

### Bus Collision

Table 4-1: EBUS traffic collisions

EBUS wiring	Ensure EBUS connections are wired with correct polarity: <b>B-B</b> and <b>T-T</b>
Dip switch settings	Ensure only (1) device with a Zone Control PCB (C3Z) has its dip switches in the “ON” position— either the <b>N-Link</b> or the <b>TFTN</b> boiler; not both
Cascade settings	<p>If using boilers which are cascaded together...</p> <ul style="list-style-type: none"> <li>· Disconnect the <b>N-Link</b> and ensure the boiler addresses are set correctly concerning each other</li> <li>· Remove the Wi-Fi harness from each “follower” boiler</li> </ul>
Room Sensor address	<p>If using NTI Room Sensors instead of thermostats...</p> <ul style="list-style-type: none"> <li>· Ensure each NTI Room Sensor is set to a unique zone address (i.e. 1-3 <u>or</u> 4-6). <b>See the NTI Room Sensor installation instructions</b></li> </ul>

## Incorrect Zone Output Activation

### 1. Zone Outputs

- Ensure Zone Output wires are connected to the correct Zone Pump or Valve

### 2. Zone Inputs

- If using thermostats, ensure each is connected to the correct Zone Input
- If using NTI Room Sensors, ensure each is set to the correct Zone Address

## Before calling NTI Technical Support

If you are still experiencing unexpected behavior from your N-Link, please refer to the following guidelines before calling NTI Technical Support:

### 1. Check the LED indicator lights on the Zone Controller PCB (C3Z) for error warnings:

- If any LEDs are ‘RED’, refer to the boiler’s HMI for details on the error
- Refer to the boiler’s Installation & Operation Manual (IOM) for advice on how to clear the error from the system

### 2. Turn “OFF” the power to the N-Link and/or the boiler, wait 15 seconds, then turn it back “ON” to reinitialize the system:

- Make sure to only do this while the boiler is in standby mode; do NOT do this during a heating demand.

## Visit us online




## NTI Boilers Inc.

- 30 Stonegate Dr. Saint John, NB E2H 0A4
- **Technical Assistance:** 1-[800-688-2575](tel:800-688-2575)



- Website: [www.ntiboilers.com](http://www.ntiboilers.com)
- Fax: 1-[506-432-1135](tel:506-432-1135)

## Documents / Resources

 <p>Installation Instructions NTI TRX Series II 3 Zone Control Module</p> <p>NTI TRX Series II 3 Zone Control Module</p>	<p><a href="#">NTI TRX Series II 3 Zone Control Module</a> [pdf] Instruction Manual</p> <p>TRX Series II, FTVN Series II, Compass Series, TFTN Series, TRX Series II 3 Zone Control Module, TRX Series, II 3 Zone Control Module, Zone Control Module, Control Module, Module</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.