

nutribullet®
PRO Blender
Champagne Multi-
Function Cold
Beverage Smoothie
Maker



nutribullet PRO Blender Champagne Multi-Function Cold Beverage Smoothie Maker User Guide

[Home](#) » [nutribullet](#) » **nutribullet PRO Blender Champagne Multi-Function Cold Beverage Smoothie Maker User Guide** 

Contents

- [1 nutribullet PRO Blender Champagne Multi-Function Cold Beverage Smoothie Maker](#)
- [2 Specifications](#)
- [3 FAQs](#)
- [4 Important SAFETY INSTRUCTION](#)
- [5 Assembly guide](#)
- [6 USING INSTRUCTION](#)
- [7 Care & maintenance](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

nutribullet®

nutribullet PRO Blender Champagne Multi-Function Cold Beverage Smoothie Maker



Specifications

- Brand: Nutribullet
- Model: Nutribullet PRO
- Intended Use: Household

FAQs

Q: How often should I replace the extractor blade?

A: It is recommended to replace the extractor blade every 6 months depending on use for optimal performance and safety.

Q: Can I blend dry ingredients with the Nutribullet?

A: Grinding dry ingredients like grains or coffee beans with the extractor blade is forbidden and may cause damage to the motor or blade, leading to personal injury or product damage.

Important SAFETY INSTRUCTION

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

GENERAL SAFETY INFORMATION

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Children shall not play with the appliance.
- NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.
- DO NOT USE OUTDOORS.
- ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.
- Always disconnect the appliance from the power supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
- Do not use this appliance for anything but its intended use. Misuse may result in personal injury.

HEAT & PRESSURE SAFETY

WARNING!

- To avoid personal injury, never blend hot or carbonated ingredients in any sealed nutribullet® cup!
- Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process at room temperature or with refrigerated ingredients and liquids (21°C/70°F or cooler). Never continuously operate for longer than necessary to create your recipe — generally less than one minute.

WARNING!

Never blend carbonated liquids or effervescent ingredients (e.g., baking soda, baking powder, yeast, etc.). Pressure from released gases can cause a sealed nutribullet® cup to burst, resulting in possible injury and/or property damage. Blade friction from prolonged operation can heat ingredients and generate internal pressure in the sealed container. This pressure can cause the cup and blade to separate or blended contents to erupt from the container, resulting in possible personal injury and/or property damage. If the sealed nutribullet® cups are warm to the touch, power off your machine and allow the vessel to cool for fifteen minutes or more. Allow contents to settle before slowly releasing the cup from the motor base. With the nutribullet® cup, pointed away from your face and body, slowly unscrew the extractor blade to gently release any residual pressure.

FRICION FROM THE ROTATING EXTRACTOR BLADES WHEN BLENDING CAN CAUSE INGREDIENTS TO HEAT AND GENERATE INTERNAL PRESSURE IN THE SEALED CUP, IF PERMITTED TO RUN FOR LONGER THAN A MINUTE. IF THE CUP IS WARM TO TOUCH ALLOW IT TO COOL COMPLETELY BEFORE CAREFULLY OPENING, POINTED AWAY FROM YOUR BODY TO AVOID INJURY.

- After blending, allow the contents to settle and release any pressure that may have built up during the extraction process by slowly unscrewing the container from the blade assembly. Have the container pointed away from you in case there is any built-up pressure.
- If you need to blend for longer than one minute, blend for 1-minute intervals. After the initial and each subsequent 1-minute blending cycle, allow the motor base to shut off completely and wait at least one minute before starting another cycle.
- Do not run for more than 3 consecutive 1- minute intervals to prevent the contents from overheating. Allow

- contents to settle for 2-3 minutes after the third extraction cycle to prevent overheating and buildup of pressure.
- **DO NOT ALLOW BLENDED MIXTURES TO SIT IN A SEALED CONTAINER FOR LONG PERIODS OF TIME!** Sugar in fruits and vegetables can ferment over time, releasing gases and causing pressure to build up in a sealed nutribullet® cup. If you will not consume your smoothie immediately, remove the blade, cover the container with a lid or plastic wrap, and refrigerate. Never store any blended mixture in a sealed nutribullet® cup either unrefrigerated or for any prolonged period of time; contents will spoil and ferment.
 - Caution must be observed if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming.

EXTRACTOR BLADE SAFETY

- Never store any extractor blade in the motor base unattached to a nutribullet® cup. An exposed blade can present a laceration hazard.

WARNING!

THE BLADES ARE SHARP! HANDLE CAREFULLY . Use care when handling any blade. To avoid laceration injury, do not handle or touch any blade edge. Caution must be observed when emptying vessels and during cleaning.

AVOID CONTACT WITH MOVING PARTS! Keep hands and utensils out of and away from the extractor blade while blending food to reduce the risk of severe personal injury.

- To prevent leakage and the possible separation of components during operation, properly align and securely attach (hand tighten) the blade to a nutribullet® cup, and check for leakage before placing it on the motor base and operating your nutribullet®.
- Once you have stopped your nutribullet®, wait until the motor comes to a complete stop and the unit powers down completely before removing the cup/extractor blade from the motor base. Taking the container off the unit prior to complete power down can cause damage to the extractor blade coupling or motor gear.

NEVER BLEND WITHOUT LIQUID AS DOING SO MAY DAMAGE THE EXTRACTOR BLADE OR MOTOR.

- The cyclonic action® of your nutribullet® requires the use of liquids to make smoothies and other nutritious beverages. The nutribullet® is not intended to be used as an ice crusher or without liquids. Always add liquid to your smoothie.
- **DO NOT USE** the extractor blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the extractor blade.
- We recommend replacing your extractor blade every 6 months (depending on use) or as needed for optimal performance.
- Certain configurations may contain a milling blade. This blade can be used for milling herbs, spices, grains and seeds.

ELECTRICAL SAFETY

WARNING!

Do not use this product in locations with different electrical specifications or plug types. Do not operate with any

type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage.

- For your safety, do not modify the plug or motor base in any way. Doing so will increase the risk of injury and void the product's warranty.
- The use of third-party attachments, including canning jars, is forbidden and may cause fire, electric shock, personal injury, or product damage and will void the warranty.
- To avoid the risk of electric shock, never immerse the cord, plug, or motor base of the blender in water or other electrical current-conducting liquids. Discontinue use if the cord, plug, or motor base is damaged.
- Always UNPLUG the nutribullet® when it is not in use or BEFORE assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the nutribullet until all parts have stopped moving.
- Periodically inspect all nutribullet® components for damage or wear that may impair proper function or present an electrical hazard. Assure that the power cord and plug are undamaged. Discontinue use and replace the nutribullet® cup if you detect cracking, crazing, cloudiness, or damage to the plastic. Assure that the blades rotate freely and that the gasket is seated and undamaged. Assure that motor base switch actuators are unobstructed, clean, and depress easily. Follow maintenance instructions in this user guide on pages 14-15. Never operate your nutribullet® with damaged components. If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service.
- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow the cord to touch hot surfaces, including the stove.³
- If the motor stops working, unplug the motor base and let it cool for an hour before attempting to use it again. Your nutribullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down sufficiently.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

VENTILATION

To prevent a fire hazard, the openings on the bottom of the motor base should be free of dust or lint and never obstructed as they are provided for ventilation to ensure reliable motor operation to prevent overheating. Never place your nutribullet® on top of flammable materials such as newspapers, tablecloths, napkins, dishtowels, placemats, or other similar type of materials.

- **CAUTION!** Always operate the nutribullet® on a level surface, leaving unobstructed space beneath and around the motor base to permit proper air circulation. Slots on the bottom of the motor base are provided for ventilation to ensure reliable operation and to prevent motor overheating.

MICROWAVE & STOVE-TOP HEATING SAFETY

- **DO NOT BLEND HOT INGREDIENTS!** After blending room temperature or cooler ingredients (21°C/70°F or less), transfer the mixture to an unsealed, microwave-safe container or to a stove-top pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients, they may feel cool to the touch, but still be

hot inside.

- Do not place any of the nutribullet® parts in a microwave, oven, or stove-top pot or immerse in boiling water as this may result in damage to the accessory.
- Avoid blending the following seeds and pits in the nutribullet®, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry pits, plum pits, peach pits, and apricot pits. Fruit pits may also cause damage to the blade and cup.

MEDICAL SAFETY

- The information contained in this user guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

MEDICATION INTERACTIONS:

If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the smoothie recipes contained in the Recipe Guide.

ADDITIONAL INSTRUCTIONS FOR PROPER USAGE


TO AVOID LEAKAGE, DO NOT OVERFILL THE CUP! Make sure ingredients and liquid do not exceed the MAX line. The cyclonic action® of the nutribullet® requires space to extract effectively and exceeding the MAX line can result in leakage and may create a dangerous pressurization which can cause the vessel and blade assembly to separate.

- Cup and extractor blades are specific to the exact model of nutribullet®. Use of incompatible parts (parts from other models) may result in damage to your nutribullet® or create safety hazards. When replacing cups or an extractor blade or ordering additional accessories from nutribullet.com, or by contacting Customer Service, please specify the model for parts that are compatible with your unit.
- Periodically inspect all nutribullet® components for damage or wear that may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged.
- Discontinue use and replace blending vessels if you detect cracking, cloudiness, or other damage to the vessel, tabs on the vessel or actuator tabs of the motor base. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the motor base is unobstructed and clean. Follow the maintenance recommended in pages 14 and 15 and never operate your nutribullet® with damaged components. If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service. You may purchase new nutribullet® cups, and extractor blades at nutribullet.com or by contacting Customer Service. WE RECOMMEND REPLACING YOUR CUP EVERY SIX MONTHS.

Save these instructions

If you have any comments, questions, or concerns, please go to [nutribullet.com](https://www.nutribullet.com).

Assembly guide

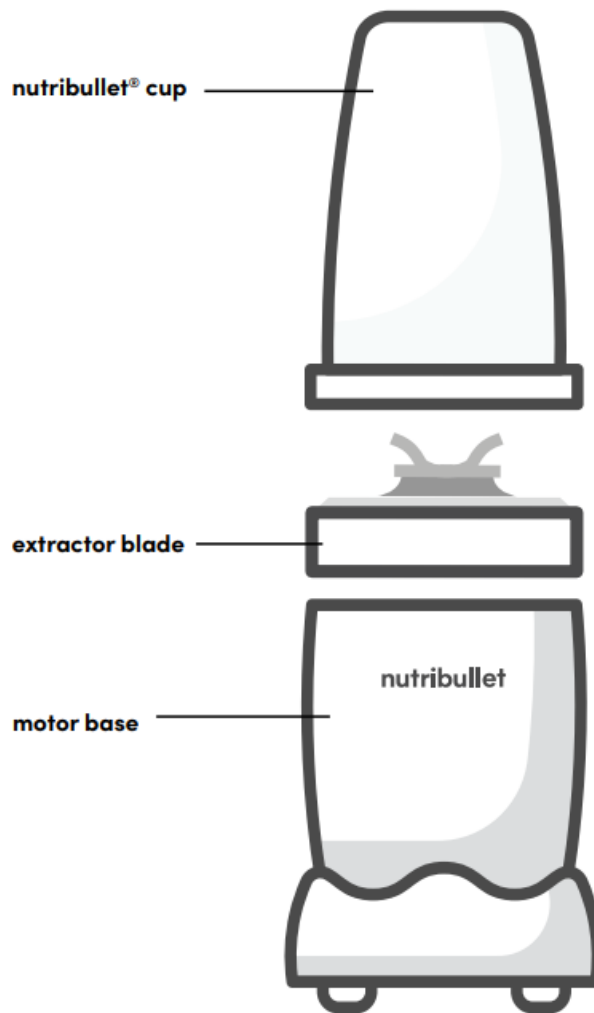

USING INSTRUCTION

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NUTRIBULLET®:

- Make sure the base is plugged in for use.
- Handle the extractor blade assembly with care, as the blades are sharp.
- Never run the nutribullet® while empty.
- nutribullet® accessories are not intended to be used in the microwave as it may damage the accessories.
- Never leave the nutribullet® unattended while in use.

Never blend hot ingredients when using any nutribullet® cup.

WARNING!

Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process at room temperature or with refrigerated ingredients and liquids (21°C/70°F or cooler).

1. Review all warning and caution statements in the Important Safeguards section (pg. 2-7) before proceeding to Step 2.
2. Place the motor base on a clean, dry, level surface such as a counter or table.
3. Add ingredients and liquid to the nutribullet® cup.

- **NOTE:** Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.



4. Place the extractor blade onto the cup and twist until it is tightly sealed.



5. Plug the power cord into an electrical outlet.



6. Turn the cup upside down and place it onto the motor base, gently push and twist.



7. Unlock the assembly by gently pushing and untwisting the cup counterclockwise.

- **NOTE:** Blending should not require longer than one minute to yield smooth and creamy results.



CAUTION

Do not remove the extractor blade from the nutribullet® cup until blending has completely ceased. Do not use the extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

Care & maintenance

Please follow the below cleaning instructions before the first use and after each use. Cleaning the nutribullet® is easy, simply place any of the pieces (except for the motor base and extractor blade) on the TOP RACK of the dishwasher or hand wash with warm soapy water and rinse.

Here's how to clean the nutribullet®

- **STEP 1:** The most important thing — ALWAYS UNPLUG the motor base from the power supply outlet when it is left unattended, before assembling, disassembling, changing accessories or approaching parts that move in use or when cleaning. Do not attempt to handle the appliance until all parts have stopped moving!
- **STEP 2:** Remove the cup/extractor blade assembly from the motor base.
- **STEP 3:** Clean the individual components (motor base, extractor blades, nutribullet® cups) as follows:

MOTOR BASE

- For the most part, the motor base doesn't really get dirty, but if you neglect to twist the extractor blade onto the cup tightly, liquids can leak out and get into the base and stick to the activator buttons.
- To avoid risk of injury, NEVER use your hands or utensils to clean the white actuator Tabs while the nutribullet® is plugged in.
- Do not remove the rubber or plastic liners inside the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the inside and outside of the motor base until clean.
- Pay particular attention to the white Actuator Tabs on the inside of the motor base to loosen any sticky debris from drips and spills. If necessary, you may use a small brush to scrub the area to ensure it is kept clean.

WARNING: Never submerge the motor base in water.

EXTRACTOR BLADE:

- DO NOT REMOVE THE GASKET as this will permanently damage the extractor blade and cause leakage. If after washing as indicated above additional disinfecting is desired, you may rinse with a 10% vinegar/water solution or with lemon juice. If, over time, the gasket becomes loose or damaged, you may order a new extractor blade at nutribullet.com or contact Customer Service.
- Dry the extractor blade completely. It is helpful to turn the blade on its side in your dish drainer to ensure BOTH SIDES of the extractor blade are completely dried.

NUTRIBULLET® CUPS & TO-GO LIDS:

- These items are all TOP RACK dishwasher safe. We recommend rinsing them and giving them a quick brush with a dish brush to remove any dried debris before washing them in the dishwasher. NEVER use the sanitize cycle to wash the Cups as this may warp the plastic.
- Regularly check the 3 tabs on the side of the Cup (cracking, crazing, breakage or rounding). If damaged, replace immediately to prevent possible personal injury.
- NEVER USE A CUP WITH A BROKEN, DAMAGED, OR MISSING TAB AS DOING SO MAY CAUSE THE CUP AND MOTOR BASE TO SEPARATE EXPOSING THE BLADE ASSEMBLY!

STUBBORN CLEANUP:

- If ingredients dry inside the nutribullet® Cup, make your cleanup a snap by filling the cup about 2/3 full with room temperature (21°C/70°F or less) water and screw on the extractor blade. Place the cup/extractor blade assembly on the nutribullet® motor base for about 20-30 seconds. This will loosen the stuck ingredients, and with a light scrub and rinse, you'll be all finished.

Replacement parts

- To order additional parts and accessories, please visit our website at nutribullet.com or feel free to contact Customer Service.

Explanation of the markings


- This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal; recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.
- This product complies with the European regulation no. 1935/2004 on materials and articles intended to come into contact with food.

MORE INFO

Capital Brands Distribution, LLC | www.nutribullet.com | All rights reserved. nutribullet and the nutribullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide. Illustrations may differ from the

actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

Documents / Resources

 <p>nutribullet nutribullet PRO</p> <p>User guide.</p>	<p>nutriBullet nutribullet PRO Blender Champagne Multi-Function Cold Beverage Smoothie Maker [pdf] User Guide</p> <p>nutribullet PRO Blender Champagne Multi Function Cold Beverage Smoothie Maker, nutribullet PRO, Blender Champagne Multi Function Cold Beverage Smoothie Maker, Champagne Multi Function Cold Beverage Smoothie Maker, Multi Function Cold Beverage Smoothie Maker, Cold Beverage Smoothie Maker, Beverage Smoothie Maker, Smoothie Maker</p>
---	---

References

- [bullet.com](#)
- [IST-Studieninstitut](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.