


NXP MCSPTTE1AK144 Development Kit User Guide

[Home](#) » [NXP](#) » NXP MCSPTTE1AK144 Development Kit User Guide 

Contents

- 1 NXP MCSPTTE1AK144 Development Kit
- 2 S32K144 DEVELOPMENT KIT FOR 3-PHASE PMSM AND BLDC MOTOR CONTROL
- 3 GET TO KNOW THE S32K144EVB
- 4 GET TO KNOW DEVKIT-MOTORGD
- 5 HEADER/PINOUT FOR PMSM MOTOR CONTROL
- 6 HEADER/PINOUT FOR BLDC MOTOR CONTROL
- 7 MCSPTTE1AK144 FEATURES
 - 7.1 Hardware
 - 7.2 Software
- 8 STEP-BY-STEP INSTALLATION INSTRUCTIONS
- 9 STEP-BY-STEP INSTALLATION INSTRUCTIONS CONTINUED
- 10 APPLICATION CONTROL
- 11 S32K144EVB JUMPER OPTIONS
- 12 DEVKIT-MOTORGD JUMPER OPTIONS
- 13 WARRANTY
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



NXP MCSPTTE1AK144 Development Kit



S32K144 DEVELOPMENT KIT FOR 3-PHASE PMSM AND BLDC MOTOR CONTROL


40 W PM Motor
Part Number: 45ZWN24-40

DEVKIT-MOTORGD Board
Part Number: DEVKIT-MOTORGD


S32K144 Evaluation Board
Part Number: S32K144EVB-Q100

S32K144 development kit for 3-phase PMSM and BLDC motor control

GET TO KNOW THE S32K144EVB

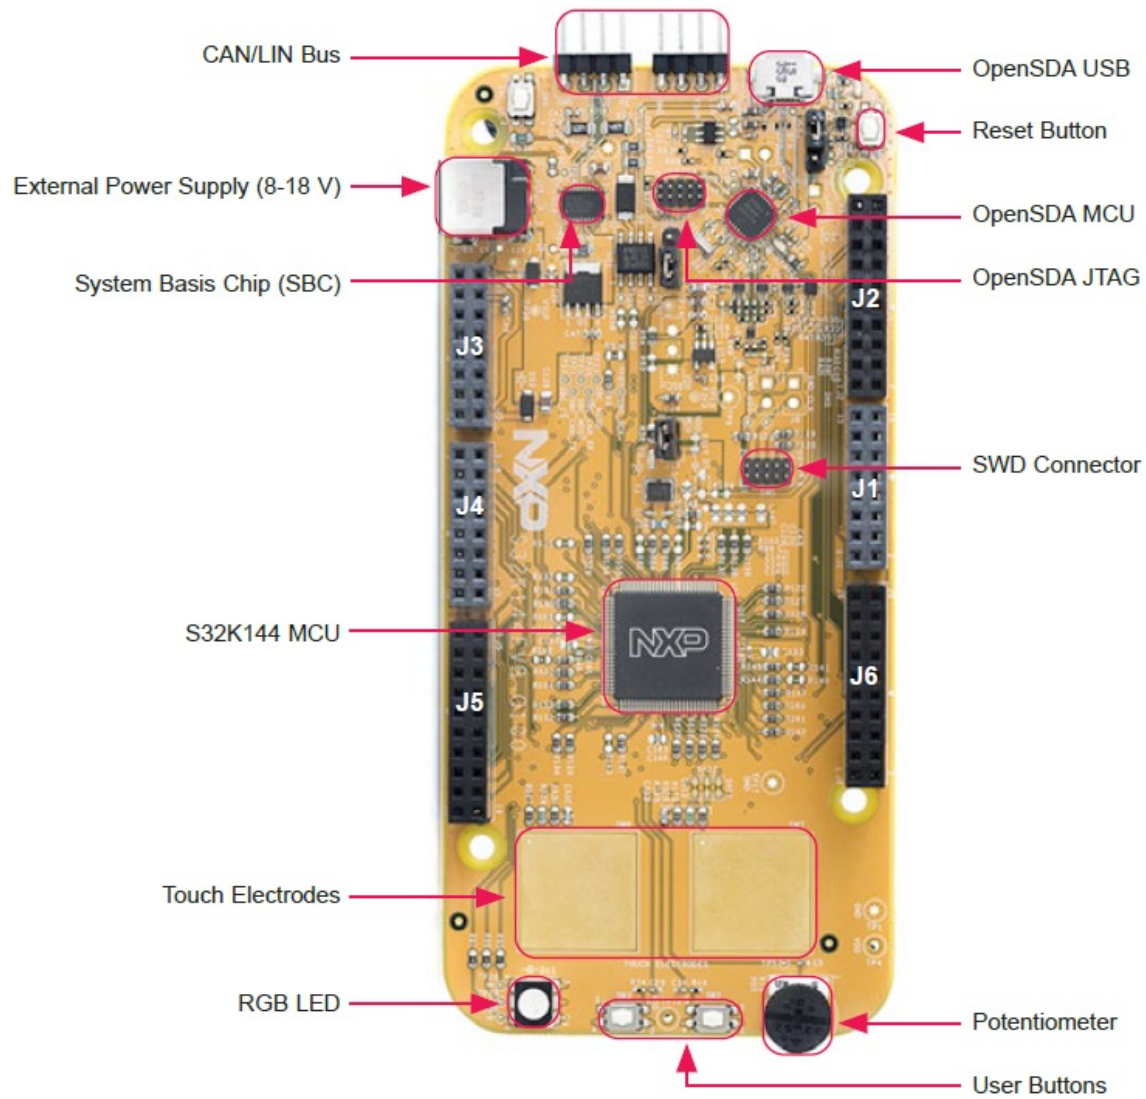


GET TO KNOW DEVKIT-MOTORGD

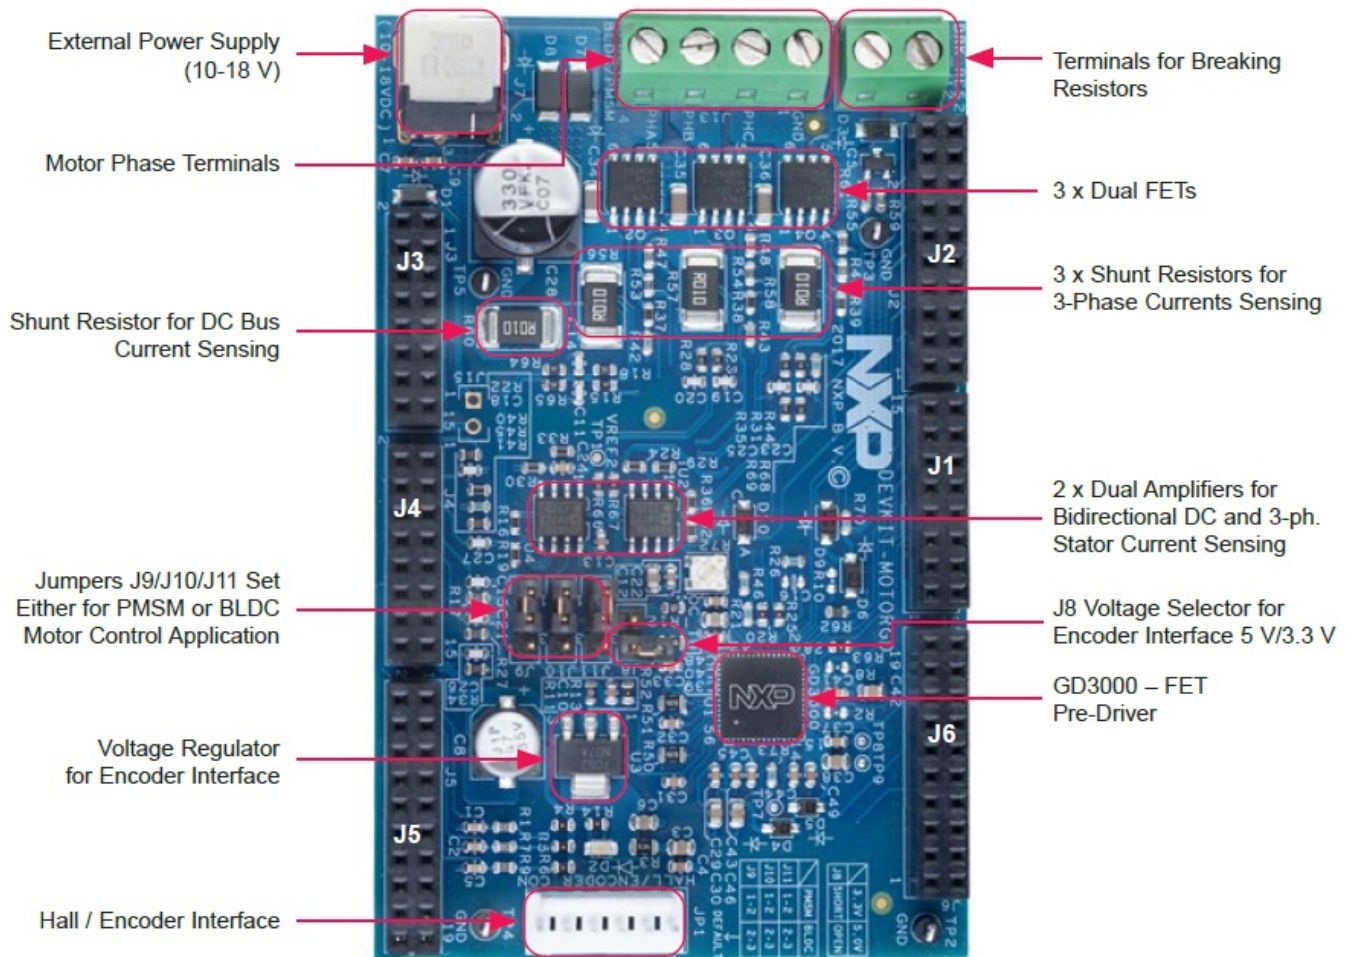

HEADER/PINOUT FOR PMSM MOTOR CONTROL

S32K144EVB controls DEVKIT-MOTORGD through inner pins of the I/O headers. Inner pins of the I/O headers are Arduino compatible. Pins in red are configurable, this is the pin configuration for PMSM motor control (see jumper options on page 11).

DKT-MOTORGD	S32K144EVB	PIN
VDC (10-18 V)	VIN (5-12 V)	J3-01
MCU_VCC (5 V)	IOREF (5 V)	J3-03
NC	RESET	J3-05
NC	3V3	J3-07
NC	5 V	J3-09
GND	GND	J3-11
GND	GND	J3-13
VDC (10-18 V)	VIN (10-18 V)	J3-15
DCBI	ADC1_SE6	J4-01
DCBV	ADC1_SE7	J4-03
PHA_I	ADC0_SE4	J4-05
PHB_I	ADC1_SE15	J4-07
PHC_I	ADC0_SE2	J4-09
NC	PTC0	J4-11
NC	PTE2	J4-13
NC	PTE6	J4-15
ENC_A	FTM2_QD_PHA	J5-01
ENC_B	FTM2_QD_PHB	J5-03
INDEX	PTA1	J5-05
NC	PTA0	J5-07
NC	PTA7	J5-09
NC	PTB13	J5-11
NC	PTC1	J5-13
NC	PTC2	J5-15
NC	NC	J5-17
NC	NC	J5-19

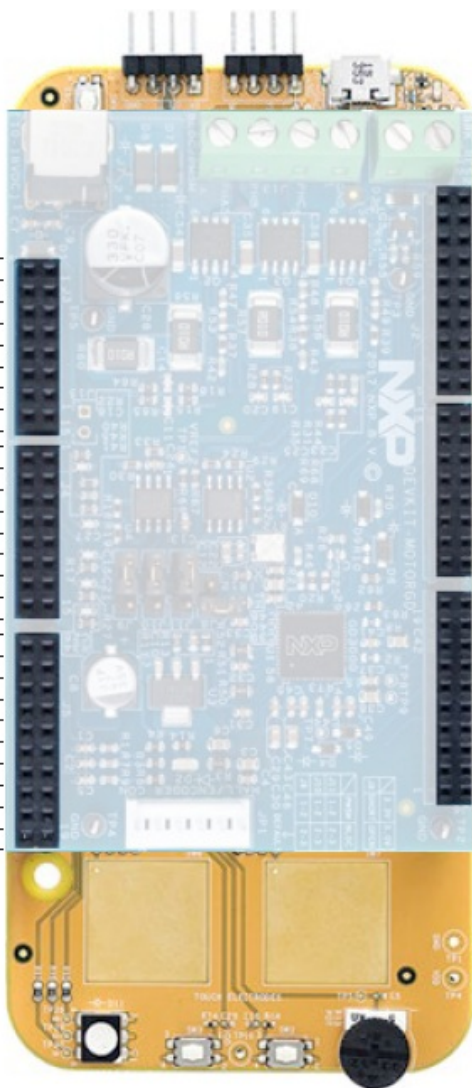

IN	S32K144EVB	DKT-MOTORGD
2-19	PTE10	GD_INT
2-17	PTE11	OC_OUT
2-15	AREF	NC
2-13	GND	GND
2-11	LPSPi0_SCK	SPI_SCLK
2-09	LPSPi0_SIN	SPI_MISO
2-07	LPSPi0_SOUT	SPI_MOSI
2-05	PTB5	SPI_CS_B
2-03	PTD14	BRAKE_PWM
2-01	PTD13	NC
1-15	FTM3_CH5	PWMC_LS
1-13	FTM3_CH4	PWMC_HS
1-11	FTM3_CH3	PWMB_LS
1-09	FTM3_CH2	PWMB_HS
1-07	FTM3_CH1	PWMA_LS
1-05	FTM3_CH0	PWMA_HS
1-03	PTA3	GD_RST
1-01	PTA2	GD_EN
8-19	PTD0	NC
8-17	PTD2	NC
8-15	PTD9	NC
8-13	PTD8	NC
8-11	PTC8	NC
8-09	PTC9	NC
8-07	PTD17	NC
8-05	PTE12	NC
8-03	PTA8	NC
8-01	PTA9	NC

HEADER/PINOUT FOR BLDC MOTOR CONTROL

S32K144EVB controls DEVKIT-MOTORGD through inner pins of the I/O headers. Inner pins of the I/O headers are Arduino compatible. Pins in red are configurable, this is the pin configuration for BLDC motor control (see jumper options on page 11).

DKT-MOTORGD	S32K144EVB	PIN			
VDC (10-18 V)	VIN (5-12 V)	J3-01			
MCU_VCC (5 V)	IOREF (5 V)	J3-03			
NC	RESET	J3-05			
NC	3V3	J3-07			
NC	5 V	J3-09			
GND	GND	J3-11			
GND	GND	J3-13			
VDC (10-18 V)	VIN (10-18 V)	J3-15			
DCBI	ADC1_SE6	J4-01			
DCBV	ADC1_SE7	J4-03			
BEMF_A	ADC0_SE4	J4-05			
BEMF_B	ADC0_SE5	J4-07			
BEMF_C	ADC0_SE2	J4-09			
NC	PTC0	J4-11			
NC	PTE2	J4-13			
NC	PTE6	J4-15			
HALL_A	FTM2_CH1	J5-01			
HALL_B	FTM2_CH0	J5-03			
HALL_C	FTM1_CH1	J5-05			
NC	PTA0	J5-07			
NC	PTA7	J5-09			
NC	PTB13	J5-11			
NC	PTC1	J5-13			
NC	PTC2	J5-15			
NC	NC	J5-17			
NC	NC	J5-19			

*IN	S32K144EVB	DKT-MOTORGD
2-19	PTE10	GD_INT
2-17	PTE11	OC_OUT
2-15	AREF	NC
2-13	GND	GND
2-11	LPSP10_SCK	SPI_SCLK
2-09	LPSP10_SIN	SPI_MISO
2-07	LPSP10_SOUT	SPI_MOSI
2-05	PTB5	SPI_CS_B
2-03	PTD14	BRAKE_PWM
2-01	PTD13	NC
1-15	FTM3_CH5	PWMC_LS
1-13	FTM3_CH4	PWMC_HS
1-11	FTM3_CH3	PWMB_LS
1-09	FTM3_CH2	PWMB_HS
1-07	FTM3_CH1	PWMA_LS
1-05	FTM3_CH0	PWMA_HS
1-03	PTA3	GD_RST
1-01	PTA2	GD_EN
8-19	PTD0	NC
8-17	PTD2	NC
8-15	PTD9	NC
8-13	PTD8	NC
8-11	PTC8	NC
8-09	PTC9	NC
8-07	PTD17	NC
8-05	PTE12	NC
8-03	PTA8	NC
8-01	PTA9	NC

MCSPTE1AK144 FEATURES

Hardware

- S32K144EVB—S32K144 evaluation board with LIN and CAN connectivity support, OpenSDA programming/debugging
- DEVKIT-MOTORGD—up to 12 V/5 A
3- phase power stage board based on SMARTMOS GD3000 pre-driver with condition monitoring and fault detection
- Low-Cost PM Motor—3-phase PM motor equipped with HALL sensor, 24 VDC, 4000 RPM, 40 W, 45ZWN24-40
- USB cable
- 12 VDC power supply

Software

- Automotive Motor Control Algorithms
 - Field-oriented control (FOC) with field weakening for sinusoidal motor type (PMSM)
 - Six-step commutation control for trapezoidal motor type (BLDC)
- Evaluation version of the Automotive Math and Motor Control Library Set—Control algorithm built on blocks of precompiled software library
- free master and MCAT

- Application tuning and variables tracking at different levels of the control structure
- Design Studio and SDK
 - Example software created in the S32 Design Studio for Arm® built on S32 SDK software
- SDK – Processor Expert®
- MCU peripherals initialization generated by Processor Expert (PEX)

STEP-BY-STEP INSTALLATION INSTRUCTIONS

Download Software

Download installation software and documentation at nxp.com/AutoMCDevKits.

Install S32 Design Studio IDE for Arm®

Download and install S32 Design Studio IDE for Arm available at nxp.com/S32DS-Arm.

Install FreeMASTER

Download and install FreeMASTER run-time debugging tool available at nxp.com/FreeMASTER.

Configure S32K144EVB and DEVKIT-MOTORGD boards

Ensure default S32K144EVB and DEVKITMOTORGD jumper options (page 11). Place DEVKIT-MOTORGD jumpers J9, J10, J11 to position 1-2 for PMSM application or 2-3 for BLDC application (page 11). Ensure that motor phase wires are in order: white, blue, green from phase A to phase C.

Connect the Power Supply

Connect the 12 V power supply to the power supply terminals on the DEVKITMOTORGD board. Keep the DC supply voltage within the range of 8 to 18 V. The DC power supply voltage affects the maximum motor speed.

Connect the USB Cable

Connect S32K144EVB to the PC using the USB cable. Allow the PC to automatically configure the USB drivers if needed.

STEP-BY-STEP INSTALLATION INSTRUCTIONS CONTINUED

Select Application and MCU Programming

Select the appropriate PMSM or BLDC motor control application from the installed directory NXP\MCSPT1AK144\sw. Select one of the next two steps (8 or 9) for MCU programming.

Re-program the MCU using MSD Flash Programmer

Copy and paste or drag and drop the Motorola S-record *.srec file from the project folder to the S32K144EVB disk drive. The software is directly programmed into the flash memory of the S32K144 MCU and executed automatically.

Reprogram the MCU using S32 Design Studio

Import the installed application software project in the S32 Design Studio for Arm®:

- Start S32 DS for Arm application.
- Click File–Import.
- Select General–Existing Projects into Workspace.
- Navigate to the installed application directory:

NXP\MC_DevKits\MCSPTE1AK144\sw, choose an appropriate project, and click OK.

- Click Finish.
- Click Run – Debug.

FrSetupeeMASTER

- Start the FreeMASTER application
- Open *.pmp FreeMASTER project from the project folder <selected project> FreeMASTER_control by clicking File – Open Project.
- Click the green GO! button in the FreeMASTER toolbar or press CTRL+G to enable the communication.
- Successful communication is signaled in the status bar at the very bottom as “RS232 UART Communication; COMn; speed = 115200”.

APPLICATION CONTROL

1. Click the App Control tab in the MCAT tool menu to display the application control page. When the power supply is connected to the DEVKIT-MOTOGD board, the application is in a READY state indicated by the green LED on the S32K144EVB board. RGB LED also indicates:
 - READY, INIT states lighting green LED
 - CALIB, ALIGN states flashing green LED
 - RUN state lighting blue LED
 - FAULT state lighting red LED
2. In case of pending faults, click the fault button Clear FAULT on the FreeMASTER MCAT Control Page, or alternatively press and hold SW2 and SW3 buttons on S32K144EVB board simultaneously.
3. Start the application by pressing the ON/OFF button on the FreeMASTER MCAT control page or by pressing switch SW2/SW3 on S32K144EVB to initiate clockwise/ counter clockwise rotor spinning direction.
4. Set required speed by changing the Speed Required variable value manually in the variable watch window, by clicking speed gauge, or by pressing the switch SW2/SW3.
5. To stop the application, click the ON/OFF button on the FreeMASTER MCAT control page or press and hold SW2 and SW3 buttons on S32K144EVB board simultaneously.

S32K144EVB JUMPER OPTIONS

JUMPER	OPTION	SETTING	DESCRIPTION
J104	Reset signal	1-2	Reset signal to OpenSDA, use to enter into Open SDA Bootloader mode
		2-3	Reset signal direct to the MCU, use to reset S32K144 (default)
J107	Board powering	1-2	S32K144 powered by 12 V power source (default)
		2-3	S32K144 powered by USB micro connector
J109/J108	CAN	OPEN	CAN termination resistor is disconnected
		SHORT	CAN terminator resistor is connected (default)

DEVKIT-MOTORGD JUMPER OPTIONS

JUMPER	OPTION	SETTING	DESCRIPTION
J8	HALL/Encoder interface	Short	Voltage level for HALL/Encoder interface is 3.3 V
		Open	Voltage level for HALL/Encoder interface is 5.0 V (default)
J9/J10/J11	Motor type	1-2	Bidirectional 3-phase current sensing for PMSM FOC (sinusoidal) motor control
		2-3	3-phase back-EMF voltage sensing for BLDC six-step (trapezoidal) sensorless motor control

SUPPORT

Visit www.nxp.com/support for a list of phone numbers within your region.

WARRANTY





Visit www.nxp.com/warranty for complete warranty information.

Documents / Resources

 <p>Quick Start Guide MCSPT1AK144 S32K144 Development Kit for 3-Phase PMSM and BLDC Motor Control</p>	<p>NXP MCSPT1AK144 Development Kit [pdf] User Guide MCSPT1AK144, Development Kit, MCSPT1AK144 Development Kit, Kit</p>
--	--

References

-  [Automotive Motor Control Development Solutions | NXP Semiconductors](#)

-  [S32 Design Studio IDE for Arm® based MCUs | NXP Semiconductors](#)
-  [NXP® Semiconductors Official Site | NXP Semiconductors](#)
-  [Support | NXP Semiconductors](#)
-  [Returns and Warranty Information | NXP Semiconductors](#)

Manuals+.