

# NXP UM11931 MCU-Link Base Standalone Debug Probe User Manual


[Home](#) » [NXP](#) » NXP UM11931 MCU-Link Base Standalone Debug Probe User Manual 

## Contents

- 1 NXP UM11931 MCU-Link Base Standalone Debug Probe
- 2 Product Information:
- 3 Product Usage Instructions:
- 4 Document information
- 5 Revision history
- 6 Contact information
- 7 Introduction
- 8 Board layout and Settings
- 9 Installation and firmware options
- 10 Feature descriptions
- 11 Additional information
- 12 Legal information
- 13 Documents / Resources
  - 13.1 References



## NXP UM11931 MCU-Link Base Standalone Debug Probe

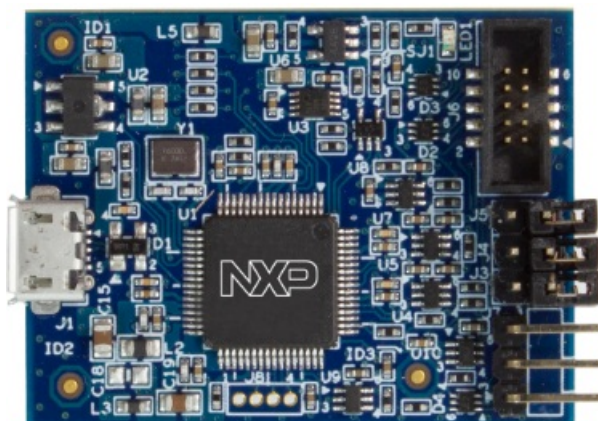

Product Information:

- **Product Name:** MCU-Link Base Standalone Debug Probe
- **Manufacturer:** NXP Semiconductors
- **Model Number:** UM11931
- **Version:** Rev. 1.0 — April 10, 2023
- **Keywords:** MCU-Link, Debug probe, CMSIS-DAP
- **Abstract:** MCU-Link Base standalone debug probe user manual

Product Usage Instructions:

Introduction

The MCU-Link Base Standalone Debug Probe is a versatile device that allows for debugging and development of custom debug probe code. It includes various features and interfaces for seamless integration with target systems.

Board layout and Settings

The connectors and jumpers on the MCU-Link are as follows:

Circuit ref	Description
LED1	Status LED
J1	Host USB connector
J2	LPC55S69 SWD connector (for development of custom debug probe code only)
J3	Firmware update jumper (install and re-power to update firmware)
J4	VCOM disable jumper (install to disable)
J5	SWD disable jumper (install to disable)
J6	SWD connector for connection to target system
J7	VCOM connection
J8	Digital expansion connector Pin 1: Analog input Pins 2-4: Reserved

Installation and firmware options

The MCU-Link debug probe comes with NXP’s CMSIS-DAP protocol based firmware pre-installed, which supports all the features of the hardware. However, please note that this specific model of MCU-Link does not support the J-Link firmware from SEGGER.

If your board does not have a debug probe firmware image installed, none of the LEDs will light up when the board is connected to a host computer. In such cases, you can update the board firmware by following the instructions in Section 3.2 below.

## Host driver and utility installation

To install the necessary drivers and utilities for the MCU-Link, please refer to the step-by-step installation guide provided on the board's webpage on nxp.com: <https://www.nxp.com/demoboard/MCU-LINK>. Alternatively, you can also use the Linkserver utility available at <https://nxp.com/linkserver> which installs the required drivers and firmware automatically.

## Document information

Info	Content
Keywords	MCU-Link, Debug probe, CMSIS-DAP
Abstract	MCU-Link Base standalone debug probe user manual

## Revision history

Rev	Date	Description
1.0	20220410	First release.

## Contact information

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

## Introduction

Jointly developed by NXP and Embedded Artists, MCU-Link is a powerful and cost-effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link includes many features to facilitate embedded software development, from basic debug to profiling and a UART to USB bridge (VCOM). MCU-Link is one of a range of debug solutions based on the MCU-Link architecture, which also includes a Pro model and implementations built into NXP evaluation boards (see <https://nxp.com/mculink> for more information). MCU-Link solutions are based on the powerful, low power LPC55S69 microcontroller and all versions run the same firmware from NXP.

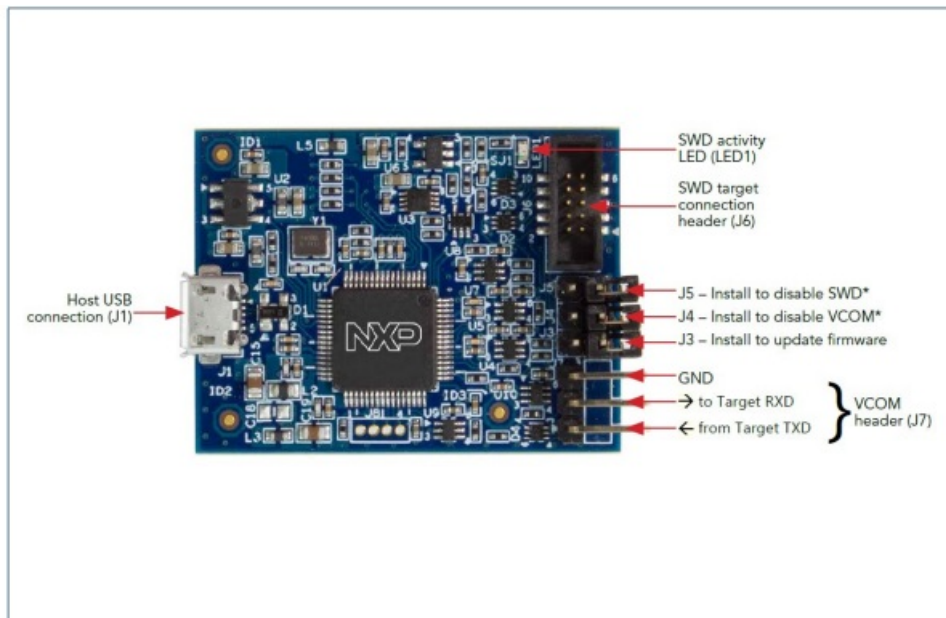


Figure 1 MCU-Link layout and connections

### The MCU-Link includes following features

- CMSIS-DAP firmware to support all NXP Arm® Cortex®-M based MCUs with SWD debug interfaces
- High speed USB host interface
- USB to target UART bridge (VCOM)
- SWO profiling and I/O features
- CMSIS-SWO support
- Analog signal monitoring input

### Board layout and Settings

The connectors and jumpers on the MCU-Link are shown in Figure 1 and descriptions of these are shown in Table 1.

### Table 1 Indicators, jumpers, buttons and connectors

Circuit ref	Description	Default
LED1	Status LED	n/a
J1	Host USB connector	n/a
J2	LPC55S69 SWD connector (for development of custom debug probe code only)	Not installed
J3	Firmware update jumper (install and re-power to update firmware)	Open
J4	VCOM disable jumper (install to disable)	Open
J5	SWD disable jumper (install to disable)	Open
J6	SWD connector for connection to target system	n/a
J7	VCOM connection	n/a
J8	Digital expansion connector Pin 1: Analog input Pins 2-4: Reserved	Not installed

## Installation and firmware options

MCU-Link debug probes are factory programmed with NXP's CMSIS-DAP protocol based firmware, which also supports all other features supported in hardware. (Note that this model of MCU-Link cannot run the version of J-Link firmware from SEGGER that is available for other MCU-Link implementations.)

Some early production units may not have a debug probe firmware image installed. If this is the case none of the LEDs will light when the board is connected to a host computer. In this situation the board firmware can still be updated by following the instructions in Section 3.2 below.

### Host driver and utility installation

A step-by-step installation guide for MCU-Link is provided at the board web page on nxp.com

(<https://www.nxp.com/demoboard/MCU-LINK>.) The rest of this section explains the same steps as can be found on that page.

MCU-Link is now also supported by the Linkserver utility (<https://nxp.com/linkserver>), and running the Linkserver installer will also install all the required drivers and firmware update utilities mentioned in the remainder of this section. It is recommended that this installer is used unless you are using an MCUXpresso IDE version of 11.6.1 or older. Please check the MCUXpresso IDE compatibility (see Table 2) before updating the MCU-Link firmware.

MCU-Link debug probes are supported on Windows 10, MacOS X and Ubuntu Linux platforms. MCU-Link probes use standard OS drivers but the installation program for Windows includes information files to provide user friendly device names. If you do not want to use the Linkserver installer package you may install these information files and the firmware MCU-Link update utility, by going to the Design Resources section of the board web page and selecting "Development software" from the SOFTWARE section. Installation packages for each host OS will be shown. Download the package for your host OS install (Linux or MacOS) or run the installer (Windows). After setting up the OS drivers, your host computer will be ready to use with MCU-Link. It is usually advisable to update to the latest version of the firmware as this may have changed since your MCU-Link was manufactured but first check Table 2 to confirm compatibility with the MCUXpresso IDE version you are using. See Section 3.2 for the steps to do perform a firmware update.

### Updating MCU-Link firmware

To update the MCU-Link's firmware it must be powered up in (USB) ISP mode. To do this insert jumper J4 then connect MCU-Link to your host computer using a micro B USB cable connected to J1. The red STATUS LED (LED3) should light and stay on (for further information on LED status information refer to Section 4.7. The board


will enumerate on the host computer as a HID class device. Navigate to the MCU-LINK\_installer\_Vx\_xxx directory (where Vx\_xxx indicates the version number, e.g. V3.108), then follow the installation instructions in the readme.txt to find and run the firmware update utilities for CMSIS-DAP. After updating the firmware using one of these scripts, unplug the board from the host computer, remove J4 and then reconnect the board.

**NOTE:** From version V3.xxx onwards, the MCU-Link firmware uses WinUSB instead of HID for higher performance, but this is not compatible with earlier version of MCUXpresso IDE. CMSIS-SWO support will also be introduced from V3.117, enabling SWO-related features in non-NXP IDEs, but also requiring an updated IDE. Please check the table below for compatibility between version of MCU-Link firmware and MCUXpresso IDE. The last V2.xxx firmware release (2.263) is available at <https://nxp.com/mcu-link> for developers using older IDE versions.

**Table 2 Firmware features and MCUXpresso IDE compatibility**

MCU-Link firmware version	USB driver type	CMSIS- SWO support	LIBUSBSIO	MCUXpresso IDE versions supported
V1.xxx and V2.xxx	HID	No	Yes	MCUXpresso 11.3 onwards
V3.xxx up to and including V3.108	WinUSB	No	No	MCUXpresso 11.7 onwards <b>REQUIRED</b>
V3.117 and onwards	WinUSB	Yes	No	MCUXpresso 11.7.1 or later <b>REQUIRED</b>

After programming the MCU-Link with the CMSIS-DAP firmware, a USB serial bus device and a virtual com port will enumerate, as shown below (for Windows hosts):

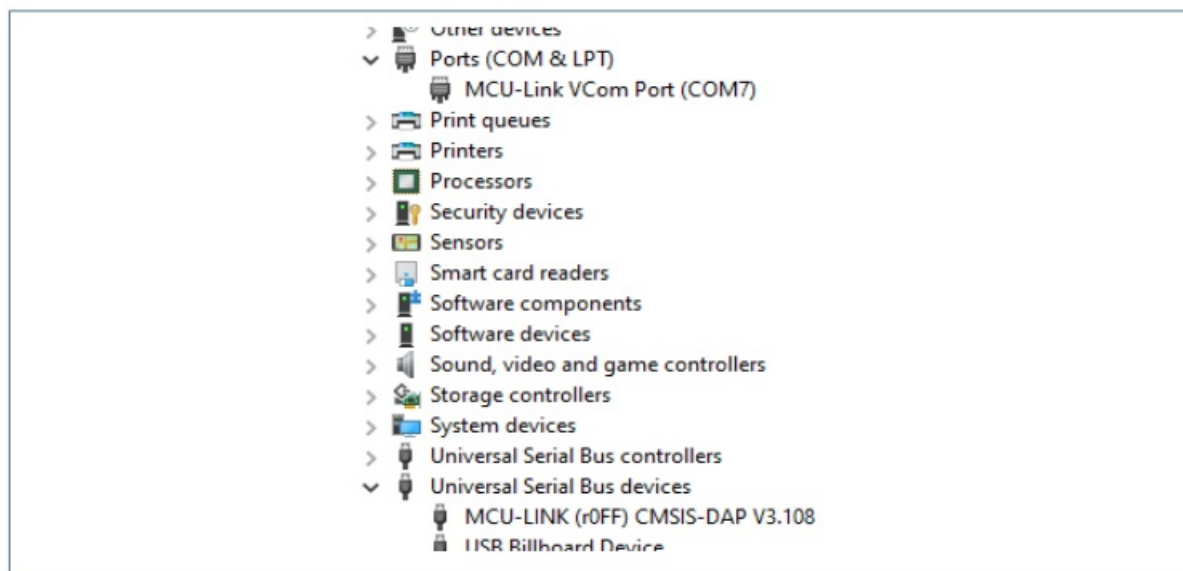

**Figure 2 MCU-Link USB devices (from V3.xxx firmware, VCOM port enabled)**

If you are using firmware V2.xxx or earlier you will see an MCU-Link CMSIS-DAP device under the USB HID devices rather than Universal Serial Bus devices.

The status LED will repeatedly fade from on to off and back on again (“breathing”).

If a more recent firmware version than that programmed into your MCU-Link is available, MCUXpresso IDE (from version 11.3 onwards) will alert you to this when you use the probe in a debug session; take careful note of the

version of firmware you install to ensure it is compatible with the IDE version you are using. If you are using another IDE with the MCU-Link it is advisable to update the firmware to ensure the latest version of firmware is installed.

### Setup for use with development tools

The MCU-Link debug probe can be used with IDEs supported within the MCUXpresso ecosystem (MCUXpresso IDE, IAR Embedded Workbench, Keil MDK, MCUXpresso for Visual Studio Code (from July 2023)); for more information on getting started with these IDEs please visit the Getting Started section of the MCU-Link board page on [nxp.com](https://www.nxp.com).

### Use with MCUXpresso IDE

MCUXpresso IDE will recognize any type of MCU-Link and will show the probe types and unique identifiers of all probes it finds in the probe discovery dialog when starting a debug session. This dialog will also show the firmware version, and will show a warning if the firmware is not the latest version. See Section 3.2 for information on how to update the firmware. MCUXpresso IDE 11.3 or later must be used when using MCU-Link.

### Use with other IDEs

MCU-Link should be recognized as a CMSIS-DAP probe by other IDEs (depending on the firmware that is programmed), and should be usable with standard settings for that probe type. Follow IDE vendor instructions for setup and use of CMSIS-DAP.

## Feature descriptions

This section describes the various features of MCU-Link.

### Target SWD/SWO interface

MCU-Link provides support for SWD-based target debug, including features enabled by SWO. MCU-Link comes with a cable target connection via J2, 10-pin Cortex M connector.

Level shifters are provided between the LPC55S69 MCU-Link processor and the target to enable target processors running at between 1.2V and 5V to be debugged. A reference voltage tracking circuit is used to detect the target voltage at the SWD connector and set the level shifter target-side voltage appropriately (see schematic page 4.)

The Target SWD interface can be disabled by installed jumper J13 but note that the MCU-Link software only checks this jumper at boot up time.

NOTE: The MCU-Link can be back-powered by a target if the MCU-Link itself is not powered via USB. For this reason it is recommended that power be applied to the MCU-Link before the target.

### VCOM (USB to Target UART bridge)

MCU-Link includes a UART to USB bridge (VCOM). A target system UART can be connected to the MCU-Link via connector J7 using the supplied cable. Pin 1 of J7 should be connected to the TXD output of the Target, and pin 2 to the RXD input of the Target.

The MCU-Link VCOM device will enumerate on the host computer system with the name MCU-Link Vcom Port (COMxx) where “xx” will be dependent on the host system. Each MCU-Link board will have a unique VCOM number associated with it. The VCOM function may be disabled by installing jumper J7 before powering the board. Note that installing/removing this jumper after powering the board will have no effect on the feature in terms of how the MCU-Link software behaves since it is only checked at power up. It is not necessary to disable the VCOM function when not in use, although this can save some USB bandwidth.

The VCOM device is configurable via the host computer (e.g. Device Manager in Windows), with the following parameters:

- Word length 7 or 8 bits
- Stop bits: 1 or 2
- Parity: none / odd / even

Baud rates of up to 5.33Mbps are supported.

### **Analog probe**

MCU-Link includes an analog signal input that can be used with MCUXpresso IDE to provide a basic signal tracing feature. As at version 11.4 of MCUXpresso IDE this feature is included with the energy measurement dialogs.

The analog input for this feature is located at pin 1 of connector J8. The input passes directly into an ADC input of the LPC55S69; refer to the datasheet of the LPC55S69 for input impedance and other characteristics. Care should be taken not to apply voltages >3.3V to this input in order to avoid damage.

### **LPC55S69 debug connector**

Most users of MCU-Link are expected to use the standard firmware from NXP and so will not need to debug the LPC55S69 processor, however SWD connector J2 may be soldered to the board and used to develop code on this device.

## **Additional information**

This section describes other information related to the use of the MCU-Link Base Probe.

### **Target operating voltage and connections**

The MCU-Link Base Probe cannot power a target system, so uses a sensing circuit (see page 4 of the schematic) to detect the target supply voltage and set up level shifter voltages accordingly. It should not be necessary to make any modifications to this circuit, but there is a pull up resistor (33kΩ) to the 3.3V supply of the MCU-Link. If issues are seen with the target system supply being affected by the MCU-Link being connected then R16 may be removed and SJ1 changed to connect to position 1-2. This will fix the level shifters at the voltage level seen at pin 1 of the SWD connector, and require that the target supply can support the VCCB input requirements of the level shifter devices. It is not recommended to make these modifications until/unless the target system has been carefully checked to see that the correct reference/supply voltage is present on pin 1 of the SWD connector (J6).

## **Legal information**

### **Disclaimers**

- Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.
- In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including – without limitation – lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.
- Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.
- Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.
- Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or



malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

- Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.
- Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.
- NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.
- Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from national authorities.


## Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

All information provided in this document is subject to legal disclaimers.

© NXP B.V. 2021. All rights reserved.

## Documents / Resources

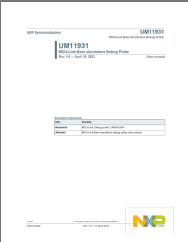	<a href="#"><b>NXP UM11931 MCU-Link Base Standalone Debug Probe</b></a> [pdf] User Manual UM11931 MCU-Link Base Standalone Debug Probe, UM11931, MCU-Link Base Standalone Debug Probe, Standalone Debug Probe, Debug Probe, Probe
---	--

## References

- [Automotive, IoT & Industrial Solutions | NXP Semiconductors](#)
- [Automotive, IoT & Industrial Solutions | NXP Semiconductors](#)
- [Linkserver for Microcontrollers | NXP Semiconductors](#)
- [MCU-Link Debug Probe Architecture | NXP Semiconductors](#)
- [MCU-Link Debug Probe Architecture | NXP Semiconductors](#)

-  [MCU Link JTAG/SWD Debug Probe | NXP Semiconductors](#)

[Manuals+](#)