



opengear CM8116 Console Manager 8100 Server User Guide

[Home](#) » [Opengear](#) » opengear CM8116 Console Manager 8100 Server User Guide 



QUICK START GUIDE
CONSOLE MANAGER 8100
Includes: CM8116, CM8132, CM8148



Contents

- 1 CM8116 Console Manager 8100 Server
- 2 WHAT'S IN THE BOX
- 3 HARDWARE INSTALLATION
- 4 ACCESS THE DEVICE
- 5 CONFIGURE SNMP POWER ALERTS
- 6 CONFIGURE SERIAL PORTS
- 7 CONFIGURE LOCAL CONSOLE
- 8 CONFIGURE NETWORK
- 9 CREATE NEW ADMINISTRATIVE USER
- 10 ACCESS DEVICE CONSOLES
- 11 LIGHTHOUSE CENTRALIZED MANAGEMENT
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

CM8116 Console Manager 8100 Server

REGISTER

This Quick Start Guide covers basic installation and configuration of the CM8100. For detailed guidance, consult the Console Manager User Guide: <https://opengear.com/support/documentation/>.

Register your product: <https://opengear.com/product-registration>

When you register, you:

- Activate your warranty.
- Get notified when firmware updates are released: <https://opengear.com/support/device-updates/>

WHAT'S IN THE BOX

CM8100 Device


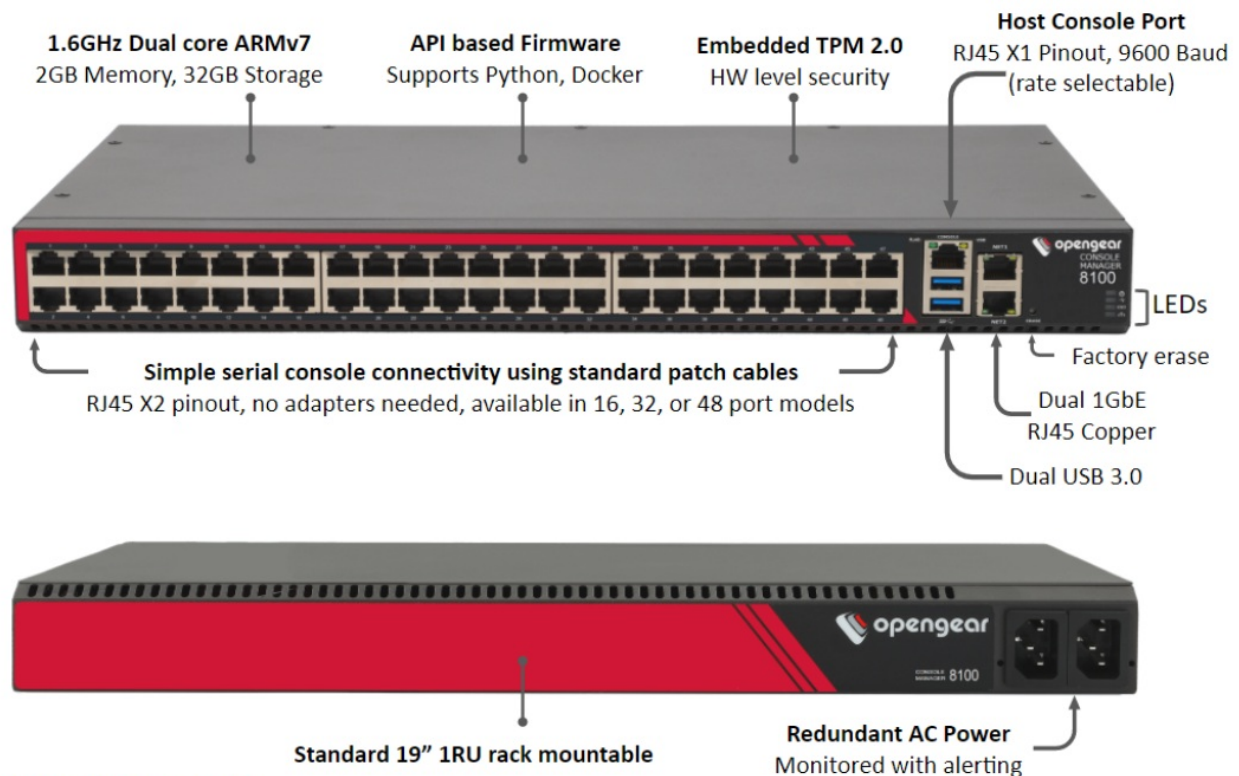


Figure: CM8148 model

Kit Contents

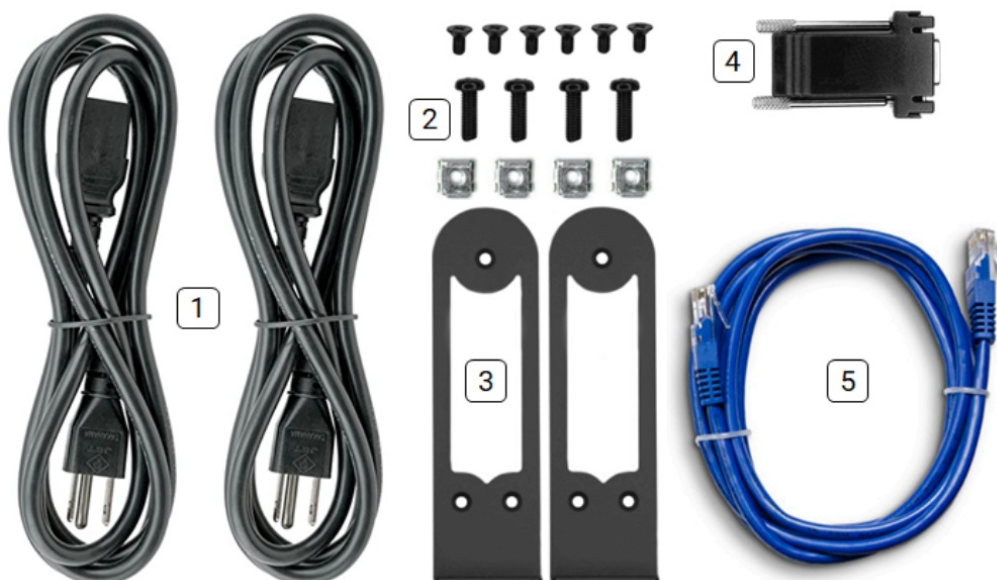

Note: Contents may be different from those pictured due to region or supplier.

Label	Item	Quantity	Notes
1	CM8100 device	1	
1	IEC power cables	2	Region-specific
2	Rack mount screw kit	1	
4	RJ45 to DB9F rollover serial adapter	1	Part number 319018
5	CAT5e RJ45 UTP straight cable – 5ft/1.5m	1	Part number 440016

HARDWARE INSTALLATION

Step 1. Connect Network Interfaces

Connect the device to a local network using any of the available physical network interfaces. All interfaces will receive a dynamic address via DHCP and DHCPv6.



Figure: Network interfaces for CM8100

Additionally, the device can be accessed from a computer or local network via interface NET1 with a static IPv4 address 192.168.0.1/24.

Firewall Zone	Network Interfaces
WAN	NET1
LAN	NET2

Table: Default firewall zones for interfaces

Step 2. Connect Serial Devices

Connect managed devices to the serial interfaces on the front of the unit.

Step 3. Connect USB Devices

USB serial devices can be connected to the USB slots at the front of the unit if required. The front USB slots are USB 3.0.

Step 4. Connect The Power

Connect the power cable to the rear of the unit.

A second power cable can be connected if redundancy is required. The power cables can be connected in any order.



Figure: Dual power supply connectors for CM8100

LED Power Status Indicator



Figure: Power supply has **redundancy**



Figure: Power supply does not have redundancy

ACCESS THE DEVICE

Step 1. Log in via the Web UI

Using a computer on the same subnet as the static network interface shown in “**Hardware Installation**” on

page 4, access the web UI with your web browser at <https://192.168.0.1/> .

Note: The device has a self-signed SSL certificate. Your browser will display an “Untrusted connection” warning. Click through the warning to access the login page.

To log in for the first time, enter the username root and password default and click Submit.

Step 2. Change Root Password

When logging in to the device for the first time you will be prompted to change the root password immediately.

Enter the current password followed by the new password and click Log in.

The ACCESS > Serial Ports page appears displaying a list of connected serial devices and links to a Web Terminal or SSH connection for each.

CONFIGURE SNMP POWER ALERTS


Configure > SNMP Alerts > Power > Voltage

Configure the System Voltage Range alert to send an SNMP TRAP whenever the system reboots or the voltage on either power supply leaves or enters the user-configured voltage range.

For more details, consult the Console Manager User Guide: <https://opengear.com/support/documentation/>.

CONFIGURE SERIAL PORTS

To change settings for individual serial ports:

1. Navigate to **CONFIGURE > Serial Ports**.
2. Click the Edit button  next to the port you wish to modify.
3. Change port settings, logging settings or configure IP aliases.
4. Click **Apply** to save changes.

Field	Value
Mode	ConsoleServer
Pinout	X2
Baud Rate Data Bits	9600
Data Bits	8
Parity	None
Stop Bits	1

Table: Default configuration for serial ports

CONFIGURE LOCAL CONSOLE


CONFIGURE > Local Management Consoles

Console Manager CM8100 units contain one RJ45 serial console.

LOCAL MANAGEMENT CONSOLES

Management Console	Parameters	Actions
RJ45 Serial Console	9600-8N1 VT102	 

To configure local console ports:

1. Navigate to **CONFIGURE > Local Management Consoles**.
2. Click the **Edit** button  next to the local console you wish to modify.
3. Change port settings.
4. Click **Apply** to save changes.








Field	Value
Baud Rate Data Bits	9600
Data Bits	8
Parity	None
Stop Bits	1
Emulation	VT102

Table: Default serial port configuration for local console access


CONFIGURE NETWORK

CONFIGURE > Network Connections > Network Interfaces

Click to expand any row to display status information about the interface and its connections.

NETWORK INTERFACES			
  			
 NET1 - 1G Copper/SFP	2 IPv4 connections 1 Automatic 1 Static	1 IPv6 connections 1 Automatic 0 Static	
 NET2 - 1G Copper/SFP	1 IPv4 connections 1 Automatic 0 Static	1 IPv6 connections 1 Automatic 0 Static	

Configure Physical Interfaces

Click the Edit button  to configure media and MTU for the any of the physical interfaces.

NET1 - 1G Copper/SFP

Enabled

Disabled




Enabled Automatic

Modify Default IPv4 Static Interface

1. Click the **“IPv4 Static”** label under NET1 to open the edit connection page.
2. Enter the IPv4 address.
3. Enter the network mask.
4. Click **Apply** to save changes.

CREATE NEW ADMINISTRATIVE USER

Note: You should create a new administrative user rather than continuing as the root user.

1. Navigate to **CONFIGURE > User Management > Local Users**.
2. Click the **Add User** button  at the top-right of the page.
3. Click the **User Enabled** checkbox.
4. Enter **Username** and **Password**.
5. Assign the **admin** group to the user to provide full access privileges.
6. Click **Save User** to create the new user account.
7. Log out and log back in as this user for all administrative functions.

Group Memberships



Group Name

Description



admin

Provides users with unlimited configuration and management privileges



netgrp

Group for users created automatically via network authentication


1 / 2 Groups Selected

For more details about Users and Groups configuration, consult the Console Manager User Guide:
<https://opengear.com/support/documentation/>.

ACCESS DEVICE CONSOLES

After you have attached managed devices and configured serial ports by following “Configure Serial Ports” on page 6, you can now access the console of your managed devices on your network.

Web UI

1. Navigate to **ACCESS > Serial Ports** to view the list of serial ports on the device.
2. Click the **Web Terminal button**  to the right of any serial port in Console Server mode to access it via the web terminal.



Console

For administrator users logged in to the device via console or SSH:

1. Type `pmshell` to view the list of available managed devices.
2. Enter the **port number** to access the desired device and press **Enter**.

SSH

The managed devices connected to the Console Manager can be accessed directly with an SSH command to connect to the device.

- To view the list of managed devices: `ssh <username>+serial@<device address>`
- To connect to a specific device by port: `ssh <username>+port<number>@<device address>`
- To connect to a specific device by name: `ssh <username>+<port label>@<device address>`

Note: The SSH delimiter can be modified via the Web UI at **CONFIGURE > Services > SSH**.


Telnet

Telnet access to managed devices is not supported at this time.

LIGHTHOUSE CENTRALIZED MANAGEMENT



Note: Lighthouse is a powerful tool that simplifies the way you manage your out-of-band network through a single pane of glass. Better control and visibility provides 24/7 resilient access to your connected IT infrastructure. For more information, visit <https://opengear.com/products/lighthouse/>.

To enroll your device:

1. Navigate to **CONFIGURE > Lighthouse Enrollment**.
2. Click the **Add Lighthouse Enrollment** button  at the top-right of the page.
3. Enter the Lighthouse Address, Enrollment Token, optional port and optional Enrollment Bundle.
4. Click Apply to begin the enrollment process.

Note: Enrollment of an Opengear device can also be performed from Lighthouse using Add Node functionality.

Documents / Resources

 <p>QUICK START GUIDE CONSOLE MANAGER 8100</p>  <p>8100-1</p>	<p>opengear CM8116 Console Manager 8100 Server [pdf] User Guide CM8116, CM8132, CM8148, CM8116 Console Manager 8100 Server, Console Manager 8100, Server, Console Manager 8100 Server</p>
---	---

References

-  [Downloads: Software, Firmware, & Custom Development Kits](#)
-  [Product Documentation: Quick Start Guides & User Manuals](#)

Manuals+.