



# Owon SP6103 P series Single Channel Output DC Power Supply User Manual

[Home](#) » [owon](#) » Owon SP6103 P series Single Channel Output DC Power Supply User Manual 

## Contents

- 1 Owon SP6103 P series Single Channel Output DC Power Supply
- 2 Product Information
- 3 Product Usage Instructions
- 4 Product Panel Operation
- 5 Product Troubleshooting
- 6 General Warranty
- 7 General Safety Requirements
- 8 Safety Terms and Symbols
  - 8.1 Safety Terms
  - 8.2 Safety Symbols
- 9 Quick Review
  - 9.1 Panel and Interface
  - 9.2 Button light instruction
  - 9.3 General Inspection
  - 9.4 Output Inspection
- 10 Panel Operation
  - 10.1 System Settings
  - 10.2 Voltage Curve
  - 10.3 Current Curve
  - 10.4 Interface Setting
  - 10.5 System Information
- 11 Troubleshooting
- 12 Appendix
  - 12.1 Appendix B: General Care and Cleaning
- 13 Contact
- 14 Documents / Resources
- 15 Related Posts



## Owon SP6103 P series Single Channel Output DC Power Supply



### Product Information

- **Product Name:** P Series Single Channel Output DC Power Supply
- **Manufacturer:** LILLIPUT
- **Address:** 5 Commonwealth Ave Woburn, MA 01801
- **Contact Number:** Phone 781-665-1400, Toll-Free 1-800-517-8431
- **Website:** [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)
- **User Manual Version:** Sep. 2020 edition V1.2.0
- **Warranty Period:** 2 years for the product and 1 year for accessories from the date of purchase

The P Series Single Channel Output DC Power Supply is a product of LILLIPUT Company. The product is protected by patent rights. The user manual contains all the necessary information regarding the product's usage and safety requirements. The manufacturer reserves the right to change the specification of the product without prior notice. The warranty period for the product is two years from the date of purchase.

### Product Usage Instructions

Before using the P Series Single Channel Output DC Power Supply, please read the user manual carefully and follow the safety requirements mentioned in it. The following are the general usage instructions:

### **General Inspection**

- Before using the product, conduct a general inspection. Check if there are any physical damages or missing parts.
- If there are any issues, contact the nearest Sales and Service Offices for assistance.

### **Power Inspection**

- After conducting the general inspection, inspect the power supply. Ensure that the input voltage matches with the product specifications. Check if there are any short circuits or overloads.
- Connect the power cord to the power outlet and then to the power input of the product.

### **Output Inspection**

After completing the power inspection, inspect the output of the product. Connect the load to the output terminal. Ensure that the polarity of the load is correct. Adjust the voltage and current according to the load requirements. Check if the output voltage and current are stable.

### **Product Panel Operation**

The product's panel consists of various buttons, knobs, and displays. Follow the instructions mentioned in the user manual to operate the product. The panel operation includes setting the voltage and current, turning on/off the output, and selecting the operation mode.

### **Product Troubleshooting**

If there are any issues with the product, refer to the troubleshooting section of the user manual. Follow the steps mentioned in it to resolve the issue. If the issue persists, contact the nearest Sales and Service Offices for assistance. By following these instructions, you can use the P Series Single Channel Output DC Power Supply safely and effectively.

### **General Warranty**

We warrant that the product will be free from defects in materials and workmanship for a period of 2 years (1 year for accessories) from the date of purchase of the product by the original purchaser from our company. This warranty only applies to the original purchaser and is not transferable to a third party. If the product proves defective during the warranty period, we will either repair the defective product without charge for parts and labour, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by our company for warranty work may be new or reconditioned like new. All replaced parts, modules and products become the property of our company.

In order to obtain service under this warranty, the customer must notify our company of the defect before the expiration of the warranty period. The customer shall be responsible for packaging and shipping the defective product to the designated service centre, a copy of the customer's proof of purchase is also required. This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. We shall not be obligated to furnish service under this warranty.

- to repair damage resulting from attempts by personnel other than our company representatives to install, repair or service the product;
- to repair damage resulting from improper use or connection to incompatible equipment;
- to repair any damage or malfunction caused by the use of not our supplies;
- to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

Please contact the nearest Sales and Service Offices for services.

Excepting the after-sales services provided in this summary or the applicable warranty statements, we will not offer any guarantee for maintenance definitely declared or hinted, including but not limited to the implied guarantee for marketability and special-purpose acceptability. We should not take any responsibility for any indirect, special or consequent damages.

## **General Safety Requirements**

Before use, please read the following safety precautions to avoid any possible bodily injury and to prevent this product or any other connected products from damage. To avoid any contingent danger, ensure this product is only used within the ranges specified. Only a qualified person should perform internal maintenance.

### **To avoid Fire or Personal Injury**

- **Use Proper Power Cord.** Use only the power cord supplied with the product and certified to use in your country.
- **Product Grounded.** This instrument is grounded through the power cord grounding conductor. To avoid electric shock, the grounding conductor must be grounded. The product must be grounded properly before any connection with its input or output terminals.
- **Check all Terminal Ratings.** To avoid fire or shock hazard, check all ratings and markings on this product. Refer to the user manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers.** Do not operate the instrument with covers or panels removed.
- **Use the Proper Fuse.** Use only the specified type and rating fuse for this instrument.
- **Avoid exposed circuit.** Be careful when working on exposed circuitry to avoid risk of electric shock or other injury.
- **Do not operate if any damage.** If you suspect damage to the instrument, have it inspected by qualified service personnel before further use.
- **Use your instrument in a well-ventilated area.** Please keep well ventilated and inspect the intake and fan regularly.
- **Do not operate in damp conditions.** To avoid short circuiting to the interior of the device or electric shock, please do not operate in a humid environment.
- **Do not operate in an explosive atmosphere.** To avoid damages to the device or personal injuries, it is important to operate the device away from an explosive atmosphere.
- **Keep product surfaces clean and dry.** To avoid the influence of dust or moisture in air, please keep the surface of device clean and dry.

## **Safety Terms and Symbols**

### **Safety Terms**

***Terms in this manual (The following terms may appear in this manual):***




- **Warning:** Warning indicates conditions or practices that could result in injury or loss of life.
- **Caution:** Caution indicates the conditions or practices that could result in damage to this product or other property.



***Terms on the product. The following terms may appear on this product:***

- **Danger:** Indicates an immediate hazard or injury possibility.
- **Warning:** Indicates a possible hazard or injury.
- **Caution:** Indicates potential damage to the instrument or other property.

**Safety Symbols**

Symbols on the product. The following symbols may appear on the product:

-  • Hazardous Voltage
-  • Protective Earth Terminal
-  • Public Ground

-  • Refer to Manual
-  • Chassis Ground

**Quick Review**

**Panel and Interface**

**Front Panel**



Figure 3-1 Front Panel Overview

①	<b>Display Area</b>	Display user interface.
②	<b>Direction Key</b>	Select menu; select parameters; Edit the cursor.
	<b>OK Key</b>	1) Enter the menu or confirm the entered parameters. 2) Switch the display mode between Number and Curve.
③	<b>Knob</b>	Select the main menu or change the value, function equals to the confirmation key.
④	<b>On/Off Key</b>	Turn on/off the channel.
⑤	<b>Channel Output Terminal</b>	Output access of channel.
⑥	<b>Power Button</b>	Turn on/off the instrument.

⑦	<b>Keylock Key</b>	Press and hold this button for about 5 seconds. When you hear a beep, the panel is locked and the lock icon is displayed on the top of the screen. When locked, pressing any other key has no effect. In the locked state, press and hold this button for about 5 seconds. When you hear a beep, the panel is unlocked.
⑧	<b>Memory Key</b>	5 sets of channel parameters can be stored for quick output.
⑨	<b>System Key</b>	System settings, interface settings, system information.

#### Button light instruction

- **On/Off key:** The key lights up when the channel turns on.

Rear Panel

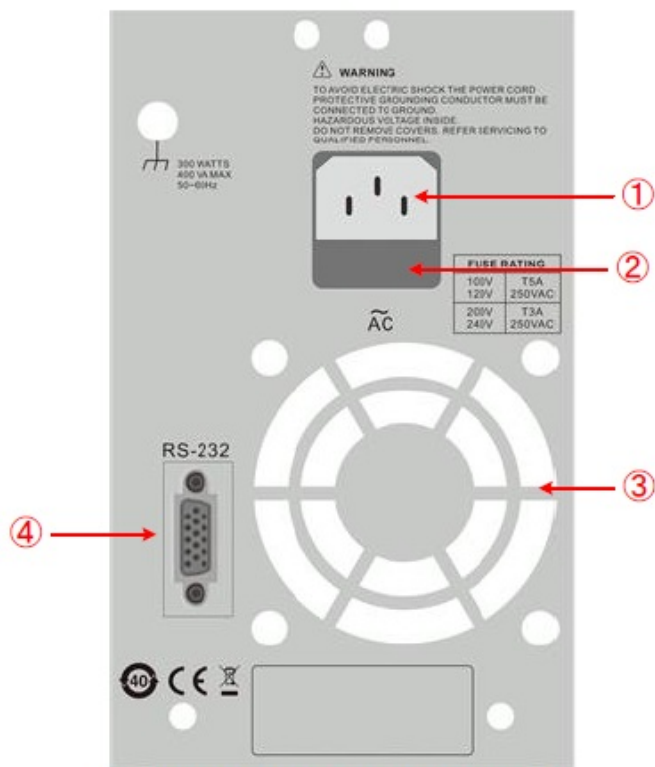


Figure 3-2 Rear Panel Overview

①	AC Power Input Jack	AC power input interface
②	Fuse	Power fuse
③	Air Vent	Air vent
④	COM port	Connect the serial port of the instrument and external device

User Interface

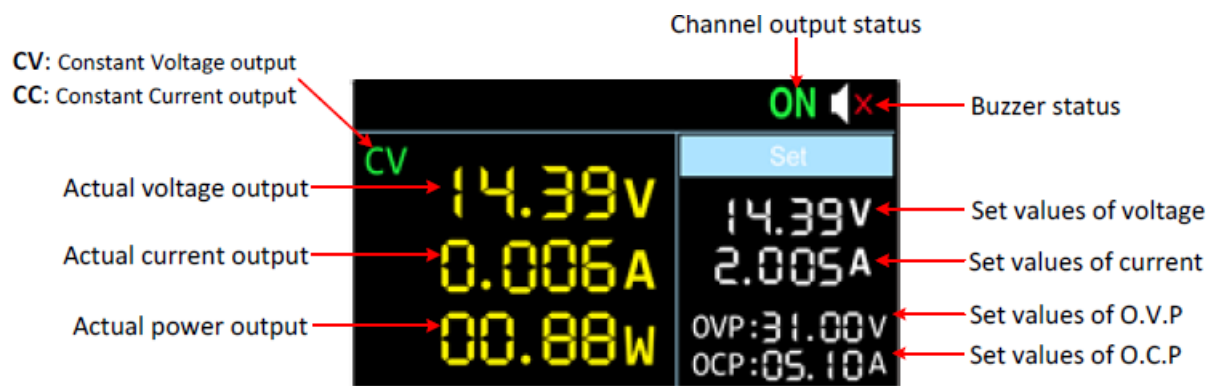


Figure 3-3 User Interface

General Inspection

After you get a new power supply, it is recommended that you should make a check on the instrument according to the following steps:



1. Check whether there is any damage caused by transportation.
  - If it is found that the packaging carton or the foamed plastic protection cushion has suffered serious damage, do not throw it away first till the complete device and its accessories succeed in the electrical and mechanical property tests.
2. Check the Accessories
  - The supplied accessories have been already described in the “Appendix A: Enclosure” of this Manual. You can check whether there is any loss of accessories with reference to this description. If it is found that there is any accessory lost or damaged, please get in touch with the distributor of our responsible for this service or our local offices.
3. Check the Complete Instrument
  - If it is found that there is damage to the appearance of the instrument, or the instrument can not work normally, or fails in the performance test, please get in touch with the our distributor responsible for this business or the our local offices. If there is damage to the instrument caused by the transportation, please keep the package. With the transportation department or our distributor responsible for this business informed about it, a repairing or replacement of the instrument will be arranged by the us.

## **Power Inspection**

1. Use the power cord supplied with the accessories to connect the instrument to the AC power.
  - **Warning:** To prevent electric shock, make sure that the instrument is properly grounded
2. Press the power button on the front panel, the button light will be on, and the startup screen will be displayed on the screen.

## **Output Inspection**

Output inspection is to ensure that the instrument can achieve its rated outputs and properly respond to operation from the front panel. For the procedures below, it is suggested that you read “Turn On/Off the Channel Output” on page 8 and “Set the Output Voltage/Current”.

## **Voltage Output Inspection**

The following steps verify basic voltage functions without load:

1. When the instrument is under no load, select a channel and ensure the output current setting for this channel is not at zero.
2. Turn on the channel output, then ensure the channel is in Constant Voltage output mode.
3. Set some different voltage values on this channel; check if the actual voltage value displayed is close to the set voltage value, and also that the actual current value displayed is nearly to zero. (4) Check that if the output voltage can be adjusted from zero to the maximum rating, When it is set to the maximum or minimum, a beep is heard, indicating that the limit has been reached.

## **Current Output Inspection**

The following steps check basic current functions with a short across the power supply's output:


1. Connect a short across (+) and (-) output terminals with an insulated test lead on this channel. Use a wire size sufficient to handle the maximum current.
2. Set the output voltage to the maximum rating on this channel.
3. Turn on the channel output. Ensure the channel you used is in Constant Current output mode.
4. Set some different current values on this channel; check if the actual current value displayed is close to the set current value, and to check if the actual voltage value displayed is nearly zero.
5. Check that if the output current can be adjusted from zero to the maximum rating, When it is set to the maximum or minimum, a beep is heard, indicating that the limit has been reached..
6. Turn off the channel output and remove the short circuit from the output terminals.

## Panel Operation

### Turn On/Off the Channel Output

- Press the On/Off key to turn on/off the channel;

### Set the Output Voltage/Current

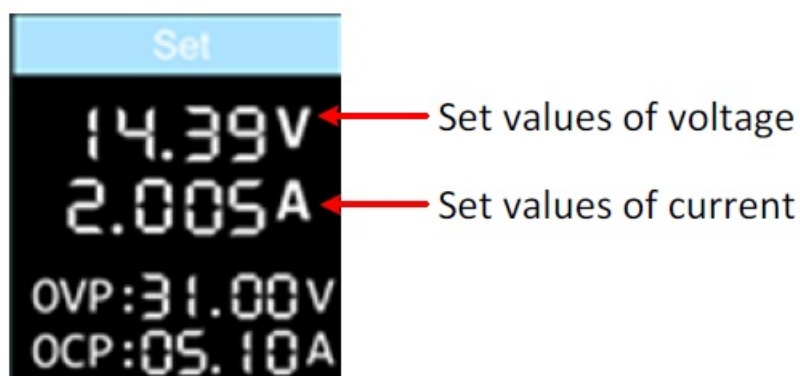


- In the channel setting area, press the  $\wedge$  /  $\vee$  keys to move the red cursor between parameters.
- After selecting the output voltage/current setting value, turn the knob to change the current cursor value, and press  $\swarrow$  /  $\searrow$  key to move the cursor position.

### Over Voltage/Current Protection

Overvoltage protection (O.V.P) or overcurrent protection (O.C.P): after the output is turned on, once the output voltage/current reaches the set value of O.V.P/O.C.P, the instrument will cut off the output, a warning will show on the screen.

**Note:** When the instrument disables the output due to protection, after you make some adjustments, the channel must be restarted to output normally.

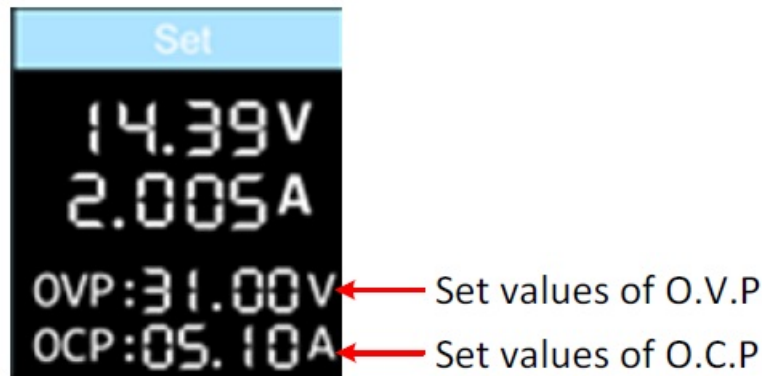


- This function can keep the power output from exceeding the load rating to protect the load.
- In the channel setting area, press the  $\wedge$  /  $\vee$  keys to move the red cursor between parameters.
- After selecting the overvoltage/overcurrent protection value, turn the Knob to change the current cursor value, and press the  $\rightarrow$  direction key to move the cursor position.

### Memory key shortcut settings

- Press Memory key on front panel, the M1, M2, and M3 keys can store five sets of channel parameters M1, M2, M3, M4, and M5, respectively, for quick output.

### Quick output

To output a set of parameters from M1 to M5, follow these steps:

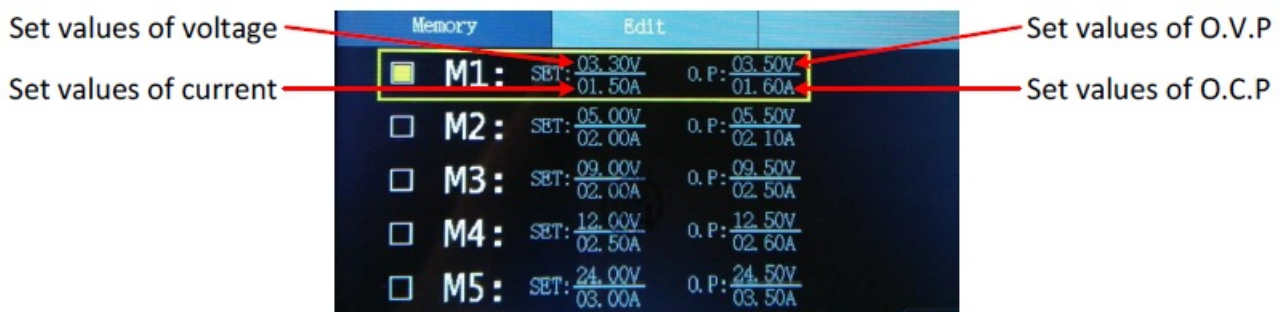






1. Press Memory key on front panel, the shortcut interface will display.
2. Press  $\vee$  key and shows the yellow select box. Press  $\wedge$  /  $\vee$  to move the select box.
3. After selecting the certain parameter, press knob or OK on the panel to confirm the input value.

### Edit

To edit the channel parameters of M1 to M5, follow these steps:



	Memory	Edit				
		M1	M2	M3	M4	M5
Set values of voltage	Volt	03.30V	05.00V	09.00V	12.00V	24.00V
Set values of current	Curr	01.50A	02.00A	02.00A	02.50A	03.00A
Set values of O.V.P	O.V.P	03.50V	05.50V	09.50V	12.50V	24.50V
Set values of O.C.P	O.C.P	01.60A	02.10A	02.50A	02.60A	03.50A

1. Press the front panel Memory button, the screen displays the quick setup interface.
2. Press the  arrow keys to display the editing interface.
3. Press the  keys to show a red cursor.
4. Press the  /  /  keys to move the red cursor between parameters.



Turn the knob to change the current cursor value, press the  arrow keys to move the cursor.

## System Settings




### Display Brightness

Press the System softkey and turn the knob to highlight the System main menu. Press the  keys to highlight the Brightness submenu. Press the  keys to adjust the brightness of the screen. The adjustment range is from 1 to 100.



### Language Setting

Press the System softkey and turn the knob to select the [Utility] menu. Press the  arrow keys to choose the language. Press the  arrow keys to select the desired language. Supported languages include Chinese and English.


### Buzzer

Press the System softkey and turn the knob to select the [Utility] menu. Press the  arrow keys to choose buzzer submenu. Press the  arrow keys to toggle the beeper on/off. When the buzzer is on, the status bar icon  lights up. When the system prompts, it beeps, such as when the output is cut due to overvoltage/overcurrent protection.

### Display

- Press the System softkey and turn the knob to select the [Utility] menu. Press the  arrow keys to choose Display submenu. Press the  arrow keys or turn the knob to set the display mode to Number or Curve.
- In system main interface, you can also press the OK key or press the knob to toggle between Number and Curve display mode.

### Number

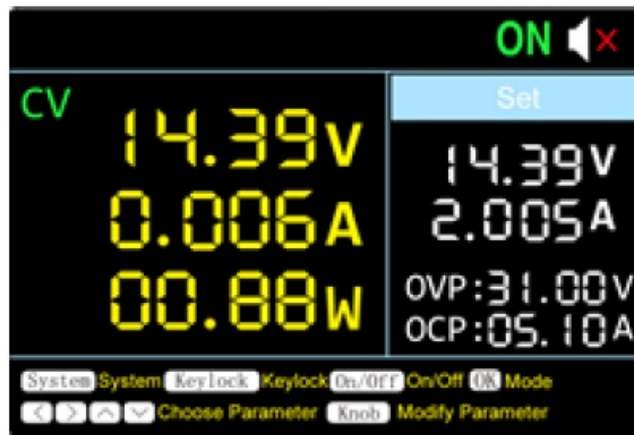

- Press the System softkey and turn the knob to select the [Utility] menu. Press the  $\vee$  arrow keys to choose Display submenu. Press the  $/$  arrow keys or turn the knob to set the display mode to Number.
- In system main interface, you can also press the OK key or press the knob to select the Number display mode. When the power supply is powered on, the default display mode is Number.

## Curve

- Press the System softkey and turn the knob to select the [Utility] menu. Press the  $\vee$  arrow keys to choose Display submenu. Press the  $/$  arrow keys or turn the knob to set the display mode to Curve.
- In system main interface, you can also press the OK key or press the knob to select the Curve display mode.

## Curve Type

- You can set the type of the displayed curve to voltage curve or current curve.

## Voltage Curve

Two methods to set the curve type to voltage curve.


### 1st Method

Press the System softkey and turn the knob to select the [Utility] menu. Press the  $\vee$  arrow keys to choose Display submenu. Press the  $/$  arrow keys or turn the knob to set the display mode to Curve. Press the  $\vee$  arrow keys to choose the CurveType submenu, press the  $/$  arrow keys or turn the knob to set the curve type to Volt.

### 2nd Method

- In system main interface, you can also press the OK key or press the knob to select the Curve display mode. Press the  $/$  arrow keys to select the Volt curve type.

**The display mode of Volt curve is as below**

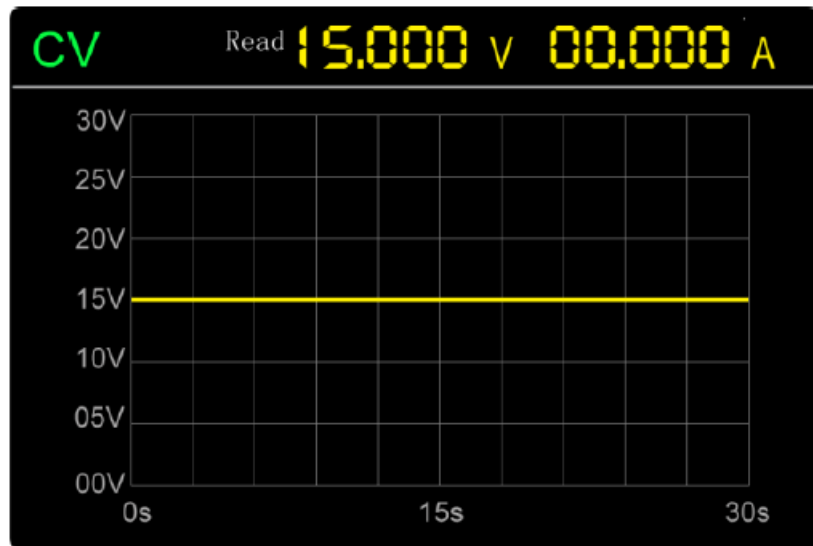

**Note:** In Volt curve display mode, you can still set the value of voltage or current. Press the / arrow keys or turn the knob to enter editing mode (edit voltage first). If the value is not changed, editing mode will be exited.

### Current Curve


Two methods to set the curve type to current curve.

**1st Method:** Press the System softkey and turn the knob to select the [Utility] menu. Press the arrow keys to choose Display submenu. Press the / arrow keys or turn the knob to set the display mode to Curve. Press the arrow keys to choose CurveType submenu, press the / arrow keys or turn the knob to set the curve type to Curr.

### 2nd Method


In system main interface, you can also press the OK key or press the knob to select the Curve display mode. Press the / arrow keys to select the Curr curve type.

**The display mode of Curr curve is as below:**

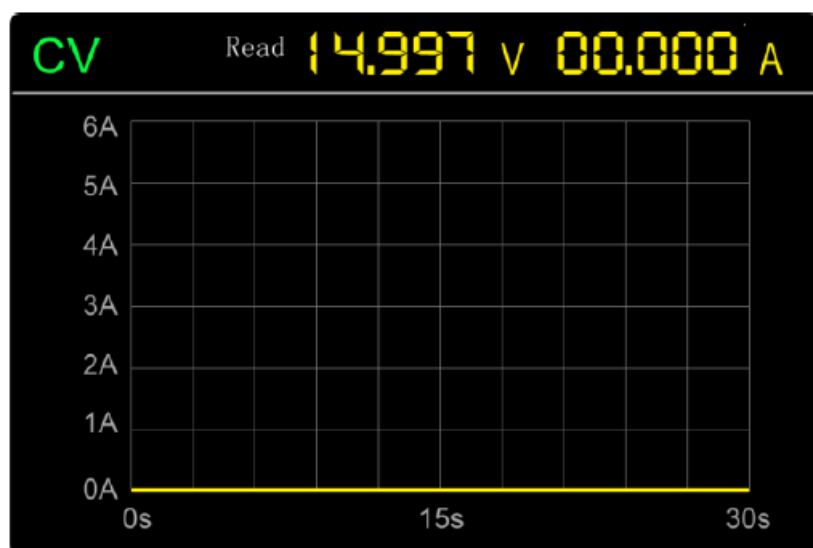

**Note:** In Curr curve display mode, you can still set the value of voltage or current. Press the / arrow keys or turn the knob to enter editing mode (edit current first). If the value is not changed, editing mode will be exited.

## Curve Time

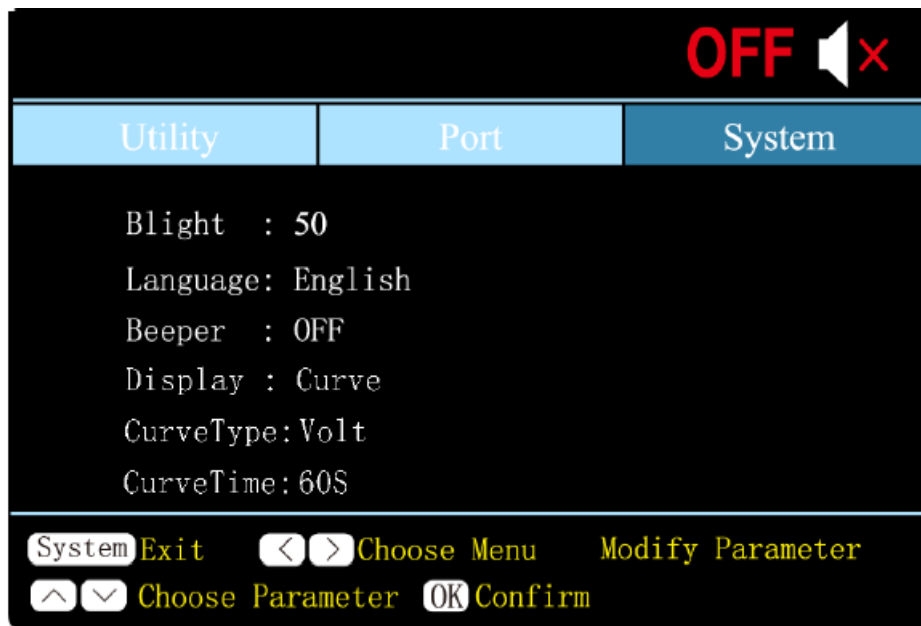

Press the System softkey and turn the knob to select the [Utility] menu. Press the v arrow keys to choose CurveTime submenu. Press the / arrow keys or turn the knob to set the display mode to Curve. Press the v arrow keys to choose CurveTime submenu, press the / arrow keys or turn the knob to set the curve time to 30S or 60S..

## Interface Setting

1. Press the v arrow keys to select the baud rate, and press the / arrow keys to set the baud rate of the RS232 serial interface. The optional values for the baud rate are: 2400, 4800, 9600, 19200, 38400, 57600, 115200, and the factory default setting is 115200. Make sure the instrument's baud rate setting matches the baud rate setting of the computer you are using.
2. Press the arrow keys to select the check digit and press the / arrow keys to toggle None, Odd, Even.
3. Press the arrow keys to select the stop bit, and press the / arrow keys to toggle 1 or 2.

**Note:** The data bits submenu cannot be set, and the data bits are fixed at 8 bits.

## System Information

### Review System Information

Press the System softkey and turn the knob to select the [SYSTEM] menu. The screen shows the model number, version number, serial number, and checksum of the machine.

### Restore Factory Settings

Press the System softkey and turn the knob to select the [SYSTEM] menu. Press arrow keys to select the Factory Reset submenu. Press OK to restore the factory default settings. See the factory setting detail table below

Output	Voltage	Current
	5 V	2 A
Limit	Voltage	Current
	31.00V	5.10A

System	Backlight		50%	
	Buzzer		On	
	Port	Port Setting	Baud Rate	115200
			Data Digit	8
			Parity Check	None
			Stop Digit	1
	Display		Number	

## Troubleshooting

### The instrument is powered on but no Display

- Check if the power is connected properly.
- Check if the fuse which is below the AC Power socket is used appropriately and in good condition (the cover can be pried open with a straight screwdriver).
- Restart the instrument after the steps above.
- If the problem still exists, please contact our for our service.

### The output is abnormal



- Check if the output voltage is set to 0V. If so, set it to other value.
- Check if the output current is set to 0A. If so, set it to other value.
- When in programmable output status, check if there is any voltage/current value is set to 0. If so, set it to other value.
- If the problem still exists, please contact our for our service.

## Appendix

### Appendix A: Accessories

The accessories subject to final delivery.

#### standard



**Power Cord**



**RS232 Cable**



**User Manual**



**Fuse**



**CD**

#### optional



**Banana plug to  
crocodile clip test  
leads**



**USB2.0 to  
RS232  
common port  
connector**

### Appendix B: General Care and Cleaning

#### General Care

- Do not store or leave the instrument where the liquid crystal display could be exposed to direct sunlight for long periods of time.

**Caution:** To avoid any damage to the instrument, do not exposed it to any sprays, liquids, or solvents.

#### Cleaning

Inspect the instrument as often as operating conditions require. To clean the instrument exterior, perform the following steps:

- Wipe the dust from the instrument surface with a soft cloth. Take care not to scratch the transparent LCD protection screen when cleaning.
- Disconnect power before cleaning your instrument. Clean the instrument with a damp soft cloth (not dripping with water). It is recommended to clean with soft detergent or fresh water. To avoid damage to the instrument, do not use any corrosive chemical cleaning agents.

**Warning:** Before re-applying power, ensure that the instrument is completely dry, avoiding any electric shock or electrical short circuit resulting from the moisture.

## Contact

### Test Equipment Depot

- 800.517.8431
- 5 Commonwealth Ave, Woburn, MA 01801
- [TestEquipmentDepot.com](http://TestEquipmentDepot.com)

### Address

- 5 Commonwealth Ave
- Woburn, MA 01801
- **Phone:** 781-665-1400
- **Toll Free:** 1-800-517-8431
- **Visit us at:** [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

Sep. 2020 edition V1.2.V1.2.0

Copyright © LILLIPUT Company. All rights reserved.

The LILLIPUT's products are under the protection of the patent rights, including ones which have already obtained the patent rights and those which are applying for. The information in this manual will replace all that in the materials published originally. The information in this manual was correct at the time of printing. However, LILLIPUT will continue to improve products and reserves the rights to change specification at any time without notice.

**owon**<sup>®</sup> is the registered trademark of the LILLIPUT Company.

## Documents / Resources



[Owon SP6103 P series Single Channel Output DC Power Supply](#) [pdf] User Manual  
SP6103 P series Single Channel Output DC Power Supply, SP6103, P series Single Channel Output DC Power Supply, Channel Output DC Power Supply, DC Power Supply, Power Supply