

Pathway PWWSI Vignette and NSB Wall Station Inserts Instructions

Home » Pathway » Pathway PWWSI Vignette and NSB Wall Station Inserts Instructions



Contents

- 1 Pathway PWWSI Vignette and NSB Wall Station
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 485 ARCHITECTURAL GATEWAYS**
- **5 485 WIRING**
- **6 CATEGORY 5 WIRING**
- 7 BELDEN 9773 (OR EQUIVALENT) WIRING
- 8 Documents / Resources

PATHWAY

Pathway PWWSI Vignette and NSB Wall Station Inserts




Product Information

The Vignette & NSB Wall Station Inserts are components used to assemble and wire wall stations for lighting control systems. The models PWWSI [VPOE / V485 / NPOE / N485] are available and come with assembly and wiring guides. These inserts are designed to work with Pathway ssACN protocol and are recommended to be used with secure access to the network.


Product Usage Instructions

Assembly Instructions


 Identify the Master Insert that has either an RJ45 connector or 2 six-pin connectors on the rear. Each Wall Station requires one Master Insert, and the remaining inserts should be Local type. Note: the Local Inserts have no connectors on the rear and have three tabs along one side.

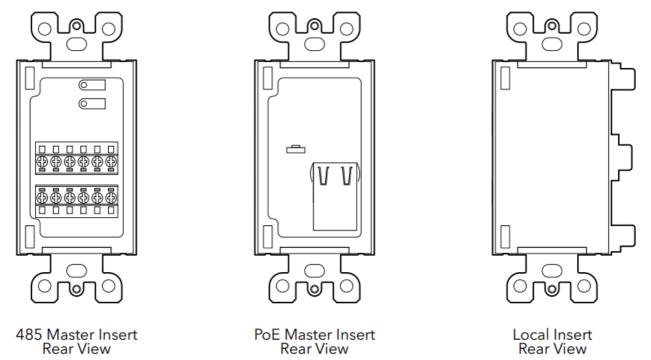

2. Hold the Master Insert in your left hand, and the 8-Pin connector in your right, as seen in the illustration below.

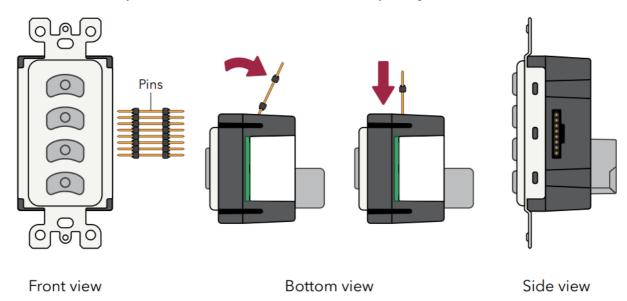


3. Hold the Master Insert in your left hand and the first Local Insert in your right. Keep the two inserts as straight and square to each other as possible. With the tabs on the Local Insert aligned with the tab slots on the Master Insert, push them directly toward each other

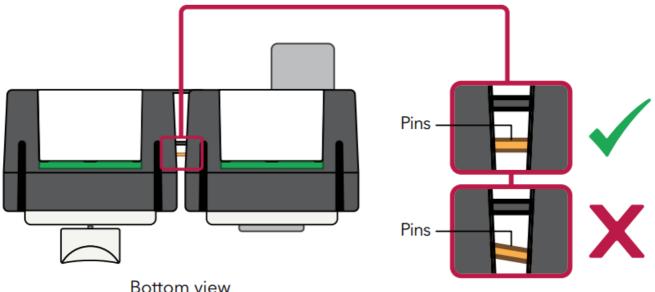


Bottom view

If misaligned, the pins will likely be resting at an angle, and will not make contact with the internal connector, as seen above. In this case, pull the two inserts apart (see step 4) and try again. If successful, repeat this process for each additional Local Insert. Once finished assembling the station, plug in cabling and test functionality before mounting the station into place (see step 5). Within the first 10 seconds of powering up, all LEDs on each insert of the station should flash. Power and check that each Local Insert passes this test before installing the station into the back box. If the LEDs on the Local Inserts do not flash, there is a problem with the connection between the Local and Master Insert. Proceed to step 4 and try again.

4. Verify proper contact by looking at the pins between the two inserts, from either above or below.

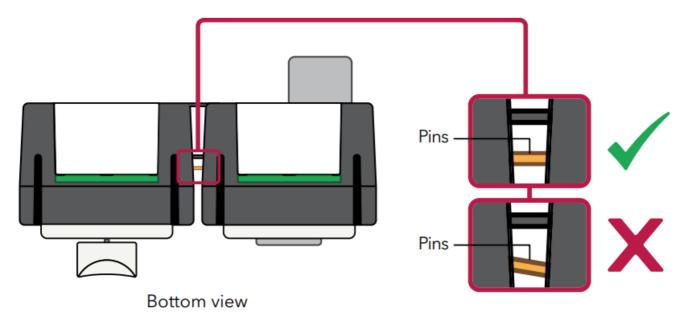


5. To separate two inserts, hold one in each hand, with your fingers on the rear of the inserts and your palms on the front. Gently pry them apart in the direction of the arrows shown in the illustration. The tabs will disengage, at which point you may pull them apart

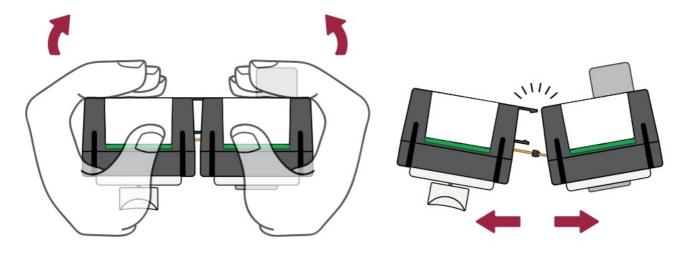

Bottom view

6. Install the wall stations in earthed metallic backboxes and cover them with Pathway Faceplates (part number: PWFP G[x]; PWFP G3 [3-Gang] shown in the illustration below).

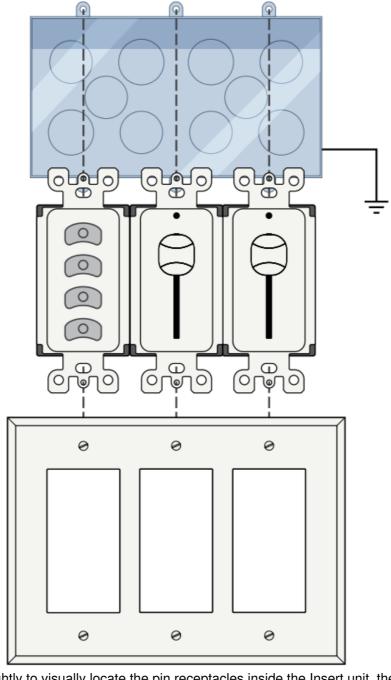

7. Angle the connector slightly to visually locate the pin receptacles inside the Insert unit, then push the pins into the connector.

Wiring Guide

The following section will detail the wiring and termination of cabling used for the 485 versions of PWWSI (N485 or V485) using legacy multi-drop wiring. Category cable may also be used. For PoE versions, each Master Insert needs only an Ethernet cable run back to a network switch. For PoE versions, each Master Insert needs only an Ethernet cable run back to a network switch. The Vignette & NSB Wall Station Inserts can be wired using two methods:

- 485 Architectural Gateways: Connect the Master Insert to a 485 Architectural Gateway using a CAT5 cable, and connect the gateway to the lighting control system.
- Category 5 Wiring: Connect the Master Insert to a Category 5 wiring using a CAT5 cable, and connect the wiring to the lighting control system.

Note: Belden 9773 (or equivalent) wiring can also be used for wiring

Recommended Practices

It is recommended to use the Pathway ssACN protocol and secure access to the network, both physically and technologically. Enabling an open protocol that does not use encryption or authentication could lead to eavesdropping or spoofing by malicious parties. If unsecured protocols are used, it is essential to acknowledge the risks and take necessary precautions.

485 ARCHITECTURAL GATEWAYS

The 485 Models require the use of a 485 Architectural Gateway. ordered separately (PWGW DIN). The Gateway is the central "hub" of the 485 Wall Station system; each Gateway has 4 Busses which can support up to 16 Stations each for a total of 64 Wall Stations in total. The Gateway then has a standard Ethernet port for connecting it to the main lighting network. Refer to the table below for compatible 485 Architectural Gateways for Vignette (V485) or NSB (N485) Wall Station systems

485 ARCHITECTURAL GATEWAYS				
Part Number	Model Description			
VIGNETTE SYSTEMS (PWWSI V485 MODELS)				
PWGW DIN V	Vignette Architectural Gateway; no additional inputs/outputs/buttons (4.5" length)			
PWGW DIN VD2	Vignette Architectural Gateway with 2 DMX Ports (6.25" length)			
PWGW DIN VD2C8	Vignette Architectural Gateway with 2 DMX Ports & 8 Contact Closures/Buttons (8" length)			
PWGW DIN VC16	Vignette Architectural Gateway with 16 Contact Closures/Buttons (8" length)			
PWGW DIN VE	Vignette Architectural Gateway with Secondary Ethernet Port (6.25" length)			
PWGW DIN VE2C8	Vignette Architectural Gateway with Secondary Ethernet Port & 8 Contact Closures/Buttons (8" length)			
NSB SYSTEMS (PWWSI N485 MODELS)				
PWGW DIN N	NSB Architectural Gateway; no additional contact closure inputs/buttons (4.5" length)			
PWGW DIN NC8	NSB Architectural Gateway with 8 Contact Closures/Buttons (6.25" length)			
PWGW DIN NC16	NSB Architectural Gateway with 16 Contact Closures/Buttons (8" length)			

485 WIRING


- All wiring must be in a continuous run and daisy-chained. No "tees" are permitted.
- Maximum cable length for Category 5 wiring is 500 feet (152 meters)
- Maximum cable length for Belden 9773 or equivalent wiring is 1000 feet (305 meters)
- The last wall station on the line must be terminated with two resistors with a value of 100Ω to 120Ω , between pins 1 & 2and 3 & 4 (see illustration below). Architectural Gateways ship with four terminated connectors, one

per bus.


Insulation Displacement Contact (IDC) Connector



Insulation Displacement Contact (IDC) Connector




Quick Resistor reference guide




CATEGORY 5 WIRING

USING COMPRESSION SCREW CONNECTOR (CSC)				
Connector Pin #	Purpose	Wire Color		
1	Rx+ (True)	Black (White Pair)		
2	Rx- (Complement)	White		
3	Tx- (Complement)	Green		
4	Tx+ (True)	Black (Green Pair)		
5	+24V	Red		
6	GND	Black (Red Pair)		
7	Not Connected	Shield Foil		
8	Not Connected	Drain Wire		

Insulation Displacement Contact (IDC) Connector

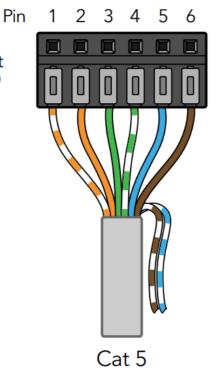

Pin 1 2 3 4 5 6

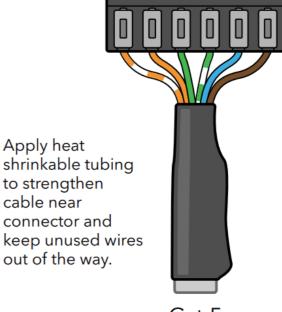


Cat 5


BELDEN 9773 (OR EQUIVALENT) WIRING

USING INSULATION DISPLACEMENT CONTACT (IDC) CONNECTOR			
Connector Pin #	Purpose	Wire Color	
1	Rx+ (True)	White / Orange	
2	Rx- (Complement)	Orange	
3	Tx- (Complement)	Green	
4	Tx+ (True)	White / Green	
5	+24V	Blue	
6	GND	Brown	
7	Not Connected	White / Blue	
8	Not Connected	White / Brown	
0	Not Connected	White / brown	

Compression Screw Connector (CSC)

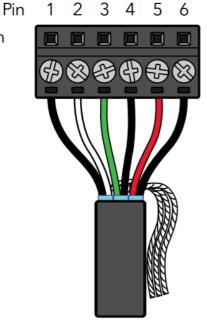


Belden 9773 (or equivalent)

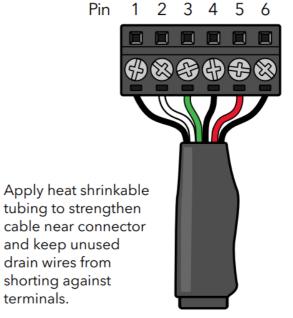

Belden 9773 (or equivalent)

CONNECTING WIRING


Once the connectors have been wired up, connect them to the 6-pin headers on the rear of the 485 Master Insert.

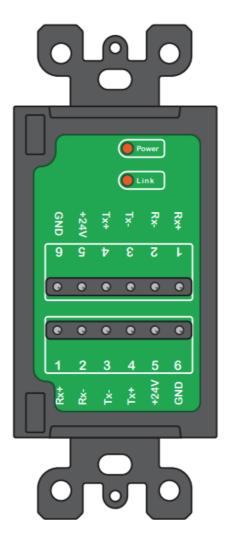

Note: that neither 6-pin header is designated as the "In" or "Thru"; either may be used for either purpose. Once wiring is connected, the "Power" LED should light, and the "Link" LED should flash at 1Hz.




If the power LED is not illuminated or the Link LED is not flashing, check the wiring on the connector(s). Also check the BUS LEDs on the 485 Architectural Gateway. These will blink when the Gateway is communicating with downstream Wall Stations If these LEDs are not blinking when connected to Wall Stations, check the wiring.

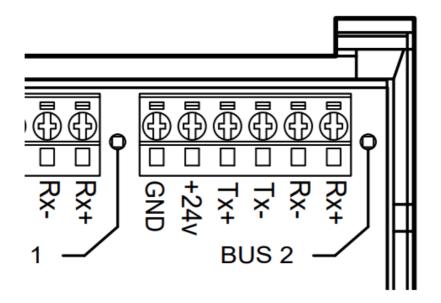


CONFIRMING WALL STATIONS IN PATHSCAPE


After completing wiring and installation, open Pathscape to confirm all Wall Stations are appearing and are communicating with the lighting network. All Wall Sations should appear in the Pathscape Device View as well as the Wall Station view.

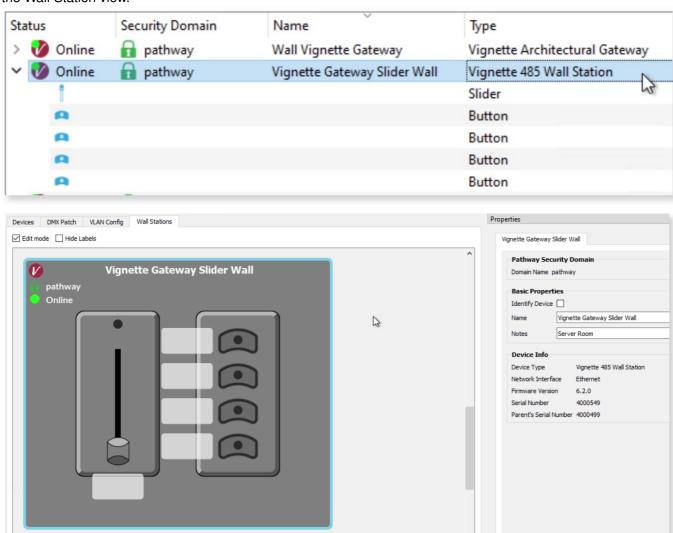

The stations' sliders and/or buttons should respond/animate when operating them from the Wall Station view (make sure you are not in Edit Mode to view the operation of the buttons and sliders).



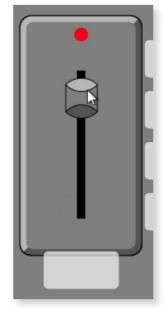

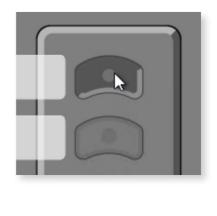

RECOMMENDED PRACTICES

- Minimize extra wire in the box. Tension on the electronics may result in damage to the station.
- Do not over-tighten compression screw terminal connectors. Tighten to 2.75 In-lbs (0.31 N-m)
- Wire pairs should remain twisted together for proper performance. Twists aid with noise rejection properties of differential signals.
- Vacuum out or otherwise clean the backbox prior to installing the station. Metallic or conductive debris may result in station damage.
- After connecting all wires to either type of connector (IDC or CSC), pull gently on each conductor to ensure the connection is secure. Wires should not easily pull out of the connectors.
- Install into an earthed metal backbox.

Documents / Resources



Pathway PWWSI Vignette and NSB Wall Station Inserts [pdf] Instructions
PWWSI Vignette and NSB Wall Station Inserts, PWWSI, Vignette and NSB Wall Station Inserts,
NSB Wall Station Inserts, Station Inserts

Manuals+.