

**Philio**  
Philio PAN07  
TWO SPDT Switch  
Module



# Philio PAN07 TWO SPDT Switch Module Owner's Manual

[Home](#) » [Philio](#) » Philio PAN07 TWO SPDT Switch Module Owner's Manual 

## Contents

- 1 [Philio PAN07 TWO SPDT Switch Module](#)
- 2 [Product Usage Instructions](#)
- 3 [PAN07 TWO SPDT Switch module with meter](#)
- 4 [Introduction](#)
- 5 [Safety Precautions and Installation](#)
- 6 [Specification](#)
- 7 [Troubleshooting](#)
- 8 [Installation](#)
- 9 [Adding to Z-Wave™ Network](#)
- 10 [Z-Wave's Configuration](#)
- 11 [Protection Command Classes](#)
- 12 [Firmware update over the air \(OTA\)](#)
- 13 [command Classes](#)
- 14 [Disposal](#)
- 15 [FCC Interference Statement](#)
- 16 [Documents / Resources](#)
  - 16.1 [References](#)
- 17 [Related Posts](#)

# Philio

**Philio PAN07 TWO SPDT Switch Module**



## Specifications

- Rated Voltage: 100-240VAC
- Maximum Load Range: 5A
- Operating Temperature: Minimum 40m indoor, 100m outdoor line of sight
- Humidity: N/A
- Storage Temperature: N/A
- Frequency Range:
  - 868.40MHz; 869.85MHz (EU)
  - 908.40MHz; 916.00MHz (USA/Canada)
  - 920.9MHz, 921.7MHz, 923.1MHz (TW/KR/Thai/SG)
- RF Power: +5dBm
- FCC ID: RHHPAN07
- Dimensions: 47.5 x 39 x16 mm

## Product Usage Instructions

### Safety Precautions and Installation

Avoid installing the unit in stormy or rainy weather. Ensure to isolate or switch off the power source before installing or maintenance. Make sure the power supply circuit is protected by a 16A circuit breaker or suitable equivalent fuse.

### Applications

The module can be used for various applications including light control. The smart relay calibration technology reduces inrush current and works well with incandescent, fluorescent, and LED lights.

### Product Features

The switch module can detect instant power wattage and overload current (6A with resistive load) of connected lights or appliances.

## FAQ

### Troubleshooting FAQ


Cause of Failure: The Switch not working and LED off Symptom: The Switch is not connected to the main power or the switch may be broken.

### Recommendation

- Check power connections.

- Do not open up the switch; send it for repair if needed.

## PAN07 TWO SPDT Switch module with meter

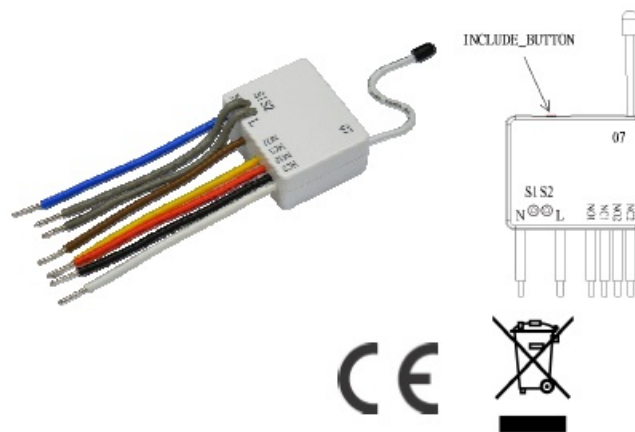

## Introduction

This in-wall dual relay switch module is a transceiver which is a Z-Wave Plus™ enabled device and is fully compatible with any Z-Wave™ enabled network. Mini size design let the module can easily hide itself into the wall box and that will be good for the house decoration.

There are many kind of application by using the module to switch AC power On and Off, one main application is the light control. The new smart relay calibration technology can reduce the inrush current caused by the load and let the module work perfectly with many kind of light like incandescent, fluorescent and LED light.

This in-wall switch module is able to detect Instant power wattage and overload current (6A with resistive load) of connected light or appliances. When detecting overload state, the Module will be disabled and its On/Off button will be lockout of which LED will flash quickly. However, disconnect and re-connecting the Module will reset its overload condition to normal status.

## Safety Precautions and Installation

- Avoid installing the unit in storming or raining weather.
- Be sure to isolate or switch off power source before installing or maintenance.
- Do ensure that the power supply circuit protected by a 16A circuit breaker or suitable equivalent fuse.

## IMPORTANT

- Installation must be performed by skilled technicians who are informed about the standards and technical requirements of the appliance and its proper installation.
- Check your local codes as they apply to your situation. If the house wiring is of aluminum, consult with an electrician about proper wiring methods.
- Before proceeding with the installation, TURN OFF THE POWER TO THE LIGHTING CIRCUIT AT THE CIRCUIT BREAKER OR FUSE BOX TO AVOID ELECTRICAL SHOCK.

## Specification

Rated Voltage	100-240VAC 50Hz/60Hz 5A
Maximum Load	5A (230Vac/120Vac) (Resistive load)
Range	Minimum 40m indoor 100m outdoor line of sight
Operating Temperature	0°C to 40°C
Humidity	Up to 85% max.
Storage Temperature	-20°C to 60°C
Frequency Range	868.40MHz; 869.85MHz (EU) 908.40MHz; 916.00MHz (USA/Canada) 920.9MHz, 921.7MHz, 923.1MHz (TW/KR/Thai/SG)
RF Power	+5dBm


OTA	support
FCC ID	RHHPAN07
Dimensions	47.5 x 39 x16 mm
Wire	0.75mm <sup>2</sup> , 18AWG

\*\* Specifications are subject to change and improvement without notice.

## Troubleshooting

Symptom	Cause of Failure	Recommendation
The Switch not working and LED off	1. The Switch is not connect to the Main power 2. The Switch break down	1. Check power connections 2. Don't open up the Switch and send it for repair.
The Switch LED illuminating, but cannot control the ON/OFF Switch of the attached load	Check if the load connect into the Switch has its own ON/OFF switch	Set the ON/OFF switch of the attached load to ON
The Switch LED illuminating, but the detector cannot control the Switch	1. Not carry out association 2. Same frequency interference	1. Carry out association 2. Wait for a while to re-try
LED keep flashing, but cannot control	Overload occurs	Remove the attached load or check max. load cannot exceed 6A (Resistive load)

## Installation

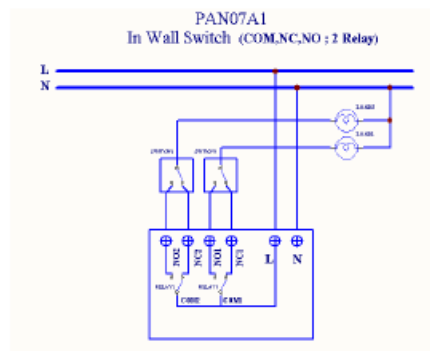

**Fig 1. PAN07 Assembling**

For Instruction to <http://www.philio-tech.com>



## **DANGER**

**Danger of electrocution!**

All works on the device may be performed only by a qualified and licensed electrician. Observe national regulations.

Any works introducing changes into the configuration must be always performed with disconnected voltage.

## **Choosing a Suitable Location**

1. Do not locate the Module facing direct sunlight, humid or dusty place.
2. The suitable ambient temperature for the Module is 0°C~40°C.
3. Do not locate the Module where exists combustible substances or any source of heat, e.g. fires, radiators, boiler etc.
4. After putting it into use, the body of Module will become a little bit hot of which phenomenon is normal.

## **Adding to Z-Wave™ Network**

In the side of casing, there is an on/off button with LED indicator below which is used to toggle switch on and off or carry out inclusion, exclusion, reset or association. When first power is applied, its LED flashes on and off alternately and repeatedly at 0.5 second intervals. It implies that it has not been assigned a node ID and start auto inclusion.

### **Auto Inclusion**

The function of auto inclusion will be executed as long as the in wall switch does not have Node ID and just connect the switch to main power.

Note: Auto inclusion timeout is 2 minute during which the node information of explorer frame will be emitted once every several seconds. Unlike “inclusion” function as shown in the table below, the execution of auto inclusion is free from pressing the On/Off button on the Switch.

The table below lists an operation summary of basic Z-Wave functions. Please refer to the instructions for your Z-Wave™ Certificated Primary Controller to access the Setup function, and to include/exclude/reset/associate

Function	Description	Annotation
No node ID	The Z-Wave Controller does not allocate a node ID to the Switch.	LED 2-second on, 2-second off
Add (Inclusion)	1. Put your Z-Wave controller into inclusion mode by following the instructions provided by the controller manufacturer.	one press one flash LED  x To support handling of the device when already installed the external switch can be used for inclusion or exclusion for 3 minutes after power up.
	2. Pressing INCLUDE_BUTTON three times within 2 seconds will enter inclusion mode.	
Remove (Exclusion)	1. Put your Z-Wave controller into exclusion mode by following the instructions provided by the controller manufacturer.	one press one flash LED  x To support handling of the device when already installed the external switch can be used for inclusion or exclusion for 3 minutes after power up.
	2. Pressing INCLUDE_BUTTON three times within 2 seconds will enter exclusion mode.	
	3. Node ID has been excluded.	LED 0.5s On, 0.5s Off (Enter auto inclusion)

Reset	1. Pressing INCLUDE_BUTTON three times within 2 seconds will enter inclusion mode.	Use this procedure only in the event that the primary controller is lost or otherwise inoperable.
	2. Within 1 second, press On/Off button again for 5 seconds.	
	3. IDs are excluded.	LED 0.5s On, 0.5s Off (Enter auto inclusion)
Association	1. The PAN07 is an always listening Z-Wave device, so associations be added or removed by a controller at any time.  Or If your controller requires to have the PAN07 send a 'node information frame' or NIF for associations, pressing the On/Off button three times within 2 seconds will cause the PAN07 to send its NIF.	one press one flash LED
	2. There are 3 groups for the switch	
<ul style="list-style-type: none"> <li>• Adding a node ID allocated by Z-Wave Controller means inclusion. Removing a node ID allocated by Z-Wave Controller means exclusion.</li> <li>• Failed or success in including/excluding the node ID can be viewed from the Z-Wave Controller.</li> <li>• Sometimes people are not easy to execute exclusion or inclusion especially when PAN07 already installed in a wall box. To solve this issue, PAN07 support a special feature that can use S1 or S2 to execute exclusion, inclusion, Reset or Association” at the first 3 minutes when first time connect to main power.</li> </ul>		


### LED Indication

To distinguish what mode the switch is in, view from the LED for identification.

State Type	LED Indication
Normal	Whatever we switch On and off of the PAN07 by S1 S2 or On/Off button or RF command, the LED will lights up 1 second and then off.
No node ID	Under normal operation, when the Switch has not been allocated a node ID, the LED flashes on and off alternately at 2-second intervals. By pressing S1 S2 or On/Off button, it will stop flashing temporarily.
Learning	When PAN07 is in learning mode, LED flashes on and off alternately and repeatedly at 0.5 second intervals.
Overload	When overload state occurs, the Switch is disabled of which LED flashes on and off alternately at 0.2 second intervals.
	Overload state can be cleared by disconnect and reconnect theSwitch to the main power

## Installation

1.

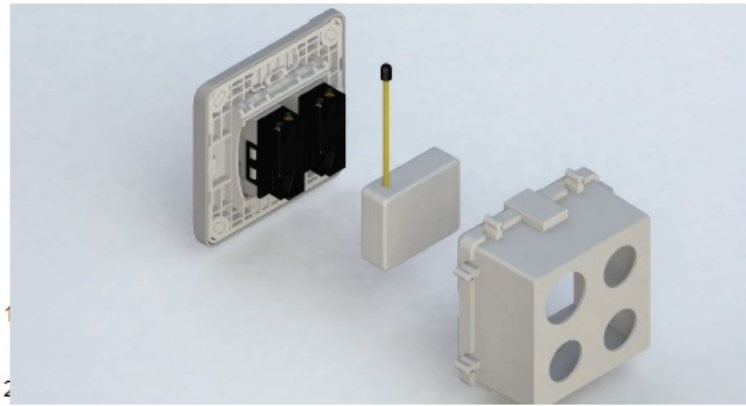

Put in wall switch into a wall box and connect the AC power wire L, N to PAN07 connector L, N.

2. Connect the wall switch to the PAN07 as Fig1.
3. To manually turn ON the Switch, press and release the On/Off button. The LED will light ON for 1 second, and the load plugged into the Switch will also turn ON.
4. To manually turn OFF the Switch, simply press and release the On/Off button. The LED will light ON for 1 second and the load plugged into the Switch will turn OFF.

## Programming

### 1. Basic Command Class / Binary Switch Command Class

The Switch will respond to BASIC and BINARY SWITCH commands that are part of the Z-Wave system.

- 1- 1 BASIC\_GET / BINARY\_SWITCH\_GET
- Since the switch have two relay, the Switch will report its On/Off state to the Controller by setting Configuration parameter 3.
- Configuration parameter 3=1 (default)
- Report ON when either relay 1 ON or relay 2 ON
- Report OFF when both relay 1 and relay 2 OFF
- Configuration parameter 3=2 Report ON when relay 1 ON
- Report OFF when relay 1 OFF
- Configuration parameter 3=3 Report ON when relay 2 ON
- Report OFF when relay 2 OFF
- Basic Get Command: [Command Class Basic, Basic Get]

### Basic Report Command

- Report OFF: [Command Class Basic, Basic Report, Value = 0(0x00)]
- Report ON: [Command Class Basic, Basic Report, Value = 255(0xFF)]
- Binary Switch Get Command: [Command Class Switch Binary, Switch Binary Get]

### Binary Switch Report Command



- Report OFF:[Command Class Switch Binary, Switch Binary Report, Value =0(0x00)]
- Report ON:[Command Class Switch Binary, Switch Binary Report, Value = 255(0xFF)]
- Note: If the BASIC\_GET/BINARY\_SWITCH\_GET command follow the
- switch On/Off command, it should add 0.5s time delay before the Get command.

## 1-2 BASIC\_SET / SWITCH\_BINARY\_SET

- Since the switch has two relay, the load attached to the Switch will turn on or off upon receipt of the following commands from a Z-Wave Controller by setting Configuration parameter 3.
- Configuration parameter 3=1(default) switch ON and OFF both relay 1 and relay 2
- Configuration parameter 3=2 switch ON and OFF of relay 1
- Configuration parameter 3=3 switch ON and OFF of relay 2

**[Command Class Basic, Basic Set, Value = 1~99, 255(0xFF)]** : the load attached to the Switch turns on.

**[Command Class Basic, Basic Set, Value = 0(0x00)]** : the load attached to the Switch turns off.

**[Command Class Switch Binary, Switch Binary Set, Value = 1~99, 255(0xFF)]** : the load attached to the Switch turns on.

**[Command Class Switch Binary, Switch Binary Set, Value = 0(0x00)]** : the  
load attached to the Switch turns off.

### 1. Z-Wave's Groups (Association Command Class Version 2)

- The Switch can be set to send reports to control associated Z-Wave devices. It supports 3 association groups which every group has one node support. Group1~Group3 support SWITCH\_BINARY\_REPORT,
- METER\_REPORT\_COMMAND\_V3
- For group 1, the Switch will report (1) ON/OFF status of Relay1 and Relay2 (2) Instant Power Consumption (Watt) of Relay1 and Relay2 (3) Accumulated Power Consumption (KWh) of Relay1 and Relay2 to group1 node.
- For group 2, the Switch will report (1) ON/OFF status of Relay1 (2) Instant Power Consumption (Watt) of Relay1 (3) Accumulated Power Consumption (KWh) of Relay1 to group2 node.
- For group 3, the Switch will report (1) ON/OFF status of Relay2 (2) Instant Power Consumption (Watt) of Relay2 (3) Accumulated Power Consumption (KWh) of Relay2 to group3 node.

### 2. 1 Auto report to Grouping 1 ~3(Maximum Node 1)

#### On/Off Event Report

When "on" or "off" state has been changed, it will send Binary Switch Report to the nodes of Group1~3.

#### Binary Switch Report

ON:[Command Class Switch Binary, Switch Binary Report, Value =255(0xFF)] OFF:[Command Class Switch Binary, Switch Binary Report, Value =0(0x00)]

#### Instant Power Consumption vary over 5% report

When the power consumption of load vary over 5%, it will send Meter report to the nodes of Group

### **Meter Report Command**

[Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 1 Scale = 0x02 Size = 4 Meter Value(W) ]

### **Overload alarm report command**

When PAN07 detect the overload, it will send Alarm Report to the correspond Group

The content of Alarm Report

Alarm report command: [Command\_Class\_Alarm, Alarm\_Report, Alarm Type = 0x08, Alarm Level = 0xFF]

### **Response to Meter Get Command**

The Switch will report its (1) instant Power Consumption (Watt) or (2) accumulated power consumption(KWH) or (3) AC load Voltage (V) or (4) AC load current ( I ) (5) load power factor (PF) to Z-Wave Controller after receive the Meter Get Command from Z-Wave Controller.

### **Instant Power Consumption (Watt) of Switch**

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x02(W)]

### **Meter Report Command:**

[Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 1 Scale = 0x02 Size = 4 Meter Value(W) ]

### **Example:**

- Meter Value 1 = 0x00 (W)
- Meter Value 2 = 0x00 (W)
- Meter Value 3 = 0x03 (W)
- Meter Value 4 = 0xEA (W)
- $\text{Meter(W)} = \text{Meter Value 3} * 256 + \text{Meter Value 4} = 100.2\text{W}$

### **Accumulated Power Consumption (KW/h)**

When receiving Meter Get Command, it will report Meter Report

- Command to the node asked.

### **Meter Get Command:**

- [Command Class Meter, Meter Get, Scale = 0x00 KW/h)]

### **Meter Report Command:**

- [Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 2 Scale = 0x00 Size = 4 Meter Value (KWh)]

### **Example:**

- Scale = 0x00 (KWh)

- Precision = 2
- Size = 4 Bytes (KWh)
- Meter Value 1 = 0x00(KWh)
- Meter Value 2 = 0x01(KWh)
- Meter Value 3 = 0x38(KWh)
- Meter Value 4 = 0xA3(KWh)
- Accumulated power consumption (KWh) = (Meter Value 2\*65536) + (Meter Value 3\*256) + (Meter Value 4) = 800.35 (KWh)

### **Clearing accumulated power consumption**

- Whenever re-start counting the accumulated power consumption is needed, you can use Meter Reset Command to clear it.
- Meter Reset Command: [Command Class Meter, Meter Reset]

### **AC load Voltage (V)**

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x04(V)]

### **Meter Report Command:**

[Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 1 Scale = 0x04 Size = 2 Meter Value(V)]

### **Example:**

Scale = 0x04 (V)

- Precision = 1
- Size = 2 (2 Bytes of V)
- Meter Value 1 = 0x09(V)
- Meter Value 2 = 0x01(V)
- AC load Voltage = (Meter Value 1\*256) +(Meter Value 2)= 230.5 (V)

### **AC load current ( I )**

- When receiving Meter Get Command, it will report Meter Report Command to the node asked.
- Meter Get Command: [Command Class Meter, Meter Get, Scale =0x05(I)]

### **Meter Report Command**

- [Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 2 Scale = 0x05 Size = 2 Meter Value(I)]

### **Example**

- Scale = 0x05 (I)
- Precision = 2

- Size = 2 (2 Bytes of I)
- Meter Value 1 = 0x01(I)
- Meter Value 2 = 0x21(I)
- AC load current = (Meter Value 1\*256) +(Meter Value 2)= 2.89 (A)
- 2-2-6 load power factor (PF)
- When receiving Meter Get Command, it will report Meter Report Command to
- the node asked.
- Meter Get Command: [Command Class Meter, Meter Get, Scale =0x06(PF)]

### Meter Report Command

- [Command Class Meter Meter Report Rate Type = 0x01 Meter Type = 0x01 Precision = 2 Scale = 0x06 Size = 1 Bytes Meter Value(PF)]

### Example

- Scale = 0x06 (PF)
- Precision = 2
- Size = 1 (1 Byte of PF)
- Meter Value 1 = 0x63(PF) (It means that the load power factor is 0.99)

### Multi Channel Command Class Version 3

PAN07 also support Muti Channel command class (version 3), which include BINARY\_SWITCH\_GET, BINARY\_SWITCH\_SET, BASIC\_GET, BASIC\_SET, METER\_SUPPORTED\_GET, METER\_RESET, METER\_GET. You may control or get report from 3 endpoints of PAN07.

### BINARY\_SWITCH\_GET

- You may get the ON/OFF state from every endpoint, when endpoint set to 1,
- PAN07 will reply state of Relay1.
- If endpoint set to 2 and PAN07 will reply state of Relay2.
- If endpoint set to 3 and PAN07 will reply ON(0xFF) either Relay 1 or Relay2 is ON, report OFF(0x00) when both Relay 1 and Relay2 OFF.
- Below is an example show a source endpoint 5 send a get command to PAN07 endpoint 1

COMMAND_CLASS_MULTI_CHANNEL	this is the endpoint of command inquirer here we assume endpoint is 5 if the inquirer doesn't support multi Channel this value will be 0)  (Bit Address =0 Destination End Point range from 1~3)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x05	
(Bit Address+Destination End Point = 0x01)	

Command Class = 0x25	(Command_Class_Switch_Binary = 0x25) (Switch_Binary_Get = 0x02)
Command = 0x02	

Below is the example show PAN07 report to last command

COMMAND_CLASS_MULTI_CHANNEL	Since the endpoint is 1 so PAN07 will reply ON(0xFF) when Relay is ON, report OFF (0x00) when Relay 1 is OFF <ul style="list-style-type: none"> <li>• (Bit Address = 0 Destination End Point)</li> <li>• (Command_Class_Switch_Binary = 0x25)</li> <li>• (Switch_Binary_Reportet = 0x3)</li> <li>• (ON=0xFF OFF=0x00)</li> </ul>
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x01	
(Bit Address+Destination End Point = 0x05)	
Command Class = 0x25	
Command = 0x03	
Parameter 1 = 0xFF	

Note: If the Multi-Channel Encapsulated BASIC\_GET/SWITCH\_GET command follow a switch On/Off command, it should add 0.5s time delay before the Get command.

### **BINARY\_SWITCH\_SET**

By using BINARY\_SWITCH\_SET Command of Multi Channel Command Class Encapsulation Command, you can switch Relay1 ON/OFF by setting endpoint to 1 or switch Relay2 ON/OFF by setting endpoint to 2 or switch both Relay1 and Relay2 ON/OFF by setting endpoint to 3.

The example of the command show that switch off relay1 of PAN07

COMMAND_CLASS_MULTI_CHANNEL	(this is the endpoint of command inquirer here we assume endpoint is 1 if the inquirer doesn't support multi Channel this value will be 0) (Bit Address = 0 Destination End Point range 1~3) Command_Class_Switch_Binary = 0x25 (Switch_Binary_Set = 0x01) (ON=0xFF OFF=0x00)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x01	
(Bit Address+Destination End Point = 0x02)	
Command Class = 0x25	
Command = 0x01	
Parameter 1 = 0x00	

### **METER\_SUPPORTED\_GET**

This command is to ask the endpoint of PAN07 what kind of meter data can be reported

The example show how to get the meter report type

COMMAND_CLASS_MULTI_CHANNEL	
-----------------------------	--

MULTI_CHANNEL_CMD_ENCAP	(this is the endpoint of command inquirer here we assume endpoint is 1 if the inquirer doesn't support multi Channel this value will be 0)  (Bit Address =0 Destination End Point range1~3)  ( Command_Class_Meter_V3 = 0x32) (Meter_Supported_Get = 0x03)
Source End Point = 0x01	
(Bit Address+Destination End Point = 0x03)	
Command Class = 0x32	
Command =0x03	

Below is the example show PAN07 report to last command

COMMAND_CLASS_MULTI_CHANNEL	(Command_Class_Meter_V3 = 0x32) (Meter_Supported_Report = 0x04) (Meter Reset =1 Meter Type=0x01)  (Scale Supported = KWh+W+V+A+Power Factor = 0x75)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x03	
(Bit Address+Destination End Point = 0x01)	
Command Class = 0x32	
Command =0x04	
Parameter 1 = 0x81	
Parameter 2 = 0x75	

### METER\_RESET

This command is to reset the Accumulated Power Consumption (KWh) to 0  
The example show how to reset the KWh

COMMAND_CLASS_MULTI_CHANNEL	(this is the endpoint of command inquirer, here we assume endpoint is 3 if the inquirer doesn't support multi Channel  this value will be 0)  (Bit Address =0 Destination End Point range1~3)  ( Command_Class_Meter_V3 = 0x32) ( Meter_Reset = 0x05)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x03	
(Bit Address+Destination End Point = 0x01)	
Command Class = 0x32	
Command =0x05	

### METER\_GET

Using meter get command to get the KWH, W, V, I, PF from endpoint of PAN07

#### Get KWH from endpoint

Meter\_GET example:

COMMAND_CLASS_MULTI_CHANNEL	(this is the endpoint of command inquirer, here we assume endpoint is 5 if the
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x05	

	inquirer doesn't support multi Channel
	this value will be 0)
(Bit Address+Destination End Point = 0x03)	(Bit Address =0 Destination End Point range1~3)
Command Class = 0x32	( Command_Class_Meter_V3 = 0x32)
Command =0x01	(Meter_Get = 0x01)
Parameter 1 = 0x00	(Scale = KWH = 0x00)

#### Accumulated power consumption (KWH) Report example

COMMAND_CLASS_MULTI_CHANNEL	(Meter report = Endpoint3) (Bit Address =0 Destination End Point = command inquirer's Endpoint value) (Command_Class_Meter_V3 = 0x32) (Meter_Report = 0x02) (Scale Bit2 = 0 Rate Type = 0x01 Meter Type=0x01) (Precision = 2 Scale Bit1Bit0 = 0 Size= 4)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x03	
(Bit Address+Destination End Point = 0x05)	
Command Class = 0x32	
Command =0x02	
Parameter 1 = 0x21	
Parameter 2 = 0x44	

Parameter 3 = 0x00	Accumulated Power Consumption = 0x000005FD = 15.33 KWh
Parameter 4 = 0x00	
Parameter 5 = 0x05	
Parameter 6 = 0xFD	

#### Get Instant Power Consumption (Watt) from endpoint

#### METER\_GET example

COMMAND_CLASS_MULTI_CHANNEL	<p>(this is the endpoint of command inquirer, here we assume endpoint is 5 if the inquirer doesn't support multi Channel this value will be 0)</p> <p>(Bit Address =0 Destination End Point range 1~3)</p> <p>( Command_Class_Meter_V3 = 0x32) (Meter_Get = 0x01)</p> <p>(Scale = W = 0x02)</p>
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x05	
(Bit Address+Destination End Point = 0x03)	
Command Class = 0x32	
Command =0x01	
Parameter 1 = 0x10	

c	<p>(Meter report = Endpoint3)</p> <p>(Bit Address =0 Destination End Point = command inquirer's Endpoint value)</p> <p>(Command_Class_Meter_V3 = 0x32) (Meter_Report = 0x02)</p> <p>(Scale Bit2 = 0 Rate Type = 0x01)</p> <p>Meter Type=0x01)</p> <p>(Precision = 1 Scale Bit1Bit0 = 0x02 Size= 4)</p> <p>Instant Power Consumption = 0x000003EA00.2W</p>
Source End Point = 0x03	
(Bit Address+Destination End Point = 0x05)	
Command Class = 0x32	
Command =0x02	
Parameter 1 = 0x21	
Parameter 2 = 0x34	
Parameter 3 = 0x00	
Parameter 4 = 0x00	
Parameter 5 = 0x03	
Parameter 6 = 0xEA	

### Get load voltage V from endpoint

Meter\_GET example:

COMMAND_CLASS_MULTI_CHANNEL	(this is the endpoint of command inquirer, here we assume endpoint is 5 if the
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x05	



	inquirer doesn't support multi Channel this
	value will be 0)
(Bit Address+Destination End Point = 0x03)	(Bit Address =0 Destination End Point range1~3)
Command Class = 0x32	( Command_Class_Meter_V3 = 0x32)
Command =0x01	(Meter_Get = 0x01)
Parameter 1 = 0x20	(Scale = V = 0x04)

COMMAND_CLASS_MULTI_CHANNEL	(this is the endpoint of command inquirer, here we assume endpoint is 5 if the inquirer does not support multi Channel this value will be 0) (Bit Address =0 Destination End Point range1~3)
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x05	
(Bit Address+Destination End Point = 0x03)	

Command Class = 0x32	( Command_Class_Meter_V3 = 0x32) (Meter_Get = 0x01) (Scale = PF = 0x06)
Command =0x01	
Parameter 1 = 0x30	

### PAN07 power factor report example

COMMAND_CLASS_MULTI_CHANNEL	<ul style="list-style-type: none"> <li>• (Meter report = Endpoint3)</li> <li>• (Bit Address =0 Destination End Point = command inquirer's Endpoint value)</li> <li>• (Command_Class_Meter_V3 = 0x32) (Meter_Report = 0x02)</li> <li>• (Scale Bit2 = 1 Rate Type = 0x01)</li> <li>• Meter Type=0x01)</li> <li>• (Precision = 2 Scale Bit1Bit0 = 0x10 Size = 1)</li> <li>• Power Factor = 0x63 = 0.99</li> </ul>
MULTI_CHANNEL_CMD_ENCAP	
Source End Point = 0x03	
(Bit Address+Destination End Point = 0x05)	
Command Class = 0x32	
Command =0x02	
Parameter 1 = 0xA1	
Parameter 2 = 0x51	
Parameter 3 = 0x63	

### Z-Wave's Configuration

Configuration Parameter	Function	Size (Byte)	Value	Unit	Default	Description
-------------------------	----------	-------------	-------	------	---------	-------------

1	Watt Meter Report Period	2	0x00-0x7FFF	5s	720	0:Disable Report W 1~0x7FFF: 720*5s=3600s= 1 hour
2	KWH Meter Report Period	2	0x00-0x7FFF	10min	6	0:Disable Report KWH 1~0x7FFF: 6*10min= 1 hour
3	Selected Relay	1	1-3		3	1 Relay1 2 Relay2 3 Relay1 & Relay2
4	Edge or Pulse mode or Edge-Toggle mode	1	1-3		1	1 Edge mode 2 Pulse mode 3 Edge-Toggle mode
5	Threshold of current for Load Caution	2	10-600	0.01A	600	600*0.01A = 6.0A
6	Threshold of KWH for Load Caution	2	1-10000	1KWh	10000	
7	Relay control mode	1	1-2		1	1 : Control relay refer to meter wattage 2 : Control relay directly
8	Restore Relay state mode	1	0-2		1	0 : All relay stay NC terminal 1 : Last relay switch state 2 : All relay stay NO terminal

9	Existence of Endpoint3	1	1-2		1	1 : Endpoint3 exist 2 : No Endpoint3
14	Watt differential report mode	1	0-4		1	0 : Disable 1 : 5% 2 : 10% 3 : 15%

						4 : 20%
31	Select Auto Report Type	1	1-2		1	1 : Basic type 2 : MultiChannel type

#### 1. Watt Meter Report Period:

If the setting is configured for 1 hour (set value =720), the PAN07 will report its instant power consumption every 1 hour to the node of correspond Group.

The maximum interval to report its instant power consumption is 45 hours ( $5s \times 32767 / 3600 = 45hr$ ).

#### 2. KWH Meter Report Period:

If the setting is configured for 1 hour (set value =6), the PAN07 will report its Accumulated Power Consumption (KWh) every 1 hour to the node of correspond Group. The maximum interval to report its Accumulated Power Consumption (KWh) is 227.55 days ( $10min \times 32767 / 1440 = 227.55$  days).

#### 3. Selected Relay

If Controller not using Multi\_Channel command class to access the relay of PAN07, you may configure the value of relay to react the Basic Command Class Binary Switch Command Class or Meter Command Class V3

#### Selecte Relay1 and Relay2 Default select is 3

Set command	Relay state	
Basic_Set or Binary_Switch_Set ON	Relay1 ON & Relay2 ON	
Basic_Set or Binary_Switch_Set OFF	Relay1 OFF & Relay2 OFF	

Get command	Relay state	Report to command sender
Basic_Get or Binary_Switch_Get	Relay1 ON or Relay2 ON	ON
Basic_Get or Binary_Switch_Get	Relay1 OFF & Relay2 OFF	OFF

Get command	parameter	Report to command inquirer
Meter_Get	KWh	Relay1 KWh1+Relay2 KWh2
Meter_Get	Watt	Relay1 W1+Relay2 W2
Meter_Get	Voltage	Relay1 and Relay2 are the same voltage
Meter_Get	Current	Relay1 I1+Relay2 I2
Meter_Get	Power factor PF	Only Relay1

- **Selecte Relay 1**

Only relay1 can be controlled and report.

- **Selecte Relay 2**

Only relay2 can be controlled and report.

- **Edge and Pulse mode**

Manual switch S1 and S2 can set to Edge mode or Pulse mode or Edge-Toggle mode, default value is Edge mode.

Edge mode: this mode is suitable for the bi-stable wall switch that has indicator point on the switch, and the same position correspond to same state of relay1 and relay2. if the PAN07 relay change the state because of receiving Z-Wave RF command, it may need two times of change (switch on to off or switch off to on) to let relay back to the correspond state.

**Pulse mode: this mode is suitable for the toggle type wall switch to swap the state of Relay1 or Relay2**

Edge-Toggle mode: this mode is suitable for the normal bi-stable switch, every time when change the state of the wall switch will also swap the state of Relay1 or Relay2.

### **Threshold of current for Load Caution**

This is a warning when the current of load over the preset threshold value, if the setting value is 600 (6A), when the load current of Relay1 over this value, PAN07 will send current meter report to the node of correspond Group, the Range of the setting value is from 10 to 600, and the default value is 600 (6A).

### Threshold of KWh for Load Caution

This is a warning when the KWh of load over the preset threshold value, If the setting value is 10000, when the Accumulated Power Consumption of Relay1 or Relay2 over this value, PAN07 will send KWh Meter Report command to the node of correspond Group, minimum value is 1KWh and default value is 10000 kWh.

### Relay control mode

1. Relay controlling is referred to the meter wattage: When PAN07 gets an instruction from RF command or the manual switch, to switch on or off, it will check the wattage of the load first. If the wattage value is greater than 2 watts, the switch state means ON; on the other hand, it means OFF. When the switch state is ON, only SWITCH OFF instruction will be accept; on the other hand, when the switch state is OFF, only SWITCH ON instruction will be accept.
2. Control relay directly: Whenever PAN07 get an SWITCH ON instruction, it will close the relay; on the other hand, it will open the relay.
3. Restore switch state mode

Whenever the AC power return from lost, PAN07 will restore the relay switch state which could be All relay stay NC terminal Last relay switch state All relay stay NO terminal. The default setting is Last relay switch state.

### Existence of Endpoint3

The endpoint3 of Multi-Channel Command Class is related to relay1 and relay2. It may be redundant for the need to control relay1 or relay2 individually. When the Existence of Endpoint3 is set as 0, the endpoint3 of Multi-Channel Command Class will be disabled. The default value is 1.

Watt **differential** report mode :

Disable : The function of Watt differential report will be disabled.

1. 3-10-1 Disable : The function of Watt differential report will be disabled.
2. 3-10-2 5% : When the differential value of Watt is over 5%, PAN07 will send a meter report to the associated group.
3. 3-10-3 10% : When the differential value of Watt is over 10%, PAN07 will send a meter report to the associated group.
4. 3-10-4 15% : When the differential value of Watt is over 15%, PAN07 will send a meter report to the associated group.
5. 3-10-5 20% : When the differential value of Watt is over 20%, PAN07 will send a meter report to the associated group.

### Select Auto Report type

- Basic type : PAN07 will send Switch\_Binary\_Report and Meter\_Report to the associated group node.
- Multi Channel type : PAN07 will send Switch\_Binary\_Report and Meter\_Report which are encapsulated by the Multi\_Channel\_Cmd\_Encap to the associated group node.

### Protection Command Classes

PAN07 supports Protection Command Class version 2, it can protect the switch against unintentionally control by e.g. a child. And it can also protect the switch from being turned off by setting it in "No RF Control" state.

After being set to “Protection by sequence” state, any intentional pressing of On/Off button or S2/S2 should be hold longer than 1 second, or the switch state will not change. However, the operation of learn function does not change, because learning will not be protected.

## **Firmware update over the air (OTA)**

PAN07 is based on 500 series SoC and supports Firmware Update Command Class, it can receives the updated firmware image sent by controller via the Z-wave RF media. It is a helpful and convenient way to improve some function if needed.

## **command Classes**

The Switch supports Command Classes including...

- COMMAND\_CLASS\_ZWAVEPLUS\_INFO
- COMMAND\_CLASS\_VERSION\_V2
- COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC\_V2
- COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY
- COMMAND\_CLASS\_ASSOCIATION\_V2
- COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO
- COMMAND\_CLASS\_POWERLEVEL
- COMMAND\_CLASS\_SWITCH\_BINARY
- COMMAND\_CLASS\_BASIC
- COMMAND\_CLASS\_SWITCH\_ALL
- COMMAND\_CLASS\_ALARM
- COMMAND\_CLASS\_SCENE\_ACTIVATION
- COMMAND\_CLASS\_SCENE\_ACTUATOR\_CONF
- COMMAND\_CLASS\_PROTECTION
- COMMAND\_CLASS\_FIRMWARE\_UPDATE\_MD\_V2
- COMMAND\_CLASS\_MULTI\_CHANNEL\_V3
- COMMAND\_CLASS\_METER\_V3
- COMMAND\_CLASS\_CONFIGURATION

## **Warning:**

1. Plug out to disconnect from power supply; Do not plug in line.
2. Do not exceed the max rating

## **Disposal**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## Philio Technology Corporation

8F., No.653-2, Zhongzheng Rd., Xinzhuang Dist., New Taipei City  
24257, Taiwan (R.O.C) [www.philio-tech.com](http://www.philio-tech.com)

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Documents / Resources



[Philio PAN07 TWO SPDT Switch Module](#) [pdf] Owner's Manual  
PAN07 TWO SPDT Switch Module, PAN07, TWO SPDT Switch Module, SPDT Switch Module, Switch Module, Module

## References

- [User Manual](#)

### [Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.