

POWERCOM 1KVA UPS Line Interactive



POWERCOM 1KVA UPS Line Interactive User Manual

[Home](#) » [POWERCOM](#) » POWERCOM 1KVA UPS Line Interactive User Manual 

Contents

- [1 POWERCOM 1KVA UPS Line Interactive](#)
- [2 Product Usage Instructions](#)
- [3 IMPORTANT SAFETY INSTRUCTION](#)
- [4 Introduction](#)
- [5 Installation](#)
- [6 Operation](#)
- [7 UPS Monitoring Connection](#)
- [8 Maintenance](#)
- [9 APP-A. Troubleshooting](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

POWERCOM

POWERCOM 1KVA UPS Line Interactive



Specifications

- Product: Line-Interactive UPS 1KVA-3KVA
- Compliance: CE regulation
- Directives: EMC Directive 2014/30/EU, LVD Directive 2014/35/EU
- Safety Standards: EN 62040 – 1
- EMC Standards: EN 62040 – 2

Product Usage Instructions

Important Safety Instructions

- **WARNING:** Save these instructions! This manual contains crucial information on UPS and battery usage during installation and maintenance. Always follow these instructions.
- **WARNING:** It is recommended to install the UPS in an ANSI/NFPA75 room with controlled temperature, humidity, and free from electrically conductive particles. Do not expose the UPS to direct sunlight or high heat sources, and do not block ventilation openings.
- **CAUTION:** Before performing maintenance, repairs, or shipping, ensure everything is turned off completely and disconnected.
- **CAUTION:** The UPS is not suitable for inductive loads like motors or household appliances such as hairdryers, speakers, and fluorescent lamps.
- **CAUTION:** All interconnections and power cables should only be made after the UPS is shut down and disconnected from the main power.
- **CAUTION:** Use only No.26 AWG or larger certified cables to connect the UPS and devices. Do not unplug the UPS from the main power during operation, or protective grounding may be compromised.

Installation

Follow these steps for proper installation of the UPS:

1. Select a suitable location as per the safety instructions provided.
2. Connect the UPS to a power outlet on a separate circuit.
3. Ensure proper ventilation around the UPS housing.
4. Connect devices to the UPS using certified cables after it is powered off.

Maintenance

To maintain the UPS:

- Regularly check for any signs of damage or wear.
- Clean the UPS housing and ventilation openings as needed.
- Ensure all connections are secure and cables are in good condition.

Replacement

If the UPS needs replacement:

- Contact a technician experienced with UPS systems for assistance.

- Follow proper disposal guidelines for electronic equipment.

FAQ

Q: What should I do if the UPS interferes with my radio or TV reception?

A: If interference occurs, try the following measures:

- Place the receiving antenna in a different location or orientation.
- Increase the distance between the receiver and the UPS.
- Connect the equipment to an outlet on a separate circuit.
- Contact a technician experienced with radio and TV systems for further assistance.

Q: Can I use the UPS with inductive loads?

A: No, the UPS is not suitable for inductive loads like motors or certain household appliances. Avoid connecting such devices to the UPS to prevent damage.

U P S

Line-Interactive
1KVA-3KVA

USER MANUAL

EMC Statement

These products are tested and thereby comply with the conditions of CE regulation, which established to offer sufficient protection against dangerous interference for installation. Installation and use of the equipment should comply with the instructions provided to avoid such interference due to the amount of radiofrequency energy that generates by the equipment; Despite this, we cannot assure that a certain amount of interference may not occur in some installations.

If by turning on and off, you conclude that the equipment's harmful interference influences your radio or television reception, use one of the following preventive measures:

- Place the receiving antenna in a separate location or orientation
- Ensure a greater distance between the receiver and the equipment
- Ensure that your Equipment connects to an outlet on a separate circuit
- Contact a technician experienced with radio and TV or the dealer for technical assistance

Declaration of Conformity Request

Units labelled with a CE mark comply with the following standard and directives:

- EMC Directive 2014/30/EU
- LVD Directive 2014/35/EU
- Safety: EN 62040 – 1
- EMC: EN 62040 – 2

The EC Declaration of Conformity is available upon request for production with a CE mark.

IMPORTANT SAFETY INSTRUCTION

WARNING: SAVE THESE INSTRUCTIONS!!

- **WARNING:** Manual contains important instructions of UPS and batteries during installation and maintenance. Follow this instruction at all time
- **WARNING:** It is recommended to install UPS in an ANSI/NFPA75 room in which temperature and humidity are controlled and free from electrically conductive particles. DO NOT expose UPS to direct sunlight or high heat source; DO NOT block off ventilation opening around the housing.
- **CAUTION:** Before conducting maintenance, repair, or shipment, please turn off everything completely and disconnect them.
- **CAUTION:** The UPS is NOT applicable for any inductive loads such as motors or domestic appliances like hairdryers, speakers, and fluorescent lamps.
- **CAUTION:** All interconnection and power cable should be connected ONLY AFTER the UPS shut down and disconnected from main.
- **CAUTION:** Only use No.26 AWG or larger certified cables to connect UPS and device.
- **CAUTION:** DO NOT unplug UPS from main power during operation or protective ground will fail. DO NOT disconnect battery under load or shut down may occur.
- **CAUTION:** Ensure the total leakage current of UPS and the connected equipment under 3.5mA.
- **CAUTION:** Ensure UPS connects to grounded main power with a fuse or circuit breaker protection.
- **CAUTION:** Dangerous amount of voltage might still exist even the UPS disconnects from the main power since residual voltage exists due to battery supply.
- **CAUTION:** Beware of all the details on the cautionary sticker located on UPS.
- **CAUTION** (No user-serviceable parts): Do not attempt to remove the unit's cover, no user-serviceable parts inside. Please refer all service to qualified service technicians.
- **CAUTION:** DO NOT dispose UPS and its batteries to fire, the battery may explode.
- **CAUTION:** DO NOT attempt to open or mutilate the battery.
- User's operations: Users only permits to:
 - Turning the UPS unit on and off.
 - Operating the user interface.
 - Connecting data interface cables.
 - Changing the batteries.
- **CAUTION:** Battery can cause shock and short circuit current. When servicing batteries:
 - Remove watches, rings, or other metal objects.
 - Use tools with insulated handles.
 - Wear rubber gloves and boots.
 - Please DO NOT place any tools or metal parts on top of batteries.
 - Disconnect charging source before connecting/disconnecting battery terminals.
 - Servicing of batteries should be performed or supervised by personnel with necessary precautions and knowledge. Keep unauthorized personnel away from batteries.
- **DANGER:** Hazardous electric component inside this unit (example: Heat-sinks) remain energized from the battery supply even when the main power is disconnected.
- **DANGER:** Battery circuit is not isolated from the AC input. Hazardous voltage may exist at battery terminals and ground—test for safety before any direct contact.
- **CAUTION:** Remove the battery's pole during service inside the battery cabinet or UPS.
- **CAUTION:** ONLY replace batteries with the same type and quantity.
- **WARNING** (Fuses): Ensure fuse replacement with the same type and rating ONLY.


Introduction

The information provided in this manual covers Line-Interactive 1-3KVA uninterruptible power system (UPS). This manual contains basic functions, operating procedures, and emergencies, also including information on how to ship, store, handle, and install the equipment. Only detailed requirements of the UPS units described herein. The installation must carry out according to this manual. The electrical installation must further comply with local legislation and regulations.

Installation


Rear panel view(For reference only)

1K

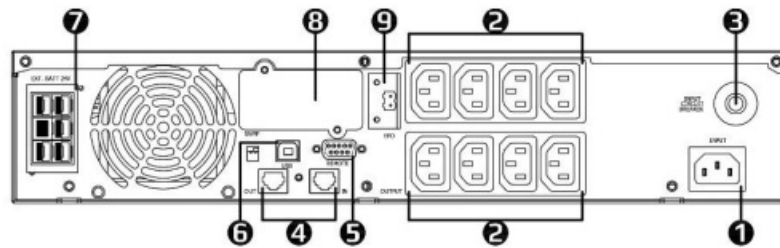


1.5KVA

IEC Type

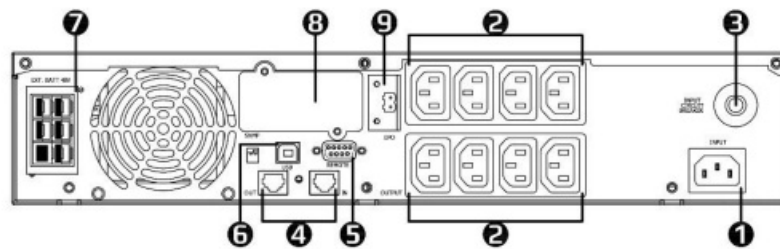


2KVA

IEC Type

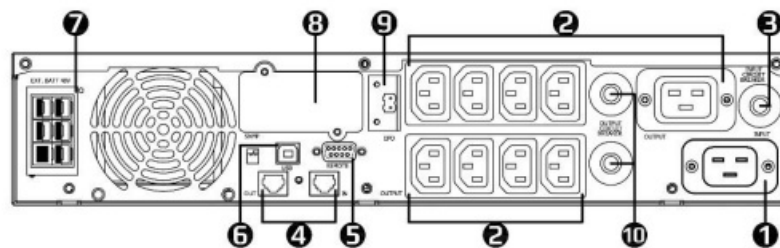

IEC Type

3KVA

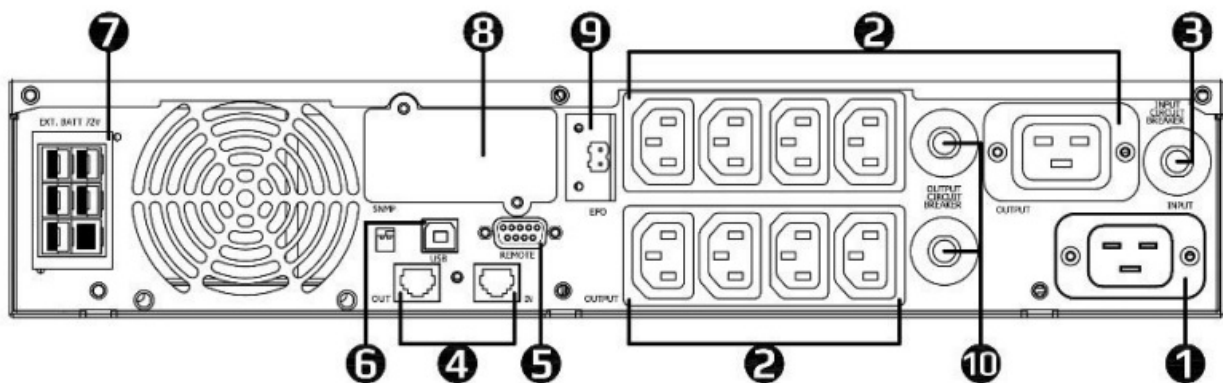

IEC Type

1. Input
2. Outlet
3. Input breaker
4. Network transient protector
5. RS232 port
6. USB
7. External battery port (optional)
8. Interface port (optional)
9. EPO (optional)
10. Outlet breaker

*Figures only display available function; functions are not on unit if not marked.

Connection to Main and Load

- Follow all installation and safety instructions very carefully; failure to do so may cause hazardous situations to personnel and equipment.
- Ensure the main power voltage matches with UPS. (110V/220V)
- For electrical installation, closely observe the nominal current rating of the source.
- Check the equipment's power requirement to prevent overloading situations.
- Do not connect devices that draw either massive power shortly or half-wave rectified current – such as hairdryer, vacuum cleaner, laser printer, and plotter.

Note: Although you may use the UPS immediately, maximum back up time will not be available yet. It is recommended to charge the batteries for a minimum of 8 hours before use

- Connect the input cable to the UPS and the other end to the mains.
The battery will automatically charge when connecting to the main power.
- Connect the loads to the UPS; Ensure receptacles are connected firmly.
- Optional) To protect your telecom/internet system, use RJ45/RJ11 cable to install the input/output cable with matching in/out jack.

Operation

Necessary information for the operation of the unit is covered in this chapter. Normally UPS runs automatically, but on a few occasions such as just after installation, all procedures are described herein.

General Description

As Line-Interactive UPS, it is capable of providing clean and stable power to your critical system. While the UPS regulates and filters power fluctuation, it also keeps the battery charged for any emergency.

- Automatic transformer regulates over and under-voltage power.
- During a power failure, the UPS immediately provides backup power from the battery to support your essential equipment.
- Power transference is typically achieved uninterrupted within 4 milliseconds.

UPS will operate in Line-Mode that supports power and charge battery while connected to power. During a power failure, the UPS will switch to Battery-Mode, in which power is maintained from the battery. In case of failure time exceed Battery-Mode duration, UPS will shut down until voltage return to prevent battery discharge.

Diagnostic Test

The diagnostic test automatically executes to check and report UPS status. While the advanced battery management system monitors the conditions of the batteries, it sends early warnings if a battery replacement is needed. Diagnostic tests can also be performed by manual control.



















System Configuration

The UPS device and battery make up the system. Depending on site and load requirements, certain additional options are available as tailored solutions. Please consider the following when planning your UPS system:

- The total demand for the protected system shall dictate the output power rating (VA). When measuring demand, please allow a margin for future expansion and calculation error.
- Battery-mode duration needs dictate the battery size. If the load is less than the UPS nominal power rating, then the actual backup time is longer.
- The following options are available:
 - Connectivity options (relay card, SNMP/WEB card)

UPS Control

Control panel functions

Display	Function Description	Display	Function Description
LCD Display			
	<u>Battery Fault</u> Battery failure Check/replace your battery		<u>Battery Mode</u> UPS is operating with battery power
	<u>Line Mode</u> UPS is operating with main power		<u>Temperature</u> Display UPS current temperature (Celsius)
	<u>Green Function</u> UPS operating in Green mode		<u>UPS Fault</u> Internal fault occurred
	<u>Input</u> Indicating UPS input power for status display		<u>Silence</u> UPS Silent mode enabled
	<u>Output</u> Indicating UPS output power for status display		<u>Overloading</u> Output exceeds UPS capacity
	<u>AVR Buck</u> Correcting over-voltage condition Output power remain normal		<u>AVR Boost</u> Correcting under-voltage condition Output power remain normal
	<u>Battery power indication</u> 0-20/21-40/41-60/ 61-80/81-100% remaining		<u>UPS Load Level</u> UPS on 0-20/21-40/41-60/ 61-80/81-100% Load level
	<u>Standby Mode</u> UPS standby due to battery depletion or software setting Will return operational after power restore		<u>Battery</u> Indicating UPS battery for status display
Button Display			
	<u>ON/OFF/TEST/Silence button</u> The master button for UPS control, refer to button peration		<u>Select Button</u> Use for UPS selection, refer to Button Operation

Button operation

Cold Start function

When the main power is disconnected from UPS, it is capable of starting with battery power for users' needs. Simply start the UPS as the instruction below.

- "On/Off/Test/Silence" button
 - Press and hold the button for 1 second to turn on UPS
 - Press and hold the button for 3 seconds to turn off UPS during operation
 - Press once to start self-test function during Line-Mode
 - Press once to enable/disable alarm buzzer during Battery-Mode
 - "Select" button
- Press this button to view UPS information on LCD Display.

Turn on the UPS

- Press the "ON" button until a single "beep" alarm disappeared or the LCD display turns on.
- Switch on the Load.

Shut Down the UPS

- Switch off the Load.
- Press the "OFF" button for 3 seconds during Line/Battery-mode.
- If applicable) To avoid electrical hazards, please turn off the internal/external input breaker. Then, turn off any external battery breaker and wait till all fans completely shut down.

Green mode

The Green mode feature will enable UPS no-Load or light-load shutdown to maintain power consumption and battery life. During battery mode, the UPS will shut down approximately 4 min with no load/light load operating. Green mode can also be enabled or disabled via monitoring software.

Green mode enable/disable: Press the "on" button twice. The UPS will switch mode and retain setting until the next manual adjustment

Note: UPS delivers with Green Mode disabled.

UPS Configuration

UPS Manual test

Manual tests for UPS or battery can be conducted from the UPS configuration as well and are functional even when the UPS is not charging the battery.

Simple test: It's recommended to conduct a simple simulation test when







1. The first use of UPS.
2. Adding new loads.
3. 6 months' regular check-up.

Switch on the UPS and wait for the power indicator to light up, then unplug UPS to simulate the main power failure.

Manual Battery Test: Press the "test" button once. UPS will automatically conduct a self-test. Please note that the UPS will briefly switch to battery mode.

UPS Status Display

UPS status shows in normal display mode. From here, you can go to the UPS meter display by pressing the button. Various measurements are available through UPS meters display; Pressing the button will scroll through the following meters.

LCD message		Description
 "xxx, V		Shows Output voltage
 xx,x Hz		Shows Output Frequency
 xxx, V		Shows Input AC voltage
 xx,x Hz		Shows Input Frequency
 LOAD%= xx%		Shows Load % of max load
 XX C		Shows approximate ambient temperature

UPS Configuration

UPS Manual test

Manual tests for UPS or battery can be conducted from the UPS configuration as well and are functional even when the UPS is not charging the battery.

Simple test: It's recommended to conduct a simple simulation test when

1. The first use of UPS.
2. Adding new loads.
3. 6 months' regular check-up.

Switch on the UPS and wait for the power indicator to light up, then unplug UPS to simulate the main power failure.

Manual Battery Test: Press the "test" button once. UPS will automatically conduct a self-test. Please note that the UPS will briefly switch to battery mode.

UPS Monitoring Connection

UPSMON Pro software (Or other power monitoring software) can further utilize the UPS with warning reminders, monitoring, control shut down, and setting adjustments.

Using monitoring features requires connecting the UPS to a computer or the internet

Connect UPS to Computer with USB (Optional)/RS232 port.

- Locate the USB/RS232 port on UPS.
- Connect with factory-provided/approved communication cable
- Ensure your computer can install and support power management software.
- Note: Either USB Port or RS232 port, only one port will function at a time.

Connect UPS with interface Slot(Optional)

- SNMP Card allows UPS management and monitoring over a network or internet
- For more information, please contact for technical assistance.

UPS RS232 PORT

- The RS-232 interface uses a 9-pin female D-sub connector.
- The RS-232 port carries the data about utility, load, and UPS.
- The interface port pins and their functions are in the following table



Pin #	Signal	Direction	Function
2	TxD	Output	TxD Output
3	RxD	Input	RxD / Inverter Off Input
5	Common		Common
6		Output	AC Fail Output
8		Output	Low Battery Output
9		Output	12VDC Power

Caution! Max rated values 12VDC

Maintenance

Please read the following instruction to ensure your safety and maintain a longer product lifetime. This section contains detailed information about moving, maintaining, and placing the UPS. With a minimal amount of maintenance, you can expect the UPS to function smoothly.

Transportation

Please handle UPS with extreme caution since a high amount of energy is within the batteries. Keep the unit in position as marked on the packaging and never drop the unit.

Storage

Please read the following instructions if the UPS is not installed immediately:

- Store the equipment as is in its original packing and shipping carton.
- Do not store in temperatures outside the range of +15°C to +25°C.
- Protect the equipment from wet or damp areas and moist air.
- To maintain the vitality of the batteries, please recharges the UPS at least 8 hours every six months.

Operation

CAUTION: Ensure that all environmental concerns and requirements are met according to safety instruction; otherwise, the safety of installation personnel cannot be guaranteed since the unit may malfunction.

- Please ensure no flammable substances such as gases or fumes.
- Avoid extreme temperature and humidity. Protect the equipment from moisture.
- Ensure there is enough space (300mm or above recommended) at the rear and side of UPS for proper ventilation.
- Ensure that the front of the UPS remains clear for user operation.
- Only authorized agents or technicians may service the unit.
- Do not open the UPS cabinet. Components may contain hazardous or fatal voltage.
- Output receptacles may carry live voltage without connecting to the main power.
- Pay special attention to UPS air inlet; do not let it covered by dust.

Battery

Maintenance

The reliability of the battery is heavily related to the environmental issue.

At the temperature of 25 degrees Celsius, A regular 6-12 months' checkup is advised.

Replacement

Caution: Read safety instruction before proceeding.


In all the following steps and factory stander:

The black battery cable is the negative (-) pole

The red battery cable is positive (+) pole

Caution: Avoid battery positive port directly contacts with metal. (including UPS cover)

1-3KVA LCD

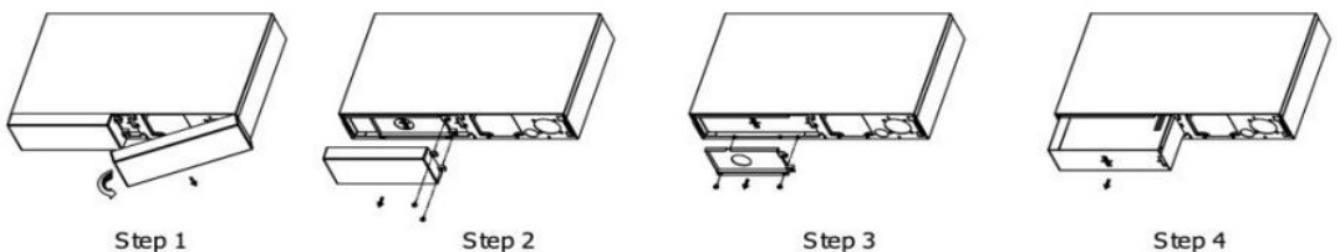

Caution: Do not remove the battery during battery-mode.

1. Ensure the UPS is turned off and disconnected from the main power.
2. From the middle of the front panel, hold the non-display side corner and pull out lightly. Then, push sideways to unlock the other tenon.
3. Remove the battery cover, disconnect battery cable, then remove the battery.
4. Replace with the same type and quantity of battery.
5. Reinstall battery into the UPS.
6. Reinstall the battery cover and front panel.

APP-A. Troubleshooting

Troubleshooting procedures give simple instructions in determining UPS malfunctions. Start the troubleshooting procedure if you witness any alarm indication.

- **Alarm**

The UPS has an audible alarm. When different situations occurred, UPS will alert users with display and buzzer.

- **Battery-mode (Slow alarm)**

During battery mode, the alarm will beep every 4 seconds. The alarm will stop when UPS return to Line-mode.

- **Battery-Low (Rapid alarm)**

During Battery-low (less than 30%), the UPS will beep every 1 second. The alarm will stop when UPS shutdown or returns to Line-mode.

- **Overload/Fault (Constant alarm)**

When UPS operating with load exceeded its maximum capacity, UPS will emit a continuous alarm to warn an overload condition. UPS will automatically turn off to protect your essential load. Please consider remove or shutdown less-essential loads.

Also, when the unit encounters other problems (battery failure, charger failure), the unit emits the alarm. Please refer to the function description and troubleshooting chart to identify the precise cause.

- **Silencing Alarm**

Here is the instruction to mute the active alarm or future alarm notification:

Note: During battery-mode, if the battery is low on power, the alarm will sound regardless of silent-mode enable/disable.

Silent alarm Enable/Disable: Press the “on” button during the Battery-Mode alarm.

If troubleshooting does not include or resolve your situation, feel free to contact for technical assistance.

PROBLEM	POSSIBLE CAUSE	Solutions
UPS can't operate switching on. No lights on, no warning sound	Power source mistake or low battery power	Check the main power connection If operating with battery power, ensure enough charging time for UPS
	Time of pressing the button is too short	Press and hold the "ON" button for a longer duration
	Output short circuit or overload on UPS	<ul style="list-style-type: none"> • Turn off UPS and take off all load. Check for any potential internal short circuit • Then attempt to turn on UPS again
	Hardware failure	Contact for technical assistance
	Battery out of order	Replace battery or contact for technical assistance
UPS always remain on battery-mode regardless of main power connection	No power source input	Check the main power source and cable
	Fuse melted or Circuit breaker tripped	Reset the breaker or replace the fuse (spare fuse is in UPS inlet.) then restart the UPS
	The main voltage is out of the UPS input range	UPS function normally, check your main power voltage
Overload/Fault indicator lit or constant buzzer beeping	UPS load exceed the capacity UPS overloading	Remove or shut down the less essential load
Battery mode duration below expectation	Batteries aren't fully charged Batteries are worn out or faulted	Ensure enough recharge time for UPS Run a self-test to check battery status Replace UPS battery if the problem remains
	The charger is out of order	Contact for technical assistance
	Green mode enabled No-load or light load shutdown engaged	Operation normal. Turn off green mode to disable such function
The battery fault indicator occurred	Battery not connected	Check the UPS batteries; make sure they are well connected
	Battery out of order or damaged	Replace battery

APP-B Technical Specifications

Model	1000A	1500A	2000A	3000A
	1000A LCD	1500A LCD	2000A LCD	3000A LCD

Configuration				
Capacity (VA)	1000 VA	1500 VA	2000 VA	3000 VA
Capacity (Watts)	900 W	1350 W	1800 W	2700 W
Form	Rack Tower Type			
Input				
Voltage	220 / 230 / 240 VAC			
Input Voltage Range	150 – 310 VAC			
Input Frequency Range	50 Hz / 60 Hz (Auto Sensing)			
Output				
Waveform	Pure Sine Wave			
Voltage	220 / 230 / 240 VAC			
Transfer Time	2-4 ms (Typical)			
Protection				
Full Protection	Overload, Surge, Short Circuit, EMI / RFI Filter			
Tele Communication	RJ11 / RJ45			
Battery				
Type	12V 9Ah	12V 7Ah	12V 9Ah	12V 9Ah
Quantity	2	4	4	6
Sealed, Maintenance Free	Yes			
Typical Recharge Time	3 hr to 90%			
Management & Communication				
Indicator	LCD Panel			
Communication Port	RS232 , USB B type, SNMP (Option)			
Physical				
Dimensions (WxDxH) (mm)	428 x 426 x 84	428 x 557 x 84		428 x 663 x 84
Weight (kgs)	16.7	24	27.5	36.8
Shipping Dimensions (mm)	577 x 590 x 221	577 x 720 x 211		577 x 826 x 211
Shipping Weight (kgs)	20.5	27.9	31.5	41.6
Alarm				
Overload / Fault	Continuous Beeping			
Battery Mode	Beep every 4 seconds			
Low Battery	Beep every 1 second			
Environment				

Operating Humidity	0-90 % RH at 0-40°C (Non-condensing)
Audible Noise	Less than 50 dB

- Specifications are subject to change without further notice.
- Specifications are for reference; actual information should be based on the real product.

© All rights reserved. All trademarks are property of their respective owners.

Documents / Resources

<div> <div> <div>UPS</div> <div>Line-Interactive</div> <div>1KVA-3KVA</div> </div> <div> <div>USER MANUAL</div> </div> </div>	<div> <div>POWERCOM 1KVA UPS Line Interactive [pdf] User Manual</div> <div>1KVA UPS Line Interactive, 1KVA, UPS Line Interactive, Line Interactive, Interactive</div> </div>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.