

POWERTECH 12V 110W Folding Solar Panel Charge Controller User Manual

Home » **POWERTECH** » **POWERTECH** 12V 110W Folding Solar Panel Charge Controller User Manual

POWERTECH



12V 110W Folding Solar Panel and Charge Controller ZM9175

User Manual

Contents [hide

- 1 USER MANUAL
- **2 PART LIST**
- **3 INSTALLATION GUIDE**
- **4 ABOUT THE REGULATOR**
- **5 Setting Operation**
- **6 Protection**
- 7 Troubleshooting
- 8 Technical Specifications Charge

Controller

- 9 Documents / Resources
- 10 Related Posts

USER MANUAL

Please ensure that you have read the product manual and instructions in full prior to use. Failure to do so may result in incorrect operation and therefore impact the product's performance.

PART LIST

- 1 x 110W Mono-Crystalline Solar Panel with 12V/10A Charge Regulator. (USB Version)
- 1 x 5m Extension Lead with Anderson Connectors 1 x Anderson to Alligator Clips Lead
- 1 x Anderson to Eye Terminals Lead
- 1 x Heavy Duty Bag

INSTALLATION GUIDE

Step 1:

Locate a clear sunlit area free from overhanging branches or heavy shade.

Step 2:

Unfold the solar panels, adjust the two supports to a suitable angle.

Step 3:

Always face the front side of solar panels towards the sun.

Wipe down the panels with a microfiber cloth to remove any dust or debris.

A Note:

To ensure maximum possible output we recommend that the solar panels are regularly re-aligned to follow the sun's movement.

Wipe the solar panel with a microfiber cloth for maximum efficiency.

Folding Solar Kit Specifications

Туре	Mono-Crystalline Solar Cells
Peak Power	110W(+5%) (SSW each)
Rated Voltage	12V
Voltage Peak Power	17.9V
Current @ Peak Power	6.15A
Open Circuit Voltage	21. 5V
Short Circuit Current	6.56A
Maximum system Vohage	1000V DC
Panel Dimensions	525(W) X 665(H) X 75(D)mm (Folded) 1050(W) X 665(H) X 35(D)mm (Unfolded)

ABOUT THE REGULATOR

1. Safety Information

- · Read all of the instructions in the manual before
- DO NOT disassemble or attempt to repair the
- Disconnect the solar panel before installing or moving the
- Power connections must remain tight to avoid excessive heating from a loose connection.
- · Only charge 12V batteries that comply with the parameters of
- Battery connection may be wired to one battery or a battery

2. Overview

The 12V/10A regulator is a PWM charge regulator with USB output that uses the most advanced digital technique. Regulator features as follows:

- Support 3 charging options: AGM, Gel &Flooded lead acid battery
- Battery status LED indicator indicates battery condition
- The USB will provide power supply that can charge electronic equipment
- Battery type and load output can be set by pressing a button
- Extensive Electronic protection

3. Product Features



Figure 1 Product Feature

1.	Mounting Hole 6 4.5	6.	Button
2.	PV Terminals	7.	Battery status LED indicator
3.	Battery Terminals	8.	Load status LED indicator
4.	Load Terminals	9.	Charging status LED indicator
5.	USB output port		

4. Wiring


- Before connecting solar charger kit with battery, please MAKE SURE the solar panel surfaces are covered or facing ground since the correct connection sequence is Battery first, then Loads if any, Solar panels to be connected
- After powering the regulator, check the Battery LED indicator on the regulator, to be solid green. Otherwise please refer to section

5. LED INDICATORS

1. Charging and load status indicator

Indicator	Color	Status	Instruction
	Green	On Solid	Charging
Charging status LED indicator	Green	OFF	No Charging
	Green	Fast Flashing	Battery Over Voltage
	Green	On Solid	Load ON
	Green	OFF	Load OFF
Load status LED indicator	Green	Slowly Flashing	Load overload
	Green	Fast Flashing	Load short circuit

2. Battery status indicator

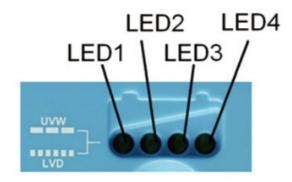

LED1	LED2	LED3	LED4	Battery Status
Slowly Flashing	x	x	x	Under voltage
Fast Flashing	х	х	х	Over-discharge

Battery LED indicator status during voltage is up

0		0	x	x 12.8V <ubat<13.4v< th=""></ubat<13.4v<>
0	g		р	13.4V <ubat<14.1v< td=""></ubat<14.1v<>
0		0	0	O 14.1V <ubat< td=""></ubat<>

Battery LED indicator status during voltage is down

0	0	х	12.8V <ubat<13.4v< th=""></ubat<13.4v<>
0	х	х	12.4V <ubat<12.8v< td=""></ubat<12.8v<>
0	Х	х	Ubat<12.4V

NOTE: 01"O" LED indicator ON; "x" LED indicator OFF.

Setting Operation

(1)Load ON/OFF Setting

When the regulator is powered on, press the button to control the load output. NOTE: The USB will output when the load is on.

Battery Type Setting

Operation:

- Step 1: Enter setting mode by pressing the button for 5 seconds until the battery status LEDs are flashing.
- Step 2: Select the desired mode by pressing a button.
- Step 3: The mode will be saved automatically without any operation for 5 seconds and LED will stop flashing.

Battery Type Indicator

LED1	LED2	LED3	Battery type
0	×	×	AGM/Lead Acid(Default)
0	0	×	Gel
0	0	0	Flooded

NOTE: "o" LED indicator ON "x" LED indicator OFF

Protection

Battery Over Voltage Protection

When the battery voltage reaches the set point of Over Voltage Disconnect Voltage(OVD), the regulator will stop charging the battery to protect the battery from being overcharged.

• Battery Over-Discharge Protection

When the battery voltage reaches the set point of Low Voltage Disconnect Voltage(LVD), the regulator will stop discharging the battery to protect the battery from being over-discharged.

· Load Overload Protection

Load will be switched off when 1.25 times rated current overload will occur. User has to reduce load appliance, then press the button or repower the regulator.

· Load Short Circuit Protection

Load will be switched off when load short circuit (+3 times rated current) will occur. The user has to clear the short circuit, then press the button or restart the regulator.

• High Voltage Transients Protection

The regulator is protected against small high voltage transients. In lightning-prone areas, additional external suppression is recommended.

Troubleshooting

Faults	Possible reasons	Troubleshooting
LED Charging indicator turn of f duñngdaytme when sunshine falls on PV modules properly	PV array disconnection	Confirm that PV and battery wire connections a re correct and tight
No LED indicator	Battery voltage may be less than 8V	Measure battery voltage with the multi-meter.Mi n.8V can start up the regulator
Charging status LED indicator Fast flashing	Battery Over Voltage	Check if the battery voltage is higher than OVD, and disconnect the PV
LED1 Fast flashing	Battery over-discharged	When the battery voltage is restored to or above the LVR point (low voltage reconnect voltage), the load will recover
Load status LED indicator slo wly flashing	Load overload	@Please reduce the number of electric equipm ent. OzPress the button or repower the regulator
Load status LED indicator fast flashing	Load short circuit	@Check carefully loads connection, clear the f ault 2Press the button or repower the regulator.

Technical Specifications – Charge Controller

Nominal system voltage	12VDC
Rated charge current	10A
Rated discharge current	10A
Battery input voltage range	8V 16V
Max. PV open circuit voltage	30V
Self-consumption	12V<5mA
Charge Circuit Voltage Drop	0.13V
USB Output Port	5VDC/1.2A
Working environment temperature	-35°C-+55°C
Humidity	95% N.C.
Mounting hole size	64.5

Battery Voltage Control Parameters Below parameters are in 12V system at 25°C

Battery Type	AGM	Gel	Flooded
Over Voltage Disconnect Voltage	16.0V	16.0V	16.0V
Charging Limit Voltage	15.0V	15.0V	15.0V
Over Voltage Reconnect Voltage	15.0V	15.0V	15.0V
Equalize Charging Voltage	14.6V		14.8V
Boost Charging Voltage	14.4V	14.2V	14.6V
Float Charging Voltage	13.8V	13.8V	13.8V
Boost Reconnect Charging Voltage	13.2V	13.2V	13.2V
Low Voltage Reconnect Voltage	11.6V	11.6V	11.6V
Under Voltage Warning Reconnect Voltage	12.2V	12.2V	12.2V

Low Voltage Disconnect Voltage	11.1V	11.1V	11.1V
Discharging Limit Voltage	10.6V	10.6V	10.6V
Equalize Duration	120 min.		120 min.
Boost Duration	120 min.	120 min.	120 min.

Distributed by:

TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere

NSW 2116 Australia Ph: 1300 738 555 Int'l: +61 2 8832 3200 Fax: 1300 738 500 www.techbrands.com

Made in China

Documents / Resources



<u>POWERTECH 12V 110W Folding Solar Panel Charge Controller</u> [pdf] User Manual 12V 110W Folding Solar Panel Charge Controller, ZM9175

Manuals+, home privacy