

## PROCONTROL Pro Control Key Safe Lock User Guide

[Home](#) » [PROCONTROL](#) » PROCONTROL Pro Control Key Safe Lock User Guide 

## Contents

- 1 PROCONTROL Pro Control Key Safe Lock
- 2 Welcome
- 3 Review of system- and product range
- 4 Security guide
- 5 About the security
- 6 Properties
- 7 Options
- 8 Operation
- 9 Multi-level security
- 10 Alarm functions (options):
- 11 Power outage mode
- 12 User interface/Cabinet software
- 13 User levels
- 14 Functions of the KeySafe Cabinet Software (KCS) for key users
- 15 Select Language
- 16 Login
- 17 Key handling
- 18 Picking up keys
- 19 Returning keys
- 20 Key location information
- 21 Finding subkeys
- 22 Vehicle search
- 23 Collection and delivery of keys stored in bulk (collectively)
- 24 Enable bulk key by setting parameters using WebAccess
- 25 Register bulk keys in WebAccess
- 26 Management on the WebAccess interface: Key transfer
- 27 Functions of the KeySafe Cabinet Software (KCS) for Admin users
- 28 Edit users
- 29 Add new user
- 30 Modify a user
- 31 Delete a user
- 32 Edit key rights
- 33 Replacing RFID key holders
- 34 Time settings – Set clock
- 35 Custom time setting
- 36 Event logs
- 37 KeySafe cabinet – Questions and Answers
- 38 Installation
- 39 Technical support
- 40 Specifications:
- 41 Frequently Asked Questions (FAQ)
  - 41.1 Q: Is the Procontrol KeySafe Lock compatible with all RFID technologies?
  - 41.2 Q: Can I use third-party power supplies with the Procontrol KeySafe Lock?
  - 41.3 Q: How do I reset the Procontrol KeySafe Lock if I forget the access code?
- 42 Documents / Resources
  - 42.1 References
- 43 Related Posts

## PROCONTROL Pro Control Key Safe Lock

### USER GUIDE

RFID technology-based safety key cabinet

## **Welcome**

Thank you for choosing a Procontrol product.

Procontrol Electronics Ltd has grown to an important national company of developing and manufacturing software, hardware, electronic devices, access control systems, work time attendance systems, queue control, client caller, and access protection systems since 1981. Thousands of satisfied customers have experienced the security ensured by our long run planning, reliable works, and the world trademarks standing behind us.

Our total product range can be viewed on our web page: [www.procontrol.hu](http://www.procontrol.hu).

## **Review of system- and product range**

The intelligent target-systems development by Procontrol in-house covers most tasks of a so-called Smart Building concept, as modules of a common building-management software (Proxernet). All of the systems are independent and they are innovative solutions. They can be put together from hardware and software modules on demand and they can be used without the need of other systems, but they work together.

All of the links below point to a short system review on our web page, from where you can find the module catalog, then you may go to the individual product reviews.

The products are usually used independently, but they can be used as part of one or more target systems.

<b>System functions</b>	<b>System components and services</b>
✓ Access control systems	NFC,RFID,BIO identifiers, turnstiles, rotating- and sliding gates
✓ Time-attendance systems	Clockbooks, attendance registers, working schedules, statistics
✓ Pay-parking systems	Crossing gates, person / vehicle identification, payment machines
✓ Electronic lock systems	NFC, RFID, BIO keys, central lock management
✓ Key- and value storing safe-systems	Person and key identification, collecting, key storage management
✓ Inmagnetrial clock and clock nets	GPS sync, NTP time server, analogue, digital reserve clocks
✓ Displays, information systems	Touch screen based informational kiosks, displays,news tickers
✓ Customer calling systems	Counter ticket dispenser, calling terminal, live voice callers
✓ Location tracking systems	Personal- and object tracking TAGs, installed as internal network
✓ Personal real time location systems	Personal transponders, bracelets, local and central monitoring
✓ Building engineering (HVAC) systems	Heating, cooling, airing, shading, lightning management
✓ Wellness control systems	Access TAGs, season ticket, safelock, solarium, management
✓ Video control systems	Camera surveillance systems, recording, tracking
✓ Fire alarm and fire safety systems	Fire alarm sensors, interceptors, fire safety center
✓ Intrusion protection systems	Opening-, motion-, breaking-sensors, signal center, alarm systems
✓ Production management systems.	Measuring production, personal collection, handover of tools
✓ Measuring technology systems	Measuring physical quantities, electronic labor instruments
✓ Vehicle fleet management systems	Fleet tracking, driver-,fuel-, refilling- management
✓ Ticketing-payment machine systems	Ticket-, card-, payment kiosks
✓ Nurse call and patient tracking systems	Wireless nurse calling, patient-tracking bracelets and management

**Products (system-independent devices):**

Cardprinters and accessories	Fargo HID
Cards, transponders, accessories	Card holders, neck straps, RFID key rings
Communication modules	Ethernet/RS232/RF860/RS485 converters, modems, Tibbo
Sensors	Temperature, pressure, humidity, approximation, water detection
Power supplies	Industrial AC/DC, DC/DC switching power supplies

We hope that you also will use our products and services with satisfaction.

### **Protected, registered brands:**

The KeySafe®, ProxerGate®, ProxerPort®, IP Thermo®, IP Stecker®, ProxerLock®, ProxerStecker®, RHS®, HI-CALL®, HI-GUARD®, MEDI-CALL®, Pani-Call®, PROXER®, PROXERNET® are official brand names of Procontrol Electronics Ltd.

Trademarks in the document are property of the respective owners. Procontrol Electronics Ltd. reserves all copyright for the document: it may not be copied for third party, modified and published without prior written permission of the author.

Procontrol Electronics Ltd. reserves the right to alter the document and the software without notice. Procontrol Electronics Ltd. assumes no liability for the accuracy of the product, the software parts and documentation and also for its adequacy and usability for specific applications.

## **Security guide**

Please read this guide carefully before installing and using the device. Please use the device properly and as described in the following manual.

The guarantee is insured only if the device is used with the implements approved or specified by the manufacturer, and it is cleaned and maintained as described in this guide.

- The manufacturer does not take warranty for the faults arising from improper use.
- Incorrect installation
- Connecting to inappropriate electric network
- Incorrect maintenance
- Not approved modifications, interventions
- Using non-original spare components
- Do not store and operate the device out of the given temperature ranges, it can lead to malfunction
- Do not try to modify or dismount any part of the device
- Do not allow this product to come into contact with water or other liquids.
- Do not store the device close to a heat source or direct flame, because the device may explode.
- Use the device only the proper way as described in the guide.
- Use the equipment only for the purpose it has been designed for.

## **About the security**

Use the power supply provided by manufacturer for the device. Use electric power connection as specified in this guide.

### **Attention!**

The device should be connected only into a grounded outlet on a protective relay equipped network.

### **To avoid fire and electrical shock**

Be aware that nobody pushes trash, gums and other stuffs into the slots of the device.

Do not install attachments and accessories that are not designed for this device. Unplug the device in case you do not use it for a very long time.

### **At installation time**

At the back of the device there are heat deflector slots. Do not cover these slots, because it may cause dysfunctions in the device and this may cause fire.

### **Cleaning**

Power down the device before starting the cleaning process. Use wet cleaning rag.

### **General rights and responsibilities**

Procontrol Ltd has the exclusive right for producing the device.

Procontrol Electronics Ltd. reserves the right to modify this documentation and software without notice.

In no event shall Procontrol Ltd. be liable for any claim, damages or other liability out of or in connection with the usage of the device.

Warranty period is 2 years.




The KeySafe Lock is a safety key-storage cabinet, that can be opened only with personal RFID proximity card (transponder) or/and with a PIN code, optionally using fingerprint identification, if the device is a KeySafeLockBio. The offline type has an inbuilt computer. It is possible to connect it to a computer network and to check remotely who and when took which key and for how long time.

The KeySafe Lock does not allow taking any key, just the ones the person is entitled to!  
More cabinets can be connected to a single data cable, monitored and managed with a ProxerNet KeySafe Management Software (a Windows application running on a PC), and it can be integrated into a building management system as well.



## Properties

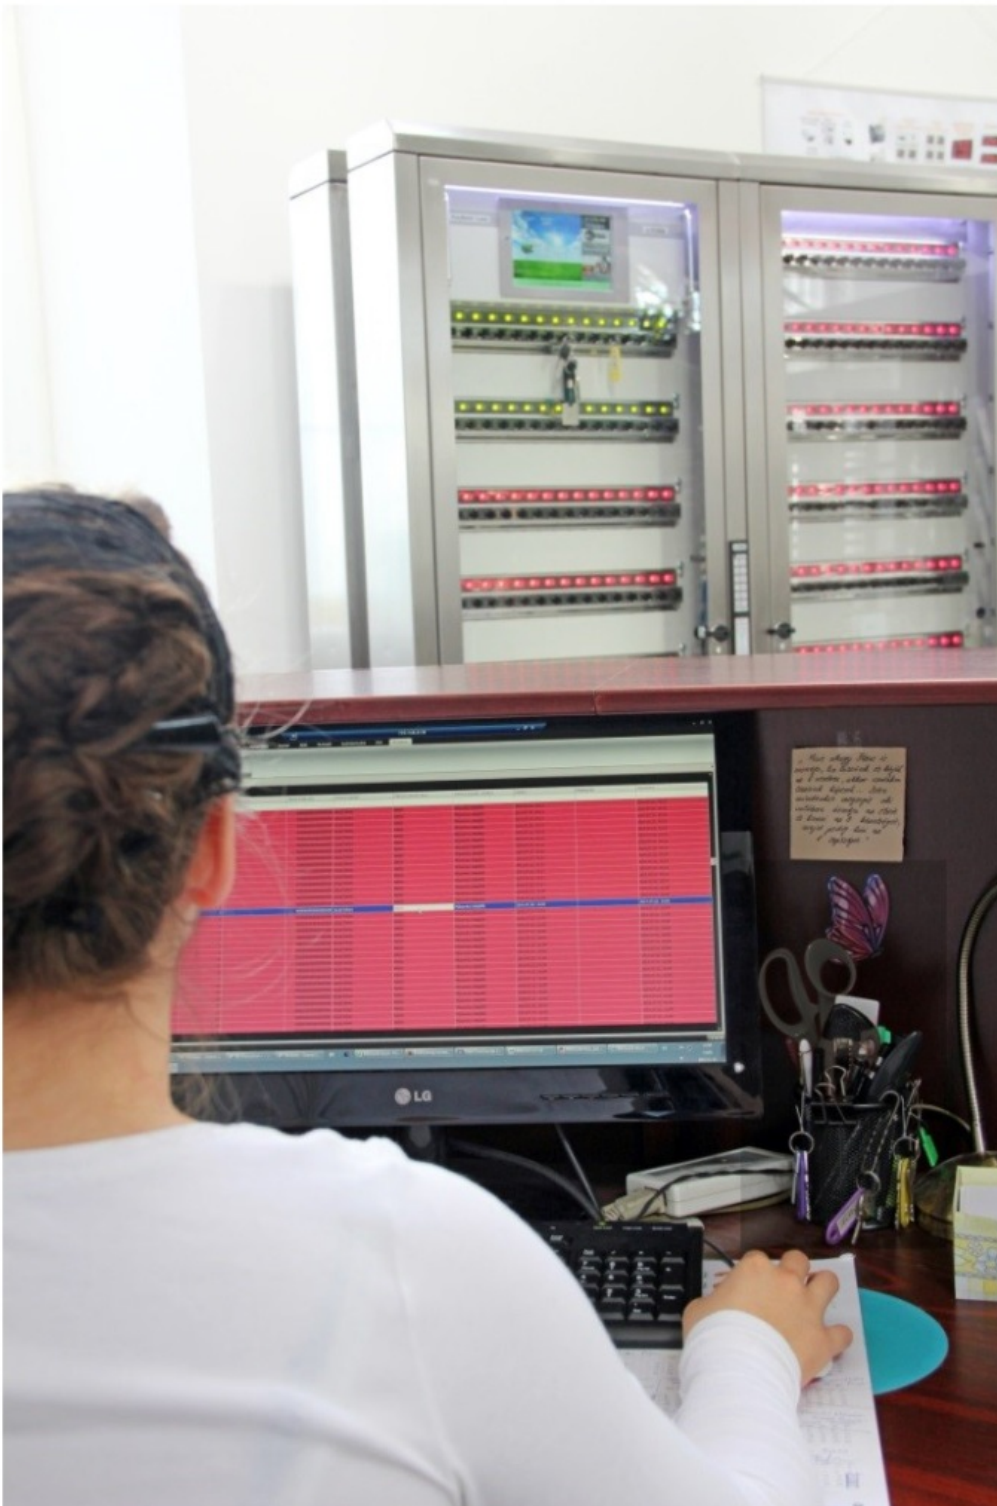

- Intelligent, safety key-rack that can be opened with ID card / PIN code – as per request the Client's own proximity cards can be used. Optionally the cabinet can be set with NFC or biometric (fingerprint) opening.
- RFID proximity key holder plugs automatically locked by bolts
- Records data like person, time, keys and their relations (who, what, when, how long); logs also the door openings
- Rights for keys can be given and withdrawn individually, even via Internet from a remote computer
- Key identification is automatic using RFID key holder plugs
- More cabinets can be set and managed as one system
- Cabinets can be extended by 8 key units modules
- Numbered key plug sockets (it locks the key-holders with electronic latches)



- Offline-online communication (operates in its own, manageable via the touchscreen of the built-in PC and also can be managed from a remote PC via Internet)
- Can be combined with the access and time management modules of its management software, the ProxerNet
- Power supply: 230V 50-60 Hz (12V/230V power supply included)
- Steel housing with safety glass door, optionally with metal door or without door
- Built-in PC with touchscreen
- Built-in secure RFID based magnet lock; built-in identifier: RFID key-holder plugs for each key individually; built-in LEDs to show the “closed / opened” status
- KeySafe Lock cabinets are made in a wall-mountable version in robust steel housing, in RAL7035 colour. Other colour or design (brushed stainless steel, outdoor design) can be ordered.
- Key reservation function
- Key finder (Where is my key?) function

## Options

- E-mail message to a given address about key movements
- Alarm (email or sound) can be triggered at keys not returned in a specific time.
- Password protection
- Wi-Fi communication
- KeySafe terminal with biometric fingerprint reader
- KeySafe cabinet can be set to accept Client’s existing cards
- Key storage capacity according to unique demands
- Mounting options per request
- Direction of door opening can be changed upon request
- Outdoor version
- At returning car keys it is obligatory to record the odometer reading
- More cabinets can be put in a string

## Operation

The cabinet can be opened only with personalized RFID proximity tags or/and PIN code, optionally using fingerprint identification (KeySafe Lock Bio). Each key has a unique RFID identifier that allows key identification and monitoring of key movements. The software logs when a key is taken, returned, and by whom. The right to be able to remove a key can be given separately. Without this right, the cabinet does not let the person take out any key.

Each key has a plug equipped with RFID transponder. If you return the plug into the right slot, the RFID reader reads the transponder, and it sends the ID to the PC software. In case of a closing command a latch locks into the plug’s notch, preventing to be able to pull out the plug.

- The module’s own RFID reader reads the available RFID IDs and sends them to the PC Software.
- When someone identifies himself, the cabinet starts to investigate, whether the user has right to take one or more keys.
- If the person has sufficient rights, the cabinet door will open and the device automatically unlocks the keys for what the person has pick up rights. Should the door be closed again, all slots will be locked.
- The PC software records all the events, since it is possible to monitor and control the key movements.

The intelligent modules containing key positions are connected to an RS485 network inside the cabinet. This network is connected via Ethernet to the cabinet's management software running on external PC. The RFID reader, the other storage units, the cabinet door locks and the door state sensors are also connected to the same RS485 network.

### **Rights for removing keys**

More than one key-ID can be assigned to one person. The right to remove a key can be given for keys one by one individually.

### **Key identification**

The cabinet recognizes what key is located in which slot. Who, when and which keys he has removed or returned – It will be saved in the event log. If you take or put back more than one key, the system will know the key holder ID numbers of all of them.

### **Multi-level security**

#### **Authorization check**

The cabinet knows already at the time of PIN code or card (optionally fingerprint) identification whether the person has authorization for a key and which keys he is allowed to remove.

There are users set in the system with admin (superuser) rights, having all access and modification rights related to users, keys and system properties.

#### **Sabotage protection**

The system can send alert if an unauthorized person wants to remove a key. It can also give a warning beep if you put the key into an incorrect slot.

The device checks by default if the key has been put back to its original position. Keys switched are indicated, but the system allows putting in the key to another slot, and logs the event. Sound signal can be turned on.

Deliberate exchange of keys on key holder plugs (with RFID transponder) can be prevented by using vandal-proof key rings.



### **Alarm functions (options):**

- The key has been removed violently from a locked position (alarm-out, email)
- The cabinet door was pried open (alarm tone, alarm out)
- Removal of connector-cover plate (tamper switch, alarm tone, alarm out)
- The motor mechanics of the key latch get jammed (alarm-out, email)
- The door was left open for too long: successful identification, keys have been removed, but the door remained open (Alarm tone, Timeout in 60 sec, alarm signal after 120 sec)
- The key was out too long, the person forgot to bring it back (Timeout, alarm message after 24 hours)
- Incoming external alarm (alarm inputs): there is fire or emergency situation, the key cabinet will be completely

unlocked, but it records all key removals and events

- End of incoming external alarm (alarm inputs): key cabinet locks again; if the door is still open, Alarm type 5 will be active.
- Optionally: If someone fails to login within a time interval more than 3 or 5 times, it is an unauthorized access and the cabinet sends an alarm notification and an e-mail to the administrator (if suitable network connection is available).

The alarm signal sounds through the built-in piezo buzzer and the PC speaker. Network connection and SMTP configuration is needed to send an e-mail alert.

Optional SMS can be sent to the specified phone numbers, through a built-in optional GSM/GPRS communicator.

**Please note:** The alarm functions set at the given cabinet may alter from the ones described above. Please contact us if you wish to implement certain features.

## Power outage mode

The KeySafe cabinet has an own UPS. In case of power outage, the KeySafe switches to power outage mode, and it still operates and communicates for 24 hours.

In case of power failure, first the key module LEDs go out and the brightness of the screen reduces; at the end the screen completely darkens. The PIN keypad flashes in every 10 seconds to show that the device can be used. The cabinet can be woken up by using a card. Login after wake up is possible as usual.

In case of KeySafeLockBio type, the fingerprint reader works only after the device has waken, when the fingerprint reader is blue.

During power outage mode the key LEDs light only at use. The key modules check the keys in every 10 seconds, so changes in key locations, removal, placing back are shown with some delay. Changes are followed up more slowly on the screen as well. After the time set the screen goes dark again if there is no activity.

The time while the cabinet is awake, the screen brightness decrease time and the time when the cabinet goes sleep can be set. For further information and setting possibility see the administrator guide.

When the power is restored, every device restore into normal mode, even if the power supply unit has run down.

## User interface/Cabinet software

Cabinet management software can be split into two parts:

- software running on the cabinet's built-in computer: KeySafe Cabinet Software (KCS)
- software running on the external management computer in the network (ProxerNet software KeySafe Module): KMS or web-based software for remote administration: ProxerSafe WebAccess

They have different functionalities. In this document only KCS is discussed.

## User levels

There are two user types in KCS:

1. Key user
2. Superuser/ Admin

The difference between the key user and the superuser is in their rights.

## User rights

Key user has right to login, select, pick up and return keys.


Superuser is authorized to login, select, pick up and return keys, and also for basic management functions.

The Admin menu is displayed only for Superusers/ Admins in KCS.

## Functions of the KeySafe Cabinet Software (KCS) for key users

Detailed management functions are available only in external cabinet management software, ProxerNet software KeySafe module.

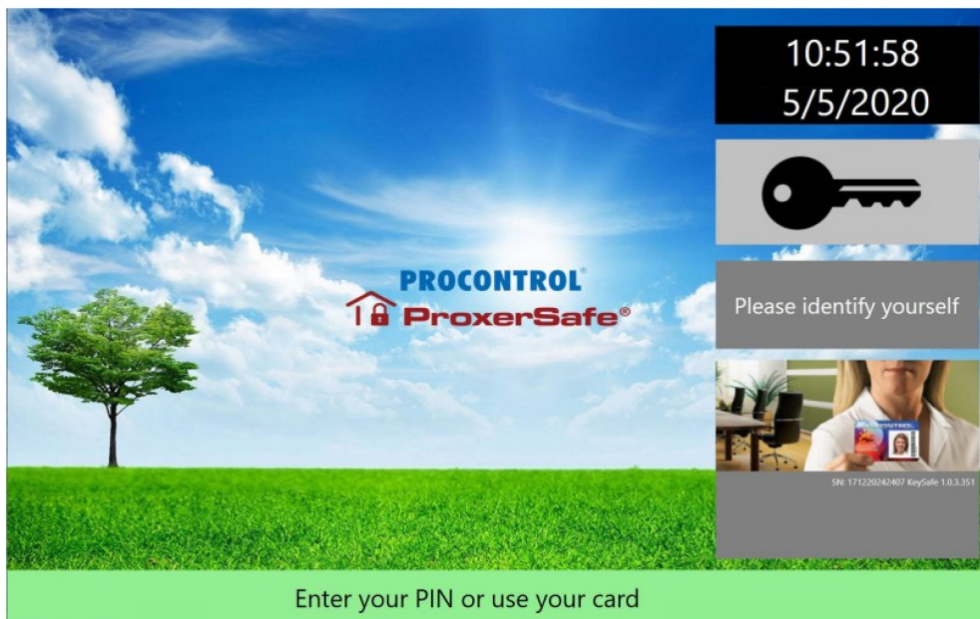


The main screen of the KCS software looks like:



The actual time and date are displayed in the upper right corner of the screen.

On the main screen you can see the device serial number (SN), which correctly identifies the KeySafe. You can see the actual software version too.

Three kinds of symbols can be seen there in the bottom left corner of the screen:

	Empty: in this case all connections are OK
	Gear: no connection to hardware
	Connector plug: no connection to Hardware Server
	Bell: tamper or fire alarm


## Select Language

The language of the software is English by default. In order to select other available languages (Hungarian, Swedish Finnish or Arabic) please consult the Admin Guide. At request other translations can be available.

## Login


### Login using card

Place your card close to the card reader (next to the screen). In case the card is not valid, KCS will display an orange screen with “Not authorized” note. It means the login has failed.

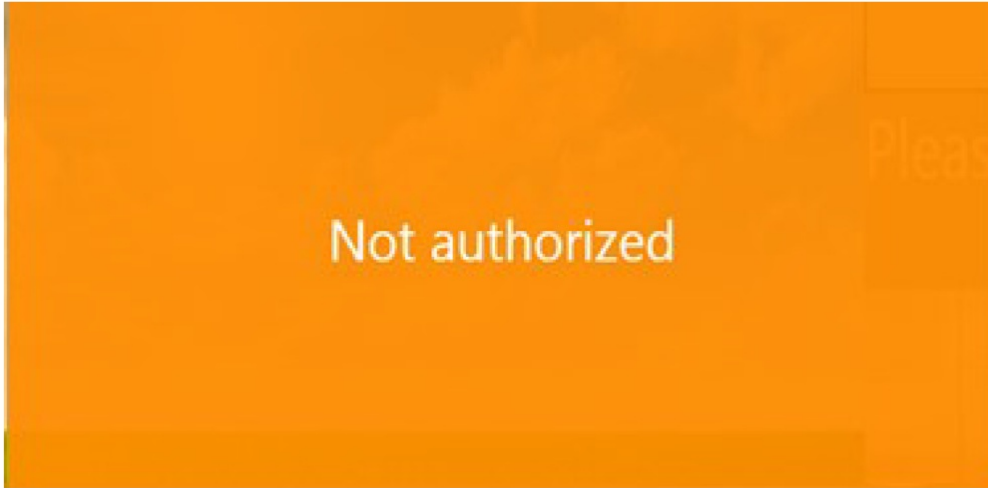

### Login using PIN code

If you would like to login to KCS using PIN code, tap the screen, enter your PIN code and press the OK button. Having mistyped a number, you can restart adding the PIN with Cancel.

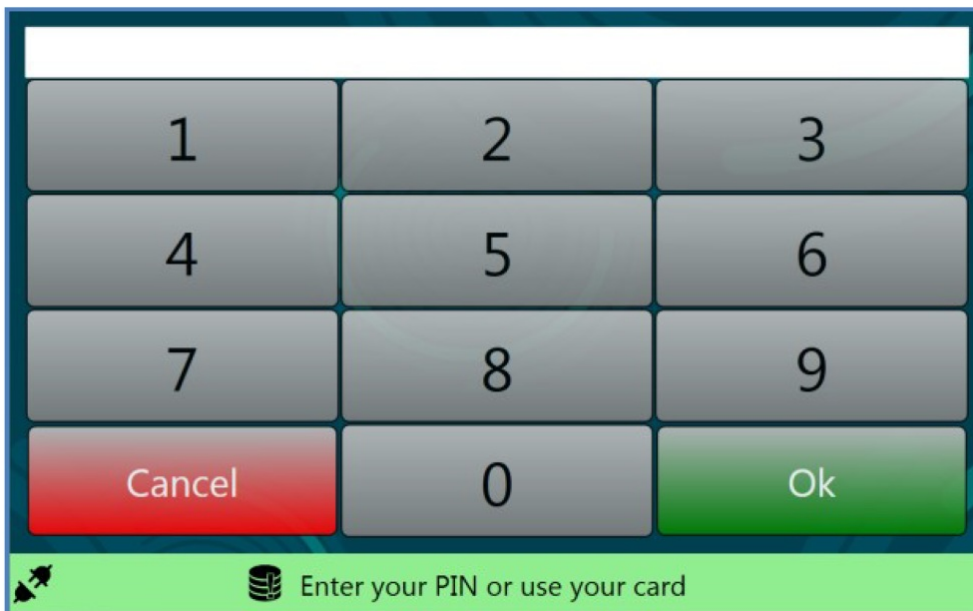


In case of a not valid PIN code, KCS displays an orange screen with “Not authorized” warning. It means the login has failed.

### Login with combination of card and PIN code

Place your card close to the card reader on the top of the cabinet, then enter your PIN code on the screen. The order can be changed (so first typing the PIN then using the card), but both PIN code and card must be valid and


authorized for a successful login.

Software displays on screen for which authentication it is still waiting.

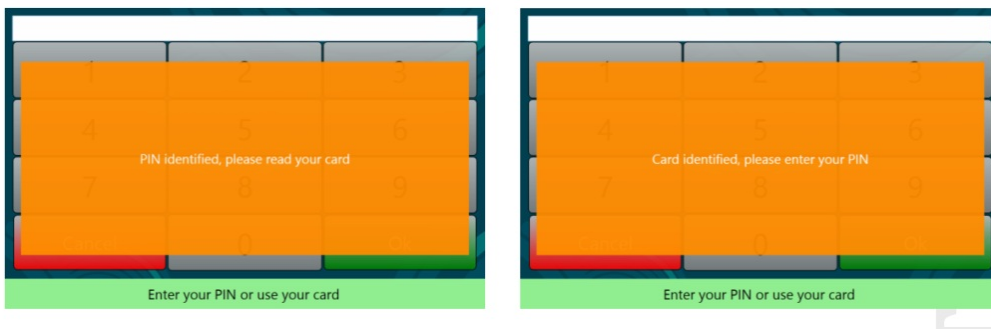

### Login with fingerprint

Put your finger on the fingerprint reader. The device beeps at the fingerprint scan. In case a fingerprint is not entitled, a "Not authorized" message appears on the screen.

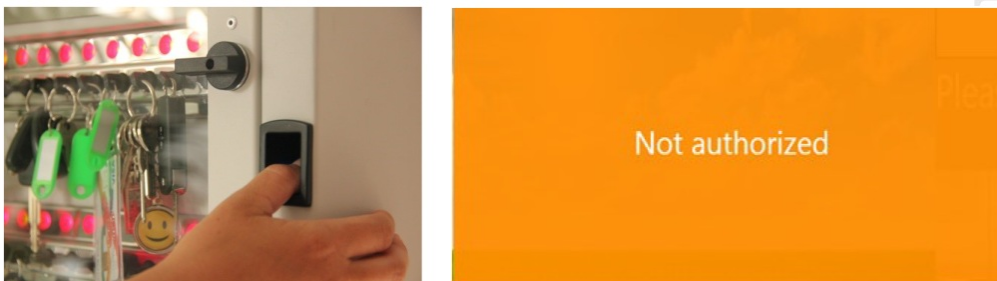

In case of success, the fingerprint reader flashes blue.

### Login with combination of fingerprint and PIN-code

Enter your PIN code and place your finger to the fingerprint reader. The order is interchangeable. If both IDs are valid, the login is successful. The software shows on the screen which identification is still needed.


In case of unsuccessful login, the door of KeySafe remains closed.

## Key handling


### Key map

After a successful login KCS will welcome you with the following screen. At login as non-admin user:



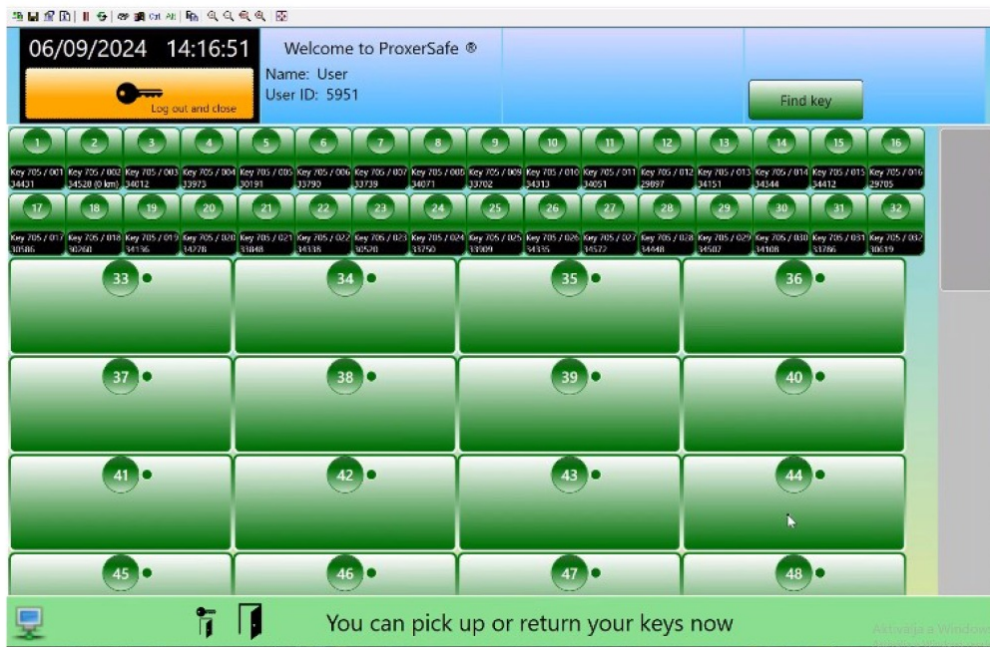

At login as administrator:

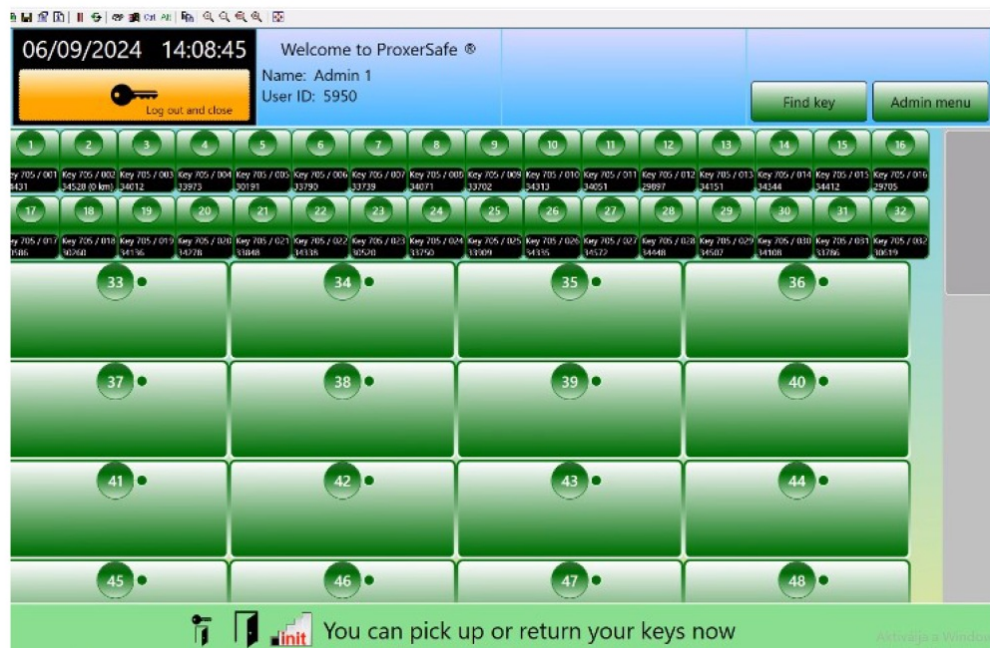


KCS will highlight the keys available for you on the screen (with key location). Numbered rectangles filled with different colours will indicate the keys.



- The full green rectangles mark the keys available for you.
- If keys are reserved, the software shows them in full orange rectangles.
- The full grey rectangle means that another user, who also has right for this key, has picked up that key.
- The full red rectangle means you do not have rights for these keys.

If the KeySafe manages bunch of subkeys (how to set keys as subkeys, see the Admin guide) and you choose one of the keys on the touch screen, you can see the subkeys in a pop-up window:

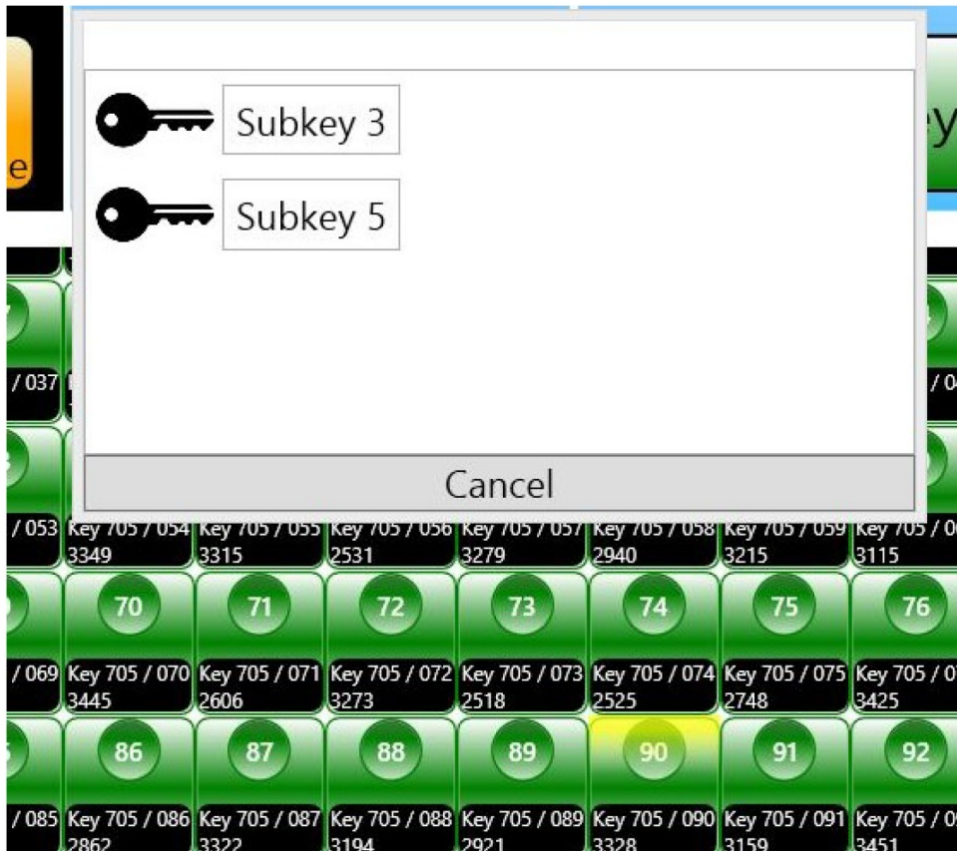

## Picking up keys

Baseline: door is closed, all keys are locked and all LEDs are red.

- Sign in with your card and/or PIN code. The built-in terminal checks if you are entitled to use key cabinet. If you have the necessary rights, the cabinet beeps and the lock releases.
- You can open the door. In case of plug lock, pull the handle toward you. (The key on the photo is for emergency opening only, the administrator of the cabinet has to take a good care of it.)
- After logging in, the LEDs turn green on the key positions you are entitled to remove keys from. You can remove them.
- The event log records the user's identity.
- Keys without authorization stay locked and the LEDs above them are red. The cabinet does not release these keys.
- When you are done, close the door.

After removing the keys, the bolts are locked again and the LEDs light in red.


The red LED indicates always a locked key latch, while the green an open one.





If the person has no activity for 90 sec after the door has been opened, the latches of the opened key slots will lock again (timeout).

Key position slots also close, if the user leaves the door open after their activity (timeout). The terminal displays a warning message that the door has to be closed.

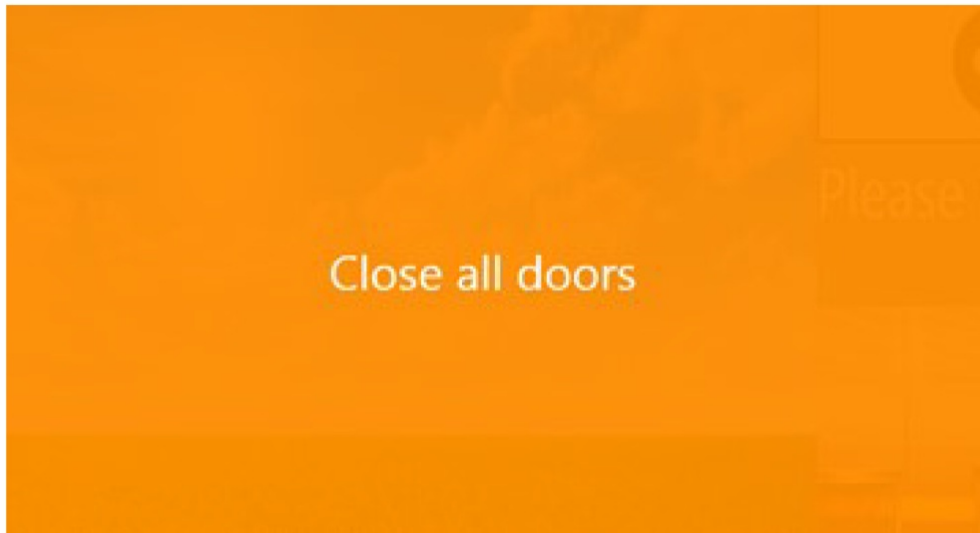

Please note: The ID card and/or PIN code will be logged always together with the user's name. Therefore, it is recommended that only one person shall pick up keys at a given time and then the door shall be immediately closed.

## Returning keys

The LEDs do not light above the empty key slots after logging in.

- You have to return the key into the correct (numbered) slot. The latch mechanics allows to return the keys.
- When the user returns a key to or picks up a new one from the correct slot, the program records the event in the log.

**Note:** Keys have to be inserted into their correct (numbered) positions till impact. Key recognition is acknowledged by a beep sound.

**Note:** The key holder plugs contain magnet, therefore small metal parts can stick to them. Please check if there is no dirt or swarf on them!

Someone else (another person, who has no rights for this particular key) can return removed keys too. In this case, the program assigns and records event information about the person who returned the key and not about the person, who has picked it up originally.

## Keys in wrong key positions

Key position monitoring and marking the mixed-up keys with icon

A person has rights for the keys, not for the key slots. If you put the key back into an incorrect slot, (for example key No. 22 into the slot of key No. 30) the cabinet accepts the key and locks it. The cabinet recognizes the key, and remembers the slot number, where a given key is. If someone wants to remove the key No. 22, he can do it also from slot No. 30.

This way you can always find the keys with the key finder function.

## Switching off marking the misplaced keys – optional

The function described in the previous paragraph can be switched off. In this case, the key map does not show the keys placed in a wrong position, but the key finder list shows the current place.


Prohibiting misplacing the keys – sound signal at keys returned to wrong position – optional

If someone returns a key into an incorrect slot, the terminal can notify him with a beep sound, and the locked slot will be immediately opened. The key can get into the correct slot only.

Key location information

If you have a key in your hand and you don't know its position, where to put it back, Key information function will be your help.

Scan the transmitter of the key plug at RFID reader of the cabinet, the key name, position and host cabinet name will appear on the screen, along with some other pieces of information.

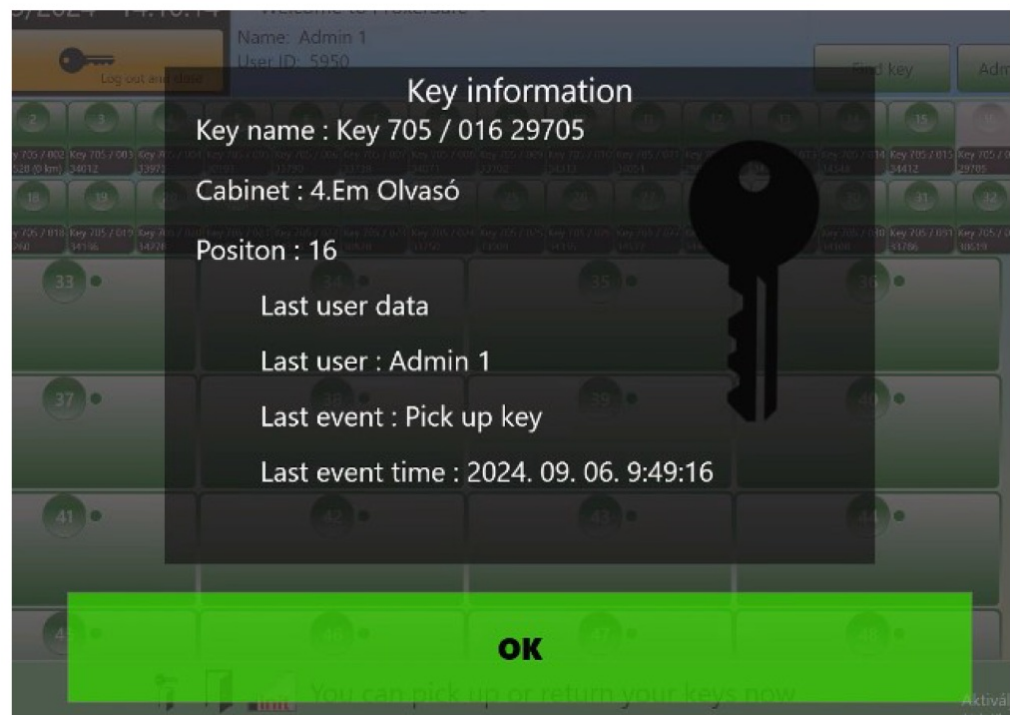

To activate this function, it must be enabled in System Configuration window by “Show key information on read” checkmark.

Welcome KeySafe® Poppy 4/27/2015 10:20:51 AM Find a key Back				
Key place	Key name			
2	Garden	Reserved	Poppy	4/27/2015 10:11 AM 4/29/2015 10:11 AM
3	Garage2			
7	Store-house			
10	FinancialOffice			
11	Garage	Last user	Rácz Viktor	4/27/2015 10:19 AM
12	Kitchen			
13	KSS233 Toyota	Wrong place, move it to	Portal	15
15	Reception	Wrong place, move it to	Portal	13
Garden Available				

## SHOW KEY INFORMATION AND READ

### Find a key (Where are my keys?)

After a successful login you can see in the Find Key menu, where your keys (key positions, key names) are. The background colours of the rows indicate where the keys are. The colour corresponds to the ones seen after the login screen.

1. Orange: Reserved key. The user's name, who has reserved the key and the reservation time intervals are displayed on the screen.
2. Grey: Picked up key. Shown with the user's name, who has last picked up the key, and the pick-up date.
3. Green: Currently available.
4. White: Picked up key, returned into another KeySafe cabinet. The name of the person, who picked up the key, and the place, where the key is now, are displayed on the screen.




Press the Back button to return to the login page.

### Finding subkeys

If you use the KeySafe for managing bunch of keys, in the FindKey menu you can see the subkeys, which belong to a key. The key position number of the subkey is the same as of the main key.

If you choose one of the subkeys on the touch screen, the LED light (which belongs to the main key) flashes.

Back	Welcome to KeySafe ® Attila 7/27/2016 9:40:17 AM	Find a key	Cabinet view
Key place nr.	Key name		
90	Subkey 5	Last user	Attila 7/24/2016 6:04 PM
91	Key 705 / 091 3159	Last user	Attila 7/24/2016 6:04 PM
91	Subkey 2	Last user	Attila 7/24/2016 6:04 PM
92	Key 705 / 092 3451	Last user	Attila 7/24/2016 6:04 PM
92	Subkey 6	Last user	Attila 7/24/2016 6:04 PM
92	Subkey 7	Last user	Attila 7/24/2016 6:04 PM
93	Key 705 / 093 2755	Last user	Attila 7/24/2016 6:04 PM
93	Subkey 9	Last user	Attila 7/24/2016 6:04 PM
93	Subkey 10	Last user	Attila 7/24/2016 6:04 PM
93	Subkey 11	Last user	Attila 7/24/2016 6:04 PM
93	Subkey 12	Last user	Attila 7/24/2016 6:04 PM

 You can pick up or return your keys now

### Vehicle search

If the system records vehicles and their keys, it can be set that the vehicles available are shown on the screen immediately after login.

**About a vehicle, you can see the following data:**


- key position in the cabinet
- key name
- type of the vehicle
- registration number

- identification number
- motor number
- colour
- if the key is in its place (True: in its place, False: not in the cabinet)

Back
Welcome to KeySafe ®
11/9/2015 10:19:25 AM
Find a key
Cabinet view

Slot	Key name	Type	License plate	Id number	Engine number	Color	In place
58	Citroen	Berlingo	BER-856	478961235563	23	Blue	<input checked="" type="checkbox"/> True
59	Toyota	Corolla	AAA-321	45464587879	78	Green	<input checked="" type="checkbox"/> True
26	Opel 1	Astra	KLO-632	6235446843331	16	Black	<input checked="" type="checkbox"/> True
75	Fiat	Uno	MKO-789	98454431131152	11	Red	<input checked="" type="checkbox"/> True

Keyboard



You can pick up or return your keys now

Optionally it can be set if the car keys not in the cabinet are shown or not.

Back
Welcome to KeySafe ®
11/9/2015 11:14:27 AM
Find a key
Cabinet view


Slot	Key name	Type	License plate	Id number	Engine number	Color	In place
58	Citroen	Berlingo	BER-856	478961235563	23	Blue	<input checked="" type="checkbox"/> True
59	Toyota	Corolla	AAA-321	45464587879	78	Green	<input checked="" type="checkbox"/> True
26	Opel 1	Astra	KLO-632	6235446843331	16	Black	<input type="checkbox"/> False
75	Fiat	Uno	MKO-789	98454431131152	11	Red	<input checked="" type="checkbox"/> True

Keyboard


You can pick up or return your keys now

Select any column to search for a vehicle. Use the keyboard in the lower right corner.

E.g., let's search for vehicles with letter C. It is possible to search in more columns at once; the search result will be displayed accordingly. To close the keyboard, click "CLOSE".

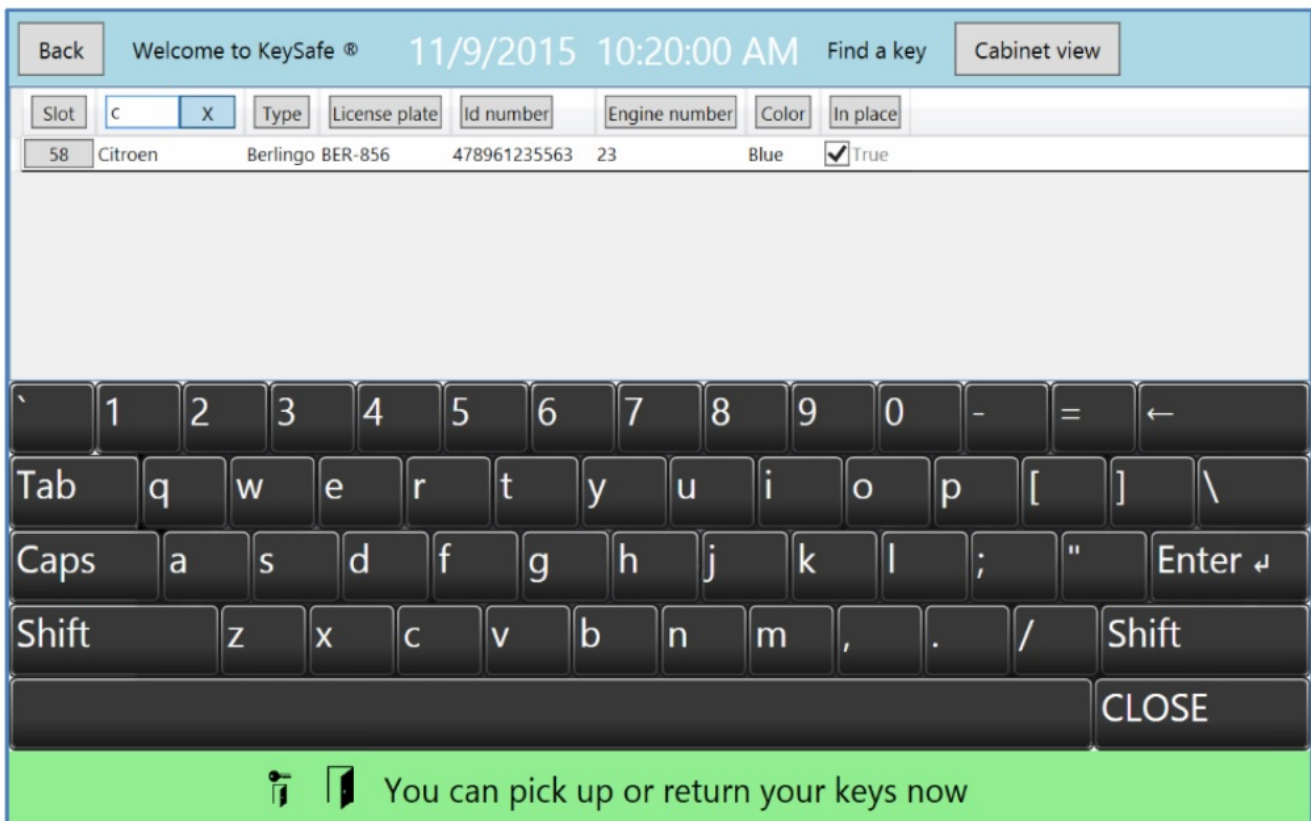

If you pick up a key, then it disappears from the list, or the software marks it as False in the column “In place” with “False”, according to system settings.

Log out with tapping the “Back” button or closing the door.

### Collection and delivery of keys stored in bulk (collectively)

By default, the KeySafe/ProxerSafe systems store the keys (more precisely, sets of keys) in separately numbered positions, with RFID identification and mechanical fixation.

Logging of the movement (pick up/return) of these keys is fully automatic.

For reasons of efficiency, some less frequently used keys can be stored not in individual key positions, but also en masse, within one closed compartment. All of these keys have a key holder with an RFID tag (but typically not a special version (RFID key plug) that can be used to fix them in cabinet positions).

### The movements of these keys are logged as follows:

- After logging into the locker, the people who are authorized to open the compartment containing the key box have physical access to these keys.
- When a key is taken out of (or put back into) the key box (compartment), the key’s transmitter must be scanned with the cabinet’s card reader. Of course, this requires cooperation and attention: this is the operator’s personal responsibility, the system cannot check whether the reading has taken place.
- The screen will then display the name of the given key and the direction of movement (pick up or return), based on the most recent movement direction. If the direction is not correct (e.g. it was returned by mistake without being scanned by the RFID reader), then the direction can be reversed by scanning the key again.
- The software logs the key movement event in the same way as if it happened at a numbered position.

### Enable bulk key by setting parameters using WebAccess

In order for the “bulk key” function to take effect, the corresponding values must be set in the parameter table.

**Authorization process:**

1. Log in to the WebAccess interface.
2. Open the Administration menu item.
3. Open the Parameters interface
4. Activate the following parameters:
  - a. ShowKeyInformationOnRead
  - b. KeysafeBulkStorage
  - c. KeysafeKeyListExpandable
  - d. KeysafeRemoteKeyTransferMode





### **Register bulk keys in WebAccess**

1. Login onto WebAccess interface
2. Open the Keys menu item
3. Press a new button, fill in necessary data
4. It is important that the value of the Native key position is 0!

### **Register bulk keys in WebAccess**



Welcome to ProxerSafe ® Admin 1 09/09/2024 16:03:41 Key edit

Save Cancel

KeySafe box	Slot	Name	RFID
4.Em Olvasó		Ömlesztett kulcs 3	224436445
4.Em Olvasó		Ömlesztett kulcs 4	11113
4.Em Olvasó		Ömlesztett kulcs 2	11268
4.Em Olvasó		Ömlesztett kulcs 1	22508
4.Em Olvasó		Ömlesztett kulcs 4	11113
4.Em Olvasó	1	Key 705 / 001 34431	34431
4.Em Olvasó	2	Key 705 / 002 34528	34528
4.Em Olvasó	3	Key 705 / 003 34012	34012
4.Em Olvasó	4	Key 705 / 004 33973	33973
4.Em Olvasó	5	Key 705 / 005 30191	30191
4.Em Olvasó	6	Key 705 / 006 33790	33790

Name: Ömlesztett kulcs 2

RFID: 11268

Positon: 0

Type: Default


Protection:


## Management on the surface of the key cabinet: Bulk key movement event

Recording process in the system:

1. Login unto the KeySafe GUI interface.
2. Read the RFID signal of the key on the card reader built into the cabinet.
3. The event (pick up/return) appears in a pop-up window on the sreen of the cabinet.
  - a. Key pick up: the key pick up is recorded in the name of the logged-in user. Later, the user can transfer the key to another person on the WebAccess interface.
  - b. Key delivery (return): the key delivery is recorded in the name of the user.

You can correct the event by re-reading the key, if necessary (for example, in the event that you forgot to read the RFID signal of the key when dropping it off or picking it up).

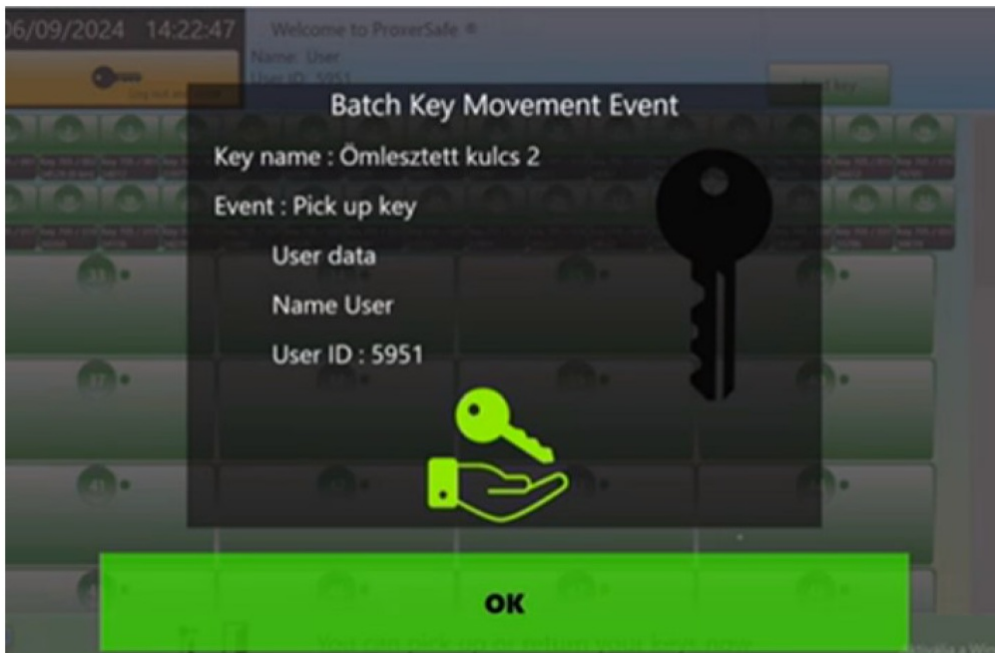

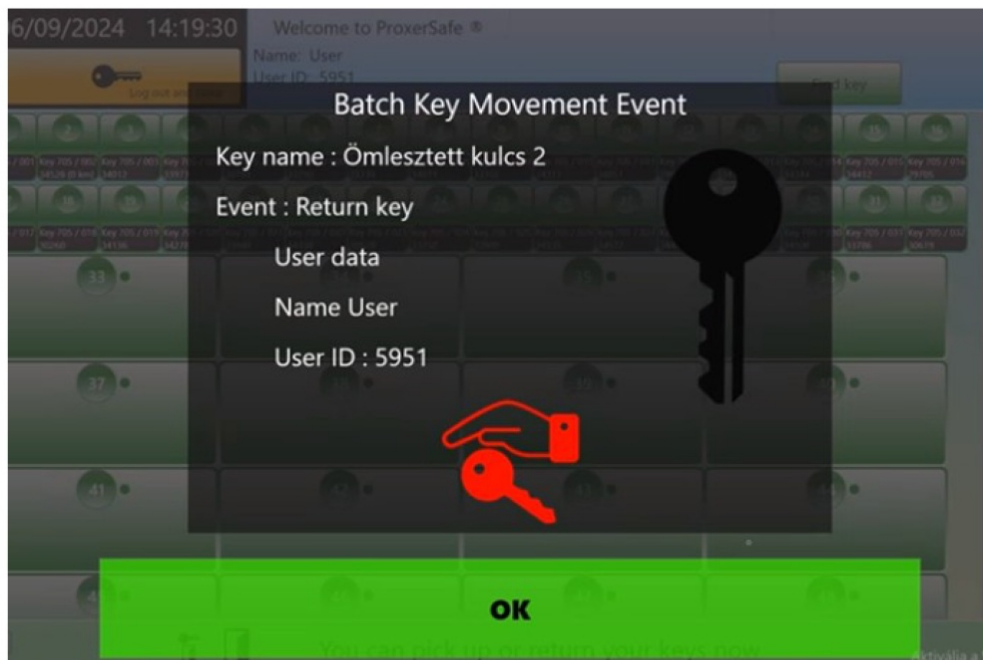


## Management on the WebAccess interface: Key transfer

The keys can be handed over away from the locker, without scanning their ID on the locker's reader as a drop-off event. The transfer is recorded on the WebAccess interface.

### Transfer process:

1. The person registering the keys must log in on the WebAccess interface.
2. Open the Key submissions menu item.
3. Select the recipient to whom the key will be sent.
4. Select the key(s) to transfer.
5. Save by pressing the Save button.

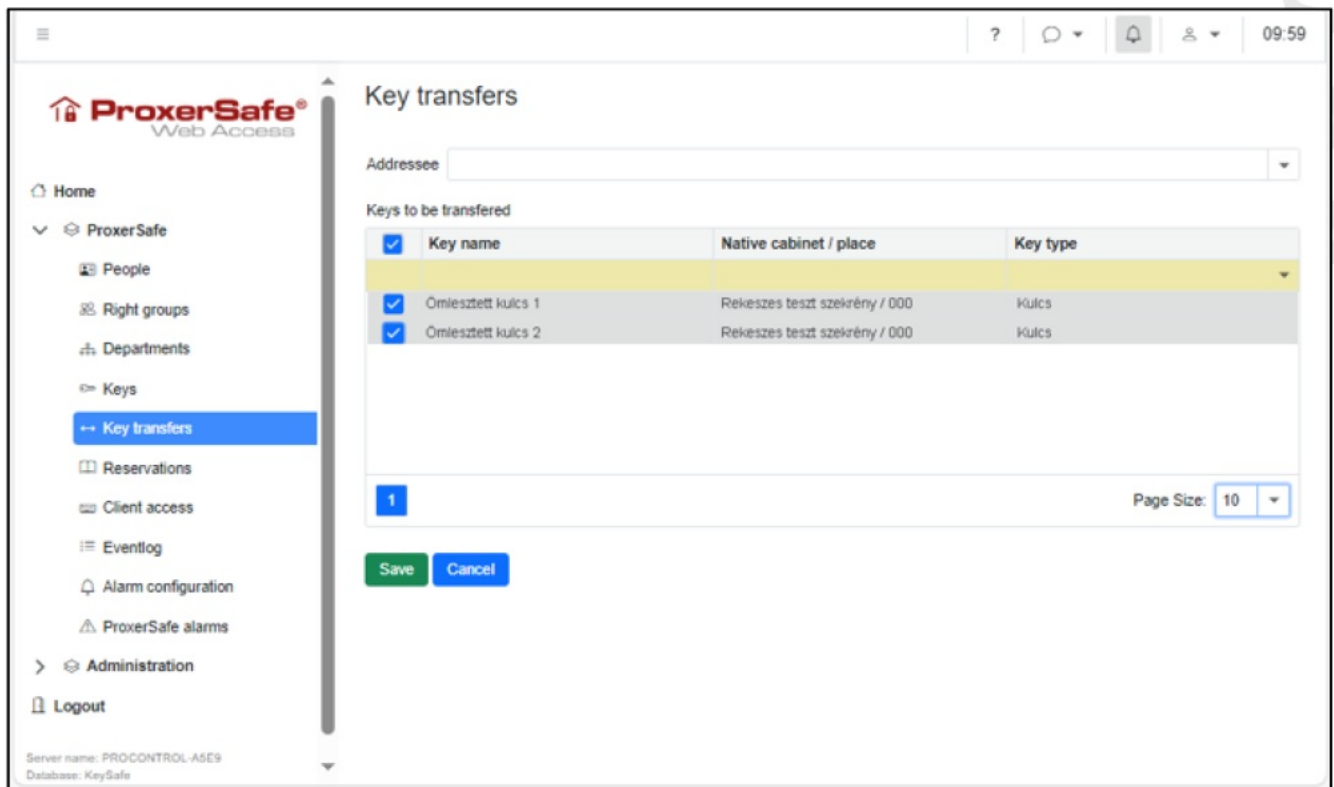

## Functions of the KeySafe Cabinet Software (KCS) for Admin users

### Key cards with admin rights

Two key cards are given with the cabinets, which have the rights to unlock all key positions and access the Admin menu. Owners of these cards have the rights to add new users into the system, manage all the keys and user rights per keys, set time and read event logs.

User cards can be also requested. These can be used to open the cabinet and certain key slots, if the rights are given to the card owner.



### Edit users

In the Users menu under the Admin menu you can add new users to the system or you can modify/delete an existing user. Tapping on a username, their data are shown on the right.

Welcome KeySafe ® 4/23/2015 3:37:38 PM Users

SaveCancel

Add newDelete

Id	Name			
5280	RÁCZ VIKTOR			
5286	Szegedi Béla			
5949	HODOR			
5950	D. Molnár Gergely			
5951	Poppy			
5952	Martin			

User data

Id:5280

Name:RÁCZ VIKTOR

Admin:☒ Admin

Pincode:••••

Pincode 2:••••

Pincode type:Permanent

Card number

Card number	Remove card
63055228	<input type="checkbox"/> Remove
137550350	<input type="checkbox"/> Remove
705347670	<input type="checkbox"/> Remove
222398030	<input type="checkbox"/> Remove
126024647	<input type="checkbox"/> Remove

Add new ->

Keyboard

## Add new user

You can add new users by pressing the “Add new” button.

0	New user			
---	----------	---	--	--

Enter new user’s data (ID, name, if user has admin privileges and card number. In the “Pincode” field

Welcome KeySafe ® 4/23/2015 3:52:45 PM Users

Save

Cancel

Add new

Delete

Id	Name			
5280	Rácz Viktor			
5286	Szegedi Béla			
5949	HODOR			
5950	D. Molnár Gergely			
5951	Poppy			
5952	Martin			
0	New user			

User data

Id: 0

Name: New user

Admin: ☐ Admin

Pincode:

Pincode 2:

Pincode type: Permanent

Card number

Remove card

Add new ->

Keyboard

## Modify a user

When you tap on a username, their data is shown on the right. You can edit those data (a pencil icon appears next to the username), and when ready, tap Save.

Welcome KeySafe ® 4/23/2015 3:38:09 PM Users

Save

Cancel

Add new

Delete

Id	Name			
5280	Rácz Viktor			
5286	Szegedi Béla			
5949	HODOR			
5950	D. Molnár Gergely			
5951	Poppy			
5952	Martin			

User data

Id: 5951

Name: Poppy

Admin: ☒ Admin

Pincode: ....

Pincode 2: ....

Pincode type: Supplementary

Card number

Remove card

Add new ->

Keyboard

## Delete a user


To remove a user, just select it, and press the Delete button (a waste-bin icon will appear next to the chosen username). Finally tap the Save button.

Welcome KeySafe ® 5/5/2015 9:51:48 AM Key edit Save Cancel

KeySafe box	Key place	Key name	RFID
Portal	1	Customer service	374772
Portal	2	Garden	375825
Portal	3	Garage	377930
Portal	4	Office	369906
Portal	5	Dressing-room	379841
Portal	6	Workshop	380530
Portal	7	Store-house	374433
Portal	8	Conference room	375033
Portal	9	Front-door	422433
Portal	10	FinancialOffice	422652
Portal	11	Garage	374750
Portal	12	Kitchen	422796
Portal	13	Reception	422639
Portal	14	KKC789 Lexus	365901
Portal	15	KSS233 Toyota	365902
Portal	16	IPO789 Mercedes	371392

Key name

RFID



If you want to delete a user with admin rights, first, you have to take away the admin rights. Then it is possible the delete the user. Otherwise, the system does not let you delete this user, and displays a warning message on the screen.

## Edit key rights

### Edit keys

You can change the name and modify the RFID number of a selected key in “Admin menu / Key edit” menu. Choose a key, modify its data and finally tap Save.

## Replacing RFID key holders

To replace a key holder, go to Admin Menu/Edit key menu, and delete the RFID number belonging to the key, and then plug in the new key holder into the right place. The RFID number of the new key holder will appear in the text box. Tap Save and start using the new RFID key holder plug.

### Assign keys to / revoke key rights from users

In Admin menu / Key rights you can assign key rights to users or revoke key rights from users. You can assign units to/revoke units from users in this menu point too.

If you click on a user name, a key list will appear on the right side. Mark the empty checkbox in the Authorized column, or unmark it if you need to revoke key rights from the user. Finally tap the Save button.

Welcome KeySafe ® 4/28/2015 2:31:53 PM Key rights				Save	Cancel
Id	Name	Authorized	Key place	Key name	
5280	Rácz Viktor	<input checked="" type="checkbox"/>	1	Customer service	
5286	Szegedi Béla	<input checked="" type="checkbox"/>	2	Garden	
5949	HODOR	<input checked="" type="checkbox"/>	3	Garage2	
5950	D. Molnár Gergely	<input type="checkbox"/>	4	Office	
5951	Poppy	<input type="checkbox"/>	5	Dressing-room	
5952	Martin	<input type="checkbox"/>	6	Workshop	
5955	Lisa	<input type="checkbox"/>	7	Store-house	
5956	Bobby	<input checked="" type="checkbox"/>	8	Conference room	
5957	George	<input type="checkbox"/>	9	Front-door	
		<input checked="" type="checkbox"/>	10	FinancialOffice	
		<input checked="" type="checkbox"/>	11	Garage	
		<input checked="" type="checkbox"/>	12	Kitchen	
		<input type="checkbox"/>	13	Reception	

## Time settings – Set clock

After a successful login as admin, you can set time and date or source of time and date.

Back

Admin menu

Edit

Users

Key rights

Key edit

Set clock

## Custom time setting

Selecting Custom Time, set date and time using “+” and “-” buttons and confirm by Set button.

Welcome to ProxerSafe® Admin 109/09/2024 13:45:50Set clockBack

☒ Custom Time☐ NTP (Network Time Protocol)

Year	Month	Day	Hour	Minute	Second
+	+	+	+	+	+
2024	9	9	13	45	18
-	-	-	-	-	-

Set

### Setting NTP time:



Welcome to ProxerSafe ® ! Offline Root ! 06/09/2024 14:33:01 Set clock Back

☐ Custom Time 
 ☒ NTP (Network Time Protocol)

☐ Default NTP Server Address  
 time.windows.com

☒ Custom NTP Server Address  
 time.windows.com

Last Successful Sync Time: 06/09/2024 12:07:17 NTP Sync

Time Zone: (UTC+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague ▾

Sync Frequency: 1 Hour

Keyboard

Save

Activating Windows

You can set the default NTP server Address or define custom NTP server address:

☐ Custom Time 
 ☒ NTP (Network Time Protocol)

☒ Default NTP Server Address  
 time.windows.com

☒ Custom NTP Server Address  
 0.hu.pool.ntp.org  
 8:30 NTP Sync

After selecting custom NTP server test it with NTP Sync. If test is successful, the cell will turn green,

☒ Custom NTP Server Address  
 0.hu.pool.ntp.org  
 8:34:17 NTP Sync

if incorrect, the cell will be show it as red background and an alarm will appear on screen:

☒ Custom NTP Server Address  
 0.hu.pool.ntp.org  
 8:02 NTP Sync

NTP resync failed: No time data available.  
 Save

Make sure you set correct time zone:

Time Zone: (UTC+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague

Sync Frequency: (UTC+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague

(UTC+01:00) Brussels, Copenhagen, Madrid, Paris

(UTC+01:00) Sarajevo, Skopje, Warsaw, Zagreb

(UTC+01:00) West Central Africa

(UTC+02:00) Amman

(UTC+02:00) Athens, Bucharest

(UTC+02:00) Beirut

(UTC+02:00) Cairo

(UTC+02:00) Chisinau

You can set synchronization frequency in hours:

Sync Frequency: 8 Hour

To return to the Admin menu, just tap Back.

## Event logs

### Check user event log

From Admin / Event log menu you can retrieve when and what keys have been taken out / returned by whom and any attempt of unauthorized cabinet door openings.

If you would like to retrieve the events within a specified time interval, just set the From (start date) and To (end date) fields and then press the Update button. Press the Back button if you would like to return to the Admin menu.

From:

4/28/2015

15

To:

4/28/2015

15

Update

Back

Eventlog

Date and time	KeySafe box	Device	Event code	Auth. Type	Name	Key name	Pick up place
4/28/2015 3:41:52 PM	Portal	Portal	(515) door left open	PIN code	Rácz Viktor		
4/28/2015 3:41:52 PM	Portal	Zár	(511) door lock locked u	PIN code	Rácz Viktor		
4/28/2015 3:54:01 PM	Portal	Portal	(502) valid PIN code	PIN code	Rácz Viktor		
4/28/2015 3:54:01 PM	Portal	Zár	(512) door lock opened	PIN code	Rácz Viktor		
4/28/2015 3:54:18 PM	Portal	Portal	(501) valid card reading	Card	D. Molnár Gerg		
4/28/2015 3:54:20 PM	Portal	Zár	(511) door lock locked u	Card	D. Molnár Gerg		
4/28/2015 3:54:32 PM	Portal	Zár	(512) door lock opened	Card	D. Molnár Gerg		
4/28/2015 3:54:57 PM	Portal	Portal	(515) door left open	Card			
4/28/2015 3:55:09 PM	Portal	Portal	(501) valid card reading	Card	D. Molnár Gerg		
4/28/2015 3:55:09 PM	Portal	Zár	(512) door lock opened	Card	D. Molnár Gerg		
4/28/2015 3:55:46 PM	Portal	Kulcsmodul 09-16	(540) pick up key	Card	D. Molnár Gerg	Garage	
4/28/2015 3:55:49 PM	Portal	Kulcsmodul 09-16	(542) return key	Card	D. Molnár Gerg	Garage	
4/28/2015 3:56:08 PM	Portal	Zár	(511) door lock locked u	Card	D. Molnár Gerg		
4/28/2015 3:56:37 PM	Portal	Portal	(502) valid PIN code	PIN code	Rácz Viktor		
4/28/2015 3:56:38 PM	Portal	Zár	(512) door lock opened	PIN code	Rácz Viktor		
4/28/2015 3:57:44 PM	Portal	Portal	(515) door left open	PIN code	Rácz Viktor		
4/28/2015 3:57:44 PM	Portal	Zár	(511) door lock locked u	PIN code	Rácz Viktor		
4/28/2015 3:58:01 PM	Portal	Portal	(502) valid PIN code	PIN code	Poppy		
4/28/2015 3:58:01 PM	Portal	Zár	(512) door lock opened	PIN code	Poppy		
4/28/2015 3:58:11 PM	Portal	Kulcsmodul 01-08	(540) pick up key	PIN code	Poppy	Store-house	
4/28/2015 3:58:17 PM	Portal	Kulcsmodul 09-16	(540) pick up key	PIN code	Poppy	FinancialOffice	
4/28/2015 3:58:19 PM	Portal	Kulcsmodul 01-08	(542) return key	PIN code	Poppy	FinancialOffice	
4/28/2015 3:58:22 PM	Portal	Kulcsmodul 09-16	(542) return key	PIN code	Poppy	Store-house	
4/28/2015 3:58:29 PM	Portal	Zár	(511) door lock locked u	PIN code	Poppy		
4/28/2015 3:58:50 PM	Portal	Portal	(502) valid PIN code	PIN code	Rácz Viktor		
4/28/2015 3:58:50 PM	Portal	Zár	(512) door lock opened	PIN code	Rácz Viktor		

1. Date and time when the event occurred
2. KeySafe cabinet
3. Device
4. Event code

5. Authorization Type
6. Name (username)
7. Key name
8. Pick-up place (location)

Press the column header if you would like to sort the rows by values in this column.

## **Reminder**

Reminder can be set in cases when key has not been returned to its location in a specified time. Setting of a reminder is described in the admin guide.

## **Monitoring – using other functions**

If users want to know for which keys they have rights, or check their own or others' event logs, they can ask for log query permission from the administrator. This way the users can check the logs on their own PC via Ethernet connection. More information is available in the ProxerNet software KeySafe module manual.

## **KeySafe cabinet – Questions and Answers**

### **What happens if someone tries to pick up a key with an unauthorized card?**

The locking mechanism prevents opening the cabinet. The cabinet gives an alarm beep, and logs the attempt.

### **What happens if I want to take more keys at the same time?**

One person can take out more keys at the same time. The event log records the key numbers, username and the date of removal.

### **What happens if I put the key back not to its own position, e.g., Key 22 into the slot of Key 30?**

The cabinet accepts the key and locks it. If someone needs the key 22, the key can also be removed from position 30.

Optionally the cabinet can check whether the key is in the right slot or not, and it can warn the person with a beep. For further information please read Keys in wrong key positions section.

### **What happens when a colleague of mine removed an authorized key, they gave it to me and I have to return it?**

You can return it. The key return event will be logged with your user ID by the cabinet.

### **What happens if someone does not close the safety door?**

If the door was left open and the timeout expired (by default 20 sec, but it can be adjusted), the cabinet gives a continuous beeping warning signal until the door is closed again.

## **Installation**

Installation guide is in the Administrator Manual.

Specialists of Procontrol Ltd. or its trained partners can install the device on a previously scheduled date.

## **Technical support**

Should you have any problems or need assistance, please contact us in email, if possible, and share all information related to the encountered problem in details. Thank you.

Procontrol Electronics Ltd.


[www.procontrol.hu](http://www.procontrol.hu)

6725 Szeged, Cserepes sor 9/b.

Tel: +36 (62) 444-007  
Fax: +36 (62) 444-181  
Email: [info\\_at\\_procontrol.hu](mailto:info_at_procontrol.hu)

**Error reports:**

Email: [service\\_at\\_procontrol.hu](mailto:service_at_procontrol.hu)

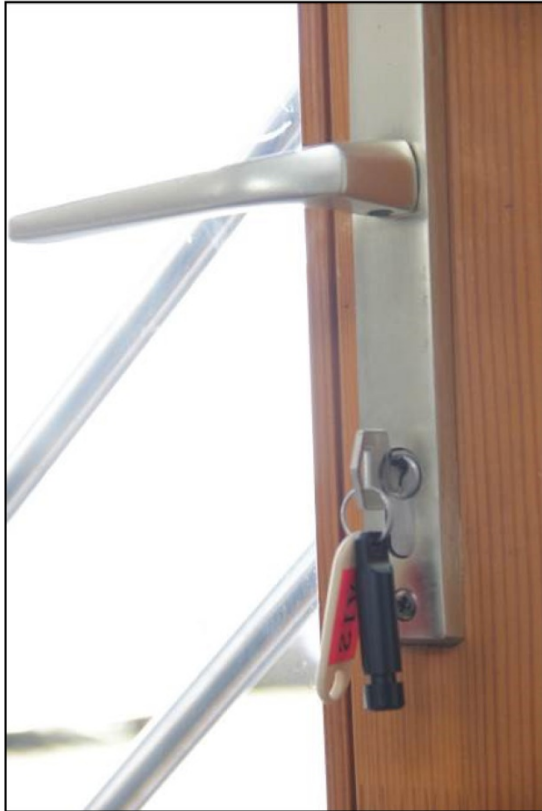

**Specifications:**

- Product Name: Procontrol KeySafe Lock
- Technology: RFID
- Manufacturer: PROCONTROL ELECTRONICS LTD
- Version: 14.0
- Date: September 2024

**PROCONTROL ELECTRONICS LTD**

[www.procontrol.hu](http://www.procontrol.hu)

---

**Frequently Asked Questions (FAQ)**

**Q: Is the Procontrol KeySafe Lock compatible with all RFID technologies?**

**A:** The Procontrol KeySafe Lock is designed to work with RFID technology-based safety key cabinet systems.


**Q: Can I use third-party power supplies with the Procontrol KeySafe Lock?**

A: It is recommended to use the power supply provided by the manufacturer to ensure proper functioning and safety.

**Q: How do I reset the Procontrol KeySafe Lock if I forget the access code?**

A: Please refer to the user manual for instructions on resetting access codes or contact customer support for assistance.

## Documents / Resources

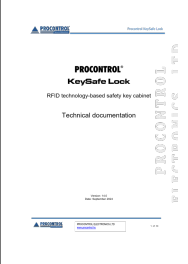	<p><a href="#">PROCONTROL Pro Control Key Safe Lock [pdf] User Guide</a> Pro Control Key Safe Lock, Key Safe Lock, Safe Lock</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.