


Pulsetv 9589 Wake-Up Light Alarm Clock User Manual

Home » Pulsetv » Pulsetv 9589 Wake-Up Light Alarm Clock User Manual

Wake-Up Light Alarm Clock User Manual

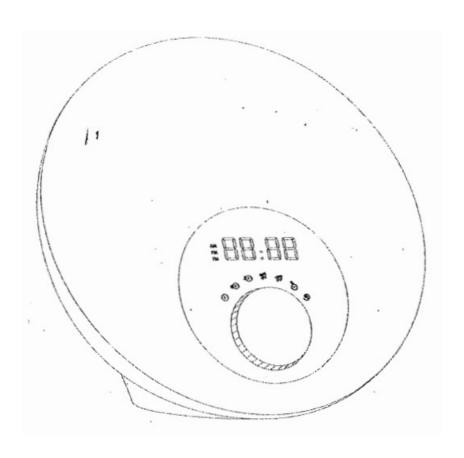

Contents


- 1 Product Diagram
- 2 What's In The Box
- 3 How to use
- 4 Button awitch
- **5 Specifications**
- 6 Documents /

Resources


7 Related Posts

Product Diagram

1. Touch switch

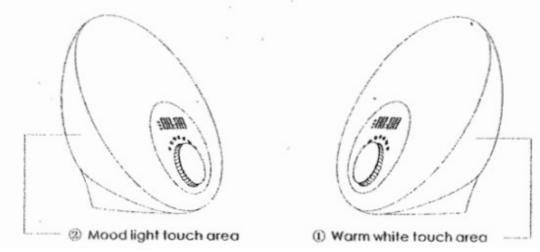


2. Knob switch

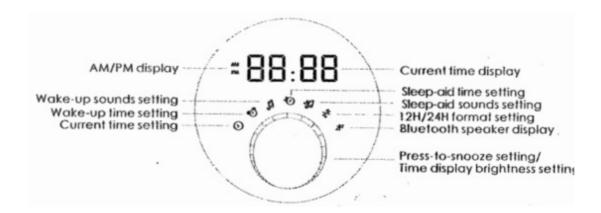

Knob Switch Setup

- Long press 1.5 secs to enter menu settings
- Turn left and right to select function setting
- · Press once to enter or confirm function setting
- · Press twice to exit menu settings
- When the alarm rings, press once to snooze for 9 minutes and press twice to turn off the alarm.
- In the standby status, press in and turn to adjust the time display brightness: 25%. 50%. 100%.

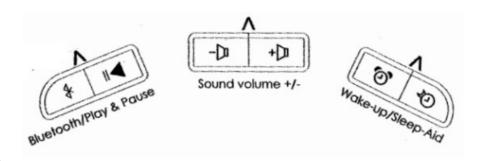

TOUCH ZONE 1

Mood light - Left Side

• Turn on/off: Pat twice

· Color selected: Press once to stop color change


· Color gradient: Press once to resume

TOUCH ZONE 2

Warm White Light - Right Side

• Turn on/off: Pat twice

· Dimming: Long press to activate

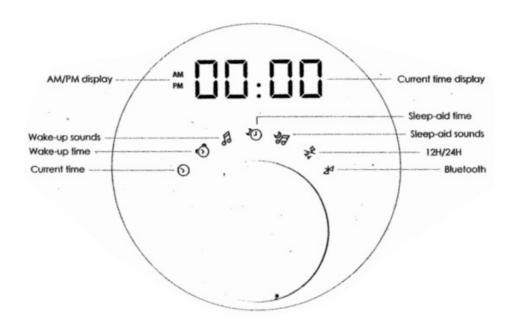

What's In The Box

1×Wake-Uplight	1×
1×Adapter	'^

How to use

Power on

Using the provided adapter to connect the lamp with the power socket, "AM 12:00" will be shown by default. Meanwhile, the other 7 icons will be shown in return, and they will disappear otter 1.5 seconds.

Knob switch setup:

Long press the knob switch for 1.5 secs to enter the menu settings. then complete each set by the following operations. Press twice to exit the menu settings or wait for 30 secs to let it exit automatically.

· Setting current time

Turn the knob switch to make the icon flash, then press the knob to enter the hours or minutes setting. Turn the knob to select hours or minutes. Finally, press the knob switch again to complete the settings.

Setting wake-up time

Turn the knob switch to make the icon flash, then press the knob switch to enter the hours or minutes setting, and then turn the knob switch again to select hours or minutes. Finally, press the. knob switch again to complete the settings.

Setting wake-up sounds

Turn the knob switch to make the icon definition flash, then press the knob switch to enter the wake-up sound setting, and then turn the knob switch again to select the sound from 6 sounds. Finally, press the knob switch again to complete the settings.

· Setting sleep-all time

Turn the knob switch to moke the icon flash, then press the knob switch to enter the minutes setting and then turn the knob switch again to select 5, 10, 15, 20. 25, 30 minutes. Finally, press the knob switch again to complete the settings.

· Setting sleep-aid sounds

Turn the knob switch to make the icon flash, then press the knob switch to enter the sleep-aid sound setting, and then turn the knob again to select the sound from 4 sounds. Finally, press the knob switch again to complete the settings.

Setting 12H/24H time format

Turn the knob switch to make the icon ²⁴ flash, then press the knob switch to enter the 12H/241-1 time format setting, and then turn the knot) switch again to select 12 or 24. Finally, press the knob switch again to complete the settings.

· Setting the time display brightness

Press once the knob switch in turn to sot the brightness to 25%. 50% or 100%.

Button switch setup

Bluetooth speaker on/off

• Turn on: Press the button to turn on the Bluetooth pairing, the icon will flash on the screen, and the paring time is limited to 15 minutes. the icon will stop flashing and display on the screen when the Bluetooth is connected successfully. 3 kinds of warning tones will be played: "Turn on" "Connected" and "Turn off" the Bluetooth.

• Play/Pause: Press the button to play or pause the Bluetooth (unction.

- Move Previous/Move Next: Turn the knob switch clockwise or counterclockwise to go forward or the back.
- Turn off: Press the button to turn off the Bluetooth speaker, the icon will disappear on the display screen.

Sound volume +/-

Turn up: Press the button to turn up the volume from 0 to 10 levels.

Turn down: Press the button to turn down the volume from 10 to 0 levels.

· Wake-up on/off

- Turn on: Press the button to activate wake-up functions, the button will be shown on the display screen. The warm white will gradually brighten 30 minutes before the alarm clock time. It will reach the brightest level at the alarm clock time.
- The alarm clock will ring for 20 minutes only once. After, the sound volume will turn up gradually, and it will reach the highest volume after 30 seconds. Then it will go off after ringing for 20 minutes if the snooze button is not pressed. Meanwhile, the warm white will also be off at this lime.
- Press to snooze: When the alarm clock rings, press the switch to snooze for 9 minutes. the button will flash frequently for 9 minutes. Press the knob switch twice to turn off the alarm clock and warm white. There is no limit to how many times you press the knob switch for snoozing.
- Turn off: Press the button on the top to cancel the wake-up functions. the button will disappear on the display screen.

Steep-old on/off

- Turn on: Press the button to turn on the sleep-aid sound, the button will be shown on the display screen. The sound will be turned down gradually until it disappears at the sleep-aid time. If the warm white is turned on. it will dim gradually until completely off at the end of the sleep-aid time. If the mood light is on, it will also, turn off at the steep-aid time.
- Turn off: Press the button again to turn off the sleep-aid sound. the button will disappear on the display screen.

Touch switch setup

Warm white mode

• Turn on: Pat the touch area twice 1 to turn on the warm white.

Brightness adjustable: Long press the touch area to adjust the desired brightness. Once the max/min brightness value is reached, please remove your hands.

Then, long-press the touch area again to adjust the brightness accordingly.

• Turn off: Pat the touch area twice to turn off the warm white.

· Mood light mode

- Turn on: Pat the touch area twice 2 to activate automatic color changing.
- Color selection: Pat the touch area once to select your favorite color.
- Color gradient: Pat the touch area once again to return to cold changing.
- Turn off: Pat the touch area twice, to turn off the mood light.
- The warm white and mood light cannot work at the same time. Both the worm white and mood light have

memory functions and can memorize preset brightness or color.


Backup Power

• In the event of a power toss, this product will still be powered by the included 3V Lithium button battery. Time, alarm clock, and Bluetooth functions are able to function normally.

5 Year Best In-class Warranty

We guarantee that your product will be tree from defects In material or workmanship for a period of 5 years from the date of purchase. If any such defect is discovered within the warranty period, Adomox inc. at its discretion. will replace the product at no cost. For warranty service or questions about your product, please feel free to email cs@adamaxinc.com or coil us at 510- 895 – 1881.

Button awitch

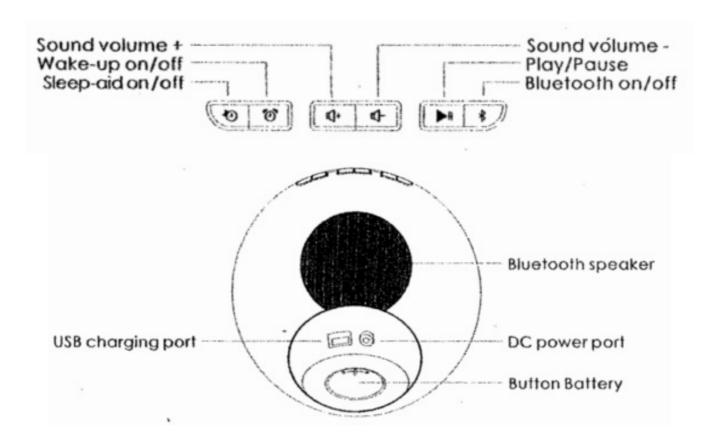

Specifications

Power	5W
Light source	LED SMD2835 27Pcs+RGB SMD5050 12Pcs
Color temperature	2700K (Not adjustable)
Warm white setting	1%-100% Brightness adjustable (Stepless dimming)
Mood light setting	256C living color light (Single color, color gradient)
Adapter specification	Input: AC 100-240V; Output: DC 12V, 1.5A
Wake-up time setting	Setting hours & minutes
Sleep-aid time setting	Setting 5,10,15,20,25.30 minutes
Power snooze time	9 minutes
Wake-up/Aid-sleep sounds	6 sounds/4 sounds
Sound volume	0-10 levels
Power back up	210mAh button battery (CR2032)
Bluetooth speaker	Yes
Time display format	121-1/24H
Time display brightness	25%/50%/100%
Lamp materials	ABS+PMMA
Lamp color	White
Lamp size.	Ф 180*H I58mm

Documents / Resources



<u>Pulsetv 9589 Wake-Up Light Alarm Clock</u> [pdf] User Manual 9589, Wake-Up Light Alarm Clock

Manuals+,