

Qilive Q.5417 Smoothie Maker



Qilive Q.5417 Smoothie Maker User Manual

[Home](#) » [Qilive](#) » Qilive Q.5417 Smoothie Maker User Manual 

Contents

- 1 Qilive Q.5417 Smoothie Maker
- 2 TECHNICAL SPECIFICATIONS
- 3 PRODUCT DESCRIPTION
- 4 BEFORE FIRST USE
- 5 OPERATION
- 6 CLEANING AND CARE
- 7 Documents / Resources
 - 7.1 References

Qilive

Qilive Q.5417 Smoothie Maker



SAFETY INSTRUCTIONS

Before using the appliance, read this instruction manual carefully and keep it in a safe place for future reference.


1. Never misuse, otherwise may cause potential injury.
2. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
3. The max. Operating time is 30 seconds.
4. Care shall be taken when handling the sharp cutting blades, emptying the bowl, and during cleaning.
5. Do not use the appliance for any purpose other than its intended use.
6. Power the appliance from an outlet that provides the voltage marked on the appliance.
7. Always unplug the USB-C charging cable and adapter plug after charging, before assembling, disassembling, or cleaning, and when unattended. Pull the adapter plug to remove it. Do not pull the cable.
8. Do not immerse the base, USB-C charging cable or adapter plug in water or any other liquid.
9. The blades of this appliance are extremely sharp and must be handled carefully.
10. Do not place the appliance on or near a hot gas flame, electric element, or a heated oven. Do not place the appliance on top of other electrical appliances.

11. The appliance is only suitable for use in temperate climates.
12. Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.
13. Do not let the USB-C charging cable hang over the edge of a table or bench top or touch any hot surface.
14. Do not operate the appliance if it has been dropped or damaged in any manner.
15. If the USB charging cable or adapter plug is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
16. Do not use the appliance with an extension cord unless the cord has been checked and tested by a qualified technician or service person.
17. The appliance must not be exposed to humidity, splashes, or other liquids. Do not place any objects that contain liquid (such as vases or glasses) on or near the appliance.
18. When the power socket serves as the means to disconnect the appliance, the power socket must remain easily accessible.
19. This symbol indicates that the materials are approved for contact with food.
20. The marking of this device (symbol of a crossed-out dustbin) complies with European Directive 2012/19/EU relating to „used electrical and electronic equipment“. This marking means that this equipment, at the end of its useful life, cannot be disposed of with other household waste. The user is required to deliver it to operators who collect used electrical and electronic equipment. Collection operators, including local collection points, shops, and local authorities, create an appropriate system for collecting equipment. Appropriate collection of used electrical and electronic equipment helps avoid harmful impacts on human health and the environment, resulting from the presence of hazardous components, as well as from improper storage and treatment of this equipment.
21. This symbol means that the appliance features double electrical insulation between the power supply voltage (hazardous) and the parts that are accessible to the user.
22. For cleaning surfaces that come into contact with food or oil, follow the details in the “Cleaning and Care” section.
23. The battery must not be charged in temperatures higher than 45°C.
24. Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
25. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, or cleaning.
26. **WARNING:** To recharge the battery, only use the detachable supply unit provided with this appliance.
27. This appliance contains non-replaceable batteries.
28. The appliance is only to be used with the power supply unit provided with the appliance.
29. If the pins of the plug parts are damaged, the plug-in power supply shall be scrapped.
30. Detachable supply unit.
31. If the external flexible cable or cord of this transformer is damaged, it shall be replaced by the manufacturer or their service agent or a similarly qualified person to avoid a hazard.
32. This product must not be disposed of or recycled with other household waste when it reaches the end of its useful life. Batteries must be disposed of by disposal regulations. Please take batteries to a dedicated recycling center, for them to dispose of them in an environmentally friendly manner.

TECHNICAL SPECIFICATIONS

Input voltage:	100-240V
Output voltage:	DC5V / 1A
Charging cable:	TYPE-C /1.2m
Cup capacity:	Maximum level prior to blending 350ml Maximum level after blending 480 ml
Protection class:	Class II
Output power:	5 W
Frequency:	50/60 Hz
Operating times:	30 seconds max./time
Motor speed:	16000±15%RPM
Supply unit model:	RY15K050100EU
Average active efficiency:	74.71%
Efficiency at low load (10%):	/
No-load power consumption:	0.05 W
Manufacturer:	Dongguan Reyi Power Electronics Co. Ltd. The five floor, No. A Building, Huixing Industrial Park Yangwu Village, Dalingshan Town, Dongguan, Guangdong.

PRODUCT DESCRIPTION

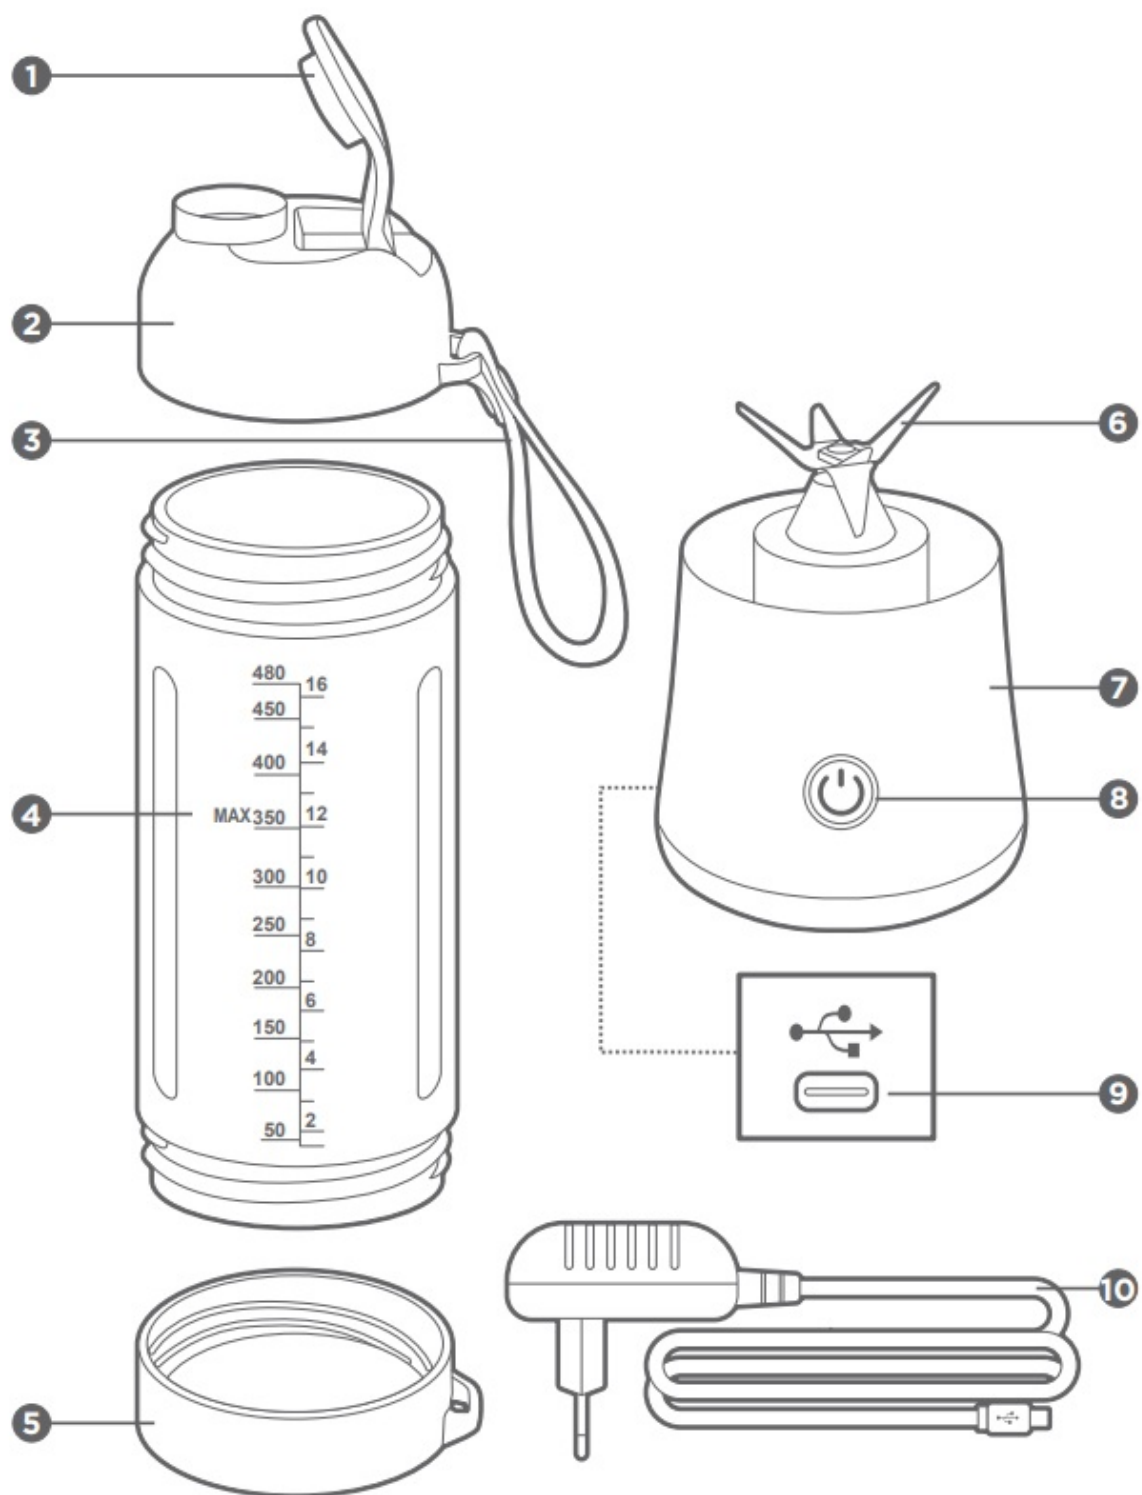

1. Drinking spout cover
2. Lid
3. Handle strap
4. Cup with MAX mark
5. Cup base cover
6. Blade
7. Base
8. ON/OFF button with indicator light
9. USB-C charging socket
10. USB-C charging cable with adapter plug

BEFORE FIRST USE

UNPACKING

1. Unpack the appliance and all the accessories.
2. Check for damage that may have occurred during transport. If the appliance or any accessory is damaged or missing, do not use the appliance and return it to the dealer immediately.
3. Before first use, follow the instructions in the **CLEANING AND CARE** section to clean all parts.

CHARGING THE SMOOTHIE MAKER

1. Connect the adapter plug to the power socket.
2. Attach the other end of the cable to the USB-C charging socket on the base.
3. The indicator light turns constantly red when charging and becomes constantly white when the smoothie maker is fully charged.
4. Charge the smoothie maker for 4 hours before first use. It takes up to 4 hours to fully charge the appliance.
5. When the battery is low, the indicator light displays red for 30 seconds.
6. The smoothie maker can be used during charging.

OPERATION

WARNING

- Always turn off and disconnect the appliance from the power outlet, before leaving the appliance unattended, assembling, disassembling, cleaning, and after use.
- Sharp spinning blades. Risk of serious injury! Never put your hands into the cup when it is attached to the base.
- Always use the smoothie maker with the lid in place.

USING THE SMOOTHIE MAKER

Place the appliance on a flat, stable, level, and dry countertop.

1. Make sure the smoothie maker is disconnected from the power outlet.
2. Unscrew the cup base cover if it is attached to the cup.
3. Screw the cup onto the base making sure it is firmly secured into place.
4. Put the solid and then liquid ingredients in the cup. Do not exceed the maximum level (MAX) indicated on the cup (350 ml).
5. Screw the lid onto the cup making sure the drinking spout cover is firmly closed.
6. Press the ON/OFF button twice to turn the smoothie maker on and start blending.
 - The white indicator light turns on during blending.
 - Each blending cycle lasts 30 seconds.
 - The white indicator light flashes 5 times to indicate the cycle is ending and then turns off.
7. Press the ON/OFF button to stop blending at any time.
 - The white indicator light will turn off.
8. Press and hold the ON/OFF button to start pulsing ingredients and release it to stop pulsing. After the first pulse, you can press the ON/OFF button to pulse again as long as it is within 5 seconds from the previous

pulse. The maximum time for pulsing is 30 seconds.

9. If no function is in use for 5 seconds, the smoothie maker automatically turns off.

IMPORTANT: To avoid overheating the appliance, allow the smoothie maker to rest for at least 20 minutes after 3 consecutive blending cycles.

10. When you have finished blending if connected, remove the USB-C charging cable from the base and unplug the adapter plug from the power socket. You can either unscrew the lid and pour the ingredients into a glass or you can turn the whole appliance upside down so the base is at the top. Unscrew the base from the cup and then screw the cup base cover onto the cup. Your smoothie is now ready to travel anywhere with you.

DISLODGING FOOD

If food becomes lodged around the blades and the blending suddenly slows down or stops and the indicator light flashes red 10 times:

1. Turn off and disconnect the USB-C charging cable (if connected) from the appliance and the power outlet.
2. Remove the cup from the base.
3. Use a soft spatula to dislodge the food around the blades. Never use your fingers. You can also, remove some solid ingredients and add more liquid to help the blades move freely.

TIPS

- The smoothie maker can be used to make juices and smoothies.
- Wash, peel, and core fruits and vegetables (as necessary) and cut them into 1 x 1 cm pieces.
- Pulse the ingredients when crushing ice cubes in a smoothie. Only crush ice when there are liquids in the smoothie maker.
- To prevent damaging the appliance, do not:
 - blend hard foods, such as nuts or dried legumes, without any liquid in the smoothie maker.
 - We recommend soaking nuts or legumes before blending;
 - place the cup in a microwave or freezer;
 - blend hot foods.

CLEANING AND CARE

WARNING


- Before cleaning, turn off and disconnect the appliance from the power outlet. Allow it to cool down.
- To avoid electrical hazards, never immerse the base or the USB-C charging cable and adapter plug in water or any other liquid. Never rinse them under the tap.
- **CAUTION:** The blades are sharp! Keep hands away from the exposed blades! Take care when handling the base especially when the cup is not attached and the blades are exposed. The blades can cause severe injury if touched.
- The cup, lid, and base cover are dishwasher safe but they must NOT be placed on a heated, dry dishwasher cycle. The base is NOT dishwasher safe.

IMPORTANT: Do not use solvents, chemical or abrasive cleaning agents, wire brushes, sharp objects or scouring pads to clean the appliance or its accessories. Clean the appliance after each use.

- Rinse the jar and lid immediately after blending to prevent food from hardening and to make cleaning easier.

- Blade: Fill the cup to the MAX mark with warm water and a little dish soap. Close the lid and blend for 1 cycle (30 seconds). Repeat this process twice with clean warm water and no dish soap.
- Cup, lid, and cup base cover: Unscrew the cup from the base or the cup base cover and detach the lid from the cup. Wash these parts with warm soapy water and a soft sponge. Rinse well.
- Base: Wipe the exterior with a soft damp cloth.
- Dry all parts thoroughly and then reassemble the appliance immediately after cleaning to ensure that the blades are not exposed.
- Store the appliance out of the reach of children and pets in a dry, dust-free environment away from direct sunlight.

Documents / Resources

	Qilive Q.5417 Smoothie Maker [pdf] User Manual Q.5417 Smoothie Maker, Q.5417, Smoothie Maker, Maker
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.