



[Home](#) » [Raychem](#) » **Raychem Elexant 450c-Modbus Modbus Protocol Interface Mapping User Manual** 

Raychem Elexant 450c-Modbus Modbus Protocol Interface Mapping User Manual

September 1,
2025

Raychem

Contents [[hide](#)]

1 Elexant 450c-Modbus

1.1 Modbus Protocol Interface Mapping

1.1.1 1. INTRODUCTION

1.1.1.1 1.1 How to Use This Manual

1.1.1.2 1.2 Modbus Communications

1.1.2 2. MODBUS REGISTER MAP

1.1.2.1 2.1 Alarm Status Coils

1.1.2.2 2.2 Controller Setup Parameters

1.1.2.3 2.3 Controller Status

1.1.2.4 2.4 INPUT Parameters

1.1.2.5 2.5 Temperature Sensor Parameters

1.1.2.6 2.6 Override

1.1.2.7 2.7 Controller's Identification Tag

1.1.2.8 2.8 Console Parameters

1.1.2.9 2.9 Temperature Sensor Parameters

1.1.2.10 2.10 General Controller Information

1.1.2.11 2.11 Dynamic Output Status

1.1.2.12 2.12 Analog Readings

1.1.2.13 2.13 Disclaimer

2 Documents / Resources

2.1 References

Elexant 450c-Modbus

Modbus Protocol Interface Mapping

Firmware version V2.1.1



chemelex

1. INTRODUCTION

This manual details the Modbus registers of the Raychem Elexant 450c-Modbus. It is intended to be used by the users' system integrators who wish to interface with their external device (i.e. DCS or Building management system -BMS- system) to the using the Modbus protocol. The manual includes details of the system's current configuration, availability resources, set-up parameters, current conditions, alarm status, log info and numerous other fixed and variable data points.

1.1 How to Use This Manual

The Elexant 450c-Modbus register can be accessed by DCS or BMS systems. However, this should only be done by expert users who understand that the system makes use of extensive semaphore fields to assure synchronization between the possibility of multiple users and conflicting instructions. These portions of the Modbus register map provide access to the current set-up and real time values being measured by the system. A snap shot of the current conditions, data for trending, alarm status, the current setting for the alarm thresholds and setpoints can be easily read without any risk to the system performance.

The entire Modbus register map is included in this document for completeness. Writing to the database is within the capability of most Modbus host devices. However, we strongly recommend that system integrators who write to the database must thoroughly test their system to ensure it is working properly and that there are no unintended

consequences.

1.2 Modbus Communications

The controller acts as Modbus slave device. A modbus master device can read and write to the controller. This enables the possibility to monitor, configure and view the alarms remotely. The protocol used is Modbus RTU via RS485.

Vari able	Description	Def aul t	Range/option s
Add ress	Modbus Station Address used to identify the controller.	1	1 to 247
Bau d	The data rate at which communications occur on the seri al network.	96 00	2400, 4800, 9 600, 19200
Parit y	Parity Defines the type of parity bit to be used with any o f the three serial communications ports.	No ne	None, Odd, E ven
Sto p Bit s	Defines the number of stop bits used with any of the thre e serial communications ports.	1	1,2

The host defaults are:

- Modbus Address: 1
- Baud Rate: 9600


The standard configuration is: 8 data bits, no parity and one stop bit.

The dip switches (below terminal 26 and 27):

Button	Resistor
---------------	-----------------

1 –	Pull down resistor
2 –	Pull up resistor
3 –	Termination resistor

Push the button to ON (as the arrow indicates) side will connect the corresponding resistor in.

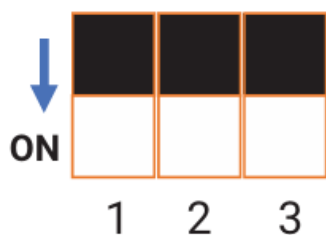

2. MODBUS REGISTER MAP

2.1 Alarm Status Coils

Modbus Function Code: 1

Modbus Start Address: 0

Modbus Block Size: 17

Number of Blocks: 1

Description	Modbus Address	Function	Comments
High TS 1 Alarm	0	1	0 = no alarm, 1 = alarm
Low TS 1 Alarm	1	1	0 = no alarm, 1 = alarm
TS 1 Failure	2	1	0 = no alarm, 1 = alarm
High TS 2	3	1	0 = no alarm, 1 = alarm

Low TS 2	4	1	0 = no alarm, 1 = alarm
TS 2 Failure	5	1	0 = no alarm, 1 = alarm
Internal Error	15	1	0 = no internal error, 1 = internal error
Panel Alarm statuses	16	1	0 = no alarm, 1 = alarm

2.2 Controller Setup Parameters

Modbus Function Code: 1,5,15

Modbus Start Address: 145

Modbus Block Size: 9

Number of Blocks: 1

Description	Modbus Address	Function	Comments
TS1 Fail Mode	145	1, 5, 15	0 = Fail off, 1 = Fail on
TS2 Fail Mode	146	1, 5, 15	0 = Fail off, 1 = Fail on
Test Program	147	1, 5, 15	0 = no, 1 = yes, test program is running
Alarm Buzzer	148	1, 5, 15	0 = no, buzzer off 1 = yes, buzzer on
TS1 high alarm feature off	149	1, 5, 15	0 = alarm active, 1 = alarm deactive

TS1 high alarm feature off	150	1, 5, 15	0 = alarm active, 1 = alarm deactive
TS1 low alarm feature off	151	1, 5, 15	0 = alarm active, 1 = alarm deactive
TS1 low alarm feature off	152	1, 5, 15	0 = alarm active, 1 = alarm deactive
Panel Alarm Control	153	1, 5, 15	0 = alarm deactive, 1 = alarm active

2.3 Controller Status

Modbus Function Code: 2

Modbus Start Address: 3

Modbus Block Size: 3

Number of Blocks: 1

Description	Modbus Address	Function	Comments
Raw Switch Output 1	3	2	0 = HC1 relay off, 1 = HC1 relay on
Keylock Status	4	2	0 = no, 1 = yes, locked
Raw Switch Output 2	5	2	0 = HC2 relay off, 1 = HC2 relay on

2.4 INPUT Parameters

Modbus Function Code: 3, 6, 16

Modbus Start Address: 0

Modbus Block Size: 20

Number of Blocks: 1

Description	Modbus Addresses	Function	Comments	Units	Scaling
Control Temperature Setpoint 1	0	3, 6, 16	0°C to 80°C (0°C to 245°C for PT100)	°C	10ths*
PASC Minimum Pipe Size 2	1	3, 6, 16	10, 15, 20, 25, 32, 40, 50, 60, 70, 80, 100, 125 if invalid value 25 is used	DN	1
Switch Control Mode	2	3, 6, 16	4 = Line/Line, 5 = PASC/PASC, 6 = Line/PASC, 7 = PASC/Line, 8 = Line/OFF, 9 = PASC/OFF, 10 = OFF/Line, 11 = OFF/PASC, 12 = OFF/OFF	—	1
Deadband 1	3	3, 6, 16	1.0°C to 5°C	°C	10ths*
PASC Minimum Ambient Temperature 1	4	3, 6, 16	-40°C to 0°C	°C	10ths*
PASC Minimum Pipe Size 1	5	3, 6, 16	10, 15, 20, 25, 32, 40, 50, 60, 70, 80, 100, 125 if invalid value 25 is used	DN	1
PASC Power Adjust	6	3, 6, 16	70,80,90,100,110,120,130,140	%	1

Sensor Setup	7	3, 6 , 16	bit 1 = TS 1 assign for Circuit 1 bit 2 = TS 2 assign for Circuit 1 bit 5 = TS 1 assign for Circuit 2 bit 6 = TS 2 assign for Circuit 2 bit 0,3,4,7 = NA 0 = No (No select) 1 = Yes (Select)	–	1
Language	8	3, 6 , 16	0 = DANISH, 1 = GERMAN, 2 = DUTCH, 3 = ENGLISH, 4 = FRENCH, 5 = ITALIAN, 6 = SWEDISH, 7 = NORWEGIAN, 8 = FINNISH, 9 = RUSSIAN, 10 = CZECH, 11 = POLISH	–	1
Country	9	3, 6 , 16	0 = GERMANY, 1 = AUSTRIA, 2 = SWITZERLAND, 3 = UK, 4 = FRANCE, 5 = ITALY, 6 = POLAND, 7 = CZECH_REPUBLI C, 8 = DENMARK, 9 = BELGIUM, 10 = RUSSIA, 11 = CHINA, 12 = JAPAN, 13 = SWEDEN, 14 = NORWAY, 15 = LITHUANIA, 16 = SLOVAKIA, 17 = NETHERLAN DS, 18 = FINLAND, 19 = IRELAND	–	1
Cable type 1	10	3, 6 , 16	0 = 10XL2_ZH, 1 = 15XL2_ZH, 2 = 26XL2_ZH, 3 = 31XL2_ZH, 4 = FS_C10_2X, 5 = OTHER	–	1
Cable type 2	11	3, 6 , 16	0 = 10XL2_ZH, 1 = 15XL2_ZH, 2 = 26XL2_ZH, 3 = 31XL2_ZH, 4 = FS_C10_2X, 5 = OTHER	–	1

Deadband 2	12	3, 6 , 16	1.0°C to 5°C	° C	10t hs *
Date-Year	13	3, 6 , 16	00 – 99	ye ar	1
Date-Month	14	3, 6 , 16	1 – 12	m o n t h	1
Date-Day	15	3, 6 , 16	1 – 31	d ay	1
Time-Hour	16	3, 6 , 16	0 – 23	h o ur	1
Time-Minute	17	3, 6 , 16	0 – 59	mi n ut e	1
Control Temperature Setpoint 2	18	3, 6 , 16	0°C to 80°C (0°C to 245°C for PT100)	° C	10t hs *
PASC Minimum Ambient Temperature 2	19	3, 6 , 16	-40°C to 0°C	° C	10t hs *

* Temperature displayed in 1/10th of °C (example: 10°C = 100)

2.5 Temperature Sensor Parameters

Modbus Function Code: 3, 6, 16

Modbus Start Address: 20

Modbus Block Size: 4

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
High TS 1 Alarm Set point**	20	3, 6, 16	2°C – 90°C (2°C to 250°C for PT100)	°C	10ths*
Low TS 1 Alarm Set point**	21	3, 6, 16	-40°C – 78°C (-40°C to +245°C for PT100)	°C	10ths*
High TS 2 Alarm Set point**	22	3, 6, 16	2°C – 90°C (2°C to 250°C for PT100)	°C	10ths*
Low TS 2 Alarm Set point**	23	3, 6, 16	-40°C – 78°C (-40°C to 245°C for PT100)	°C	10ths*

* Temperature displayed in 1/10th of °C (example: 10°C = 100)

** Can be disabled through section 2.2

2.6 Override

Modbus Function Code: 3, 6, 16

Modbus Start Address: 34

Modbus Block Size: 2

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
Remote Override Status 1	34	3, 6, 16	0 = Override not active 1 = Force on Override active 2 = Force off Override active	—	—
Remote Override Status 2	35	3, 6, 16	0 = Override not active 1 = Force on Override active 2 = Force off Override active	—	—

2.7 Controller's Identification Tag

Modbus Function Code: 3, 6, 16

Modbus Start Address: 90

Modbus Block Size: 10

Number of Blocks: 1

Desc ription	Mo db us Ad dr es s	F u n c ti o n	Comments	U n i t s	S c a l i n g
-----------------	---------------------------------------	----------------------------------	----------	-----------------------	---------------------------------

Controller's Identification Tag	90 to 99	3, 6, 16	Letters(A-Z) numbers(0-9), /.()_-# Two characters per address. String terminators = Null or space Note: LSByte of 99 is always Null. Input the ascii code for the characters above, for example, input 0x4142 (Hex or 16706 in Dec) for register 90, and 0x3031 (in Hex or 12337 in Dec) for register 91, then the controller ID will be AB01.	—	—
---------------------------------	----------	----------	--	---	---

2.8 Console Parameters

Modbus Function Code: 3, 6, 16

Modbus Start Address: 120

Modbus Block Size: 2

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
Keylock Passcode	120	3, 6, 16	1 to 9999: Incorrect passcode input will be ignored, and correct input will be valid for 2 minutes. (used to enter the code to unlock access to register 121)	—	—
Lock Enable/Disable	121	3, 6, 16	0 = Keylock inactive, 1 = Keylock active	—	—

2.9 Temperature Sensor Parameters

Modbus Function Code: 3, 6, 16

Modbus Start Address: 147

Modbus Block Size: 1

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
Communications Activity Time-out	147	3, 6, 16	Used for load shedding and remote override 0-255	sec	1

2.10 General Controller Information

Modbus Function Code: 4

Modbus Start Address: 0

Modbus Block Size: 4

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
Device Type	0	4	Fixed value = 450	—	1
Firmware Version	1	4	Firmware Version-Major 0-255	—	1
Firmware Version	2	4	Firmware Version-Minor 0-255	—	1

Firmware Version	3	4	Firmware Version-Build 0-255	—	1
------------------	---	---	------------------------------	---	---

2.11 Dynamic Output Status

Modbus Function Code: 4

Modbus Start Address: 50

Modbus Block Size: 15

Number of Blocks: 1

Description	Modbus Address	Function	Comments	Units	Scaling
Control Output Duty Cycle 1	50	4	0 = full off, 100 = full on	%	1
Tracing Control Status	51	4	2 digits, the first for circuit 1 and the second for circuit 2 (for example, 0 means both are normal, 15 means circuit 1 = force off, circuit 2 = force on) 0 = normal temperature control 1 = output override force off 2 = test program in progress 5 = output override force on	—	1

PASC On-Count 1	52	4		s e c	1
PASC Off-Count 1	53	4		s e c	1
PASC Next Switch Count 1	54	4		s e c	1
PASC Percent On 1	55	4	0 = full off, 100 = full on	%	1
PASC Output State 1	56	4	0 = Off, 1 = On	–	1
PASC Total Time 1	57	4		s e c	1
Control Output Duty Cycle 2	58	4	0 = full off, 100 = full on	%	1
PASC On-Count 2	59	4		s e c	1

PASC Of f-Count 2	60	4		s e c	1
PASC N ext Switc h Count 2	61	4		s e c	1
PASC P ercent O n 2	62	4	0=full off, 100=full on	%	1
PASC O utput Sta te 2	63	4	0 = Off, 1 = On	–	1
PASC To tal Time 2	64	4		s e c	1

2.12 Analog Readings

Modbus Function Code: 4

Modbus Start Address: 81

Modbus Block Size: 2

Number of Blocks: 1


Description	Modbus A ddress	Func tion	Comments	U nit s	Sca ling
-------------	--------------------	--------------	----------	---------------	-------------

Current TS 1 Temperature	81	4	TS 1 failure = +3000.0°C TS 1 not used = +3200.0°C	°C	10th s*
Current TS 2 Temperature	82	4	TS 2 failure = +3000.0°C TS 2 not used = +3200.0°C	°C	10th s*

* Temperature displayed in 1/10th of °C (example: 10°C = 100)

2.13 Disclaimer

MODBUS map information is proprietary and confidential. Use of this information is permitted solely in order to implement a communications link between customer equipment and Raychem controllers. It may not be used for any other purpose, and it is not to be disclosed to 3rd parties without the written consent of Chemelex Thermal LLC.

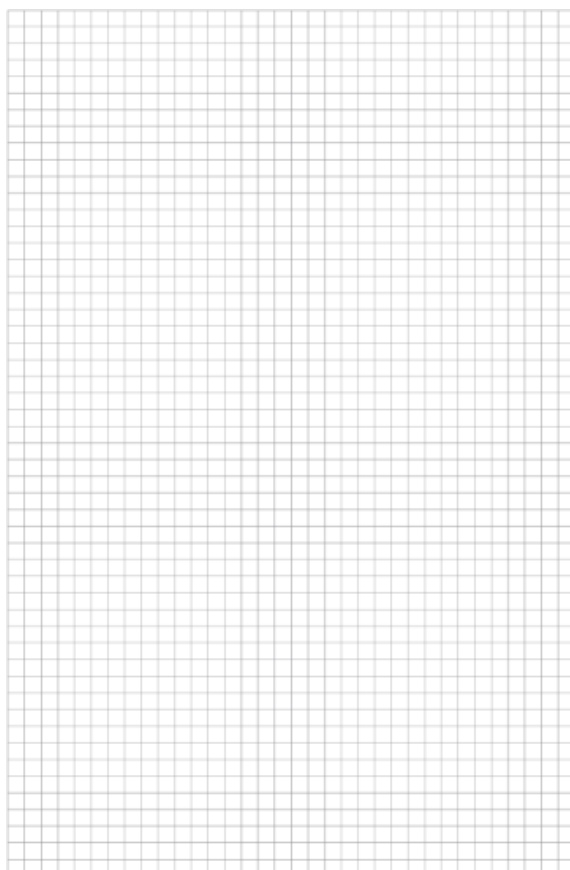

België / Belgique

Tel +32 16 21 35 02

Fax +32 16 21 36 04

SalesBelux@chemelex.com

Bulgaria

Tel +359 2 973 33 73

SalesEE@chemelex.com

Česká Republika

Tel +420 606 069 618 (Comm)

+420 602 232 969 (Ind)

infoCZ@chemelex.com

Danmark

Tel +45 70 11 04 00

SalesDK@chemelex.com

Deutschland

Tel 0800 181 82 05

SalesDE@chemelex.com

España

Tel +34 911 59 30 60

Fax +34 900 98 32 64

SalesES@chemelex.com

France

Tél 0800 90 60 45

SalesFR@chemelex.com

Hrvatska

Tel +385 51 225 073 (Comm)

+385 1 605 01 88 (Ind)

SalesEE@chemelex.com

Italia

Tel +39 02 577 61 51

Fax +39 02 577 61 55 28

SalesIT@chemelex.com

Lietuva/Latvija/Eesti

Tel +370 698 411 56

SalesEE@chemelex.com

Magyarország

Tel +36 1 253 76 17

SalesHU@chemelex.com

Nederland

Tel 0800 022 49 78

SalesNL@chemelex.com

Norge

Tel +47 66 81 79 90

SalesNO@chemelex.com

Österreich

Tel 0800 29 74 10

SalesAT@chemelex.com

Polska

Tel +48 22 331 29 50

Fax +48 22 331 29 51

SalesPL@chemelex.com

Казахстан

Tel +7 7112 31 67 03170

SalesKZ@chemelex.com

Serbia and Montenegro

Tel +386 41 665 634 (Comm)

+381 230 439 519 (Ind)

SalesEE@chemelex.com

Schweiz/Suisse/Svizzera

Tel +41 (41) 766 30 80

Fax +41 (41) 766 30 81

infoCH@chemelex.com

Suomi

Puh 0800 11 67 99

SalesFI@chemelex.com

Sverige

Tel +46 31 335 58 00

SalesSE@chemelex.com

Türkiye

Tel +90 545 284 09 05

SalesEE@chemelex.com

UK/Ireland

Tel 0800 969 013

SalesUK@chemelex.com



Raychem Tracer Pyrotenax Nuheat

©2025 Chemelex. All Chemelex marks and logos are owned or licensed by Chemelex Europe GmbH or its affiliates. All other trademarks are the property of their respective owners. Chemelex reserves the right to change specifications without notice.

RAYCHEM-OM-EU1850-Elexant450cModbus-ML-2504

chemelex.com

Documents / Resources

	Raychem Elexant 450c-Modbus Modbus Protocol Interface Mapping [pdf] User Manual NGC-UIT3-EX, EU1850-Elexant450cModbus-ML-2504, Elexant 450c-Modbus Protocol Interface Mapping, Elexant 450c-Modbus, Protocol Interface Mapping, Protocol Interface Mapping, Interface Mapping, Mapping
--	--

References

- [User Manual](#)

Raychem
Elexant 450c-Modbus, Elexant 450c-Modbus Protocol Interface Mapping, EU1850-Elexant450cModbus-ML-2504, Interface Mapping, mapping, NGC-UIT3-EX, Protocol Interface Mapping, Raychem

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.