



RICE LAKE 164491 Speed Sensor Belt Scale Monitors Instruction Manual

[Home](#) » [RICE LAKE](#) » RICE LAKE 164491 Speed Sensor Belt Scale Monitors Instruction Manual 



**Speed Sensor
Belt Scale Monitors
Installation Manual**
January 25, 2022
PN 164491 Rev A



The logo for Rice Lake Weighing Systems features a solid red horizontal bar at the top. Below the bar, the words "RICE LAKE" are written in a large, bold, black, sans-serif font. Underneath "RICE LAKE", the words "WEIGHING SYSTEMS" are written in a smaller, black, sans-serif font with wide letter spacing. A registered trademark symbol (®) is located to the upper right of the word "LAKE".

RICE LAKE[®]

WEIGHING SYSTEMS

An ISO 9001 registered company © Rice Lake Weighing Systems. All rights reserved.

Rice Lake Weighing Systems® is a registered trademark of Rice Lake Weighing Systems.

All other brand or product names within this publication are trademarks or registered trademarks of their respective companies.

All information contained within this publication is, to the best of our knowledge, complete and accurate at the time of publication. Rice Lake Weighing Systems reserves the right to make changes to the technology, features, specifications and design of the equipment without notice.

The most current version of this publication, software, firmware and all other product updates can be found on our website:

www.ricelake.com

Technical training seminars are available through Rice Lake Weighing Systems. Course descriptions and dates can be viewed at www.ricelake.com/training or obtained by calling 715-234-9171 and asking for the training department.

© Rice Lake Weighing Systems All Rights Reserved

Speed Sensor

Rice Lake continually offers web-based video training on a growing selection of product-related topics at no cost.

Visit www.ricelake.com/webinars

Visit our website www.RiceLake.com

Contents

- [1 Introduction](#)
- [2 Safety](#)
- [3 General Safety](#)
- [4 Technical Specifications](#)
- [5 Speed Sensor DimensionsSpeed Sensor Wiring DiagramIntroduction](#)
- [6 Installation](#)
- [7 Troubleshooting](#)
- [8 FCC Compliance](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Introduction

The speed sensor monitors the belt speed. It is directly coupled to a rotating shaft (i.e. the bend pulley as shown in Table 2-1 on page 4) which drives a signal generator. The speed sensor submits an output signal at a frequency directly proportional to the shaft speed. It is typically installed on a non-driven pulley of a belt conveyor for detecting belt speed.



Manuals and additional resources are available from Rice Lake Weighing Systems at

www.ricelake.com/manuals

Warranty information can be found on the website at www.ricelake.com/warranties

Safety

Safety Signal Definitions:



DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. Includes hazards that are exposed when guards are removed.



WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in serious injury or death. Includes hazards that are exposed when guards are removed.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury.

IMPORTANT

Indicates information about procedures that, if not observed, could result in damage to equipment or corruption to and loss of data.

General Safety



Do not operate or work on this equipment unless this manual has been read and all instructions are understood. Failure to follow the instructions or heed the warnings could result in injury or death. Contact any Rice Lake Weighing Systems dealer for replacement manuals.



WARNING

- Failure to heed could result in serious injury or death.
- Some procedures described in this manual require work inside the indicator enclosure.
- These procedures are to be performed by qualified service personnel only.
- Take all necessary safety precautions when installing the speed sensor, including wearing safety shoes, protective eyewear, and using the proper tools.
- Do not allow minors (children) or inexperienced persons to operate this unit.
- Do not operate without all shields and guards in place.
- Do not place fingers into slots or possible pinch points.
- Do not use any load-bearing component that is worn beyond 5% of the original dimension.
- Do not use this product if any of the components are cracked.
- Do not exceed the rated load limit of the unit.
- Do not make alterations or modifications to the unit.
- Do not remove or obscure warning labels.
- Keep hands, feet, and loose clothing away from moving parts.

Technical Specifications

Ambient Temperature:.....30° to 80° C (-22° to 176° F)

Enclosure:IP65

Detecting Speed Range.....: 20 to 280 rpm

Conduit Holes:.....1/2"-14 NPT (M25x1.5)

Speed Sensor Dimensions

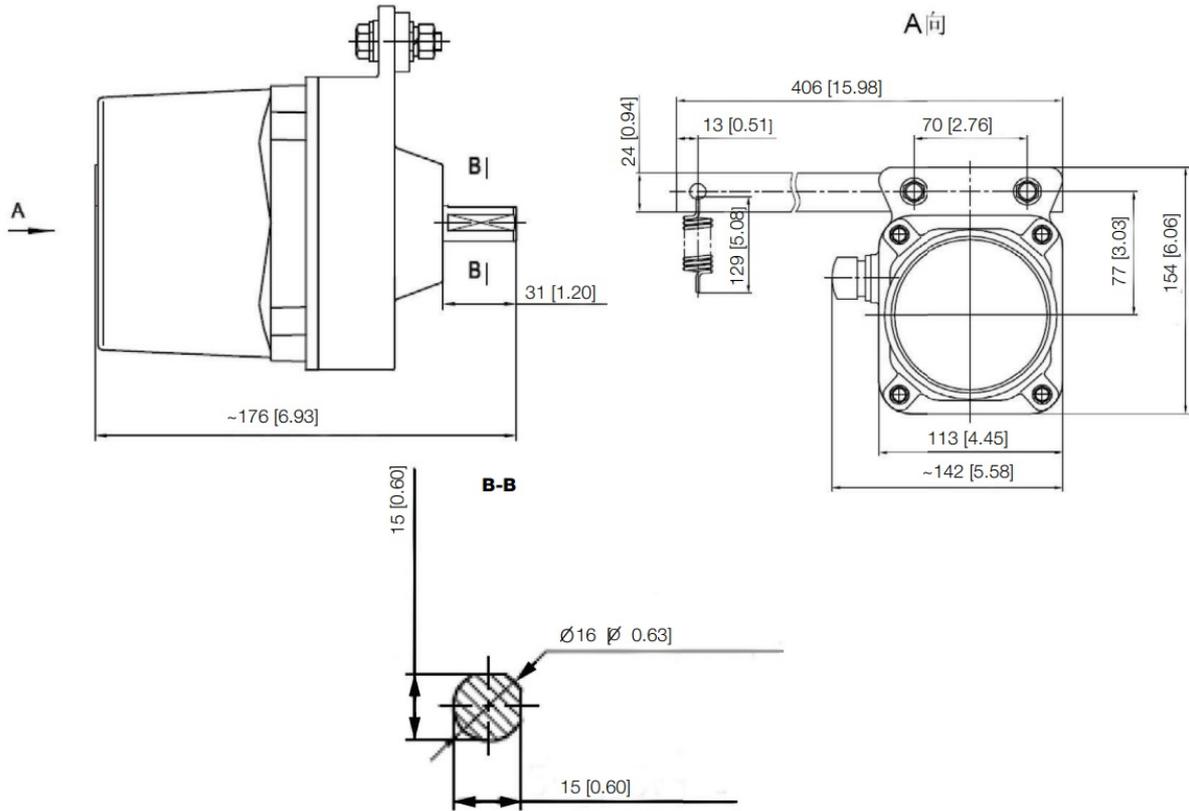


Figure 1-1. Speed Sensor Dimensions (Millimeters [inches])

Speed Sensor Wiring Diagram

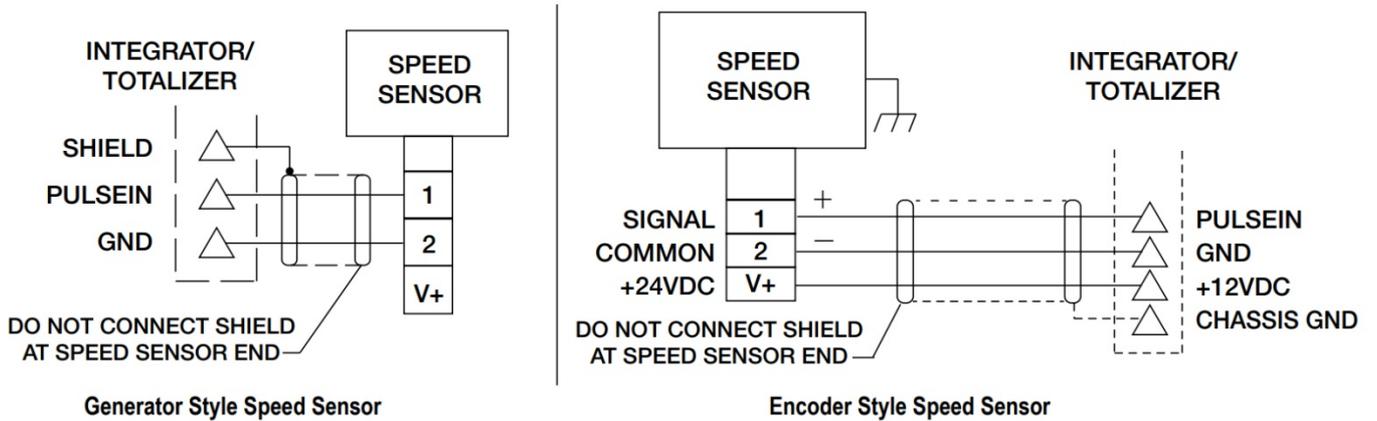


Figure 1-2. Speed Sensor Wiring Diagram

Introduction

920i Pulse Input


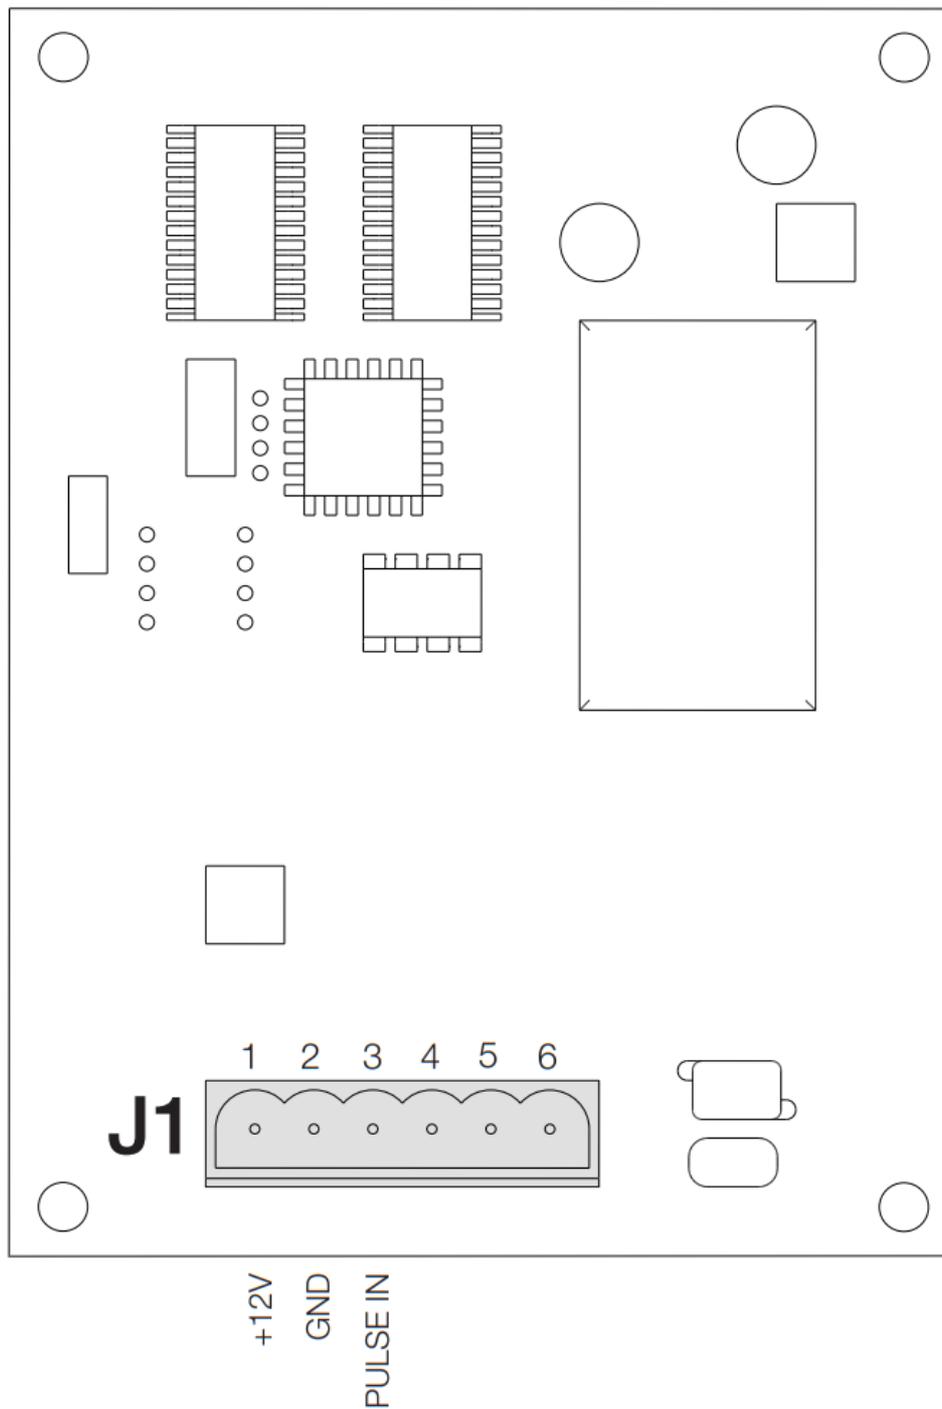


Figure 1-3. 920i Pulse Input

1.6 882D Pulse Input

Use the J13 connector on the 882D CPU board to provide pulse input from the speed sensor to the 882D. Wire the cable to the connector as shown in Figures 1-4. Pins 4, 5, and 6 are the top level of the connector and make up the primary pulse input channel (Input 1). Pins 1, 2, and 3 are the bottom level of the connector and make up the secondary pulse input channel (Input 2).

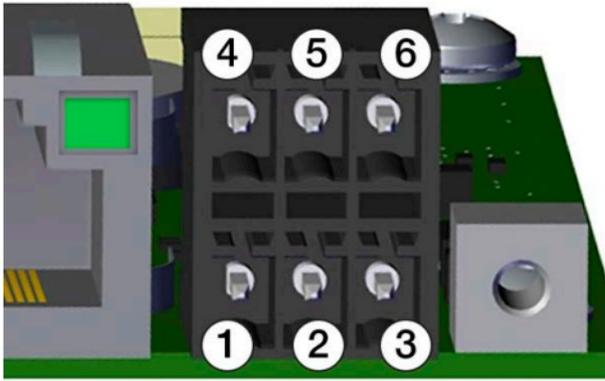

Connector	Pin	Signal
J13	1	+12V, 100 mA max
	2	Ground
	3	Pulse Input #2
	4	+12V, 100 mA max
	5	Ground
	6	Pulse Input #1

Figure 1-4. 882D Pulse Input

Installation

Install the speed sensor using the following instructions.



WARNING

Ensure that the belt scale is turned off and all power to the unit has been removed prior to starting the installation of the speed sensor.

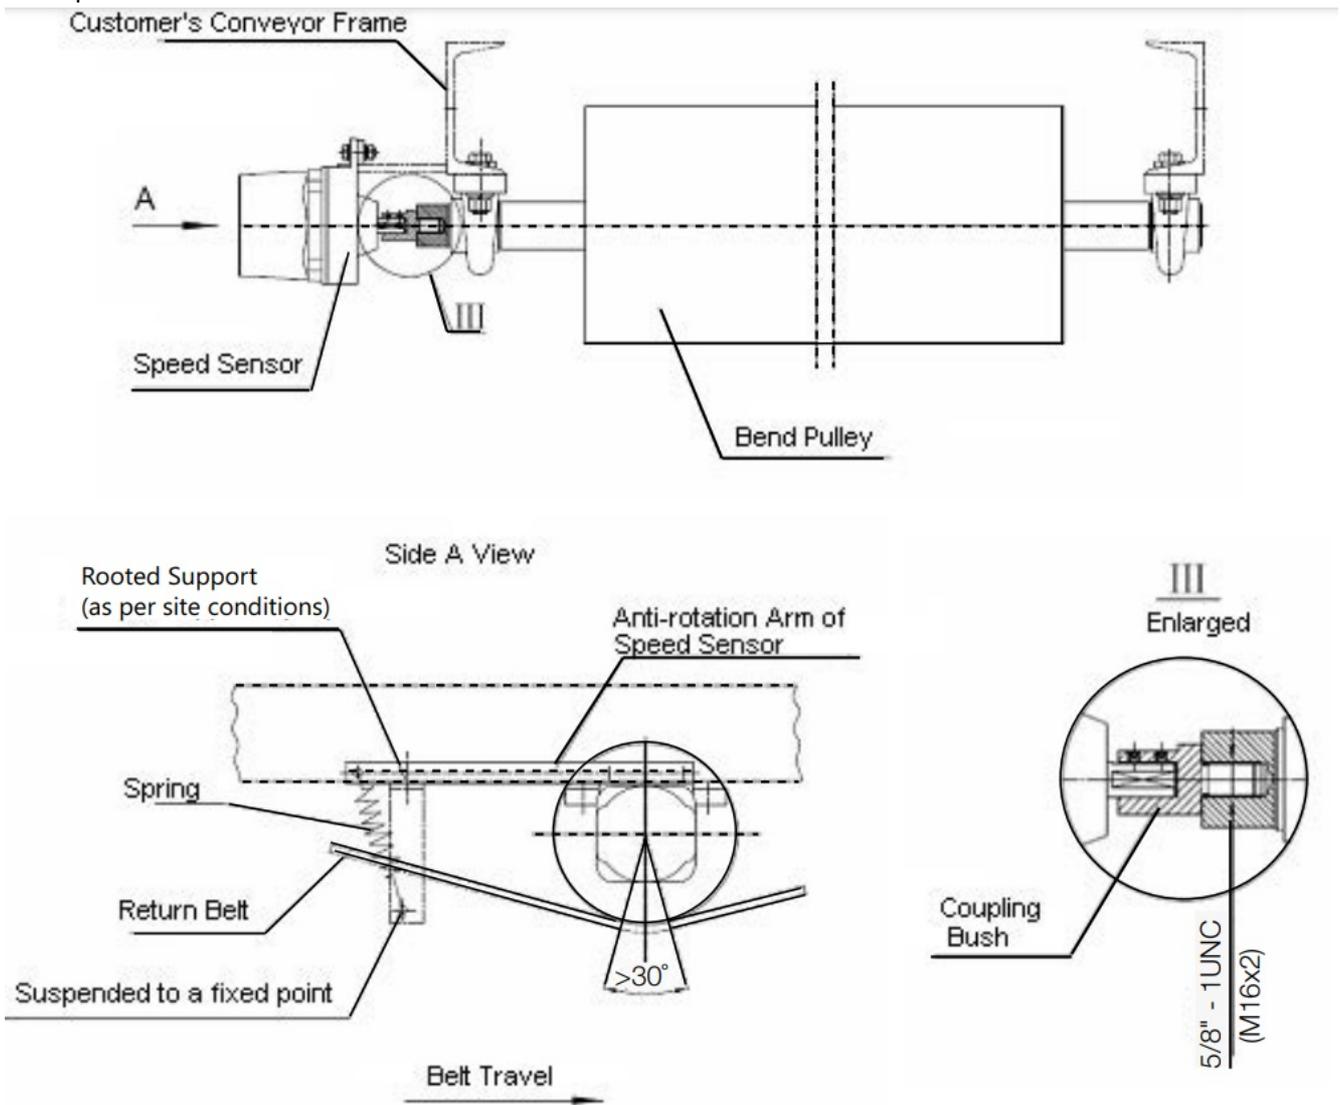


Figure 2-1. Installation Diagram

1. Locate the center of the bend pulley shaft and punch mark.
2. Drill 1/4" (6 mm) pilot hole.
3. Use a 17/32" (13.5 mm) bit to drill the center of the pulley shaft (minimum 1" deep) (26 mm).
4. Tap the drilled hole with a 5/8-11 tap (M16x2).
5. Install (thread) the supplied coupling into the tapped hole (may use thread-lock adhesive) and tighten.
6. Use supplied bolts, washers, and nuts to connect the anti-rotation arm to the speed sensor.
7. Weld a support plate on the conveyor frame at a suitable position.
8. Place the anti-rotation arm against the support plate.
9. Use the supplied spring to tension the anti-rotation arm against the support plate.
10. Secure to a fixed object. Be sure to make the spring in slight tension when connecting the two parts.

IMPORTANT

Do not attach the speed sensor to a driven pulley. A driven pulley may have belt slippage in certain conditions, which may reduce speed sensing accuracy. The selected bend pulley should have a suitable diameter. The rotary speed of the bend pulley should be kept within the detection range of the speed sensor. The bend pulley should have a minimum of 30 degrees belt wrap to ensure positive rotation, because any slippage between the belt and the pulley may cause reduced accuracy of the belt scale.

2.1 Testing

After installation, test unit to ensure proper mechanical and electrical operations. Make sure the cover is tightly secured and conduit sealed to prevent entry of water or moisture.

Troubleshooting

- Ensure that the rotary shaft is connected securely to the pulley.
- Ensure the unit is wired correctly and the connections are tight.
- Open the cover of the speed sensor. Ensure that the signal generator works properly.
- If the speed sensor still fails after the above checkpoints have been performed, check the peripheral circuit for fault finding.

IMPORTANT

Do not try to modify or change the components without prior approval of Rice Lake Weighing Systems. Rice Lake Weighing Systems will have no liability for any damage caused by the user's modification even during the warranty period.

3.1 Spare Parts

Rice Lake Weighing Systems recommends keeping the following spare components on hand for each unit.

- Anti-rotation arm
- Spring
- Coupling (PN 123146)

FCC Compliance

United States

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause

harmful interference in which case the user will be required to correct the interference at his own expense.

Canada

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.



Visit our website www.RiceLake.com

© Rice Lake Weighing Systems Specifications are subject to change without notice.

Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St.

Rice Lake, WI 54868

USA U.S. 800-472-6703

Canada/Mexico 800-321-6703

International 715-234-9171

Europe +31 (0)26 472 1319

January 25, 2022

www.ricelake.com

PN 164491 Rev A

Documents / Resources

 The thumbnail shows the cover of the "Speed Sensor Installation Manual". It features a photograph of a yellow and black speed sensor mounted on a metal frame. The text "Speed Sensor" and "Installation Manual" is visible at the top. The Rice Lake logo is at the bottom.	<p>RICE LAKE 164491 Speed Sensor Belt Scale Monitors [pdf] Instruction Manual 164491 Speed Sensor Belt Scale Monitors, Speed Sensor Belt Scale Monitors, 164491</p>
--	---

References

- [Rice Lake Weighing Systems](#)
- [Manuals | Rice Lake Weighing Systems](#)
- [Training | Rice Lake Weighing Systems](#)
- [Warranties](#)
- [Videos and Webinars | Rice Lake Weighing Systems](#)
- [Rice Lake Weighing Systems](#)
- [Rice Lake Weighing Systems](#)
- [Rice Lake Weighing Systems](#)
- [Manuals | Rice Lake Weighing Systems](#)