



# RUXTEK RTP403 3G WCDMA Fixed Wireless Phone without WiFi User Manual

[Home](#) » [RuxTek](#) » RUXTEK RTP403 3G WCDMA Fixed Wireless Phone without WiFi User Manual 

## Contents

- [1 RUXTEK RTP403 3G WCDMA Fixed Wireless Phone without WiFi](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety and Maintenance](#)
- [5 Your Phone](#)
- [6 State icons](#)
- [7 Instructions before Use](#)
- [8 Operation](#)
- [9 Basic Function](#)
- [10 Menu Functions](#)
- [11 Message](#)
- [12 Call logs](#)
- [13 Tools](#)
- [14 FAQ](#)
- [15 FCC Warning](#)
- [16 Documents / Resources](#)
  - [16.1 References](#)
- [17 Related Posts](#)

# RUXTEK

**RUXTEK RTP403 3G WCDMA Fixed Wireless Phone without WiFi**



## Product Information

### Specifications

- **Model:** RTP-403
- **Brand:** RuxTek
- **Wireless Technology:** 3G WCDMA
- **WiFi:** Not available

### Appearance

The RuxTek 3G WCDMA Fixed Wireless Phone without WiFi has the following key features:

- LCD screen
- M1~M5 keys for dialing preset numbers
- Call Log shortcut key
- FM shortcut key
- SMS shortcut key
- Redial key
- The mute key for switching to MUTE mode during a call
- Speaker key for hands-free operation
- 0 key for space
- DEL/BACK key for going back to the last menu and deleting characters
- MENU/OK key for accessing the main menu and submenus
- UP key for accessing the Family (Speed dial menu) in the idle screen
- DOWN key for scrolling the cursor and accessing the settings menu in the idle screen
- LEFT key for turning down the volume and accessing the FM menu in the idle screen
- RIGHT key for turning up the volume, playing music and FM, and accessing the calculator's menu on the idle screen
- Dial key for making a phone call by inputting the phone number and pressing Dial

- END key for ending a phone call or going back to the idle screen
- 0-9 Numeric Keys

## State Icons

- **Network Signal:** Indicates the availability of 3G network services
- **New SMS:** Indicates the presence of a new SMS message
- **Missed Call:** Indicates a missed call
- **Calling:** Indicates an ongoing call
- **Silent Mode:** Indicates that the phone is in silent mode
- **WLAN E Network Identification (registered):** Indicates the network identification is registered
- **Battery Life:** Indicates the remaining battery life

## Screen Background Light

- The background light illuminates the screen. It turns on when the phone is powered on and automatically turns off after a certain period of inactivity to save battery.
- You can adjust the brightness of the background light by navigating to [Menu] – [Settings] – [Display] – [Backlight].

## Volume Adjustment:

### During a call:

1. Press the [Up Key] to increase the volume.
2. Press the [Down Key] to decrease the volume.

### During MP3 playing:

1. Press the [Up Key] to increase the volume.
2. Press the [Down Key] to decrease the volume.

### During FM playing:

1. Press the [Right Key] to increase the frequency band.
2. Press the [Left Key] to decrease the frequency band.

## Product Usage Instructions

### Connectors on the Phone

1. USB TYPE C head
2. Antenna Connector
3. Battery Jack
4. SIM Card Slot

## 5. RJ9 Handset Cord Jack

### Assemble the Antenna

Follow the instructions below to assemble the antenna:

1. Locate the Antenna Connector on the phone.
2. Attach the antenna to the Antenna Connector.

### PUK Code

- The PUK code (Personal Unlock Code) is used to unlock a SIM card that has been locked due to entering the wrong PIN code.
- If the PUK code is entered incorrectly more than ten times, the SIM card will become ineffective. The PUK code is provided by your network service operator.

### FAQ

#### Q: Can I use WiFi with this phone?

- **A:** No, this phone does not have WiFi capability.

#### Q: How can I adjust the brightness of the screen background light?

- **A:** To adjust the brightness, go to [Menu] – [Settings] – [Display] – [Backlight].

#### Q: What is the purpose of the PUK code?

- **A:** The PUK code is used to unlock a SIM card that has been locked due to entering the wrong PIN code.

### Safety and Maintenance

#### While using the phone, please observe the following points

- Before use please read the instruction manual carefully.
- Do not power on the phone when use of the phone is prohibited or it may cause interruption or danger.
- Please keep your phone off when you are on a plane. If functions that will automatically power on your phone, such as an alarm clock or calendar, are set up, please check and cancel the configuration before boarding the plane.
- While using the phone, please keep away from heat sources and high-voltage environments, such as electric appliances or electric cooking devices. Please use the phone under normal temperature. Using it in temperatures above 55°C or below -10°C may damage the phone.
- Pay attention to fire prevention. Make sure to power off the phone while you are near flammable materials, such as gas-filling stations and fuel storage.
- Do not hold the phone in your hand while driving. Do not put the phone above the airbag or within reach of the

airbag to prevent damage when the airbag is inflated.

- Original battery, charger, and accessories should be used.
- Phone may interfere with nearby electronic devices; therefore keep it away from electronic devices such as radio, PC, pacemaker hearing aids, etc. Do not place the phone near credit cards or magnetic fields.
- Please power off your phone in hospitals and other special places according to specific regulations there.
- Keep the phone away from mechanical vibration or shaking. Do not hit the screen of your phone with sharp tools.
- If a plastic cover or case is used for the phone, the surface coating may be damaged.
- Do not disassemble the phone without professional help.
- Do not use benzene, thinner, or alcohol to clean the cover of your phone. Keep your phone away from corrosive chemicals such as detergent. Use a clean and soft cloth instead and wipe gently.
- Prevent your phone from insulation or places with excessive smoke or dust.
- Your phone is not waterproof, so please keep it dry. Do not use it in a damp environment, such as a bathroom. Keep it away from rain and moisture.
- When you are to pull the charger away from your phone or cut off the power supply of the charger, please hold the connector tightly and then pull it out. Do not drag the power cable.
- Do not rely on your phone as the only communication device for emergencies, such as medical rescue.
- Keep the phone out of reach of children to avoid danger.

#### **While using the battery, please observe the following points**

- Before use, please read the instructions for use, as well as the label on the surface of the battery.
- Please charge the battery in a cool and well-ventilated room. Otherwise, high environmental temperatures may lead to overheating, smoking, burning, distortion, or even explosion of the battery.
- There are special protection circuits and devices inside the battery, so do not open the battery; otherwise, it may lead to a short circuit or electrolyte leak. If electrolytes enter the eyes, there is a danger of blindness.
- In such case, immediately wash your eyes with clean water (Do not rub the eyes with your hands) and then immediately go to the hospital for treatment.
- Do not squeeze the battery. Keep it away from mechanical vibration and shaking. Do not short-connect the battery, for this may damage the battery and components connected to it.
- A short circuit may be caused by a coin or clip directly connecting the anode and cathode of the battery, so do not put the battery together with metal objects.
- Please keep the metal contact points and battery clean.
- Do not use a damaged or depleted battery.
- The battery should be replaced when it cannot meet the requirements for performance. The battery can be charged hundreds of times before it should be replaced. Battery belongs to consumables.
- Though it can be charged hundreds of times, its quantity of electric charge may decrease gradually. When service time (talk time and standby time) is found to have decreased, the battery shall be replaced.
- Prevent battery exposure to the sun or places with excessive smoke or dust. Do not use it in damp environments, such as a bathroom. The battery is not waterproof; so keep it away from rain and moisture.
- Do not put the battery in places that are too hot or too cold. Temperatures above 55°C or below -10°C may affect the performance of the battery.
- Do not put the battery on fire to avoid an explosion.

- Do not put the battery in water to avoid short circuits inside, resulting in battery overheating, smoking, distortion, damage, or even explosion.
- Treat batteries according to local regulations (for example, recycling). Do not treat batteries as domestic garbage to avoid explosion and pollution.
- A special charger should be used to charge this battery, and charging time should not exceed 12 hours.
- Keep the battery out of reach of children to avoid danger.
- Do not place the battery on fire; follow local laws and ordinances in disposing of used batteries.
- Using other types of batteries, chargers, and accessories may violate the certification or warranty terms of equipment and may result in danger.

**While using a battery charger, please following points:**


- Before use, please read the instructions first, as well as the labels on the surface of the charger.
- Do not disassemble or modify the charger or use it when the power cable is damaged; otherwise, there will be an electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquids, immediately cut off the power supply.
- Do not short-connect the charger and keep it away from mechanical vibration or shaking and direct sunshine. Do not use it in damp environments, such as a bathroom.
- The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as a TV set or radio.
- When pulling out the plug, hold the charger instead of dragging the power cable to avoid damage to the power cable.
- Keep the charger out of reach of children to avoid danger.



**Your Phone**

**Appearance**

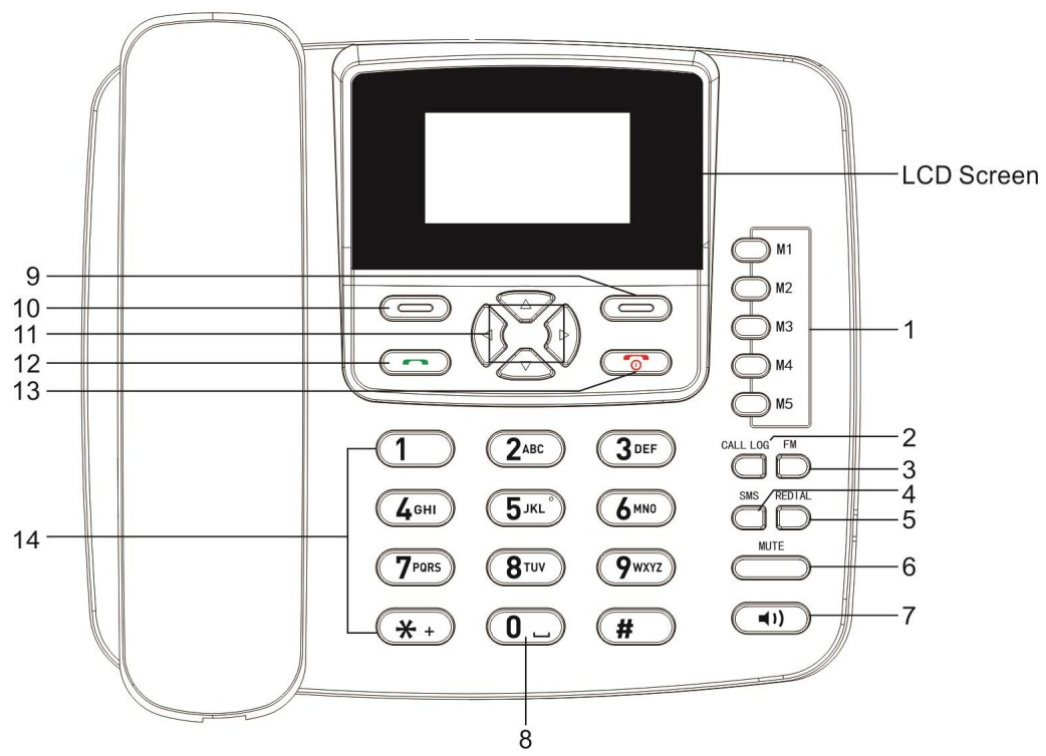

**The key description** below the silkscreen photo changed












	LCD	
1	M1~M5	Press to dial the Preset number if set OK.Family number.
2	Call Log	Shortcut to access the Call Log menu in the idle screen.
3	FM	Shortcut to access the FM menu in idle screen.
4	SMS	Shortcut to access the SMS menu in the idle screen.
5	Redial	In standby mode, press to enter the Call log menu. And can redial the last number.
6	MUTE	When the call is connected, select it to switch to MUTE mode.
7	Speaker Key	Activate hands-free operation(speaker icon).
8	0 key	Space key
9	DEL/BACK KEY	In any menu, you can go back to the last menu. Press to delete the characters you've entered. In standby status, press to enter the Contacts menu.
10	MENU/OK KEY	Press to go into the main menu on the idle screen Press it to access the submenu.
11	UP KEY	You can scroll the cursor with the UP key; Shortcut to access the Family(Speed dial menu) menu in idle screen.
	DOWN KEY	You can scroll the cursor with the DOWN key; Shortcut to access the settings menu in the idle screen.
	LEFT KEY	Turn down the volume during the conversation, Shortcut to access the FM menu in idle screen.
	RIGHT KEY	Turn up the volume during conversation or playing music and FM Shortcut to access the calculator's menu in idle screen.
12	Dial key 	To make a phone call, input the phone number and press the Dial key. Shortcut to access the outgoing menu in idle screen.
13	Power on or off/ END Key 	Press and hold for about 3 seconds to power the phone on/off; Press the end key to end the phone call or go back to the idle screen.
14	0~9 Numeric Keys	To input numbers and characters; In idle screen, press * to enter *; In the editing screen, press * to enter the special symbol mode. In the idle screen, press # to enter #; In the editing screen, press # to switch the input method.



## State icons

### Icons on the screen:

	Network signal
	You can use the 3G network services.
	New SMS received.
	Missed call.
	Calling
	Activated silent mode.
	The signal of WLAN
	Network Identification( registered)
	Battery life.

### Screen background light

Background light can illuminate the screen. When you power on your phone, the background light will turn on for a certain period. If no key is pressed within the period, the background light will turn off automatically so as to save battery.

### To set background light brightness:

1. [Menu]→[Settings]→[Display]→[Backlight] 1.5.Adjust the volume

### During a call

1. Press [Up Key] to increase the volume.
2. Press [Down Key] to decrease the volume.

### During MP3 playing


1. Press [up Key] to increase the volume.
2. Press [down Key] to decrease the volume.

### During FM playing


1. Press [Right Key] to increase the Increase frequency band.
2. Press [Left Key] to decrease the Increase frequency band.

## Instructions before Use

### Connectors on the Phone

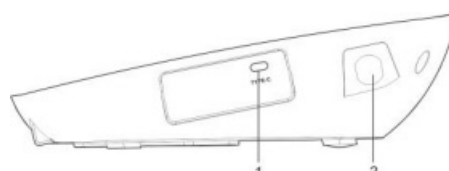

1. USB TYPE C head
2. Antenna Connector

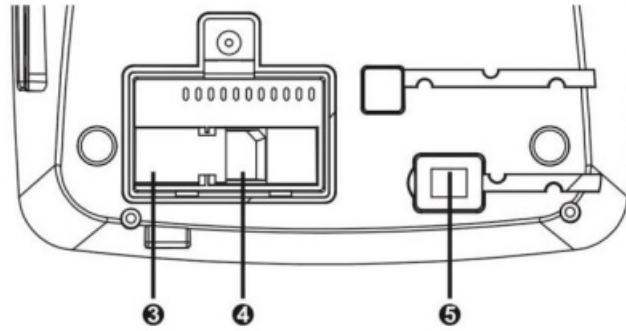

3. Battery Jack
4. SIM card Slot
5. RJ9 handset cord Jack

### Assemble the antenna



### Charging the battery by adapter

- When the battery is fixed to the phone, put the Mini USB cable into AC-Adapter Jack.
- During charging, the screen shows the battery charging icon, when the battery is full, the charging icon will stop rolling.

### Install SIM card

- Always switch the phone off before removing or inserting a SIM card.
- Open the bottom cover of the battery. Remove the battery; slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and that the beveled corner matches with the SIM card slot.
- Put in the battery and install the bottom cover.

## Operation

### Power on

The device can work on both single battery mode and single charger mode.

1. Press and hold the [Power key] button until the boot screen appears.
2. If there is a prompt for a PIN code, please input your PIN code and then press the [OK] key.

- After powering on, if the SIM card inserted is valid, your phone will automatically search for an available network; if not, it will prompt: Insert SIM or Invalid SIM.

## **PIN code**

- PIN code is used to prevent illegal use of the user's SIM card. If your phone has enabled PIN code protection, there will be a prompt for entering the PIN code. If wrong the PIN code is entered three times, the SIM card will be automatically locked.
- You have to enter a PUK code to unlock it. PIN code is related to the SIM card instead of the phone and is provided by your network service operator.

## **PUK code**

- PUK code, referring to the personal unlock code, is used to unlock a SIM card that is locked because of the wrong input of the PIN code.
- If the wrong input of the PUK code exceeds ten attempts, the SIM card will lose efficacy.
- PUK code is provided by the network service operator.
- Please contact the operator for the default PIN and PUK.

## **Power off**

- To power off, please hold [Power key] until the power off screen appears.

## **Basic Function**

### **Dial Phone**

- In standby state, press the number keys to enter the phone number and then press [Send key] to call.
- Press [DEL/BACK key] to clear the last digit or hold it to clear all. If the phone number being dialed can be recognized by the phone book, the name of the contact person will be displayed on the dialing screen.
- Press [Power key] to end a call.
- Quick dial from the contacts list
- In standby state, press [DEL/BACK key] to enter the phonebook.
- Slide the scroll bar to choose a contact you want to dial.
- Press [Send key] to dial out.
- Quick dial from the Outcall number list
- In the standby state, press [Send key] to enter the [Outcall number] list.
- Slide the scroll bar to select the person you want to call or the number you want to dial. 4.3.3 Press [Send key] to dial out the number.
- Answer incoming call
- When there is an incoming call, the incoming call interface will be displayed together with a special ringtone.
- Press [Send key] to answer calls.
- Press [Power key] directly to reject the incoming call.
- If the phone number of a caller can be recognized, the number will be displayed on the incoming call screen.

- If information about the number is stored in contacts, the caller's name will also be displayed.
- If a caller hides his/her number or the network bans call indication, the incoming call is displayed as \*\*\*\*\*.

### **Terminate call**

1. When there is an incoming call, press [Power key] to reject the call.
2. During the call, press [Power key] to terminate the current call.

### **Making emergency calls**

As long as you are within the coverage of the network, you can make emergency calls even if you have not registered with the local network or do not have a SIM/UIM card. Enter the local emergency number and then press [Send key] to make an emergency call.

### **Make international long-distance call**

1. Before an international phone number can be dialed, press the [0] key until the "+" sign appears. The "+" sign tells the network you are making an international call.
2. Input country code, area code, and phone number.
3. Press [Send key] to call.

**Note:** Some networks do not allow "+" for dialing international numbers, you can use 00 instead of "+"

### **Talk options**

- Key operations as below in the process of call:
- The phone provides some talk control functions in the process of a call.
- During the call, press [DEL/BACK key] to back to Home status.
- During the call, press [Left soft key] to enter the [Options] menu to access the talk control functions.

### **Hold/Resume talk state**

1. During the call, press [Left soft key] and select [Hold] in the [Options] menu.
2. To activate the held talk, Press [Left soft key] and select [ Unhold] in the [Options] menu.

### **Dial the second number**

- During a call, you can dial another number.
- Press [Left soft key] and select [Add call] to dial the second call,
- When the second number is put through, the first call will be held automatically.

### **Answering a second incoming call**

- Please make sure the network supports the call waiting function and the status has been set to Enabled.
- If there is a second incoming call in the process of the first call, you'll hear the "Beep" tone and the screen will

prompt.

- Press [Left soft key] to answer the second incoming call.
- When the second call is put through, the first call will be switched to held state.
- Press [Power key] to terminate the second call.

### Select the current phone number

- When the second call is answered, press [Send key] to swap between the current call and the held call, and press [Left soft key] to [Options] menu:
- **Swap:** to hold the current call and activate the held call
- **Merge:** Add held call to conference call.
- **End call:** Terminate current call.
- **End Merge:** Terminate conference call.
- **Note:** Not all networks provide the multi-party service.

### Menu Functions

- You can press [Left soft key] in the standby state to enter the main menu. Press [DEL/BACK key] or [Power key] to return to standby mode.

### Message

- In a standby state, enter the [Menu]→[ Message] menu.

### Write Message

- In the edit mode, you can edit SMS content and add recipients.
- When editing SMS, press the [Left soft key] to enter [options] menu, as listed below:
- **Select:** choose and view a message.
- **New message:** edit the new message and Send the message to people.
- **Settings:** in this mode, you can general settings and SIM Card Settings
- **Delete thread:** Delete information
- **Cell broadcasts:** Receiving Broadcast Information from Cells
- **Messages in SIM** Insert template message.

### Message Setting

- You can set the function for Text messages, for example: Delivery report, SMS Validity, Manage SIM card messages, Save SMS On SIM, SMS Service Center, Delivery report, Multimedia Message Validity, and so on.
- **Delivery report:** Request a delivery report for each message you send
- **Manage SIM card messages:** Manage messages stored on your SIM card.
- **Auto-retrieve:** Automatically retrieve messages.
- **Roaming auto-retrieve:** Automatically retrieve messages while roaming

## Contacts

In a standby state, enter the [Menu]→[Contacts] menu.

1. Move the cursor to the input box to search the contact record quickly, you can input the character or number to search from the records list, and the matched records will list on the LCD
2. Press [Left soft key] to enter the [Options] menu, with the following options: Add contact, contacts to display, Import/Export, Batch delete, SIM capacity, Phone Capacity

- **Add contact:** Create a new contact record. Store the contact to the phone or SIM card.
- **Contacts to display:** you can choose to display ALL contacts, phones, or SIM cards.
- **Import/Export:** Import/Export contacts from internal/external storage.
- **Batch delete:** Delete all contacts.

## Call logs

- In the standby state, enter the [Menu]→[Call logs] menu.

### Missed Call:

- Press [left key] to view the missed calls list.

### Dialed calls :

- Press [left key] to view the dialed calls list.

### Received Calls:

- Press [ left key] to view the received calls list.

## Tools

- In the standby state, enter the [Menu]→[Tools] menu. You have a choice here for Calendar, Calculator, Bluetooth

### Calendar

- In the standby state, enter the [Menu]→[Tools] menu. The following are the functions.
- **Today:** Move the cursor to the current data in the calendar interface.
- **Select Date:** Move the cursor to the special data in the calendar interface.

### Calculator

- In the standby state, enter [Menu]→ [Tools]→[Calculator] menu.

## Key operations:

- **[UP key]:** Press for Addition;
- **[Down key]:** Press for Subtraction;
- **[Left key]:** Press for Multiplication;
- **[Right key]:** Press for Division ;
- **[Left soft key]:** Equal to "=", press to display the calculation result.
- **[DEL/BACK key]:** Press to clear contents that have been entered.
- **[\*]:** press to enter "-".

## FM Radio

- **In a standby state,** enter [Menu]→FM Radio, and also you can press the [FM] key to enter the FM menu directly. The following are the options:
- **Radio List:** Channel the new FM from the list.
- **Turn Off:** Exit the FM player.

## Settings

- In the standby state, enter the [Menu]→[Settings] menu. The following are the settings:

### Call settings

- In the state, you can enter check your SIM card function, you can setting voice mail, Fixed dialing numbers, Call forwarding, Call barring settings, and Additional settings.
- **Voice call:** You can set voice mail, call forwarding, call barring, and so on.
- **Voice mail:** Select the voice mail service operator and the voice number.
- **Call divert:** Divert the incoming calls to another phone number. This function requests the network's support. Please contact your operator for details.
- **Call barred:** Use the menu to set the call bar. It contains All outgoing calls, Cancel all, and Change barring password. This function requests the network's support. Please contact your operator for details.
- **Additional settings:** You can set the Caller ID and call waiting function.
- Also, you can choose [General Settings], Setting ID dial list, Call recording, Fade-in ringer, and SpeedDial.
- **IP dial list:** Add IP Phone number Then select the IP dialing from the left-click menu of the dialing interface.
- **Call recording:** Turn on /Off automatic recording.
- **Fade-in ringer:** When enabled, incoming call ringer volume will be turned up.
- **Speed dial:** We can set nine groups of speed dial numbers, When we press the 2 number key, after 3 seconds, the second group's number will be automatically allocated.
- **Family:** Set the number for [M1~M5] key

### Display You can set the below items.

- **Contrast:** Adjust the LCD brightness
- **Backlight:** we can set the time of screen timeout, as 15 seconds,30 seconds, and so on.

## Security

- **Set up SIM card lock** You can set PIN lock to On or Off and change PIN. The default PIN code is provided by your SIM operator.
- **Screen lock** Set the screen lock and password.
- **Unlock method:** when the device is in standby status, press #804#123456#, and press the green key(send key) to unlock.

## Date and Time

- Set time zone, time/date, date format, and time format

## Language

- Set the phone language.

## Schedule on/off

- Set schedule power on or power off.

## Storage

- device storage in internal storage or SD card.

## Memory Cleanup

- Cleaning up system garbage, Releasing memory space.

## Reset

- Restore the phone setting to factory data status.

## About phone

- Display some phone information, such as Model number, Android version, Baseband version, and so on.

## FAQ

- If any problems are encountered while using the phone, please refer to the FAQ's below. If the problems still exists, please contact the manufacturer or service provider.
- Enter PIN code” appears on the screen
- Enter the valid PIN code of your SIM card. Please contact your operator immediately if you do not know the code.
- Enter PUK code” appears on the screen
- Your SIM card will be locked if you enter the wrong PIN code three times. To unlock your SIM card, you have to



enter the PUK code. Please contact your operator for details.

- Insert SIM card” appears on the screen
- Make sure the SIM card is correctly installed. Check if the SIM card works properly. It may have defects or faults. If so, please contact your operator for details.
- “Not in service area. Network failure.” is displayed
- Check the signal intensity indicator. If there is no signal, you may be in the basement or network blind area in a building. Please move to another location to receive a signal.
- If in your situation you are not covered by a network, please contact your operator for details.
- Poor sound quality, echo, or noise makes communication difficult.
- Hang up your phone and dial again. Your network may connect the phone to a line with better communication quality.
- Standby time declines
- The signal at your location is weak, making the phone search for the signal for a long time. When you don't want to answer any calls, please turn off your phone's power for the time being to help preserve battery life.
- It is also possible that the battery has been used for a long time and is approaching its life span. In this case, please replace the battery.
- Phone fails to boot
- Check battery volume or charge the battery. The battery is probably uncharged. Please charge your phone until the battery is restored, then try to power it on again.
- Cannot send a short message
- Please check the SMSC address if the correct number has been set. Perhaps you have not opened the SMS service; the Recipient of the short message is invalid.
- Can't charge

**There are three possibilities:**

1. The charger of your phone does not work properly. You can contact the nearest service provider or dealer;
2. Ambient temperature is not appropriate. Please change the charging environment;
3. Poor contact. Please check the plug of your charger.

- Cannot add entries into the phonebook
- The phonebook is full. You will have to delete other entries to free up space.
- Cannot select some functions
- The service is not available or the location network does not support this service. Please contact your operator for details.

**FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Specific Absorption Rate (SAR) information:**

This RuxTek 3G WCDMA Fixed Wireless Phone without WiFi meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

#### **FCC RF Exposure Information and Statement**


The SAR limit of USA (FCC) is 1.6 W/kg averaging over one gram of tissue. Device types: smartphone (FCC ID: 2BDRQ-RTP403) have also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use on the body is 1.089W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters, and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

#### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or approved antenna.

---

## **Documents / Resources**

 <p>RUXTEK RuxTek 3G WCDMA Fixed Wireless Phone without WiFi Model: RTP403 User Manual</p>	<p><a href="#">RUXTEK RTP403 3G WCDMA Fixed Wireless Phone without WiFi</a> [pdf] User Manual RTP403 3G WCDMA Fixed Wireless Phone without WiFi, RTP403, 3G WCDMA Fixed Wireless Phone without WiFi, Fixed Wireless Phone without WiFi, Wireless Phone without WiFi, Phone without WiFi</p>
---	---

## **References**

- [User Manual](#)

