




safetrust 8845-200 IoT Sensor WM User Guide


[Home](#) » [safetrust](#) » safetrust 8845-200 IoT Sensor WM User Guide 

Contents

- 1 safetrust 8845-200 IoT Sensor WM
- 2 In the box
- 3 What you'll need
- 4 Installation
- 5 Configuration
- 6 Testing
- 7 Regulatory Information
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



safetrust 8845-200 IoT Sensor WM

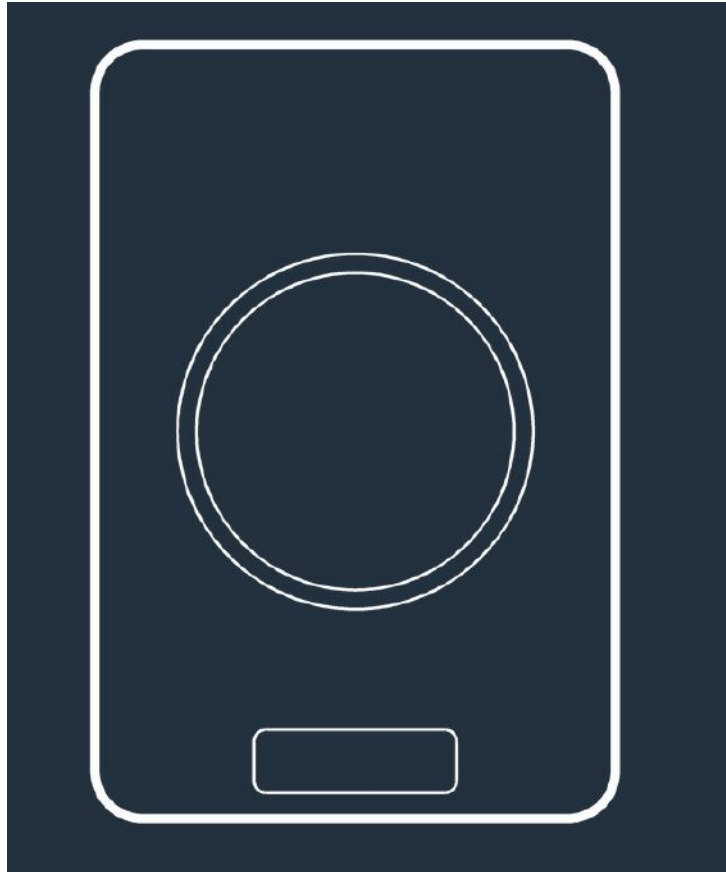


In the box

- Option 1: Secures the top and bottom casing together



**#6-32 x .375" spanner
security screw**

- Option 2: Secures the top and bottom casing together

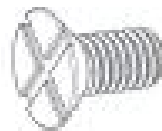

**#6-32 x .375" phillips
flat head screw**

- For mounting wall bracket




#6-32 x .375" Phillips machine screws

What you'll need

- A working internet connection
- Cable, 5-12 conductor (Wiegand), 4 conductor Twisted Pair Over-All Shield and UL approved, Belden3107A or equivalent (OSDP)
- Linear DC power supply
- Metal or plastic junction box
- Drill with various bits for mounting hardware

Installation

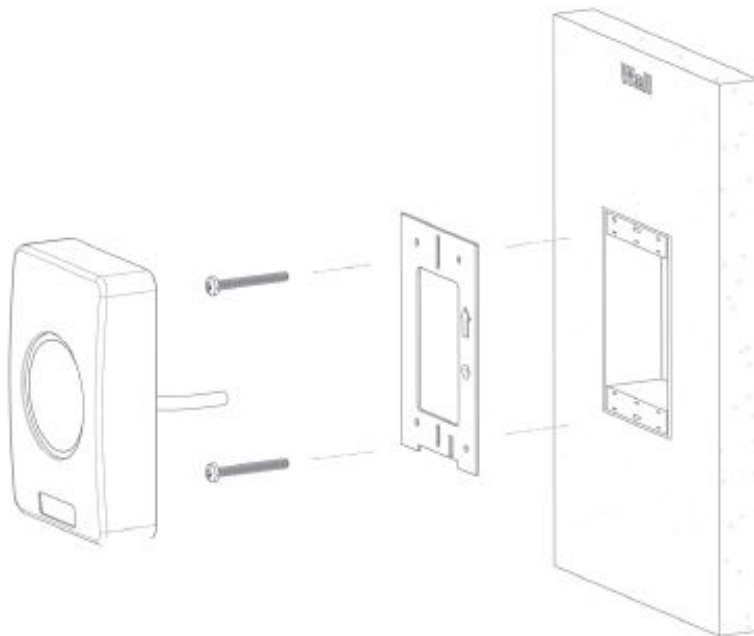

For a wall mounted installation, locate the electrical box which will be recessed into the wall. You will see a top and bottom metal flange with holes which is used to secure the back plate to the wall. Using the Phillips machine screws provided (#6-32 x .375") screw the back plate against electrical box so that it's flush.




The next step is to connect the wires as per the wiring table above.

Wire Colors		
Ground	●	Black
Wiegand Output D0	●	White
Wiegand Output D1	●	Green
Buzzer Input	●	Yellow
Tamper Out	●	Purple
Green LED Input	●	Orange
Relay Out	●	Blue
Relay In	●	Grey
RED LED Input	●	Brown
RS485 B	●	Pink
RS485 A	●	Aqua
12 VDC	●	Red


Once the back plate has been fitted and the wiring is complete, the top casing can be inserted onto the bottom casing like shown above.




Complete the hardware installation by fixing the snake eye screws (security screws) to the top and bottom casing (#6-32X5/16" SS).

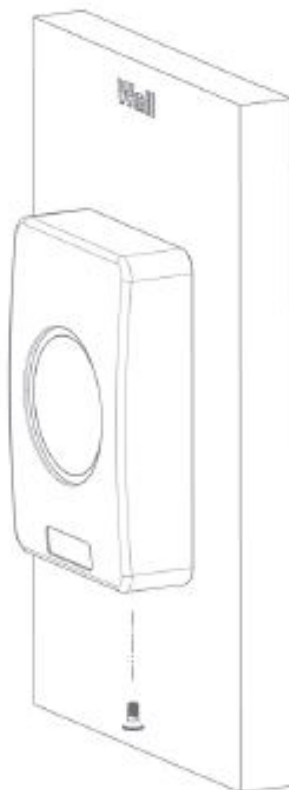


Configuration

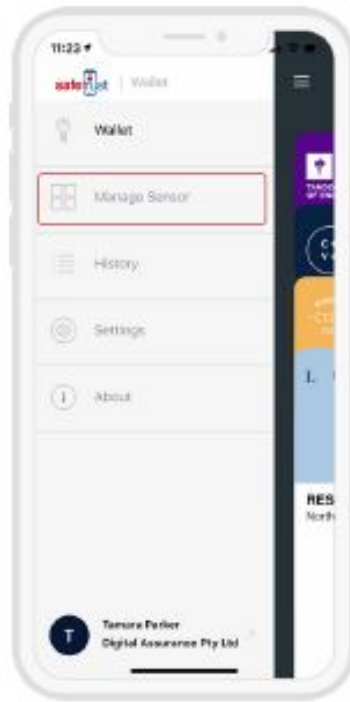

Open the Safetrust Wallet APP and select Manage Sensor tab. Make sure your system admin has set you up with this role.

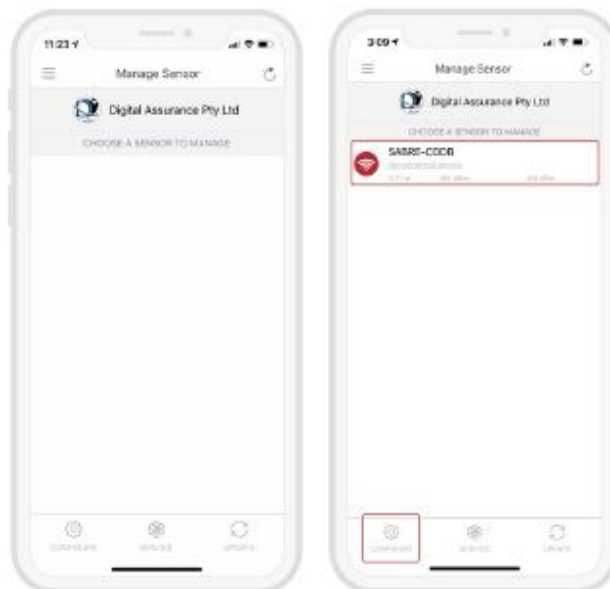

With the Admin Installer tab open from the App, bring the phone in range of the IoT Sensor and once visible from the App, highlight and select "Configure".

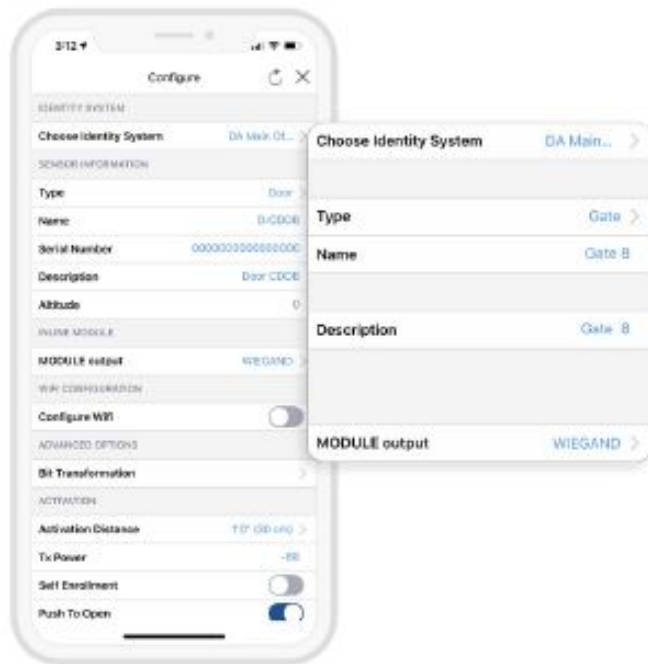


- Choose an Identity System.
- Specify the Type of access from the dropdown (eg. Door, Gate etc.)
- Assign a short Name and Description using alphanumeric characters.
- Choose an Output for the sensor (the default is set to Wiegand).

When the IoT Sensor information is saved successfully to Credential Manager and assigned to the Identity System, the new description will appear in the Manage Sensor tab with a unique serial number assigned.



Testing

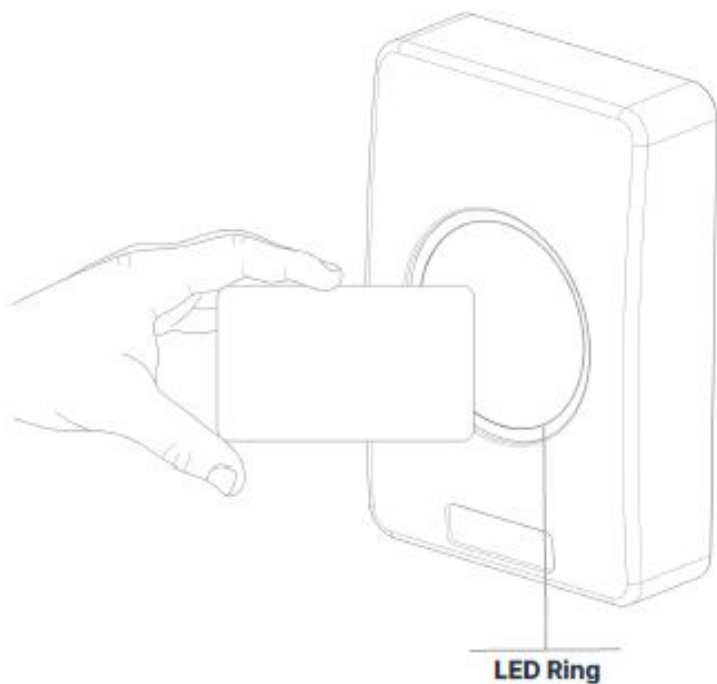

Access with cards

Status LED


Solid red
Indicates idle mode


Flashing red
Powering up


Solid green
Success


Flashing green
Credential is read and
access is granted



Access with mobile

Status LED


Solid red
Indicates idle mode


Flashing red
Powering up




Solid Blue
Success


Flashing Blue
Credential is read and
access is granted




Regulatory Information

FCC: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Canada Radio Certification: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. CE Marking: Safetrust hereby declares that these proximity readers are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Documents / Resources

	safetrust 8845-200 IoT Sensor WM [pdf] User Guide 8845-200, IoT Sensor WM
	safetrust 8845-200 IoT Sensor WM [pdf] User Guide 8845-200, IoT Sensor WM, 8845-200 IoT Sensor WM

References

-  [Safetrust Inc - Touchless Identity Solutions](#)
-  [Safetrust Inc - Touchless Identity Solutions](#)
-  [Slack](#)