



Safetrust SA210 Sabre Module User Guide

[Home](#) » [safetrust](#) » Safetrust SA210 Sabre Module User Guide 



1. The SABRE Module offers a quick Bluetooth mobile access upgrade for legacy readers with a Hirose connector.*


Remove the mounting screw at the bottom of the reader.




2. Once the screw is removed pull the reader out and up to remove it from the wall mount bracket.




3. The Hirose connector is hidden behind the black electrical tape. By peeling the tape the connector will become accessible.

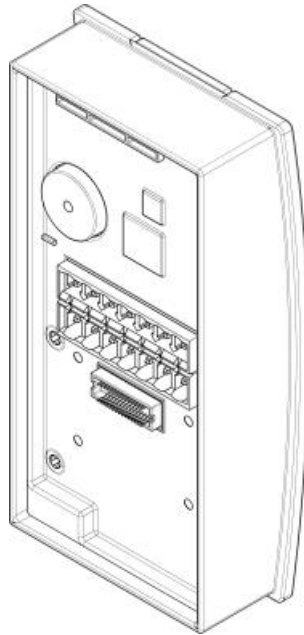


4. The SABRE module has a matching Hirose connector that will plug into the host reader.

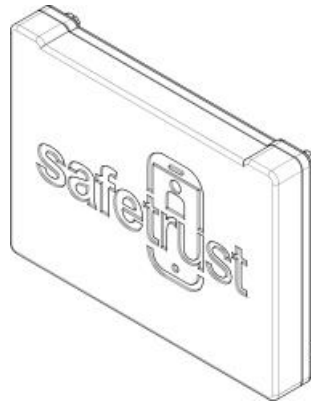

5. Position the SABRE module (with the logo up), onto the Hirose connector and press firmly to make a connection.

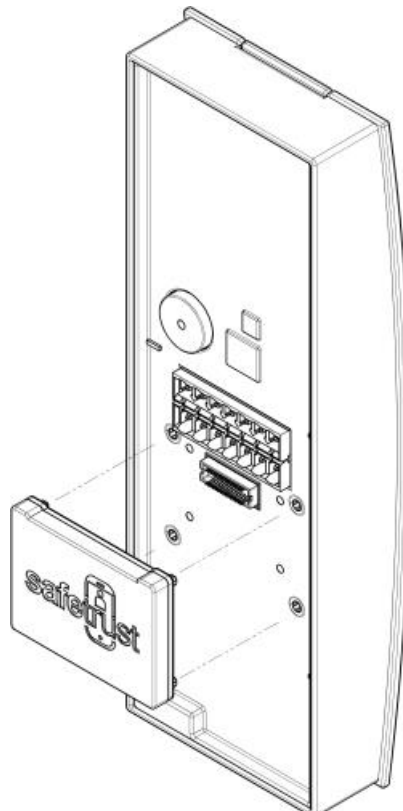


6. Once a connection is made between the Hiroshi connectors, the module will start to receive power and within 5 seconds will be operational.

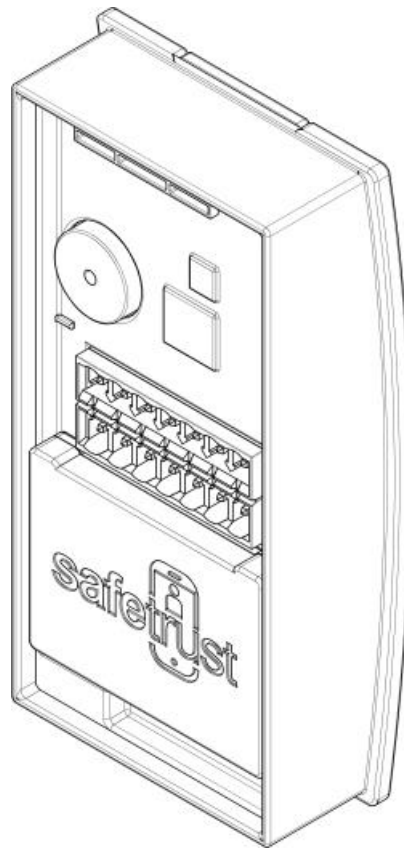

7. With the SABRE module connected, re-mount the reader onto the wall and reinsert the mounting screw.



8. Open the Safetrust Wallet APP and select the Admin Installer tab. Make sure your system admin has set you up with this role).

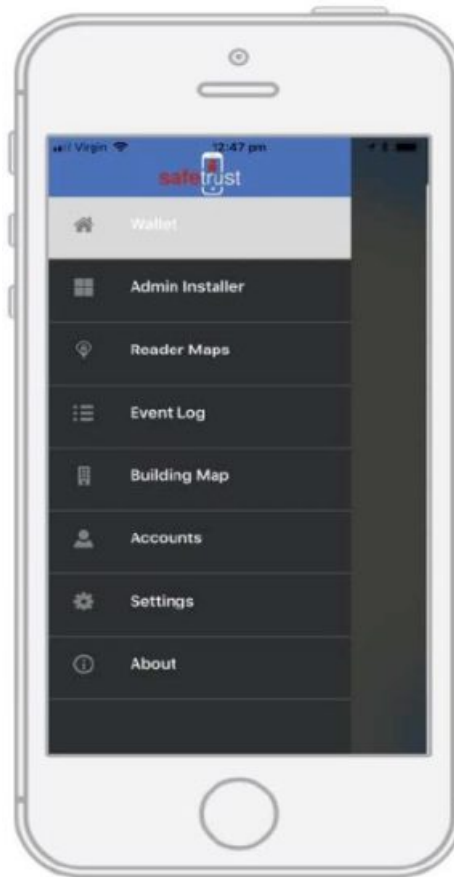


9. With the Admin Installer tab open from the App, bring the phone in range of the SABRE Module and once visible from the App, highlight and select “Configure”.




10. Select the corresponding IDENTITY SYSTEM from the drop-down box. Assign a short “Name” and “Description” using alphanumeric characters.

Enable the slider for “Self Enrollment” if you intend to allow your users to enroll mobile credentials using their existing legacy cards from this reader. Click ‘Save’ to successfully complete the reader configuration.

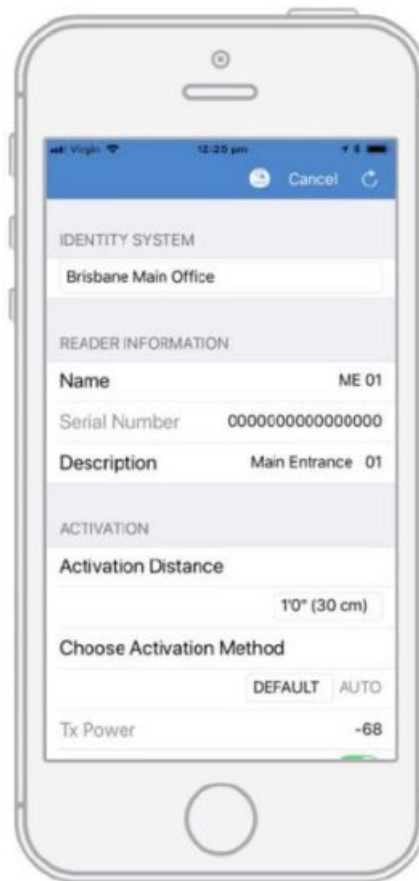


11. When the SABRE Module information is successfully saved to the Credential Manager and assigned to the Identity System, the new description will appear in the Admin Installer with a unique serial number assigned.

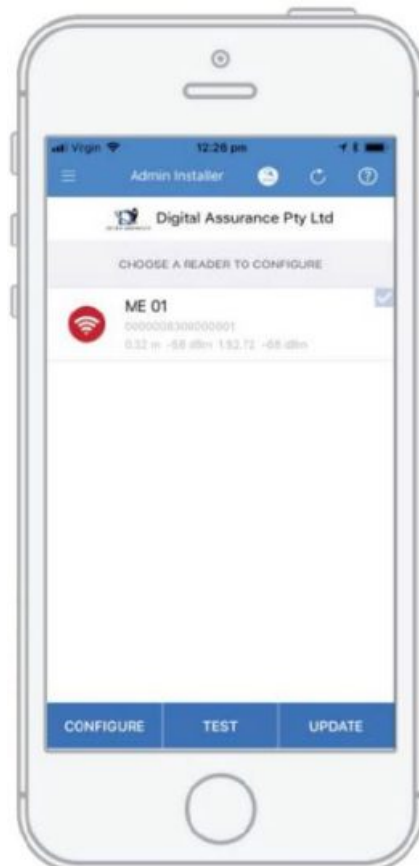

12. To open the door, simply present your mobile device running the Safetrust Wallet application to the SABRE Module. When the phone is within the configured activation range, the LED within the assigned credential for this identity system will be green in color. If "Auto Authenticate" is enabled for the mobile credential, the credential will be sent to the SABRE Module whenever the mobile device is



13. The two main configuration options for this are the “Sensitivity Level to Activate” slider, which determines how easily your mobile device will pick up the activation zone, and the “Anti Passback” setting, which defines the within the activation zone.

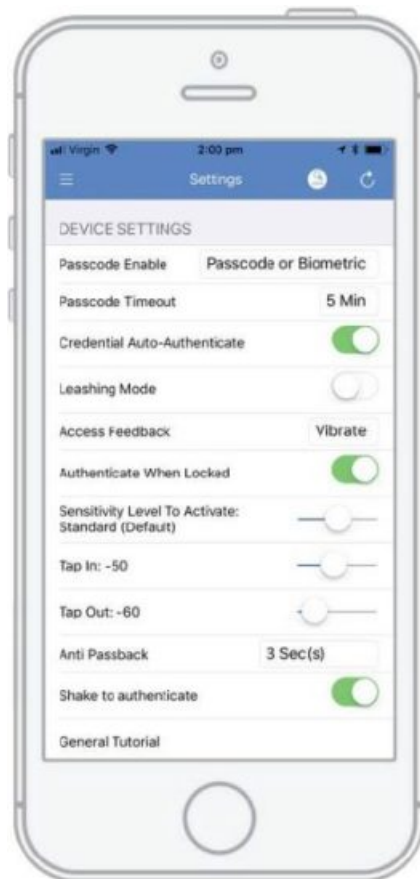

FCC

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure: Mobile RF exposure device, there shall be a minimum separation of 20 cm between the device and any users or installers.

FCC PART 15.19 STATEMENT: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada Radio Certification

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

www.Safetrust.com

sales@Safetrust.com

+1 510 9 SAFE 09

SAFETRUST MODEL SA210

FCC ID: 2ANI5SA210

IC ID: 23133-SA210

MADE IN THE USA




Contents

[1 Documents / Resources](#)

[1.1 References](#)

[2 Related Posts](#)

Documents / Resources

	Safetrust SA210 Sabre Module [pdf] User Guide SA210, 2ANI5SA210, SA210 Sabre Module, Sabre Module
---	--

References

- [!\[\]\(eae20f1adff742df783f6f7e3bbe72d1_img.jpg\) Safetrust Inc - Touchless Identity Solutions](#)
- [!\[\]\(43c6e08c5a1618d745b54da5c843274e_img.jpg\) Safetrust Inc - Touchless Identity Solutions](#)

Manuals+.