



SAFRAN SecureSync 2400 NetClock NENA Breakout Cable User Guide


[Home](#) » [Safran](#) » SAFRAN SecureSync 2400 NetClock NENA Breakout Cable User Guide 

Contents

- [1 SAFRAN SecureSync 2400 NetClock NENA Breakout Cable](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Components](#)
- [6 Installation](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



SAFRAN SecureSync 2400 NetClock NENA Breakout Cable

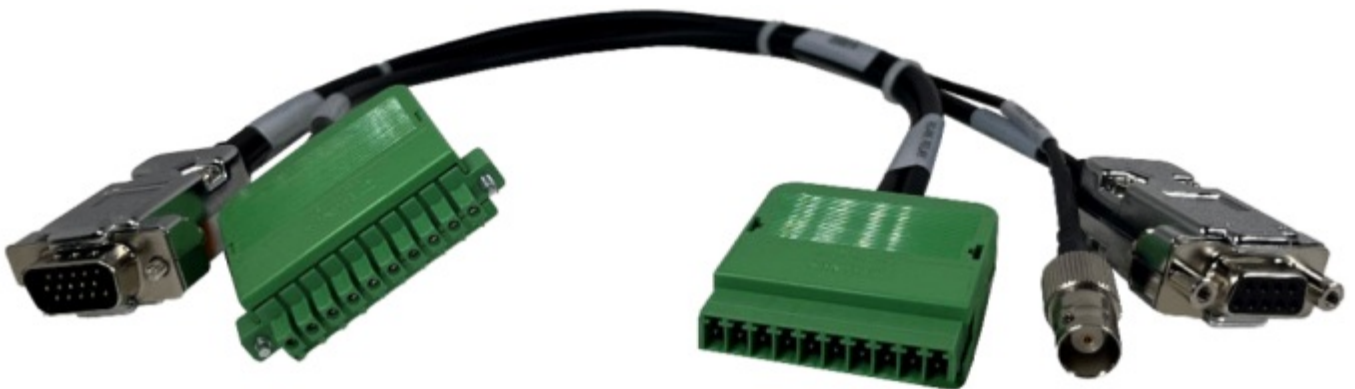

Product Information

- **Product Name:** SecureSync 2400 NetClock/NENA Breakout Cable
- **Model:** SecureSync 2400

- **Part Number:** 2400-5000-0705
- **Revision:** 2
- **Introduction:** The SecureSync 2400 NetClock/NENA Breakout Cable is an optional accessory for the SecureSync 2400 unit. It allows for the connection of the 1204-0F card to the main board of the SecureSync 2400, enabling further configuration and functionality.

Product Usage Instructions

1. Ensure that you have already installed the 1204-0F card on your SecureSync 2400 unit. If not, refer to the Option Card Field Installation Guide for instructions.
2. Take the NetClock/NENA Breakout Cable and connect the terminal block marked "CONNECT TO 1204-0F" to the terminal block on the 1204-0F card located on the rear panel of the SecureSync.
3. Connect the HD15 male connector marked "CONNECT TO 2400 I/O" on the NetClock/NENA Breakout Cable to the multi-I/O connector on the main board of the SecureSync 2400.
4. To configure the Pin Layout, log on to the Web UI and navigate to MANAGEMENT > Network > Pin Layout.
5. If you have a preset pin layout configuration file, you can upload it by following these steps:
 - Download the preset pin layout configuration file from this link: <https://safran-navigation-timing.com/document/securesync-2400-netclock-nena-breakout-cablepinout/>
 - In the Actions panel of the Pin Layout page, select "Upload Layout" and upload the "netclockcablepins.json" file.
 - In the Actions panel, select "Apply Changes".
6. If you want to manually adjust your pin layout settings, follow these steps:
 - To eliminate unnecessary signals, delete the following pins:
 - Pins 1, 2 – IRIG_IN DCLS
 - Pins 3, 13, 8 – HQ_OUT RS485
 - Pins 15 – ATC_IN RS232
 - Pins 4, 14, 9 – HQ_IN RS485
 - Click on the plus sign in the upper right corner to add.
 - Add pins 3, 13, and 8 to "ATC_OUT | RS485" and click "Submit".
 - If you require an IRIG AM output instead of DCLS, add pins 6 and 7 to "IRIG_OUT | RS485".
 - In the Actions panel, select "Apply Changes" to confirm your new pin layout.

- **Part Number:** 2400-5000-0705
- **Revision:** 2

Introduction

- The NetClock/NENA Option is a user-selectable kit for the SecureSync 2400 that serves as a drop-in replacement for the
- NetClock 9483 NENA-Compliant Master Clock interfaces.
- The NetClock/NENA Option Kit uses the 15-pin multi-I/O connector (found on the main board of the unit), and the 1204- 0F Alarm Relay option card, to connect to the NetClock/NENA Breakout Cable. This cable provides the same three output interfaces as found on the NetClock 9483: BNC IRIG Out, RS-232 on DB9, and RS-485 and Alarm Relay on a shared terminal block, allowing users to swap in the 2400 system with seamless

integration to end devices.

Components

The NetClock/NENA Option Kit (2400-0000-0705) includes the following materials:

- NetClock/NENA Breakout Cable (CA08R-0000-0010)
- NetClock/NENA Option Manual (this document, 2400-5000-0705)

Also required (must be ordered separately):

- Alarms/Relay Option Card (1204-0F):
- The 1204-0F card can be installed in any open slot. The terminal block connector will be used in conjunction with the NetClock/NENA Breakout Cable.
- For information on this card, see https://safran-navigationtiming.com/manuals/2400/Content/NC_SS/Com/Topics/OPTCARDS/OC/List/Alrm/Rlay/O.htm.

Installation

• 1204-0F Option Card Installation

For customer installation of the 1204-0F card on a SecureSync 2400 unit already in your possession, follow the instructions in the Option Card Field Installation Guide to ensure that you safely install the 1204-0F. The Option Card Field Installation Guide is shipped with option cards ordered separately from SecureSyncs, and is also found here:


<https://safran-navigation-timing.com/document/option-card-installation-guide/>.

Warning: Field installation of option cards by end users is potentially dangerous and requires strict adherence to all safety warnings and cautions. Personal injury and permanent equipment damage can occur. Do not attempt to install the card without referring to the Option Card Field Installation Guide.

(If you are receiving this kit with an order for a SecureSync 2400 and a 1204-0F card, your 1204-0F card will be already installed in your unit).

NetClock/NENA Breakout Cable Installation

Once a 1204-0F card is installed in your SecureSync 2400, you can attach the NetClock/NENA Breakout Cable (see image below).

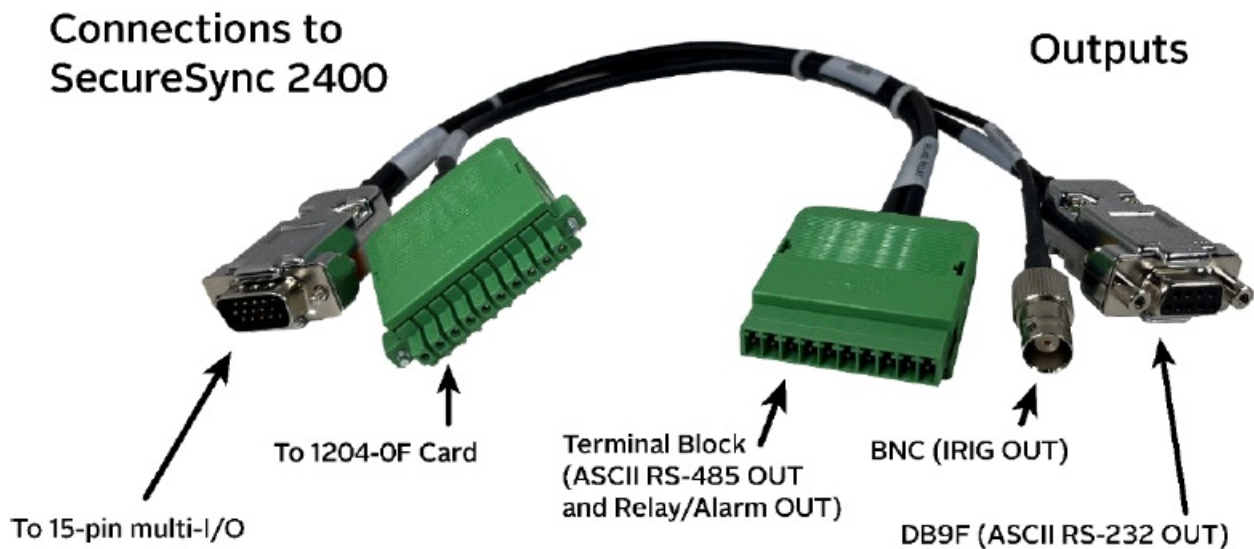

1. On the NetClock/NENA Breakout Cable, connect the terminal block marked CONNECT TO 1204-0F to the terminal block on the 1204-0F card on the rear panel of the SecureSync.
2. Connect the HD15 male marked CONNECT TO 2400 I/O on the NetClock/NENA Breakout Cable to the multi-I/O connector on the main board of the SecureSync 2400.
3. Log on to the Web UI to further configure the Pin Layout. Navigate to MANAGEMENT > Network > Pin Layout. From here, you can either:

- **Upload a Pin Layout configuration:**

- Download the preset pin layout configuration file here: <https://safran-navigation-timing.com/document/securesync-2400-netclock-nena-breakout-cablepinout/>
- In the Actions panel of the Pin Layout page, select Upload Layout and upload the thenetclockcablepins.json file.
- In the Actions panel, select Apply Changes.

Caution: Do not skip this step, or your changes will not take effect.

- OR, you can manually adjust your pin layout settings using the following steps:
- To eliminate later confusion, first delete four unnecessary signals:
- **DELETE Pins 1,2, IRIG_IN DCLS:** DELETE Pins 3, 13, 8 HQ_OUT RS485
- **DELETE Pins 15 ATC_IN RS232:** DELETE Pins 4,14, 9 HQ_IN RS485

Layout			
Pin Number	Signal	Type	
BNC	PT5_OUT	DCLS	Delete
BNC_GND		GND	
6	IRIG_OUT	DCLS	Delete
7		GND	
1	IRIG_IN	DCLS	
2		GND	
15	ATC_IN	RS232	
5	ATC_OUT	RS232	Delete
10		GND	
3	HQ_OUT	RS485	
13	HQ_OUT	RS485	
8		GND	
4	HQ_IN	RS485	
14	HQ_IN	RS485	
9		GND	
11	IRIG_OUT	AM	
12		GND	

Click on the plus sign in the upper right corner, and

- ADD pins 3, 13, & 8 to ATC_OUT | RS485 (as in the following figure) and click Submit.

Add Pin

Signal

ATC_OUT | RS485

Type Filter

RS485

Pins

3, 13, 8

Submit

Note: If your setup requires an IRIG AM output rather than DCLS, you will also need to ADD pins 6 & 7 to IRIG_OUT | RS485 to change the signal.

Your pin layout should now be configured like the following image:

Layout			
Pin Number	Signal	Type	
BNC	PPS_OUT	DCLS	Delete
BNC_GND		GND	
6	IRIG_OUT	DCLS	Delete
7		GND	
1	None	GND	
2		GND	
15	None	GND	
5	ATC_OUT	RS232	Delete
10		GND	
3	ATC_OUT	RS485	Delete
13	ATC_OUT	RS485	
8		GND	
4	None	GND	
14	None	GND	
9		GND	
11	IRIG_OUT	AM	
12		GND	

In the Actions panel, select Apply Changes to confirm your new pin layout.

Caution: Do not skip this step, or your changes will not be reflected on the unit.

Additional Web UI configuration may be necessary based on your application of the inputs and outputs. You can select each output to change specifications (on your IRIG or ASCII signals, for instance). See the following image for reference.



In the Web UI, the following interfaces apply to the NetClock/NENA Breakout Cable:


1. IRIG-OUT (found on the BNC connector of the NetClock/NENA Breakout Cable).
2. ASCII OUT RS232 (found on the DB9F connector of the NetClock/NENA Breakout Cable).
3. ASCII OUT RS485 (found on the terminal block connector of the NetClock/NENA Breakout Cable).
4. ALARM/RELAY signals Alarm Output 0 and 1 (found on the terminal block connector of the

NetClock/NENA Breakout Cable.

Note: in this setup, Alarm Output 2 is not functional).

PIN	SIGNAL	FUNCTION
1	PPS_OUT	1PPS output
2	SERIAL_OUT_TX	RS-232 Transmit data
3	SERIAL_OUT_RX	RS-232 Receive data
4	NC	No connection
5	GND	Ground
6	NC	No connection
7	NC	No connection
8	NC	No connection
9	NC	No connection

- DB9 Output Pins From terminal end of NetClock/NENA Breakout Cable

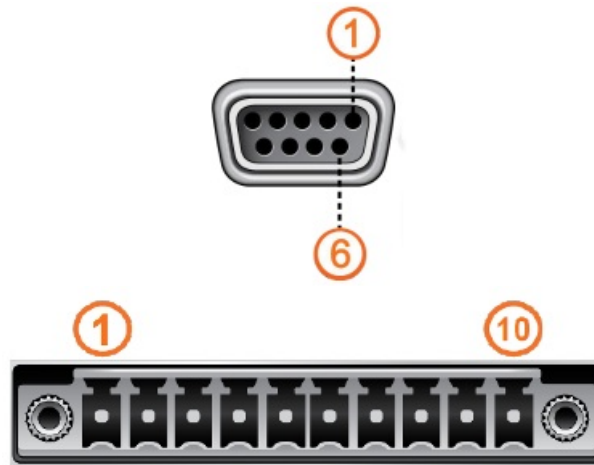

Pin	Signal	Direction	Characteristics
1	RS-485 TX+	Out	0V to 3VDC differential, 120 Ω load
2	RS-485 TX-	Out	0V to 3VDC differential, 120 Ω load
3	GROUND	N/A	GROUND
4	Relay 0 NO	Out	Normally Open 30 VDC, 2A max. switching power
5	Relay 0 NC	Out	Normally Closed 30 VDC, 2A max. switching power
6	Relay 0 COMMON	Out	Common Contact 30 VDC, 2A max. switching power
7	Relay 1 NO	Out	Normally Open 30 VDC, 2A max. switching power
8	Relay 1 NC	Out	Normally Closed 30 VDC, 2A max. switching power
9	Relay 1 COMMON	Out	Common Contact 30 VDC, 2A max. switching power
10	GROUND	N/A	GROUND

Terminal Block Pinout

Relay 0		
From Common (pin 6)	To NO (pin 4)	To NC (pin 5)
Power applied. No alarms	Short	Open
Power applied. Alarm active.	Open	Short
No power applied to SecureSync	Open	Short
Relay 1		
From Common (pin 9)	To NO (pin 7)	To NC (pin 8)
Power applied. No alarms	Short	Open
Power applied. Alarm active.	Open	Short
No power applied to SecureSync	Open	Short

Alarm Relay Power Source

More information on standard unit behavior or any other feature or function of the SecureSync 2400 can be found in the user manual at <https://safran-navigation-timing.com/manuals/>.


Information furnished by Safran is believed to be accurate and reliable. However, no responsibility is assumed by Safran for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Safran reserves the right to make changes without further notice to any products herein. Safran makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Safran assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. No license is granted by implication or otherwise under any patent or patent rights of Safran. Trademarks and registered trademarks are the property of their respective owners. Safran products are not intended for any application in which the failure of

the Safran product could create a situation where personal injury or death may occur. Should Buyer purchase or use Safran products for any such unintended or unauthorized application, Buyer shall indemnify and hold Safran and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable legal fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Safran was negligent regarding the design or manufacture of the part

Safran Electronics & Defense

- safran-navigation-timing.com.

Documents / Resources

	<p>SAFRAN SecureSync 2400 NetClock NENA Breakout Cable [pdf] User Guide 2400-5000-0705, SecureSync 2400 NetClock NENA Breakout Cable, NetClock NENA Breakout Cable, NENA Breakout Cable, Breakout Cable, Cable</p>
---	---

References

- [S The World Leader in Resilient PNT - Safran - Navigation & Timing](#)
- [S Safran | Navigation and Timing - The World Leader in Resilient PNT](#)
- [S Option Card Installation Guide - Safran - Navigation & Timing](#)
- [S SecureSync 2400 NetClock /NENA Breakout Cable Pinout - Safran - Navigation & Timing](#)
- [S Online Manuals - Safran - Navigation & Timing](#)
- [S Alarm Relay Out 1204 0F](#)
- [User Manual](#)