

SENECA T201 2 Wire – Loop Alternated Current Transducer Instruction Manual

Home » SENECA » SENECA T201 2 Wire – Loop Alternated Current Transducer Instruction Manual



SENECA T201 2 Wire - Loop Alternated Current Transducer Instruction Manual



Contents

- 1 General Specifications
- 2 Technical features
- 3 DIP-switches
- 4 Mounting
- 5 Multi-turn primary winding to improve sensibility
- 6 Support
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**

General Specifications



- The T201 instrument is an AC current transducer (CT) for 4 20 mA current loops (loop powered 2 wires technology).
- High precision.
- Extremely compact size.
- Wide configurability: eight pre-calibrated ranges, DIP-switch selected.
- Extremely low consumption.
- Low output ripple and quick response to variations.
- Damping filter (DIP-switches activable) to reduce the response time (damping starts, unstable loads, etc.).

Technical features

INPUT					
Measure type	AC rectified average				
Range	5 A, 10 A, 15 A, 20 A, 25 A, 30 A, 35 A, 40 A (DIP-switch selected).				
Peak factor	2				
Bandwidth	20 – 1000 Hz				
Insulation	When a sheathed wire is used, the insulation voltage is set by sheath p roperties. On a bare wire, it's stated 3 kV A.				

Over-current	800 A permanent							
OUTPUT AND POWER SUPPLY								
Туре	4 – 20 mA, max. load R =600 Ω .Screw terminals: p and m.							
Terminals	Screw terminal pitch 5.08mm for max 2.5 mm ² cables							
Hole diameter	12.3 mm							
Power supply	5 – 28 VC (between p and m.)							
Protections	- Polarity reversal - Over-Voltage							
Max. indication	< 28 mA							
ACCURACY (1)	ACCURACY (1)							
	Frequency: 40 – 400 Hz	Frequency: 20 – 1000 Hz						
Range < 5 A	0.1 % o.m. + 0.1 % o.t.s.	0.1 % o.m. + 0.3 % o.t.s.						
Range > 5 A	0.2 % o.m. + 0.1 % o.t.s.	0.2 % o.m. + 0.3 % o.ts.						
Resolution	Infinity							
Temperature coefficient	< 150 ppm/°C.							

Т


Error due to EMI	< 40 mA					
Response time	– Filter «fast»: 100 ms – Filter «slow»: 2500 ms					
Residue ripple	< 10 μA rms @ 20mA and 50 Hz					
Self-Consumption	< 50 mW					
Notes (1)	These acronyms apply: o.m. = of measurement, o.t.s. = of the scale.					
OVERVOLTAGE CATEGORY						
Bare conductor	CAT. III 300V					
Insulated conductor	CAT. III 600V					
OPERATING CONDITION						
Protection degree	IP20.					
Operating temperature	-20 - +70 °C.					
Storage Temperature	− 40 − +85 °C.					
Humidity	10 – 90 % non-condensing					
Altitude	Up to 2000 m a.s.l.					


CASE				
Weight	47 g.			
Overall dimensions	41 x 44 x 26 mm (without terminals).			
Box material	PA6, black.			

DIP-switches

Input Range								Filter (*)				
SW 1	1	2	3	Range		1	2	3	Range		4	
				5 A		1			25A		1	Presen
			1	10A	SW 1	1		1	30A	SW 1		Absent
		1		15A		1	•		35A			
		1	1	20A		1	1	1	40A			

In the table the symbol corresponds to the switch in the ON position. The instrument is factory delivered with range 5A, 100ms filter. (*)The input filter slows down the response time to about 2.5 s and stabilizes the measurement.

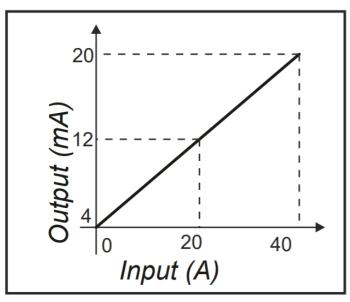

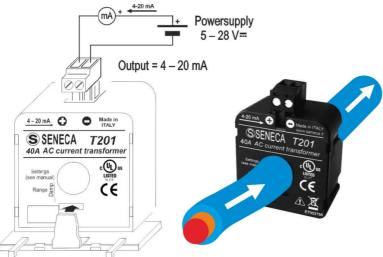

Mounting

The device can be located in any position and place, in accordance with the operating conditions above stated. Use the included holder bracket when fixing it to a DIN rail.

WARNING: High-strength magnetic fields may change the output value. Avoid closeness to permanent magnets, electromagnets or iron bulks that cause such a modification of the surrounding magnetic field; try a different arrangement or orientation if zero error was greater than expected.

Multi-turn primary winding to improve sensibility

You can increase the sensibility of the device simply passing several times in the hole with the measuring current, realizing turns with multiplicative effect: for example, passing 5 times in the hole, as to see 4 turns, choosing a 40 A range, you get an equivalent sensibility of 8 A full-scale. When you make this, let dispose the turns with symmetry in order to preserve accuracy: use diametric contraposition with 2 turns, cross disposition with 4 turns, 60° with 6 turns, and so on.



Disposal of electrical & electronic equipment (applicable throughout the EU and other countries wit separate collection programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative

consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of it. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you

purchased this product.

Support

SENECA s.r.l.

Via Austria, 26 – 35127 – PADOVA – ITALY **Tel.** +39.049.8705355 – 8705359 **Fax** +39.049.8706287

Manuals and configuration software are available at website: www.seneca.it/products/t201

Technical support: support@seneca.it
Product Information: sales@seneca.it

This document is property of SENECA Srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice. Content of this documentation is subject to periodical revision.



Documents / Resources



<u>SENECA T201 2 Wire - Loop Alternated Current Transducer</u> [pdf] Instruction Manual T201, 2 Wire - Loop Alternated Current Transducer, Alternated Current Transducer, Current Transducer, T201, Transducer

References

S T201 | Current Transducers - T201 Line | SENECA

Manuals+,