

SEVERIN SM 3737 Multi Blender + Smoothie Mix and Go Instruction Manual

SEVERIN

SM 3737 Multi Blender + Smoothie Mix and Go Instruction Manual



ART.-NO. SM 3737

Contents

- [1 SM 3737 Multi Blender + Smoothie Mix and Go](#)
- [2 Important safety instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

SM 3737 Multi Blender + Smoothie Mix and Go



Multi-mixer + Smoothie Mix & Go

Dear Customer,

Before using the appliance, read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

Connection to the mains supply

Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with all binding CE labelling directives.

Familiarization

1. Stopper with measuring cup
2. Lid (blender jug)
3. Blender jug with handle
4. Blender blade
5. Motor housing
6. Rotary control
7. Power cord with plug
8. Blade unit – Blender
9. Power cord storage (on underside of appliance)
10. Rating label (on underside of appliance)
11. Lid (drink container)
12. Blade unit – Drink container
13. Drink container

Important safety instructions

- In order to avoid hazards, repairs to this electrical appliance or its power cord must be carried out by our customer service. If repairs are needed, please send the appliance to our customer service department (see appendix).
- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the appliance with liquids or immerse it.
- The blender jug, drink container, blade assembly and lids can be cleaned with hot soapy water
- For detailed information on cleaning the appliance, please refer to the section Cleaning and care.
- **Caution:** The blades for the blender and drink container are extremely sharp. To prevent injuries, take special care when cleaning the appliance and when emptying the blender jug.
- **Caution:** Do not put hot liquid into the blender jug or drink container.
- Extra care is required when pouring hot liquids into the blender jug or drink container in case a jet of vapor should escape from the appliance.
- **Caution:** Any misuse can cause severe personal injury.
- Always switch the appliance off and remove the plug from the wall socket,
 - when there is no supervision,
 - before opening the lid,
 - before removing or fitting the blender jug or drink container,
 - in case of any malfunction during use,
 - before cleaning, – after use.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- This appliance is intended for domestic or similar applications, such as the
 - staff kitchens in shops, offices and other similar working environments,
 - agricultural working environments,
 - by customers in hotels, motels etc. and similar accommodation,
 - in bed-and breakfast type environments.

- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved.
- Children must not be permitted to operate the appliance. The appliance and its power cord must be kept well away from children.
- Children must not be permitted to play with the appliance.
- Caution: Keep any packaging materials well away from children
 - these materials are a potential source of danger, e.g. of suffocation.
- Every time the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects.
Should the appliance, for instance, have been dropped onto a hard surface, or if excessive force has been used to pull the power cord, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- The appliance should only be placed on a level surface. Do not allow the housing or its power cord to come into contact with open flames or any hot surfaces such as hot-plates.
- Do not let the power cord hang free.
- Do not touch any moving parts during operation – this can be extremely dangerous.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.

Before using for the first time

Before the appliance is used for the first time, the blender jug, drink container and lids should be thoroughly cleaned as described in the section Cleaning and care.

Switch settings

The following settings can be selected:

P The appliance remains switched on as long as the rotary switch is held in this position

0 The appliance is switched off

I Low power

II Maximum power

Short-term operation

The appliance is designed to process average domestic quantities of food; it can be operated without interruption for a maximum of 3 minutes, after which it should be allowed to cool down to room temperature.

Safety switch

A special safety switch in the motor housing ensures that the appliance can only be operated if the blender jug is properly locked in position.

Before removing the blender jug, make sure that the rotary control is in position 0. This also applies when fitting the blender jug to the motor housing. If the control is not in its off-position (0), the motor will start immediately.

Multi-mixer operation

- Fit the blender jug to motor housing, with its handle to the right, in such a way that the two triangle symbols are aligned.
- Put the liquid ingredients into the blender jug. The jug has a maximum capacity of 1000 ml. To avoid possible foaming or spilling when processing foamable or thin liquids such as milk, do not fill the jug over the 700 ml mark.
- Replace the lid so that the spout is completely covered.

- To add ingredients during operation, the stopper in the center of the lid can be removed. Do not put any objects into the blender jug while the appliance is operating.
- Insert the plug into the wall outlet and use the rotary control to select the required power setting.
- **Caution:** Do not operate when the blender jug is empty. Do not fill it with dry items only, such as nuts, almonds etc.
- After using the blender, switch off and remove the plug from the wall socket. Wait until the motor has come to a complete standstill before removing the blender jug.

Using the multi-mixer to crush ice Ice-cubes can be easily crushed in the blender jug:

Fill the jug a quarter full with ice cubes, and then fit it to the motor housing, as described in the section Multi-mixer operation. Put on the lid with the stopper in place, and use the pulse function (P) to operate the appliance for about 2 seconds. Wait until the ice cubes have collected in the bottom of the jug again and then repeat the process, until the cubes have been reduced to the required size.

Smoothie-maker operation

- Cut the ingredients into cubes of about 15 mm and put them into the drink container (see pic. A).
- For best results, the following sequence should be observed:
 1. liquids
 2. fresh ingredients
 3. frozen ingredients
 4. yoghurt/ice-cream
- The container has a maximum capacity of 600 ml.
- Screw the blade unit clockwise onto the drink container.
- Turn the container upside down and fit it to the motor housing in such a way that the two triangle symbols are aligned. Now lock the container by turning it clockwise.
- Insert the plug into a suitable outlet and use the rotary control to select the desired speed setting or the pulse function (P).
- **Caution:** Do not operate the appliance when it is empty. Do not fill it with dry items only, such as nuts, almonds etc.
- If some residue sticks to the drink container's sidewalls, remove the container, shake it and let it run through another brief pulse cycle.
- Remove the plug from the wall socket after use. Wait until the motor has come to a complete standstill before removing the container and unscrewing the blade unit.
- Close the container with its lid.

Wind-up power cord storage

The power cord can be wound up for storage on the underside of the unit. Unwind it completely before operation. Information for testing institutes:

The following recipe may be used: Mix 400 g soaked carrots and 600 g water for 3 minutes.

- **Cleaning and care** Always remove the plug from the wall socket before cleaning the appliance.
- To avoid the risk of electric shock, do not clean the motor housing or the power cord with water and do not immerse them in water. The motor housing may be wiped with a slightly damp, lint-free cloth.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- For cleaning directly after use, fill the blender jug (max 700 ml) or drink container (max 400 ml) with warm water

and a little detergent. Let the appliance run for a short period as described in the section Operation. Afterwards, rinse the blender jug or drink container with its blade unit, the lids and stopper with fresh water. All parts must be thoroughly dried afterwards.

- The drink container and lids can also be cleaned in a dishwasher. All other parts are not dishwasher-safe.
- If necessary, the sealing gasket on the blender jug lid can be removed for cleaning. Before the appliance is used again, the gasket must be replaced.
- If required, the blade unit for the blender jar can be detached for cleaning: first remove the collar under the jar by turning it clockwise (see pic. B), and lift out the blade unit (pic. C). **Caution:** The blades are extremely sharp. The gasket in the drink container cannot be removed. Clean the blade unit with a suitable brush. Wipe the gasket with a moist cloth. To re-assemble, place the blade unit on the gasket, fit the collar and lock it by turning it counterclockwise all the way, observing the markings on the collar).

Multi-mix recipes

Iced coffee

200 ml cold coffee

100 ml milk (1,5%)

2 tsp dark bitter chocolate, grated

1 tsp caramel sauce

3 ice cubes

1 scoop vanilla ice

Put all the ingredients into the blender jug and start mixing them at setting II. The result may be sweetened with sugar, according to taste.

Banana chocolate milk-shake

1 banana

400 ml chilled milk

2-3 EL chocolate sauce

4 scoops chocolate ice-cream

Peel the banana, cut it into small pieces and puree finely together with the milk. Add the chocolate sauce and ice-cream and mix briefly.

Additional recipes:



or under www.severin.de/Service/Rezepte

Smoothie recipes

Strawberry-banana smoothie

175 g strawberries

½ banana

250 ml orange juice

½ tbs honey

Cut the banana into small pieces, put it into the drink container together with the remaining ingredients – and prepare your smoothie.

Tropical garden smoothie

65 g	celery
65 g	cucumber
25 g	rocket/roccella
35 g	tomato
100 g	banana
55 g	pineapple
40 g	yoghurt
1 tabs	olive oil
10 g	linseed/flaxseed
1 tabs	honey
80 ml	water

Cut the vegetables and fruit into small pieces, put them into the drink container together with the remaining ingredients – and prepare your smoothie.

Additional recipes:



or under www.severin.de/Service/Rezepte

Disposal



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.


SEVERIN

SEVERIN Elektrogeräte GmbH

Model specifications are subject to change.
I/M No.: 10417.0000 12/22



Documents / Resources

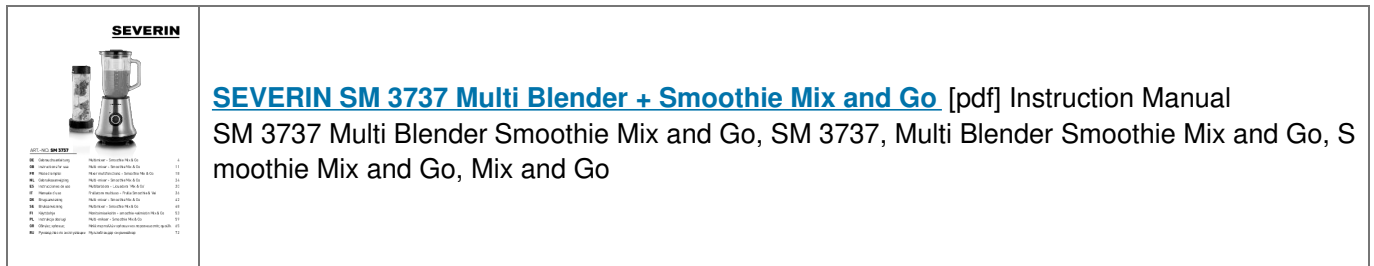

References

- **S** [SEVERIN \(Official\)](#)
- **S** [SEVERIN \(Official\)](#)
- **S** [SEVERIN \(Official\)](#)
- **S** [Service Center - SEVERIN \(Official\)](#)

Manuals+,