

Shark

Shark IW4000 Series
Cordless Detect Pro
Auto Empty System



Shark IW4000 Series Cordless Detect Pro Auto Empty System Instruction Manual

[Home](#) » [Shark](#) » Shark IW4000 Series Cordless Detect Pro Auto Empty System Instruction Manual 

Contents

- [1 Shark IW4000 Series Cordless Detect Pro Auto Empty System](#)
- [2 Product Usage Instructions](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 QUICK START GUIDE](#)
- [5 ASSEMBLY](#)
- [6 SETTINGS](#)
- [7 AUTO MODE](#)
- [8 ESSENTIAL MAINTENANCE](#)
- [9 CLEANING THE SENSORS](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Shark

Shark IW4000 Series Cordless Detect Pro Auto Empty System



Specifications

- Components: motorized nozzle, wand, handheld vacuum
- Power Source: Electric
- Filters: HEPA and pre-motor filters
- Usage: Indoor

Product Usage Instructions

Safety Instructions

1. Before each use, inspect all parts for damage. Discontinue use if any part is damaged.
2. Use only identical replacement parts.
3. Do not expose any parts to water or liquids except for filters and dust cup.
4. Keep the appliance and cord out of reach of children.

General Use

1. Turn off the vacuum before connecting or disconnecting any parts.
2. Avoid handling the plug or vacuum with wet hands.
3. Ensure dust cup, filters, and brushroll are in place before use.
4. Avoid putting objects into nozzle or accessory openings.
5. Keep vacuum airflow unrestricted; clear any obstructions before use.
6. Avoid contact between nozzle and body parts or loose clothing.
7. Do not use a damaged or malfunctioning vacuum.
8. Exercise caution when cleaning on stairs.
9. Do not leave the vacuum unattended while powered on.
10. Maintain constant movement over carpet surfaces to prevent damage.

11. Avoid placing the vacuum on unstable surfaces.

Prohibited Uses

Avoid using the vacuum for picking up liquids, large objects, hard/sharp objects, excessive dust, smoking/burning objects, flammable/combustible/toxic materials, and do not attach it to power tools for dust collection. Avoid using in poorly lit, wet/damp, or outdoor areas.

Frequently Asked Questions (FAQ)

Q: Can children operate this vacuum?

No, children should not operate this vacuum. Close supervision is necessary when used near children.

Shark® Cordless Detect Pro™ Auto-Empty System IW4000 Series

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL • HOUSEHOLD USE ONLY

WARNING When using an electrical appliance, to reduce the risk of fire, electric shock, injury, or property damage, basic precautions should always be followed, including the following:

1. This vacuum consists of a motorized nozzle, wand, and handheld vacuum. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
2. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
3. Use only identical replacement parts.
4. This vacuum contains no serviceable parts.
5. Use only as described in this manual. **DO NOT** use the vacuum for any purpose other than those described in this manual.
6. With the exception of the filters and dust cup, **DO NOT** expose any parts of the vacuum to water or other liquids.
7. Keep the appliance and its cord out of reach of children.
DO NOT allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.

GENERAL USE

8. This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children.
9. Always turn off the vacuum before connecting or disconnecting any current carrying hoses, motorized nozzles, chargers, batteries, or other electrical or mechanical parts.
10. **DO NOT** handle plug or vacuum with wet hands.
11. **DO NOT** use without dust cup, HEPA and pre-motor filters, and brushroll in place.
12. Only use Shark® branded filters and accessories. Failure to do so will void the warranty.
13. **DO NOT** put any objects into nozzle or accessory openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.

14. DO NOT use if nozzle or accessory airflow is restricted. If the air paths or the motorized floor nozzle become blocked, turn the vacuum off. Remove all obstructions before you turn on the unit again.
15. Keep nozzle and all vacuum openings away from hair, face, fingers, uncovered feet, or loose clothing.
16. DO NOT use if vacuum is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
17. Use extra care when cleaning on stairs.
18. DO NOT leave the vacuum unattended while powered on.
19. When powered on, keep the vacuum moving over the carpet surface at all times to avoid damaging the carpet fibers.
20. DO NOT place vacuum on unstable surfaces such as chairs or tables.
21. DO NOT use to pick up:
 - Liquids
 - Large objects
 - Hard or sharp objects (glass, nails, screws, or coins)
 - Large quantities of dust (including drywall, fireplace ash, or embers). DO NOT use as an attachment to power tools for dust collection
 - Smoking or burning objects (hot coals, cigarette butts, or matches)
 - Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
 - Toxic materials (chlorine bleach, ammonia, or drain cleaner)
22. DO NOT use in the following areas:
 - Poorly lit areas
 - Wet or damp surfaces
 - Outdoor areas
 - Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
23. Turn off the vacuum before plugging in or unplugging the charger.
24. Turn off the vacuum before any adjustment, cleaning, maintenance or troubleshooting.
25. During cleaning or routine maintenance, DO NOT cut anything other than hair, fibers, or string wrapped around the brushrolls.
26. Allow all filters to air-dry completely before replacing in the vacuum to prevent liquid from being drawn into electric parts.
27. DO NOT modify or attempt to repair the vacuum or the battery yourself, except as indicated in this manual. DO NOT use the battery or vacuum if it has been modified or damaged. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
28. Always turn off this appliance before connecting or disconnecting motorized nozzle or hand tool.

BATTERY PACK

29. The battery is the power source for the vacuum. Carefully read and follow all charging instructions.
30. To prevent unintentional starting, ensure it is powered off before picking up or carrying the vacuum. DO NOT carry the appliance with your finger on the power switch.
31. Use only charging dock XDCKBU3500L or chargers DK25A-263080H-U or YLS0251A-T263080 Use of incorrect charger may result in no charging and/or unsafe conditions.
32. Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the

battery terminals increases the risk of fire or burns.

33. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
34. Battery should not be stored at temperatures below 3°C (37.4°F) or above 104°F (40°C) to maintain long-term battery life.
35. DO NOT charge battery at temperatures below 5°C (40°F) or above 104°C (104°F). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
36. Store the appliance indoors. DO NOT use or store it below 3°C (37.4°F). Ensure the appliance is at room temperature before operating.
37. DO NOT expose the battery to fire or temperatures above 265°F (130°C) as it may cause explosion.
38. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
39. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
40. For IW4000 series, use only with Shark battery pack XBTR625KSLN.
41. If the charging cord plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT force into outlet or try to modify to fit.
42. To reduce the risk of shock and unintended operation, turn off power and remove the Li-Ion battery before servicing.

READ AND SAVE THESE INSTRUCTIONS

VISIT qr.sharkclean.com/IW4000seriesmanual OR



SCAN HERE

FOR FULL INSTRUCTIONS & REPLACEMENT PARTS

Please be sure to read and save the warnings on other side prior to using your unit.

QUICK START GUIDE

How to set up the IW4000 Series


Shark® Cordless Detect Pro™ Auto-Empty System.

ASSEMBLY



1. Slide the Wand onto the neck of the Floor Nozzle until it clicks into place.
2. Align the Hand Vacuum nozzle opening with the top of the wand and slide it on until it clicks into place.
3. Make sure the Dock is facing upright. Slide the Charging Post into the slot on front of dock until it clicks.

4. Place the dock on the floor near a wall outlet. Plug the Power Cord into the outlet, then connect the cord to the port on the back of the charging post.
5. Store the crevice tool accessory on the mount on the dock.

For proper operation, ensure all components are completely connected and clicked into place.

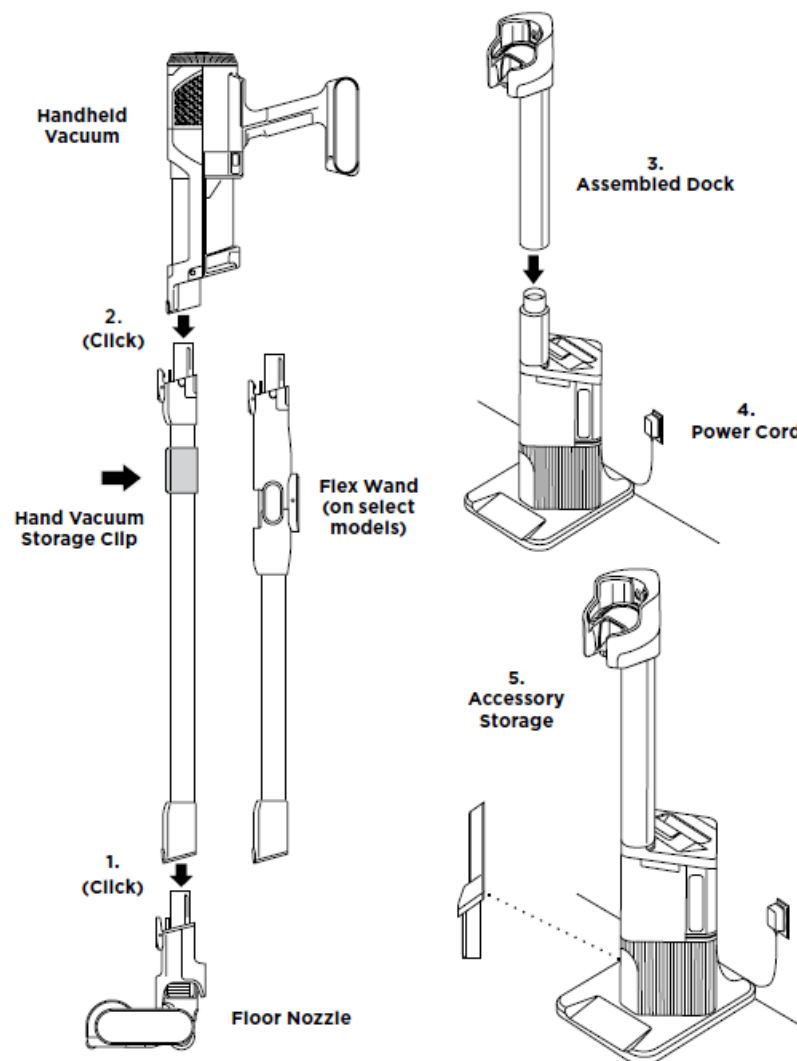


SETTINGS

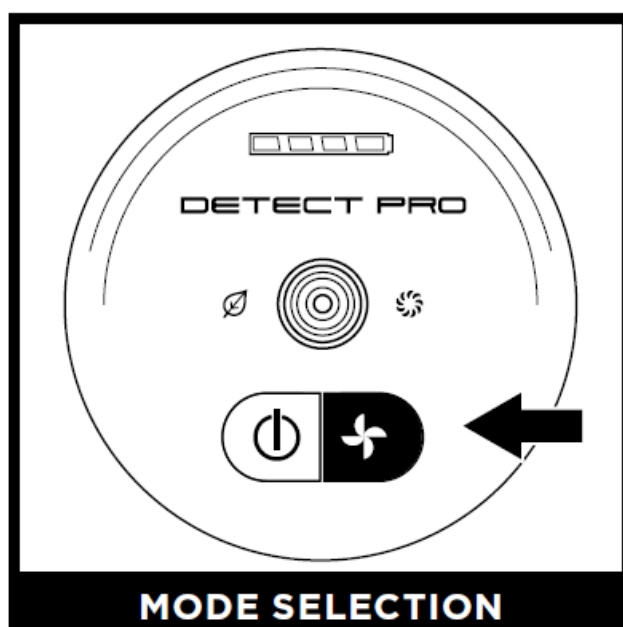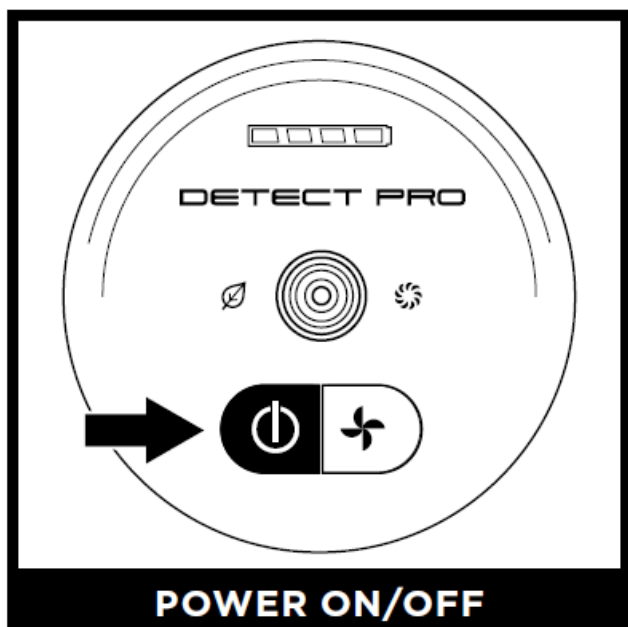

Press the On/Off button on the handle to turn on power. To turn off power, press the button again. To toggle between ECO, AUTO, and BOOST modes, press the mode selection button.

MODES EXPLAINED

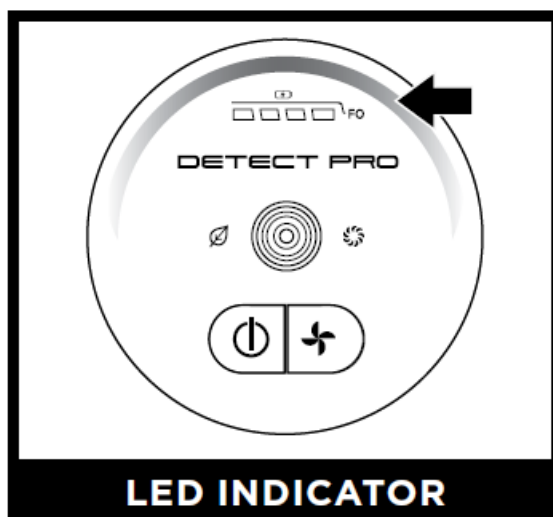

When the LED indicator light is blue, this means no heavy dirt levels are detected and suction power is normal. When the vacuum senses heavy debris, the light will turn red, and suction power will increase for more cleaning power. When the indicator light turns amber, debris is being removed. Continue cleaning until the indicator turns blue again.

AUTO MODE

- In this mode, all of the following technology is automatically activated:
- DirtDetect: Identifies dirtier high-traffic areas and automatically boosts suction power to pull in hidden dirt.
- FloorDetect™: Brushroll responds to surface changes and automatically adjusts to optimize your clean.
- EdgeDetect: Dynamically detects edges and corners and maximizes suction and power to remove stubborn dirt.
- LightDetect™: Senses low-light situations and automatically illuminates dark areas to help you spot debris.
- ECO mode: Vacuum runs on the lowest power setting to preserve battery life. Auto Mode technology is NOT activated.


- **BOOST mode:** Vacuum runs at maximum power for the highest possible suction level. Auto Mode technology is NOT activated.

ESSENTIAL MAINTENANCE

CLEANING THE FILTERS


Regularly rinse and replace the filters to maintain your vacuum's suction power. To clean filters, rinse them with water only. Allow all filters to air-dry completely for up to 24 hours before reinstalling to prevent liquid from being drawn into electric parts. Clean the pre-motor filters at least once a month and HEPA filter at least once a year. Tap off loose dirt between washes when needed. More frequent cleaning may sometimes be necessary with heavy use. Please refer to the Owner's Guide for more information on filter maintenance.

1. To access the HEPA filter, rotate the filter cover on the handheld vacuum to the unlocked position.
2. Pull off the filter cover and lift out the HEPA filter.
3. Reinsert the filter, then replace the cover and rotate it back to the locked position.

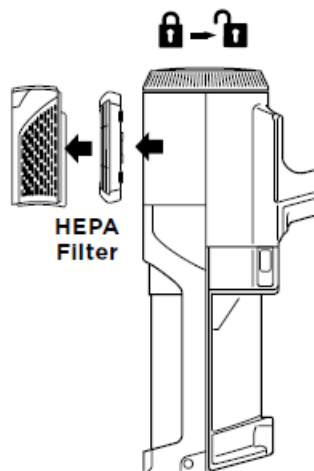

Squeeze both release buttons to remove dust cup for filter maintenance.

Note: Dust cup must be open to remove.

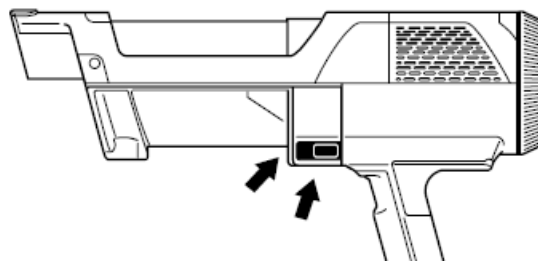

IMPORTANT: DO NOT use soap when cleaning the filters. Use water only. The vacuum will not have suction if the post-motor filter is not installed. Ensure that all filters are installed before using.




CLEANING THE SENSORS

Make sure to clean the sensors regularly, as hair and other debris may build up and obstruct them. If the sensors are partially obstructed, Auto mode will not function as expected.

To clean the sensors:

1. Turn off power and remove the floor nozzle.

2. Locate the DirtDetect Sensor in the nozzle of the hand vac (Fig. 1), the LightDetect Sensor on the top of the nozzle (Fig. 2), 3. Gently wipe the sensors with a and the EdgeDetect sensor on the side of the nozzle (Fig. 3).
3. Gently wipe the sensors with a microfiber cloth and remove all hair and debris.
4. Reattach the floor nozzle to the rest of the unit and turn on power. Verify that the unit is functioning normally.

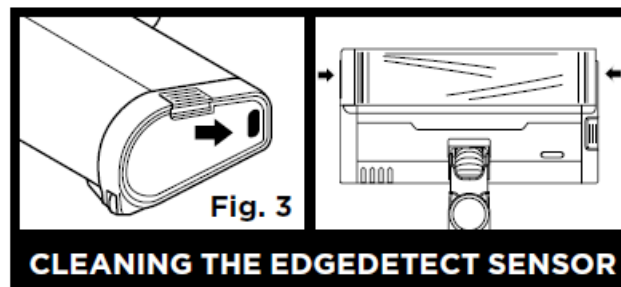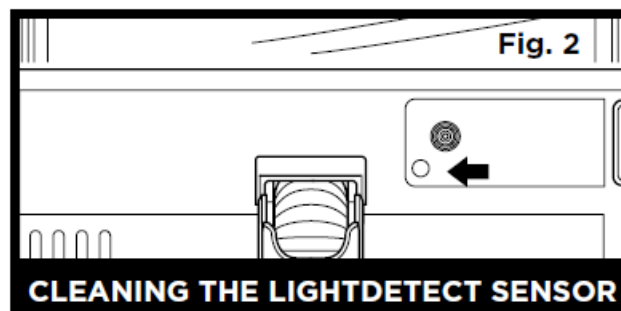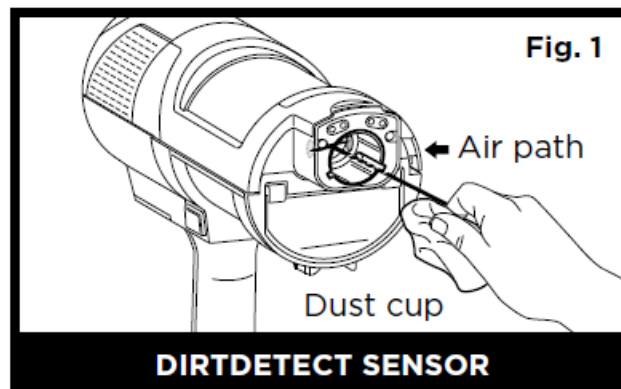

© 2024 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC. DETECT PRO, FLOORDETECT, and LIGHTDETECT are trademarks of SharkNinja Operating LLC. IW4000Series_QSG_MP_Mv1

Documents / Resources

	<p>Shark IW4000 Series Cordless Detect Pro Auto Empty System [pdf] Instruction Manual</p> <p>IW4000 Series Cordless Detect Pro Auto Empty System, IW4000 Series, Cordless Detect Pro A uto Empty System, Detect Pro Auto Empty System, Auto Empty System, Empty System, Syste m</p>
--	---

References

- [User Manual](#)

