



## Sharper Image Easy-To-Read Digital Clock User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Easy-To-Read Digital Clock User Manual 

### USER MANUAL



Thank you for purchasing the Sharper Image Easy to Read Digital Clock. Please take a moment to read this guide and store it for future reference.

## Contents

### 1 FEATURES

### 2 HOW TO SET THE EASY TO READ DIGITAL CLOCK UP

### 3 HOW TO SET THE TIME

### 4 HOW TO SET THE DATE

### 5 HOW TO USE TIME MODE

### 6 HOW TO USE DATE MODE

### 7 HOW TO SELECT LANGUAGES

### 8 HOW TO USE AUTO DIMMING

### 9 HOW TO USE COLOR MODE

### 10 ALARM 1 SETTING

### 11 ALARM 1 FREQUENCY

### 12 ALARM 2 SETTING

### 13 ALARM 2 FREQUENCY

### 14 ALARM 3 SETTING

### 15 ALARM 3 FREQUENCY

### 16 VOLUME

### 17 SPECIFICATIONS

### 18 WARNINGS

### 19 WARRANTY / CUSTOMER SERVICE

### 20 Questions about your Manual? Post in the comments!

#### 20.1 Related Posts


## FEATURES

- Color display
- Three alarm settings
- 8" LED screen
- Auto dim options


## HOW TO SET THE EASY TO READ DIGITAL CLOCK UP

- Remove the clock and AC adapter from the packaging
- Peel the screen protector off the display screen
- Plug the input connector of the AC adapter into the DC-in hole on the back of the device
- Plug the clock into an outlet and press the ON/OFF switch or wait 5 seconds and the clock will automatically turn on
- The clock can be used on a desk (includes an adjustable bracket or wall mount)

**NOTE:** The clock is pre-set to Eastern Time. It has a small internal battery that maintains time, even when the clock is unplugged or during a power outage. If you receive the clock in another time zone (Pacific, Mountain or Central) you will have to adjust the time by using these instructions.

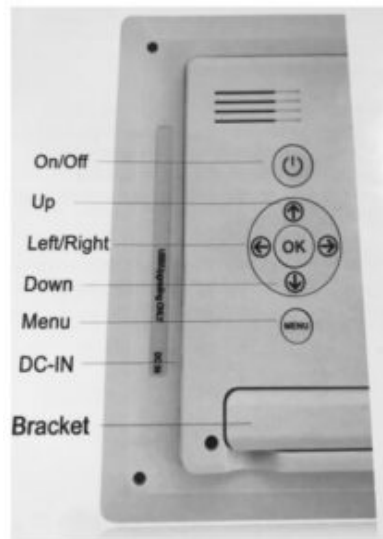

## HOW TO SET THE TIME

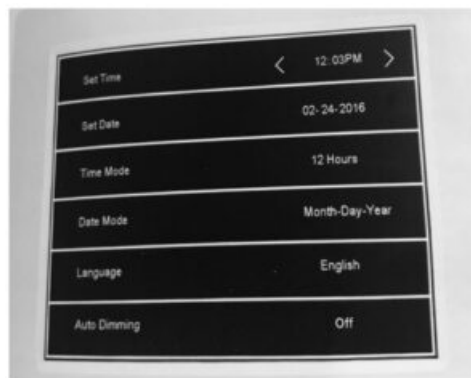

- Press the MENU button to access the settings page. Press the UP/DOWN button to access the 1st line labeled Set Time
- Press the RIGHT/LEFT button to select the field to be modified
- When the field is underlined with blue, use the UP/DOWN button to adjust the number
- After the changes are completed, press the OK button to save the settings
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO SET THE DATE

- Press the MENU button to access the settings page. Press the DOWN button to access the 2nd line labeled Set Date
- Press the RIGHT/LEFT button to underline the field to be modified
- When the field is underlined with blue, use the UP/DOWN button to adjust the number
- After the changes are complete, press the OK button to save the settings
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO USE TIME MODE

- Press the MENU button to access the settings page
- Press the DOWN button to access the 3rd line labeled Time Mode

- Press the RIGHT/LEFT button to switch between 12 hours (A.M./P.M.) or 24 Hours (Military Time)
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO USE DATE MODE

- Press the MENU button to access the setting page
- Press the DOWN button to access the 4th line labeled Date Mode
- Press the RIGHT/LEFT button to switch between:
  - Month-Day-Year (Standard U.S. Mode) and Day-Month-Year (Standard European Mode)
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

**NOTE:** The clock doesn't change the time automatically for daylight savings time and needs to be adjusted manually.

## HOW TO SELECT LANGUAGES

- Press the MENU button to access the setting page
- Press the DOWN button to access the 5th line labeled Language
- Press the RIGHT/LEFT button to select a language (English, French, German, Dutch, polish, Spanish, Italian and Welsh are available)
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO USE AUTO DIMMING

- Press the MENU button to access the setting page
- Press the DOWN button to access the 6th line labeled Auto Dimming
- Press the RIGHT/LEFT button to switch between: Mid, Low or Off
- Mid: the brightness automatic dims to dark at 7:00 PM and dims to bright at 7:00 AM (For this mode, the brightness of the day is 50cd/m<sup>2</sup> and of the night is 10cd/m<sup>2</sup>)
- Low: the brightness the brightness automatic dims to dark at 7:00 PM and dims to bright at 7:00 AM (For this mode, the brightness of the day is 50cd/m<sup>2</sup> and of the night is 10cd/m<sup>2</sup>)
- Off: the brightness doesn't change during the day and the night. (For this mode, the brightness of the day and night are both is 50cd/m<sup>2</sup>)

## HOW TO USE COLOR MODE

- Press the MENU button to access the settings page
- Press the DOWN button to access the 7th line labeled Color Mode
- Press the RIGHT/LEFT button to switch between White or Yellow
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## ALARM 1 SETTING

- Press the MENU button to access the settings page
- Press the DOWN button to access the 8th line labeled Alarm 1 Setting
- Press the RIGHT/LEFT button to select the field to be modified
- When the field is underlined with blue, use the UP/DOWN button to adjust the number
- After the change are complete, press the OK button to save the settings
- Press the DOWN button to access alarm 1 frequency settings

## **ALARM 1 FREQUENCY**

- Press the DOWN button to access the 9th line labeled Alarm 1 Frequency
- Press the RIGHT/LEFT button to switch between: Off, Once, Every day, Mon. to Fri, Weekend
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

**NOTE:** The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

## **ALARM 2 SETTING**

- Press the MENU button to access the settings page
- Press the DOWN button to access the 10th line labeled Alarm 2 Setting
- Press the RIGHT/LEFT button to select the field to be modified
- When the field is underlined with blue, use the UP/DOWN button to adjust the number
- After the changes are complete, press the OK button to save the settings
- Press the DOWN button to access alarm 2 frequency settings

## **ALARM 2 FREQUENCY**

- Press the DOWN button to access the 11th line labeled Alarm 2 frequency
- Press the RIGHT/LEFT button to switch between: Off, Once, Every day, Mon. to Fri, Weekend
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

**NOTE:** The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

## **ALARM 3 SETTING**

- Press the MENU button to access the settings page
- Press the DOWN button to access the 12th line labeled Alarm 3 Setting
- Press the RIGHT/LEFT button to select the field to be modified
- When the field is underlined with blue, use the UP/DOWN button the adjust the number
- After the changes are complete, press the OK button to save the settings
- Press the DOWN button to access alarm 2 frequency settings

## **ALARM 3 FREQUENCY**

- Press the DOWN button to access the 13th line labeled Alarm 3 Frequency
- Press the RIGHT/LEFT button to switch between: Off, Once, Every day, Mon. to Fri. Weekend
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

**NOTE:** The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

## VOLUME

- Press the MENU button to access the settings page
- Press the DOWN button to access the 14th line labeled VOLUME
- Press the RIGHT/LEFT button to increase or decrease the alarm volume (1-10)
- After the changes are complete, press the OK button to save the settings

**Note:** The clock has an auto switch-on function when connected to the power supply. To power the clock off or back on, press and hold the ON/OFF button for a few seconds.

## SPECIFICATIONS

- Dimensions: 8.5" L x 6.8" W x 0.9 lbs.
- LED size: 6.4 x 4.8, 8 inches
- Backlight: LED
- IPS: 4: 3
- Resolution: 1024 x 768
- AC power adapter: Input 100-240V
- AC output DC: 5V-1A

## WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture
- To prevent fire or shock hazard, do not install this product in a confined space such as a bookcase or similar unit
- Do not remove the cover or backing. No user serviceable parts are inside.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.

**Read More About This User Manuals...**

[Sharper-Image-Easy-To-Read-Digital-Clock-Manual-Optimized.pdf](#)

[Sharper-Image-Easy-To-Read-Digital-Clock-Manual-Original.pdf](#)

---

**Questions about your Manual? Post in the comments!**