

SHOWVEN®
Creeper AQ PLUS, Creeper AQ
Creeper AQ Low Fog Generator



SHOWVEN Creeper AQ PLUS, Creeper AQ Creeper AQ Low Fog Generator User Manual

[Home](#) » [Showven](#) » SHOWVEN Creeper AQ PLUS, Creeper AQ Creeper AQ Low Fog Generator User Manual 

Contents

- 1 SHOWVEN Creeper AQ PLUS, Creeper AQ Creeper AQ Low Fog Generator
- 2 Specifications
- 3 SAFETY CONSIDERATIONS
- 4 Technical Specifications
- 5 Models
- 6 Product Overview
- 7 Operation Panel
- 8 Interface
- 9 Operation
- 10 Maintenance
- 11 Warranty Instructions
- 12 Frequently Asked Questions
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

SHOWVEN®

SHOWVEN Creeper AQ PLUS, Creeper AQ Creeper AQ Low Fog Generator



Specifications

- **Model:** Creeper AQ PLUS
- **Dimension:** (not provided)
- **Weight:** 48kg
- **Voltage:** AC200-240V, 50-60Hz / AC100-120V, 50-60Hz
- **Work Power:** 2500W
- **Heat-up Time:** Approximately 5 minutes
- **Fluid Tank Capacity:** 3.3L
- **Water Tank Capacity:** 35L
- **DMX-512:** Yes
- **Remote control:** Yes
- **Output Adjustable:** 1-100%
- **Max. Fog Output:** 20,000 cfm/min
- **Max. Coverage:** Approximately 400 sq. ft.
- **Max. Fluid Consumption:** Approximately 32ml/min
- **Max. Water Consumption:** Approximately 500ml/min
- **Continuous Output:** Yes
- **Fully Loaded Output Time:** 100+ minutes
- **Consumable:** FX-M Fog Fluid, Water

Thanks for choosing the SHOWVEN® CREEPER AQ series low fog generator, we hope it will bring you lots of exciting moments.

Please read the following manual carefully before operating this product.

SAFETY CONSIDERATIONS

- Unauthorized repairs are prohibited, it may cause serious incident
- Make sure the power supply is consistent with the rated voltage of the equipment, and the socket must be well grounded. Unplug and turn off the machine when not use
- CREEPER AQ series machine can be used both indoors and outdoors, with better effect for indoor use. Please try to keep the machine dry
- Not use the machine in high-temperature
- Installed in well-ventilated area, ensure at least 50cm space around the machine, cover of the nozzle is forbidden
- For adult use only, keep it away from children, fire, inflammable and explosive articles
- If the machine fails to work, please stop the operation and unplug the machine. Check for fluid bottle, water tank, fuse, power connection, etc. carefully, if can't solve the problem, please contact SHOWVEN® or your local SHOWVEN® partner for advice
- Suggest using SHOWVEN® original FX-M fog fluid, other fluids may lead to clog or malfunction
- In case of eye contact of fog fluid, please wash it with clean water. If fluid is swallowed immediately look for medical advice
- Please do NOT add any other material such as grease, pigment, gas, etc to the fluid bottle or water tank
- The device shall not be altered and applied for another use purpose

Technical Specifications

- **Model:** Creeper AQ PLUS Creeper AQ
- **Dimension:** 950×500×540mm 805×390×480mm
- **Weight:** 48kg 35kg
- **Voltage:** AC200-240V, 50-60Hz AC200-240V, 50-60Hz AC100-120V, 50-60Hz AC100-120V, 50-60Hz
- **Work Power:** 2500W 2000W
- **Heat-up Time:** Appr. 5min Appr. 5min
- **Fluid Tank Capacity:** 3.3L 3.3L
- **Water Tank Capacity:** 35L 24L
- **DMX-512:** YES YES
- **Remote control:** YES YES
- **Output Adjustable:** 1-100 1-100
- **Max. Fog Output:** 20,000 cfm/min 15000 cfm/min
- **Max. Coverage:** Appr. 400Appr. 300
- **Max. Fluid Consumption.** Appr. 32ml/min Appr. 32ml/min
- **Max. Water Consumption:** Appr. 500ml/min Appr. 375ml/min
- **Continuous Output:** YES YES
- **Fully loaded Output Time:** 100+ min 100+ min
- **Consumable:** FX-M Fog Fluid, Water FX-M Fog Fluid, Water

Models




Creeper AQ PLUS




Creeper AQ

Product Overview

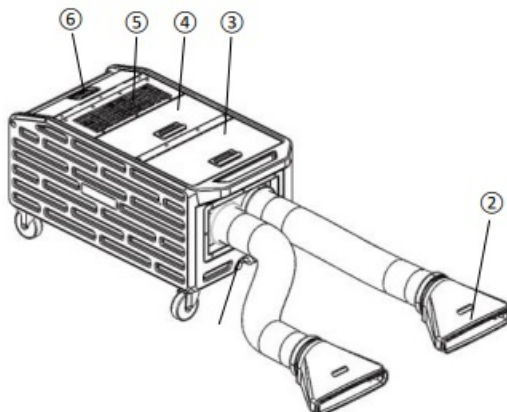

Creeper AQ PLUS


- 1. Drain
- 4. Fluid Tank

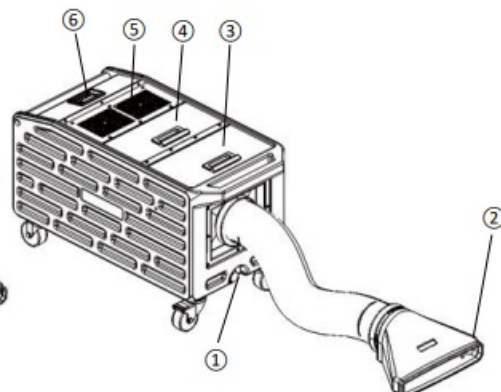

Creeper AQ


- 3. Water Tank
- 6. Control Panel

Control Panel Overview

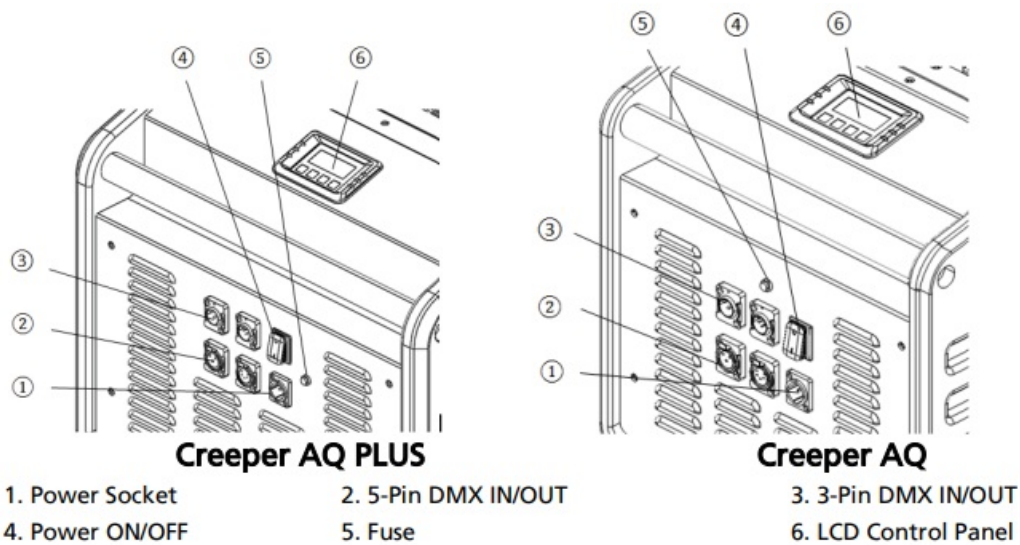

Operation Panel

1. Control button area

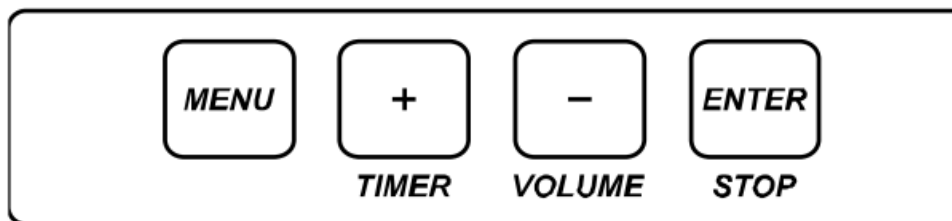


MENU: switch through setup menu

- +: Parameter up; multiplex "TIMER" (smoke output time)
- -: Parameters down; multiplex "VOLUME" (smoke output start)
- ENTER: confirm and save parameters (screen will blink once when save successfully); multiplex "STOP".

NOTE: Screen will switch to main interface automatically if not press any button in a period time.

Interface

1. Main interface

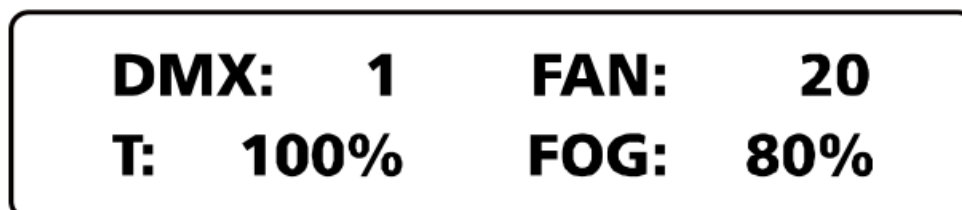

- **First Line:** DMX address and Fan Speed, ":" blinks when there is DMX in signal
- **Second Line:** Shows machine core temperature and Fog Volume. The machine ready for operate when temperature value close to 100%

2. Error information

Error information	Explanation
E2 Temp. Sensor	Temp. Sensor Malfunction
E3 Water Sensor I	Low water level of Inner Water Tank, system is pumping water to inner water tank or liquid level sensor malfunction
E4 Water Sensor O	Low water level of Outer Water Tank, need to feeding the water tank or liquid level sensor malfunction
E5 K Temp. Over	Circuit board malfunction
E6 Heat Fail	Heater broken or circuit board malfunction

3. Setting Menu

Press "MENU" switch through setup menu.

Options	Range	Explanation
DMX Address	1~512	DMX address setup
Fog Output	1-100%	Fog output volume setup
Fan Speed	1-100%	Fan speed setup

Interval Set	1-600	Set fog output interval
Duration Set	1-600	Set fog output duration
Wireless Set	ON / OFF	Wireless function set
(Language)	/English	Language switch
Manual Drainage	ON / OFF	Drainage ON/OFF, when need to drain the water in outer water tank, please turn it on, water in outer tank will pump into inner tank, and drain

DMX Channel

There are two DMX channel mode for Creeper AQ series machine, 2 channel mode and 3 channel mode switchable. Default is 2 channel mode, if need to set to 3 channel mode please contact SHOWVEN®.

1. channel mode

Channel	Function
First Channel(CH1)	Fog output: DMX VALUE 6-255, fog output from 1-100. As DMX value increase, the denser the fog, the longer for dissipate.
Second Channel(CH2)	Fan speed: DMX VALUE 6-255, fan speed from 1-100. As DMX value decrease, the better the fog stick to the ground but spread slower


2. channel mode

Channel	Function
First Channel(CH1)	Fog output: DMX VALUE 6-255, fog output from 1-100
Second Channel(CH2)	Fan speed: DMX VALUE 6-255, fan speed from 1-100
Third Channel(CH3)	Ultrasonic atomizer QTY: (0~127)atomizer QTY is 3 (CREEPER AQ is 2) (128~255)atomizer QTY is 4 (CREEPER AQ is 3)

Wireless Control

Wireless control is used to remote control the machine. Before use the wireless function please make sure machine was ready, wireless status was ON, and no DMX cable connection Remote controller:

- **A.** Fog output START
- **B.** Fog output STOP
 - Remote control is optional configuration.
 - When wireless controller is not working properly, please switch to the Wireless Control menu, set it into ON status, and press ENTER key to save the change.
 - When machine on Wireless Control interface, operator can match the CREEPER AQ mini with remote controller by pressing any key on remote controller for 1s, the machine screen flash once means match was finished.

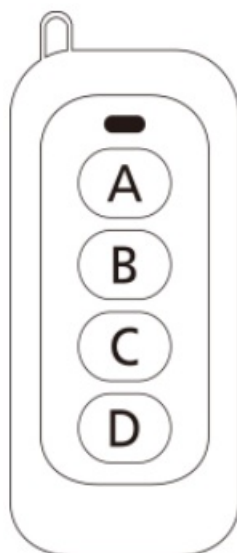

Operation

1. Installation

Check the machine and accessories, ensure it is in good status. Place the machine on a flat surface, tilting may result in inaccurate water level alarm.

2. Fill the machine with FX-M fog fluid

Fill the liquid tank with FX-M Pro medium fog fluid. Please use original fog fluid from SHOWVEN® , Warranty will be void if any other type fog fluid is used.

3. Power ON Creeper AQ (PLUS)

1. Connect the machine to suitable rated power supply. Please ensure power supply meets the requirement. Always connect the machine to a protected circuit and ensure it is properly grounded.
2. Turn on the machine, it heat up automatically, and shows "WARMING UP" on LCD screen.

4. Fill the water tank

Fill the outer water tank with pure water until the alarm of water shortage on LCD screen (E3, E4) disappear. Operator can also connect the machine to water supply with G1/6 pipe connector, machine will refill it automatically.

5. Setting

Once the machine has reached operating temperature, temp., fog output and fan speed will show on the screen, please adjustable it accordingly.

If use a DMX to firing, please also set the DMX address and connect with a DMX cable.

6. Firing

Press "-"(VOLUME) to start generate low fog, press "ENTER"to stop.

If use DMX console control, please follow the previously introduced DMX channel information to firing the machine.

7. Power OFF and clean up

1. To turn off the machine, please POWER OFF and unplug the power cable.
2. Please empty the fluid tank and wash the pipe system with distilled water (put distilled water in fog fluid tank and firing for few minutes).
3. For transportation or not use for a long time, please drain the water inside machine.

Maintenance

1. Use SHOWVEN® original fog fluid FX-M.
2. Check the filter in fluid tank before each show, clean or replace it when it is necessary.
3. Running the machine at least once per month.
4. Clean machine regularly avoid dust, liquid accumulate on the machine.
5. Whenever storage or not use the machine for a period of time, please use distilled water to wash the pipe system by filling the fluid bottle with distilled water and firing the machine several minutes.
6. Whenever storage or not use the machine for a period of time, please drain the machine and keep it dry.

Warranty Instructions

- Sincere thanks for your choosing our products, you will receive quality service from us. The product warranty period is one year. If there are any quality problems within 7 days after shipping out from our factory, we can exchange a brand new same model machine for you.
- We will offer free of charge maintenance service for machines which with hardware malfunction (except for the instrument damage caused by human factors) in warranty period. Please don't repair machine without factory permission.

Below situations NOT included in warranty service:

- Damage caused by use other type of fog fluid which is not SHOWVEN® FX-M. Damage caused by improper transportation, usage, management, and maintenance, or damage caused by human factors;
- Disassemble, modify or repair products without permission;
- Damage caused by external reasons (lightning strike, power supply etc.)
- Damage caused by improper installation or use;

For product damage not included in the warranty range, we can provide paid service. An invoice is necessary when applying for maintenance service from SHOWVEN®.




Showven Technologies Co., Ltd.

- Tel: +86-731-83833068
- Web: www.showven.cn
- E-mail: info@showven.cn
- Add: No.1 Tengda Road, Liuyang Economic & Technical Development Zone, Changsha, Hunan, 410300, P.R.China


Frequently Asked Questions

- **Q: Can the Creeper AQ series machines be used outdoors?**
 - A: Yes, the machines can be used both indoors and outdoors, but they provide better effects when used indoors.
- **Q: How do I address error messages like E2 or E6 on the interface?**
 - A: The manual provides explanations for each error code; refer to it to troubleshoot and resolve issues related to temperature sensors, water levels, or heater malfunctions.

Documents / Resources

	<p>SHOWVEN Creeper AQ PLUS, Creeper AQ Creeper AQ Low Fog Generator [pdf] User Manual</p> <p>Creeper AQ PLUS, Creeper AQ, Creeper AQ PLUS Creeper AQ Creeper AQ Low Fog Generator, Creeper AQ PLUS Creeper AQ, Creeper AQ Low Fog Generator, AQ Low Fog Generator, Low Fog Generator, Fog Generator, Generator</p>
---	--

References

-  [Founder of Sparkular, Sparkular Machine Maker | Showven](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.