




SMARTTEH LPC-3.GOT.002 Graphical Operation Terminal User Manual

[Home](#) » [SMARTTEH](#) » SMARTTEH LPC-3.GOT.002 Graphical Operation Terminal User Manual 

Contents

- 1 SMARTTEH LPC-3.GOT.002 Graphical Operation Terminal
- 2 Product Information
- 3 Product Usage Instructions
- 4 ABBREVIATIONS
- 5 DESCRIPTION
- 6 FEATURES
- 7 INSTALLATION
 - 7.1 Input & output connection interfaces
 - 7.2 Mounting instructions
- 8 TECHNICAL SPECIFICATIONS
- 9 CONNECTION & CONFIGURATION GUIDE
- 10 PROGRAMMING GUIDE
 - 10.1 Basic functionalities
- 11 MODULE LABELING
- 12 SPARE PARTS
- 13 CHANGES
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts





Product Information

Longo Programmable Controller LPC-3.GOT.002 The Longo Programmable Controller LPC-3.GOT.002 is a graphical operation terminal designed and manufactured by SMARTEH d.o.o. It is a programmable logic controller with a graphical user interface (GUI) and supports the transmission control protocol (TCP) and remote terminal unit (RTU) standards. The device operates on a 100-230V AC network and requires authorized personnel for installation and maintenance.

Standards and Provisions While planning and setting up electrical devices, it is essential to consider the standards, recommendations, regulations, and provisions of the country in which the devices will operate. Failure to do so may result in damage to the equipment or electrical hazards.

Danger Warnings The Longo programmable controller must be protected from moisture, dirt, and damage during transport, storage, and operation. Using the device in a manner not specified by the manufacturer may affect the degree of protection provided by the equipment.

Waste Electrical and Electronic Equipment (WEEE) Waste electrical and electronic equipment (WEEE) must be collected separately, according to the manufacturer's instructions.

Manufacturer The Longo Programmable Controller LPC-3.GOT.002 is manufactured by SMARTEH d.o.o., located at Poljubinj 114, 5220 Tolmin, Slovenia.

Product Usage Instructions

Installation Before installing the Longo Programmable Controller LPC-3.GOT.002, ensure that you have read and understood the standards, provisions, and danger warnings mentioned in the user manual. The device operates on a 100-230V AC network and requires authorized personnel for installation and maintenance. Follow the mounting instructions provided in section 4.3 of the user manual for proper installation.

Technical Specifications Refer to section 5 of the user manual for technical specifications of the Longo Programmable Controller LPC-3.GOT.002.

Connection and Configuration Guide Refer to section 6 of the user manual for the main connection scheme and configuration guide for the Longo Programmable Controller LPC-3.GOT.002.

Programming Guide Refer to section 7 of the user manual for a basic overview of the functionalities and GUI

design and programming of the Longo Programmable Controller LPC-3.GOT.002.

Module Labeling and Spare Parts Refer to sections 8 and 9 of the user manual for module labeling and spare parts information, respectively.

Changes and Notes Refer to sections 10 and 11 of the user manual for changes and notes related to the Longo Programmable Controller LPC-3.GOT.002.

- **STANDARDS AND PROVISIONS:** Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 100 .. 230 V AC network is allowed for authorized personnel only.
- **DANGER WARNINGS:** Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.
- **WARRANTY CONDITIONS:** For all modules LONGO LPC-3 – if no modifications are performed upon and are correctly connected by authorized personnel – in consideration of maximum allowed connecting power, warranty of 24 months is valid from the date of sale to the end buyer, but not more than 36 months after delivery from Smarteh. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.
- This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.
- Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

- This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).
- If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.
- Waste electrical and electronic equipment (WEEE) must be collected separately!

LONGO LPC-3 complies to the following standards:

- **EMC:** EN 55032:2002, EN 55035:2017, EN 61000-3-2:2014, 61000-3-3:2013
- **LVD:** IEC 61010-1:2010 (3rd Ed.), IEC 61010-2-201:2013 (1st Ed.)
- Smarteh d.o.o. operates a policy of continuous development.
- Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.
- **MANUFACTURER:**
- SMARTEH d.o.o.
- Poljubinj 114
- 5220 Tolmin
- Slovenia

ABBREVIATIONS

- **PLC** Programmable logic controller
- **GUI** Graphical user interface
- **TCP** Transmission control protocol
- **RTU** Remote terminal unit
- **RTC** Real time clock
- **IDE** Integrated development environment
- **FBD** Function block diagram
- **LD** Ladder diagram
- **SFC** Sequential function chart
- **ST** Structured text
- **IL** Instruction list
- **CAN** Controller area network
- **COM** Communication
- **SD** Secure digital
- **LED** Light emitting diode
- **RAM** Random access memory
- **NV** Nonvolatile
- **PS** Power supply

DESCRIPTION

- Smarteh LPC-3.GOT.002 graphical operation terminal is designed and developed as ideal solution for building automation as a supplement to LPC-2 modules. It is PLC based product with software tools allowing users to design GUI. Different communication protocols offers various connectivity opportunities. Aluminium frame with resistive touch screen offers an intuitive, clear and flexible interface between the user and the building.
- LPC-3.GOT.002 is equipped with Ethernet connection and can be used as a Modbus TCP/IP Master and/or Slave device or BACnet IP (B-ASC). USB port is used for local programming and debugging.
- Over TCP/IP, programming and debugging is possible via LAN (inside building) or even via WAN network (remotely over internet).
- LPC-3.GOT.002 is powered from external DC power supply.
- LPC-3.GOT.002 includes two galvanic isolated CAN bus for CANopen protocol and non-isolated
- RS-485 bus for Modbus RTU master protocol, used e.g. for local or remote connection to other LPC PLCs. It also has Smarteh bus port for connection with Smarteh LPC-2 slave devices. Integrated "Setting Storage FLASH", "RTC" and "NV RAM", does not need the battery for it is functioning. There is also a built-in buzzer which can be controlled through PLC program.
- Smarteh IDE (Integrated Development Environment) software tool is used with all the PLCs from the LPC family and it supports all five standard PLC programmable languages (FBD, LD, SFC, ST, IL). It also supports "off line", "on line" debugging and local/remote program transferring. Distributed processing is supported which makes it possible to handle fast operations. GUI design tool supports large set of dynamic controls from buttons to indicators and enables connectivity between PLC programs and user interface.
- LPC-3.GOT.002 is an innovative and an attractive solution for a competitive price.

FEATURES



Figure 1: LPC-3.GOT.002


Table 1: Features

Aluminium frame with 7” LCD display and resistive touch screen - landscape or portrait orientation
Graphical interface is freely designed by the user with GUI editor in SmartehIDE
Ethernet connectivity with Modbus TCP/IP Slave (server) and/or Master (client) functionality, BACnet IP (B-ASC), web server and SSL
Modbus RTU Master or Slave
Smarteh bus
USB port for debugging and application transfer
Remote access and application transfer
2 galvanic isolated (2500 V DC) CAN port - one for master, one for slave
RTC and 512 kB NV RAM with super capacitor for needed energy storage
Micro SD Card slot
Built-in buzzer controlled from PLC program
Display brightness level controlled from PLC program
Disconnectable spring type connectors
Status LEDs
Flush mount
Quality design

INSTALLATION

Block diagram

Figure 2: LPC-3.GOT block diagram¹

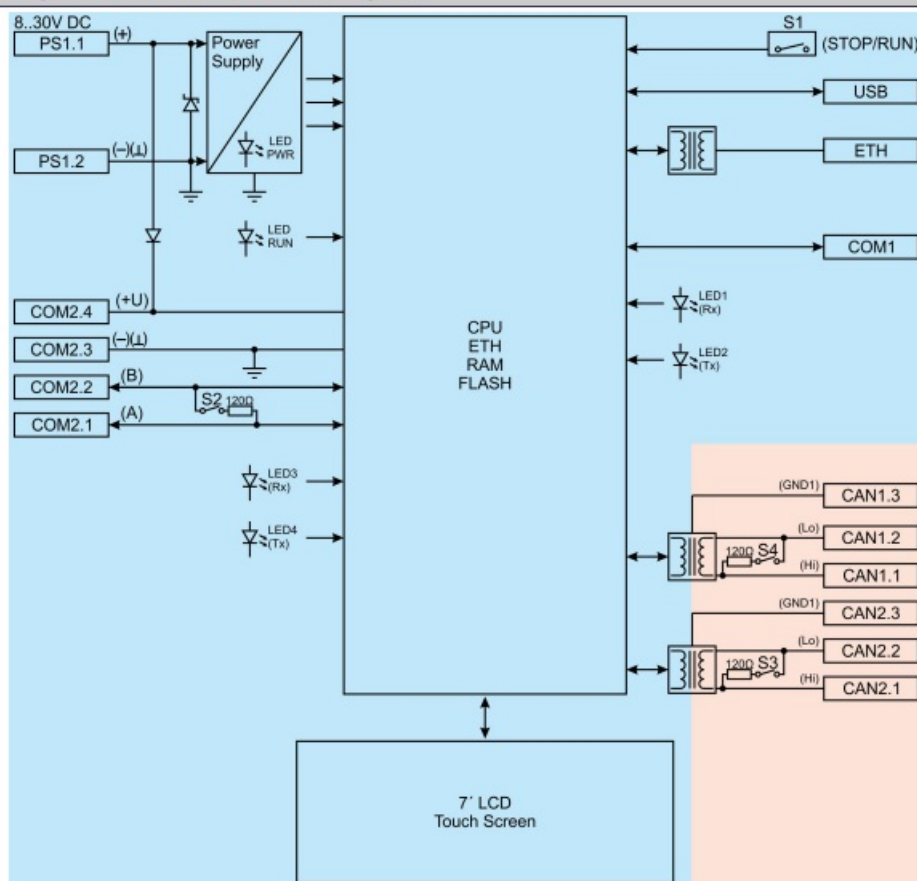

1. Colored areas represent different voltage domains – galvanic isolated areas. Please refer to General technical specifications in TECHNICAL SPECIFICATION for details.

Input & output connection interfaces

Table 2: Power supply2

PS1.1 (+)	PLC power supply	8 .. 30 V DC, 2 A
PS1.2 (-)		GND

Table 3: Switches

		STOP: application not running
		ON: the corresponding channel is internally

S2	COM2 RS-485 termination (Trm1)	terminated with 120 Ω
		OFF: no internal termination present
		ON: the corresponding channel is internally
S3	CAN2 bus termination (Trm2)	terminated with 120 Ω
		OFF: no internal termination present
		ON: the corresponding channel is internally
S4	CAN1 bus termination (Trm3)	terminated with 120 Ω
		OFF: no internal termination present

Table 2: Power supply ²		
PS1.1 (+)	PLC power supply	8 .. 30 V DC, 2 A
PS1.2 (-)	\perp	GND

Table 3: Switches		
S1	Operation mode (RUN/STOP)	RUN: PLC normal operational mode STOP: application not running
S2	COM2 RS-485 termination (Trm1)	ON: corresponding channel is internally terminated with 120 Ω OFF: no internal termination present
S3	CAN2 bus termination (Trm2)	ON: corresponding channel is internally terminated with 120 Ω OFF: no internal termination present
S4	CAN1 bus termination (Trm3)	ON: corresponding channel is internally terminated with 120 Ω OFF: no internal termination present

Table 4: CAN1 & CAN2 ³		
CAN1.1	CAN1 High (Hi) (Master)	0 .. 5 V
CAN1.2	CAN1 Low (Lo) (Master)	
CAN1.3	CAN1 reference point (GND1)	0 V to CAN1
CAN2.1	CAN2 High (Hi) (Slave)	0 .. 5 V
CAN2.2	CAN2 Low (Lo) (Slave)	
CAN2.3	CAN2 reference point (GND1)	0 V to CAN2

Table 5: COM2 RS-485 ⁴		
COM2.1	RS-485 (A)	0 .. 5 V
COM2.2	RS-485 (B)	
COM2.3	$-\perp$	GND
COM2.4	+U	Power supply output

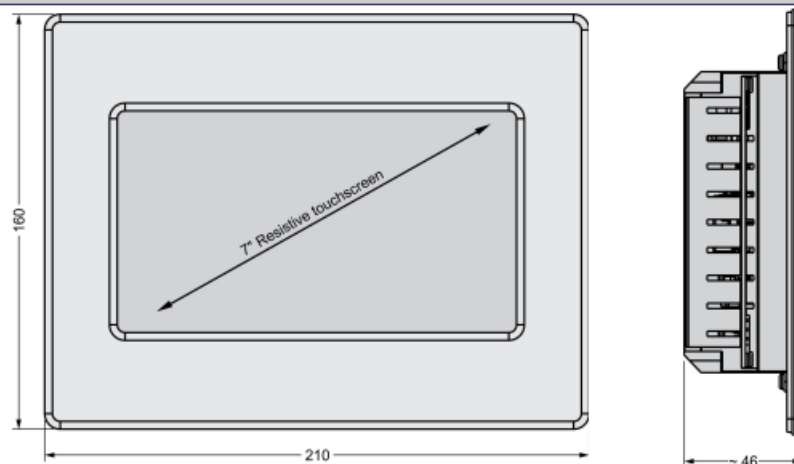
1. Wires connected to the module must have cross sectional area at least 0.75 mm². Minimum temperature rating of wire insulation must be 85 °C.
2. Wires connected to the module must have cross sectional area at least 0.14 mm². Use twisted-pair cables of type CAT5+ or better, shielding is recommended. Minimum temperature rating of wire insulation must be 85 °C. Galvanic isolation of 2500 V DC between CAN1, CAN2 and rest of the PLC circuit is provided.
3. Different protocols like Modbus RTU Master can be selected inside Smarteh IDE. Wires connected to the module must have cross sectional area at least 0.14 mm². Use twisted-pair cables of type CAT5+ or better, shielding is recommended.

Table 6: COM1 Smarteh bus

COM1.1	N.C.	
COM1.2	(-)(⊥)	GND
COM1.3	(+) PLC power supply	Power supply output
COM1.4	RS-485 (A) Smarteh bus	0 .. 5 V
COM1.5	RS-485 (B) Smarteh bus	
COM1.6	N.C.	

Table 7: LEDs

LED RUN	Application running (green)	ON: application is running OFF: application is stopped or PLC in boot mode
LED PWR	Power (green)	ON: PLC is powered on OFF: PLC has no power supply
LED1 (Rx)	COM1 Rx status (red)	OFF: No receiving packets ON: Receiving packets
LED2 (Tx)	COM1 Tx status (green)	OFF: Not transmitting packets ON: Transmitting packets
LED3 (Rx)	COM2 Rx status (red)	OFF: No receiving packets ON: Receiving packets
LED4 (Tx)	COM2 Tx status (green)	OFF: Not transmitting packets ON: Transmitting packets


Mounting instructions**Figure 3: Housing dimensions****Dimensions in millimeters.**

- EXTERNAL SWITCH OR CIRCUIT BREAKER AND EXTERNAL OVERCURRENT
- **PROTECTION:** The unit is allowed to be connected to installation with over current protection that has a nominal value of 6 A or less.
- All connections, PLC attachments, and assembling must be done while.
- LPC-3.GOT.002 is not connected to the main power supply.
- Wires connected to the PLC must have a cross-sectional area of at least 0.75 mm².
- The minimum temperature rating of wire insulation must be 85 °C.⁷

Mounting instructions for enclosure door

1. Switch off power supply.
2. Make cut out and mounting holes – see Figure 4.
3. Mount LPC-3.GOT.002 to the provided place, using $\phi 3$ mm screws.
4. Connect input, output and communication wires.
5. Switch on power supply.

Figure 4: Dimensions for cut out and mounting holes

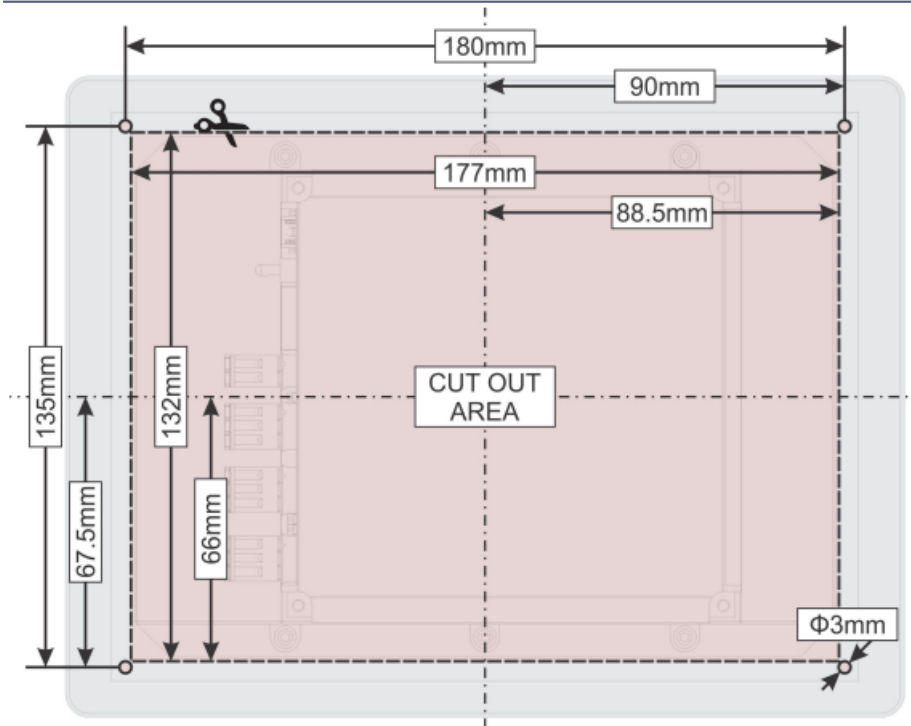

TECHNICAL SPECIFICATIONS


Table 8: Technical specifications

Power supply PS1	8 .. 30 V DC
Inrush current	max. 2 A
Power consumption PS1	max. 5 W
Connection type for PS1	disconnectable spring type connectors for stranded wire 0.75 to 1.5 mm ²
Connection type for CAN1, CAN2, COM2	disconnectable spring type connectors for stranded wire 0.14 to 1.5 mm ²
Connection type for COM1	RJ-12 6/4
CAN1 or CAN2 isolation voltage to PS1	2500 V DC
COM2 RS-485 port	non isolated, 2 wire
COM1 Smarteh bus	non isolated
Ethernet	RJ-45, 10/100/1000T IEEE 802.3
USB	mini B type, device mode or host mode (USB On-The-Go), high-speed/full-speed
RTC	capacitor backed up with retention of cca. 14 days
Operating system	Linux
CPU	i.MX6 Single (ARM® Cortex™-A9) @ 1GHz
RAM	512 MB DDR3
Flash	4 GB eMMC 8bits (MLC type)
NV RAM	512 kB, capacitor backed up with retention cca. 14 days
Display	7", 800 × 480 resolution, 24 bit colour depth
Dimensions (L x W x H)	160 x 210 x 46 mm
Display dimensions (L x W)	85.5 x 154 mm
Weight	650 g
Ambient temperature	0 to 50 °C
Ambient humidity	max. 95 %, no condensation
Maximum altitude	2000 m
Mounting position	vertical
Transport and storage temperature	-20 to 60 °C
Pollution degree	2
Over-voltage category	II
Electrical equipment	class II (double insulation)
Protection class front side	IP 65
Protection class back side	IP 30

CONNECTION & CONFIGURATION GUIDE


Main connection scheme & configuration

Figure 5: Main connection scheme⁵

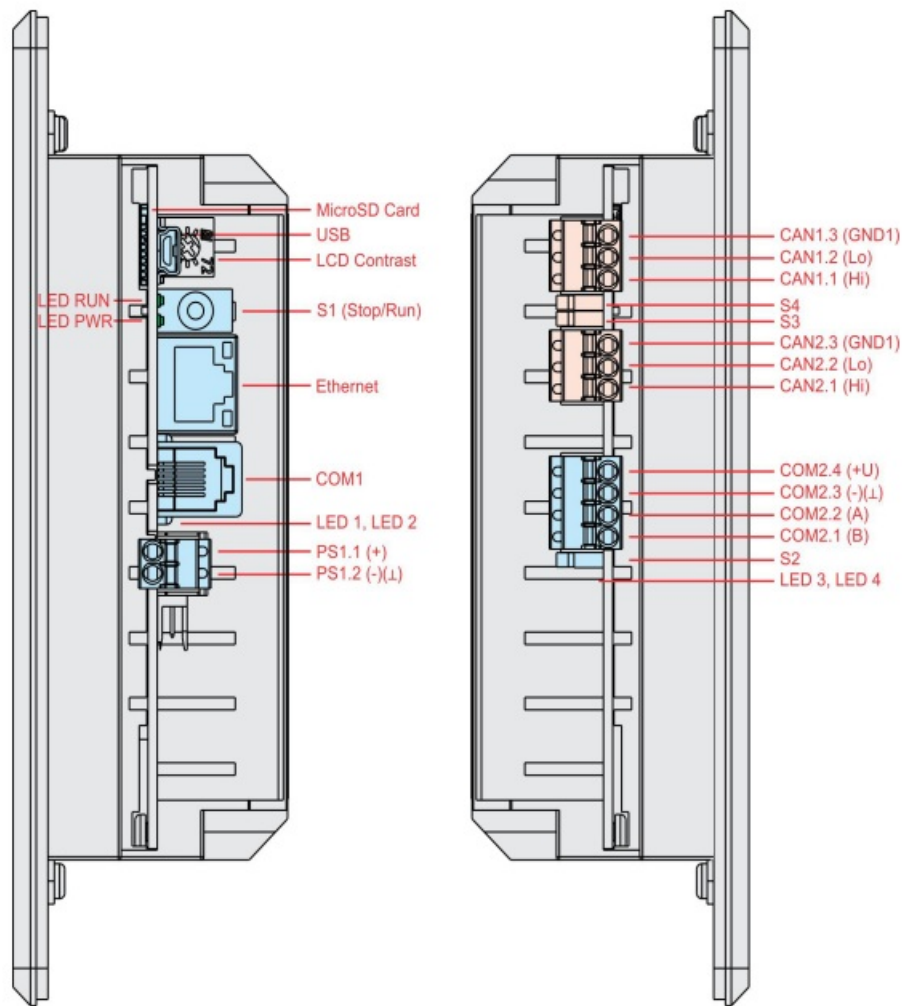

- Coloured areas represents galvanic isolated areas. Please refer to General technical specifications for details.

Figure 6: Grounding possibilities

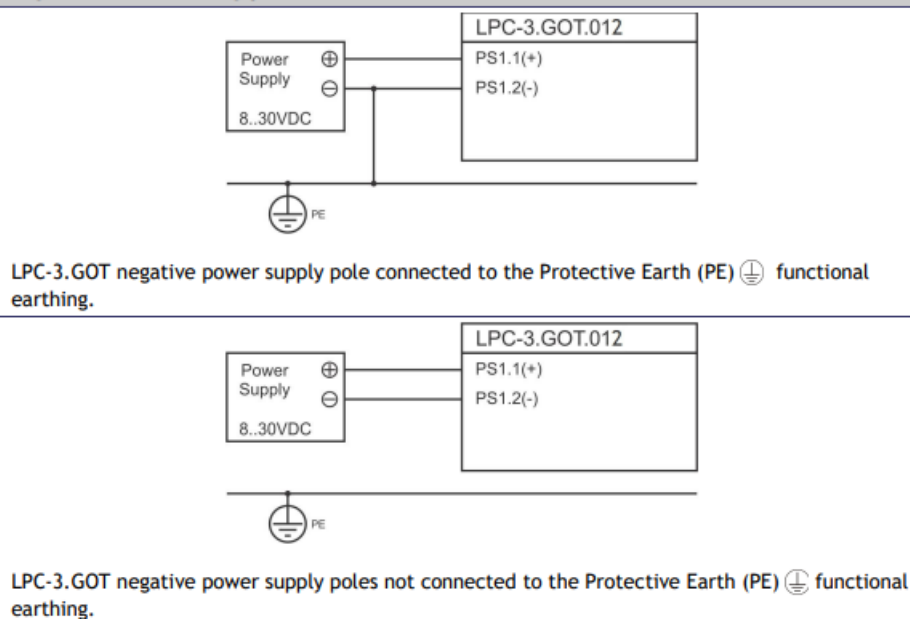

PROGRAMMING GUIDE

- This chapter is intended to offer the programmer additional informations about some of the functionalities and units integrated in this module.

Basic functionalities

RTC unit

- For RTC back-up and for Retain variables there is Super Capacitor instead of battery integrated inside PLC. This way, replacement of the discharged battery is avoided. The Retention time is minimum 14 days from the power down. RTC time provides date and time information.

Modbus TCP/IP master unit

- When configured for Modbus TCP/IP Master / Client mode, the LPC-3.GOT.002 functions as a master device, controlling the communications with other slave devices such as sensors, inverters, other PLCs, etc. LPC-3.GOT.002 sends Modbus TCP/IP commands to and receives Modbus TCP/IP responses from the slave units.

Following commands are supported:

- 01 – Read Coil Status
- 02 – Read Input Status
- 03 – Read Holding Registers
- 04 – Read Input Registers
- 05 – Write Single Coil
- 06 – Write Single Register
- 15 – Write Multiple Coils
- 16 – Write Multiple Registers
- **Note:** each of this command can read/write up to 10000 addresses.

Modbus TCP/IP slave unit

- Modbus TCP slave has 10000 addresses in each memory section:
- **Coils:** 00000 to 09999
- **Discrete inputs:** 10000 to 19999
- **Input register:** 30000 to 39999
- **Holding registers:** 40000 to 49999
- **Supports** up to 5 connections to the slave units (defined with MaxRemoteTCPClient parameter).
- **Highest** scan rate is 100 ms.

Modbus RTU master unit

- When configured for Modbus RTU Master mode, the the LPC-3.GOT.002 functions as a master device, controlling the communications with other slave devices such as sensors, inverters, other PLCs, etc.
- LPC-3.GOT.002 sends Modbus RTU commands to and receives Modbus RTU responses from the slave devices.

The following commands are supported:

1. Read Coil Status
 2. Read Input Status
 3. Read Holding Registers
 4. Read Input Registers
 5. Write Single Coil
 6. Write Single Register
 - Write Multiple Coils
 - Write Multiple Registers
- **Note:** each of this commands can read/write up to 246 bytes of data. For analog (Input and Holding registers) this means 123 values, while for digital (Statuses and Coils) this means 1968 values. When higher quantity of data is required, LPC-3.GOT.002 can execute up to 32 same or different supported commands simultaneous.
 - **Physical layer:** RS-485
 - **Supported baud rates:** 9600, 19200, 38400, 57600 and 115200bps
 - **Parity:** None, Odd, Even.
 - **Stop bit:** 1
 - **Modbus** RTU slave unit
 - **Modbus** TCP slave has 1023 addresses in each memory section:
 - **Coils:** 00000 to 01023
 - **Discrete inputs:** 10000 to 11023
 - **Input register:** 30000 to 31023
 - **Holding registers:** 40000 to 41023
 - **Highest** scan rate is 100 ms.
 - Smarteh RS485 bus for connectivity with LPC-2 system
 - Port COM1 is used for communication with LPC-2 slave modules. All communication settings are configured in SmartehIDE software program.

BACnet IP unit

- When configured for BACnet IP (B-ACS), following commands are supported:

Data Sharing


- ReadProperty-B (DS-RP-B)
- WriteProperty-B (DS-WP-B)
- Device and Network Management
- Dynamic Device Binding-B (DM-DDB-B)
- Dynamic Object Binding-B (DM-DOB-B)
- Device Communication Control-B (DM-DCC-B)
- Time Synchronization-B (DM-TS-B)
- UTCTimeSynchronization-B (DM-UTC-B)

- For more information, please contact producer.

CANopen unit

- CANopen unit consists of Master and Slave communication ports. They are independent, thus can be connected to two different CAN network at the same time.
- The ports can operate at baud rates 50 kbps, 125 kbps or 250 kbps.
- It follows the internationally standardized (EN 50325-4) CAN-based higher-layer protocol for embedded control systems. Advised rules and concepts by this standard must be followed to fulfil the conditions and so achieving normal operation and results.
- The structure of the network as cable type and lengths, baud rates, number of the nodes and termination must be taken into account within the recommendations and requirements, when designing the network.
- The bus network can consist of at least one Master and at list one Slave node by the standard, but it is advised that with increased number of nodes, the Master node fastest interval is extended. Below are two examples:
- **Example 1:** network with 1 master and 9 slaves, every slave have defined 32 (4×8) byte of data and baud rate 125 Kbps. Fastest Cycle time for this configuration is 50 ms.
- **Example 2:** network with 1 master and 4 slaves, every slave have defined 4 byte of data and baud rate 250 Kbps. Fastest Cycle time for this configuration is 5 ms. 5 ms is the fastest recommended cycle time.
- It is recommended to power-up all the nodes on the same network at the same time, if some or all nodes had been reprogrammed (to reinitialize the communication properly).

Figure 7: CAN Master and Slave wiring diagram example

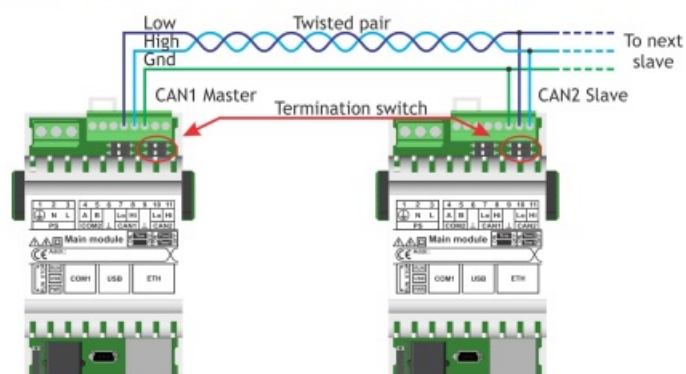

RUN/STOP Switch

- **Run:** Status RUN status LED “on” indicate that the user graphical application is up and user program is running.
- **Stop:** When the switch is turn to STOP state, the RUN status LED is “off” and application is stopped.

PLC task cycle time

- Main PLC task interval (under Project tab -> Resource Tasks Interval) time → → is not recommended to be set lower than 50 ms.

GUI design and programming

Figure 8: LPC Manager interface example⁶


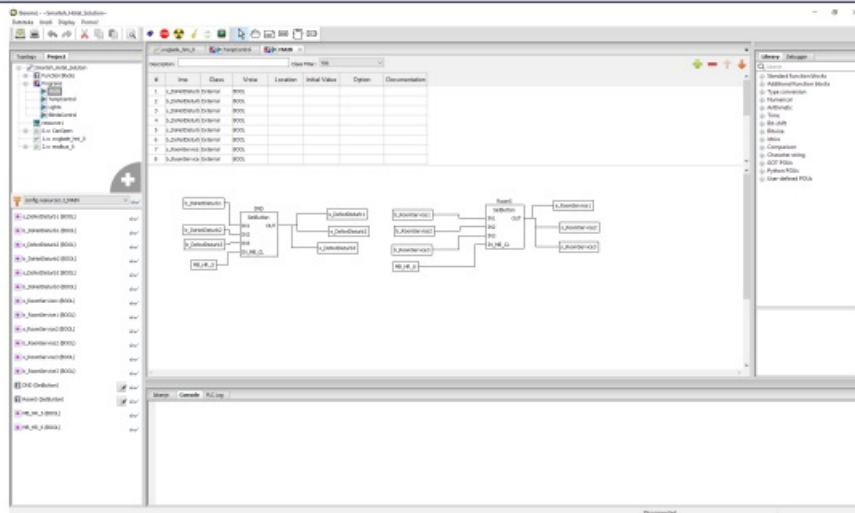


Figure 9: Inkscape open source tool⁷

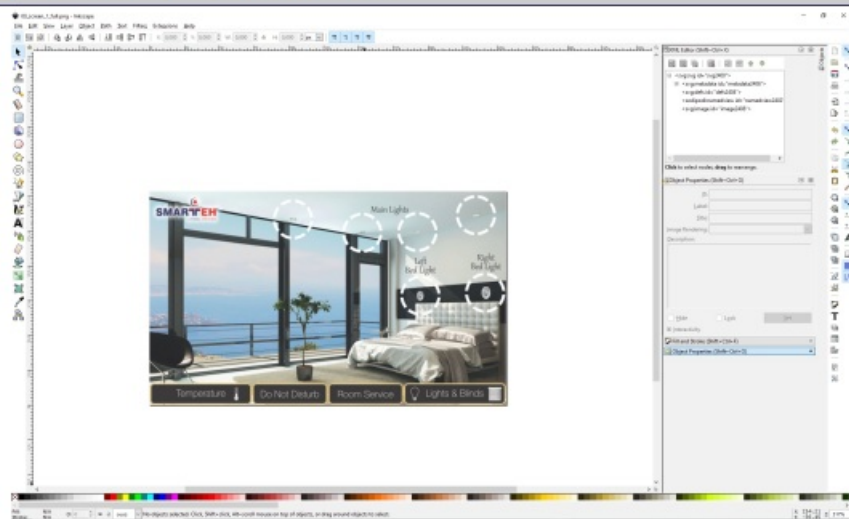

NOTE: Recommended minimum size of the touch object is 10 x 10 mm.

1. Configuration of the PLC is done using Smarteh IDE software tool. Please refer to LPC Manager user manual for details.
2. Configuration of the PLC is done using Inkscape open source tool.

MODULE LABELING

Figure 10: Label

Label (sample):

XXX-N.ZZZ
P/N: AAABBBCCDDDEEE
S/N: SSS-RR-YYXXXXXXXXXX
D/C: WW/YY

Label description:

1. XXX-N.ZZZ – full product name.

- XXX-N – Product family
 - ZZZ – product
2. P/N: AAABBBCCDDDEEE – part number.
- AAA – general code for product family,
 - BBB – short product name,
 - CCDDD – sequence code,
 - CC – year of code opening,
 - DDD – derivation code,
 - EEE – version code (reserved for future HW and/or SW firmware upgrades).
3. S/N: SSS-RR-YYXXXXXXXXXX – serial number.
1. SSS – short product name,
 2. RR – user code (test procedure, e.g. Smarteh person xxx),
 3. YY – year,
 4. XXXXXXXXXXXX – current stack number.
4. D/C: WW/YY – date code.
- WW – week and
 - YY – year of production.

Optional

1. MAC
2. Symbols
3. WAMP
4. QR code
5. Other

SPARE PARTS

For ordering spare parts following Part Numbers should be used:

LPC-3.GOT.002 Graphical operation terminal	
LPC-3.GOT.002	P/N: 226GOT20002001
Flush mounting box	
Flush mounting box Gewiss 48006	P/N: 206FMB10001001


CHANGES

The following table describes all the changes to the document.

Date	V.	Description
28.2.2022	1	The initial version, issued as <i>LPC-3.GOT.002 User Manual</i> .

- SMARTEH d.o.o. / Poljubinj 114 / 5220 Tolmin / Slovenia / Tel.: +386(0) 388 44 00 / e-mail: info@smarteh.si / www.smarteh.si
- Written by SMARTEH d.o.o.
- Copyright © 2022, SMARTEH d.o.o.
- User Manual
- Document Version: 1
- February 2022

Documents / Resources

	<p>SMARTEH LPC-3.GOT.002 Graphical Operation Terminal [pdf] User Manual LPC-3.GOT.002 Graphical Operation Terminal, LPC-3.GOT.002, Graphical Operation Terminal, Operation Terminal, Terminal</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [Smart solutions | Smarteh](#)