

SmartGen CMM365-4G Cloud Monitoring Communication Module User Manual

Home » SmartGen cMM365-4G Cloud Monitoring Communication Module User Manual





CMM365-4G Cloud Monitoring Communication Module User Manual



Contents

- 1 CMM365-4G Cloud Monitoring Communication
- **Module**
- **2 OVERVIEW**
- **3 PERFORMANCE AND CHARACTERISTICS**
- **4 SPECIFICATION**
- **5 PANEL AND TERMINAL DESCRIPTION**
- **6 PROGRAMMABLE PARAMETERS**
- **7 SYSTEM APPLICATION DIAGRAM**
- **8 CASE DIMENSION AND INSTALLATION**
- 9 FAULT FINDING
- 10 PACKING LIST
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

CMM365-4G Cloud Monitoring Communication Module

SmartGen众智Chinese trademark SmartGenEnglish trademark

SmartGen — make your generator smart

SmartGen Technology Co., Ltd.

No.28 Jinsuo Road, Zhengzhou, Henan Province, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas) **Fax:** +86-371-67992952

Web: www.smartgen.com.cn/

www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder. Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies. SmartGen Technology reserves the right to change the contents of this document without prior notice.

Table 1 - Software Version

Date	Version	Note
11/30/2021	1	Original release.

OVERVIEW

CMM365-4G Cloud Monitoring Communication Module is 4G wireless network communication protocol conversion module of all-modes, which can achieve genset (with SCI) connection with Internet. After logging into cloud server, module will receive corresponding genset controller communication protocol from cloud server. Cloud monitoring module can obtain genset data information via RS485 port and send the information to related could server via 4G wireless network. Users can monitor genset running status at real time and check genset running records by mobile APP (IOS or Android), or PC etc. terminal device.

It has GPS and BD positioning function, which can upload the obtained longitude and latitude, altitude information at real time to the corresponding cloud server.

PERFORMANCE AND CHARACTERISTICS

- Connect to cloud server via 4G wireless network, one cloud monitoring module for one genset;
- With port for communication with genset control module: RS485, which can monitor most genset control modules of leading brands internationally;
- Wide power supply: DC (8~35)V, which can directly use engine starting battery;
- GPS and BD positioning function for obtaining genset location information to realize genset positioning;
- Apply network data communication protocol of JSON format, upload the genset data changes at real time, meanwhile compression algorithm is applied, which greatly reduces network flow;
- Upload data to server immediately when genset has alarms;
- Module panel has power and multiple communication status indicators; clearly display module working status;
- Parameter setting function: users can do parameter setting by module RS485 port;
- Modular structure design, flame retardant ABS enclosure, light weight, compact structure with easy installation.

SPECIFICATION

Table 2 - Technical Parameters

Items	Contents
Operating Voltage	DC(8.0~35.0)V, continuous power supply.
Power Consumption	Standby: ≤2W; Working: ≤2W.
RS485 Port	Non-isolated, half-duplex, 9600 baud rate, max communication distance 1,000m.
Vibration	5Hz~8Hz, amplitude=17mm; 8Hz~100Hz, a=4g; 100Hz~500Hz, a=2g.
Shock	50g, 11ms, half-sine, three consecutive shocks are applied in each of the three mutually perpendicular directions, for a total of 18 times. IEC 60068-2-27
Bump	25g, 16ms, half-sine; IEC 60255-21-2.
GPRS Port	Standard SMA port (female), SMA port (male) for antenna.
GPS Port	Standard SMA port (female), SMA port (male) for antenna, active antenna.
Wireless Network	LTE-TDD/LTE-FDD
Case Dimensions	86mmx61mmx36mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-25~+70)°C
Conforming Standard	GB/T 37089 Reciprocating internal combustion engine driven alternating current generating sets controller.
Weight	0.1kg

PANEL AND TERMINAL DESCRIPTION

4.1 PANEL INDICATOR AND KEYS

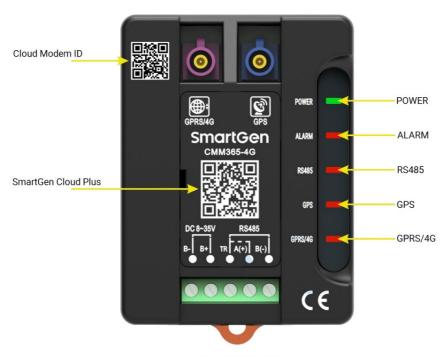


Fig.1 - Panel Indicator

Table 3 – Indicators Description

Icon	Note	
POWER (Green)	LED Light Green: Normal power supply indication.	
ALARM (Red)	LED Light Red: Common alarm indication.	
RS485 (Red)	Normally On: Communication failure; Flash: Communication normal.	
GPS (Red)	Normally Off: GPS is disabled; Normally On: GPS not obtain satellite signal; Flash: GPS obtains satellite signal.	
GPRS/4G (Red)	Off: CMM365-4G module fails to register with server; On: Register with server suc cessfully; Flash: Real-time data communication normal.	

ANOTE: The last 15 digits of the cloud modem ID is the IMEI number of chip.

4.2 GPRS ANTENNA PORT

Connect GPRS antenna to GRRS/4G port.

Antenna port: $50\Omega/SMA$ female. **4.3 GPS ANTENNA PORT**

After GPS is enabled, connect GPS antenna to CMM365-4G.

Antenna port: $50\Omega/SMA$ female, active antenna.

ANOTE: GPS antenna needs to be placed to open outdoors, otherwise location information may be inaccurate.



Fig.2 - CMM365-4G Antenna Connection


ANOTE: GPRS antenna and GPS antenna cannot be connected reversely.

4.4 SIM CARD INSTALLATION

Insert 4G SIM card. CMM365-4G will connect to server via wireless mobile network.

NOTE: This module supports 4G wireless network of all modes. Standard SIM card is applied (size: 25mmx15mm). When GPS indicator and GPRS indicator flash at the same time, it means SIM card is not inserted or SIM card is in bad contact.

After removing the head cover, the installation steps are as below:

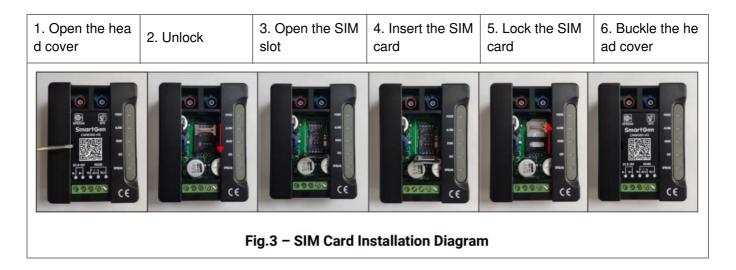

4.5 RS485 PORT

Receive genset data information by connecting RS485 port with genset controller RS485 port. 120Ω terminal resistor is recommonded to use if communication fails, short connect A(+) and TR terminal.

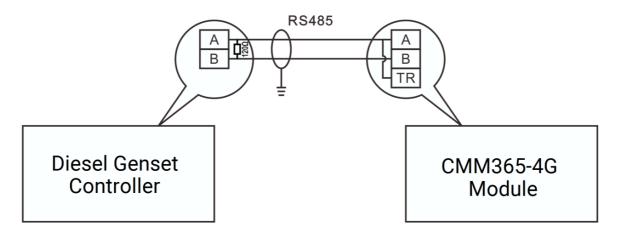


Fig.4 - RS485 Connection Diagram

It is connected to PC USB port through RS485 port and SG72A transfer, all parameters can be configured and CMM365-4G module ID & login password can be viewed.

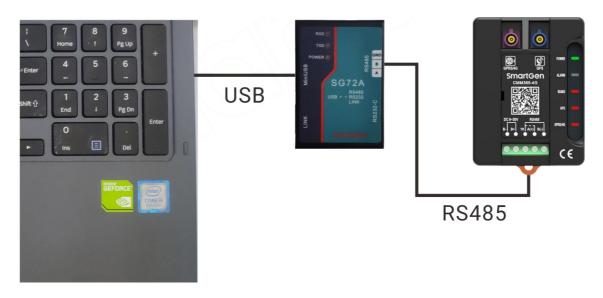


Fig.5 - RS485 and PC Connection Diagram



Fig.6 - Terminal Diagram

Table 4 – Terminals Description

No.	Function	Cable Size	Remark	
1	B-	1.0mm ²	Connected with negative of starter battery.	
2	B+	1.0mm ²	Connected with positive of starter battery. 3A fuse is recommended.	
3	RS485 (TR)	0.5mm²	Terminal matching resistor wiring terminal.	
4	RS485 A(+)	0.5mm ²	120 $Ω$ shielding line is recommended to use with sing	
5	RS485 B(-)	0.5mm ²	le end grounded.	

ANOTE: RS485(TR) and A(+) short connection is equivalent to bus parallel with a 120Ω matching resistor.

PROGRAMMABLE PARAMETERS

5.1 CONTENTS AND SCOPES OF PARAMETERS Table 5 – Parameter Contents and Scopes

No.	Items	Parameters	Defaults	Desci	ription
Gatew	Gateway				
1	Site Name		20 Chinese characters, letters or numb ers.		
2	Server URL	www.smartgencloudplus.com		40 characters	
3	Server Port	(0-65535)	21318		,
4	Module Password	123456		16 characters	
GPS	GPS				
1	GPS Enable	(0-1)	1	0: Manual Input 1: GPS Location	
2	Longitude	((-180)-180)°	114.	GPS location, altitude information.	
3	Latitude	((-90)-90)°	35.		
4	Altitude	((-9999.9)-9999.9)m	100.0		

NOTE: Monitored genset controller model needs to be set on the platform, and cloud monitoring module needs to be re-powered after setting.

5.2 PC CONFIGURATION INTERFACE

Connecting the RS485 port of CMM365-4G communication module with PC to configure the parameters.



Fig.7 - Gateway Configuration



Fig.8 - GPS Configuration

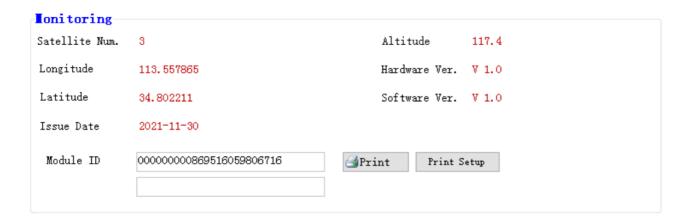


Fig.9 - Module Monitoring Interface

NOTE: If need to read or set cloud modem configuration, the upper computer needs to be connected within 30s after cloud modem is powered on, at time time, it enters .configuration mode. The cloud modem enters normal mode adter closing upper computer or disconnecting.

SYSTEM APPLICATION DIAGRAM

One CMM365-4G module connects with one genset monitoring module. It can be connected via RS485 port.

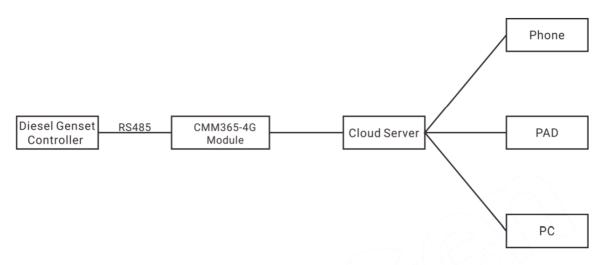


Fig.10 - CMM365-4G System Application Diagram

CASE DIMENSION AND INSTALLATION

35mm guide rail cabinet installation or screw-fixed (M4) installation can be applied. Case dimensions are as below:

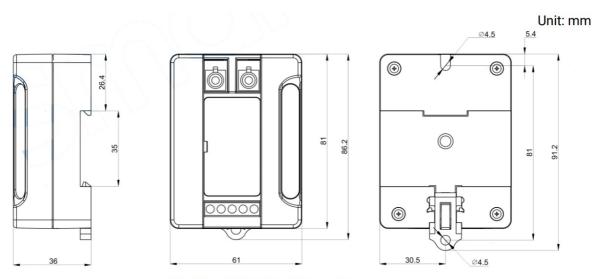


Fig.11 - CMM365-4G Case Dimension

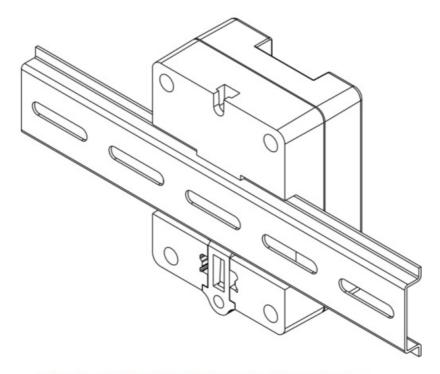


Fig.12 - CMM365-4G Guide Rail Installation

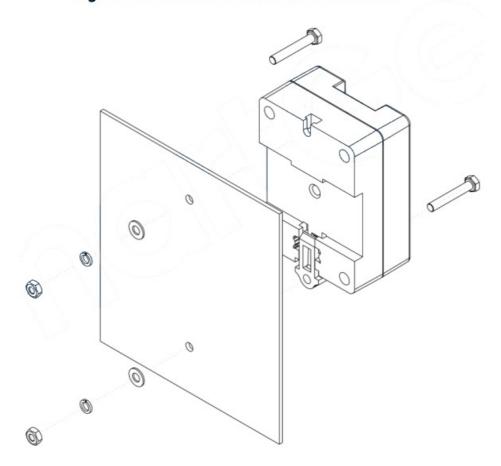


Fig.13 - CMM365-4G Screw Installation

FAULT FINDING

Table 6 – Fault Finding

Symptoms	Possible Solutions		
Module No Response with Power	Check power voltage; Check module wiring connections.		
GPRS/4G Indicator Off	Check SIM card is inserted or not; Check GPRS antenna is connected or not.		
GPS Not Gain Location	Check GPS parameters are enabled or not; Check GPS antenna is connected or not and placed outdoor or not.		
RS485 Comm. Abnormal	Check wiring connections; Check RS485's connections of A and B is reversely connected or not.		

PACKING LIST

Table 7 – Packing List

No.	Name	Quantity	Remark
1	CMM365-4G	1	
2	GSM Magnetic Antenna	1	
3	External GPS Antenna	1	
4	Certificate	1	
5	User Manual	1	



SMARTGEN (ZHENGZHOU) TECHNOLOGY CO.,LTD.

Documents / Resources



SmartGen CMM365-4G Cloud Monitoring Communication Module [pdf] User Manual CMM365-4G Cloud Monitoring Communication Module, CMM365-4G, Cloud Monitoring Communication Module, Communication Module

References

- 众智
- → 众智
- <u>Smartgencloudplus.com</u>

Manuals+,