



## SmartGen HAT600N Series ATS Controller User Manual

[Home](#) » [SmartGen](#) » SmartGen HAT600N Series ATS Controller User Manual 

# SmartGen

HAT600N SERIES  
(HAT600N/HAT600NI/HAT600NB/HAT600NBI)  
ATS CONTROLLER  
USER MANUAL



## Contents

<a href="#">1 HAT600N Series ATS Controller</a>
<a href="#">2 OVERVIEW</a>
<a href="#">3 PERFORMANCE AND CHARACTERISTICS</a>
<a href="#">4 SPECIFICATION</a>
<a href="#">5 OPERATING</a>
<a href="#">6 LCD DISPLAY</a>
<a href="#">7 COMMISSIONING</a>
<a href="#">8 PARAMETERS CONFIGURATION</a>
<a href="#">9 EVENT LOG</a>
<a href="#">10 TIMING START</a>
<a href="#">11 DATE AND TIME SETTING</a>
<a href="#">12 LANGUAGE SETTING</a>
<a href="#">13 CONTROLLER INFORMATION</a>
<a href="#">14 ATS OPERATION</a>
<a href="#">15 COMMUNICATION CONFIGURATION AND CONNECTION</a>
<a href="#">16 DESCRIPTION OF CONNECTING TERMINALS</a>
<a href="#">17 TYPICAL WIRING DIAGRAM</a>
<a href="#">18 INSTALLATION</a>
<a href="#">19 FAULT FINDING</a>
<a href="#">20 Documents / Resources</a>
<a href="#">20.1 References</a>

## HAT600N Series ATS Controller

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies. SmartGen Technology reserves the right to change the contents of this document without prior notice.

**Table 1 Software Version**

Date	Version	Note
2017-04-06	1.0	Original release.
2019-09-05	1.1	Added communication function description in parameter settings.
2020-05-12	1.3	Fixed current terminal number of breaker application diagram and optimized the diagram.
2020-12-16	1.4	Modified the event log record number.
2021-08-05	1.5	1. Added the torque requirement for fixing clips below the installation dimension on drawing; 2. Changed the font to "Roboto"
2022-05-31	1.6	Updated the figures of back panel and case dimensions, updated the logo of SmartGen.

## OVERVIEW

HAT600N series ATS controller is an intelligent dual-supply module with programmable function, automatic measurement, LCD display, and digital communication. It combines digitalization, intelligence and network together. Measurement and control process are automated, which greatly reduces hand operation mistakes. It is an ideal option for ATS. HAT600N series ATS controller is made of microprocessor as its core, which can accurately detect 2-way-3-phase voltage and also make accurate judgment for abnormal voltage (over voltage, under voltage, loss of phase, over frequency, under frequency) and output passive control signal. This controller has full consideration in various applications of ATS (automatic transfer system), which can be directly used for Intelligent ATS, Contactor ATS, Circuit Break ATS etc. It have compact structure, advanced circuits, simple wiring and high reliability, can be widely used in electric power, telecommunications, petroleum, coal, metallurgy, railways, municipal administration, intelligent building, electrical devices, automatic control and testing system etc.

## PERFORMANCE AND CHARACTERISTICS

1. System type can be set to: Mains (1#) & Mains (2#), Mains (1#) & Generator (2#), Generator (1#) & Mains (2#), Generator (1#) & Generator (2#).
2. Backlit 128×64 LCD, optional Chinese and English display, push-button operation.
3. Collect and display 2-way 3 phase Voltage and Frequency:

1#	2#
Line-Line voltage (Uab, Ubc, Uca)	Line-Line
Phase voltage (Ua, Ub, Uc)	Phase v
Frequency (F1)	Frequen

4. Collect and display load active power, apparent power, power factor and 3 phase current.
5. Over current alarm function.
6. Over/under voltage, loss of phase, reverse phase sequence, over/under frequency protection.
7. Automatic/Manual mode transfer; In manual mode, switch can be forced to close or open;
8. All parameters can be set on site. Two level passwords ensure authorized staff operation only.
9. During genset testing ATS controller can be set to either in On-load or Off-load mode.
10. ATS Controller has function of automatic Re-closing.
11. Closing output signal can be set as on intervals or as continuous output.
12. Applicable for ATS of one neutral position, two neutral position and change over.
13. Applicable for 2 isolated neutral line for Generator and Mains.
14. Real-time clock (RTC).
15. Event log can record 50 items circularly.
16. Timely schedule can be set on monthly or weekly basis and trial can be set as with on- load or off -load.
17. Can control two generators to work in a cycle, even the genset running time and crank rest timen be set.
18. Widely range of DC power supply (8V to 35V). Max.80V DC input can be endured in an instant, or be supplied via HWS560 module (input AC 85V~560V, output DC 12V).
19. Wide space between connecting terminals of AC input. Max.625V input voltage.
20. With standard isolated RS485 communication interface. With “remote controlling, remote measuring, remote communication” function by the ModBus communication protocol.
21. Can check the current status of controller (including switch digital input, over Voltage, and under Voltage etc.).
22. Suitable for various AC systems (3 phase 4-wires, 3-phase 3-wires, single-phase 2-wire, and 2-phase 3-wire).
23. Modular design, flame-resisting ABS plastic shell, plug-in terminals and embedded installation. Compact

structure with easy installation.

**Table 2 HAT600N Series Controller Models and Main Functions**

Type	DC Power Supply	AC Power Supply	AC Current and Power
HAT600N	√	×	×
HAT600NI	√	×	√
HAT600NB	√	√ (LN220V)	×
HAT600NBI	√	√ (LN220V)	√

**SPECIFICATION**

Items	Contents		
Operating Voltage	DC 8.0V~35.0V, continuous power supply. HTS220/HWS560 power supply (without battery supply). AC160V~280V (HAT600NB/HAT600NBI) during AC power L1N1/L2N2 supply.		
Power Consumption	<3W (Standby mode: ≤2W)		
AC Voltage Input	AC system	HAT600N/HAT600NI	HAT600NB/HAT600NBI
	3P4W (L-L)	(80~625)V	(80~480)V
	3P3W (L-L)	(80~625)V	Not used
	1P2W (L-N)	(50~360)V	(50~280)V
	<b>2P3W (A-B)</b>	(80~625)V	(80~480)V
Rated Frequency	50/60Hz		
Close / Open Trip Relay Output	16A AC250V Free Voltage relay output		
Programmable Relay Output	16A/7A AC250V Free Voltage relay output		
Digital Input	Connecting to GND		
Communication	RS485 isolated interface, ModBus Protocol		
Dimensions	209mmx153mmx55mm		
Panel Cutout	186mm x 141mm		
Operating Temp. Range	Temperature: (-25~+70)°C; Humidity: (20~93)%RH		
Storage Condition	Temperature: (-25~+70)°C		
Protection Rank	IP55: when waterproof gasket is installed between enclosure and control screen.		
Insulation Strength	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min.		
Weight	0.8kg(HAT600N,HAT600NI)/1.0kg(HAT600NB/HAT600NBI)		

## OPERATING









### 4.1 OPERATION PANEL



**Fig. 1 Operation Panel**

#### 4.2 KEY FUNCTION DESCRIPTION

**Table 4 Key Function Description**

Icon	Keys	Description
	1# Close	In Manual mode, switch on 1# power to load.
	Open	In Manual mode, switch off 1# or 2# power to off-load.
	2# Close	In Manual mode, switch on 2# power to load.
	Manual	Press and controller enters into Manual mode.
	Automatic	Press and controller enters into AUTO mode.
	Test	Pressing this key can directly enter commissioning interface.
	Menu / Confirm	Press the key to enter menu interface; pressing and holding it to return to the main menu interface. When an alarm occurs, pressing and holding the key can remove alarm.
	Scroll Screen /Increase	Scroll the screen. In parameter editing, pressing this key can increase values.

## LCD DISPLAY

### 5.1 MAIN SCREEN

<p> <b>U1(L-L) 380 380 380V</b>  <b>U2(L-L) 380 380 380V</b>  <b>F1 50.0Hz F2 50.0Hz</b>  <b>Present Status: MANUAL</b> </p>	<p>This screen shows: line-line voltage (L1-L2, L2-L3, and L3-L1), frequency and controller's present working mode.</p>
<p> <b>U1(L-N) 219 219 219V</b>  <b>U2(L-N) 219 219 219V</b>  <b>AMP 500 500 500A</b>  <b>Present Status: MANUAL</b> </p>	<p>This screen shows: 1# and 2# 3 phase Voltage (L-N), 3 phase current with load and controller status.</p>
<p> <b>PWR 329kW</b>  <b>PF 1.00 PS 329kVA</b>  <b>2010-06-10 (4) 20:25:36</b>  <b>Present Status: MANUAL</b> </p>	<p>This screen shows: total active power, total apparent power, power factor and real-time clock and controller working status.</p>
<p> <b>1# Volt normal</b>  <b>2# Volt normal</b>  <b>Gens Start signal Output</b>  <b>Gens starting</b> </p>	<p>           First line: 1# operating state of power supply. Second line: 2# operating state of power supply. Third line: other operating states.            Fourth line: alarm type and information.         </p>

Table 5 Display of #1 Status (upper to lower)

No.	Item	Type	Description
1	1# Gens Alarm	Alarm	When 1# genset occur failure, this will display.
2	1# Fail to Close	Alarm	When 1# breaker occur closing failure, this will display.
3	1# Fail to Open	Alarm	When 1# breaker occur opening failure, this will display.
4	1# Over Voltage	Indication	When 1# power supply voltage is higher than the setting value, this will display.
5	1# Miss Phase	Indication	Loss of any phase of A, B and C.
6	1# Over Freq	Indication	When 1# power supply frequency is higher than the setting value, this will display.
7	1# Under Freq	Indication	When 1# power supply frequency is lower than the setting value, this will display.
8	1# Under Volt	Indication	When 1# power supply voltage is lower than the setting value, this will display.
9	1# reverse phase	Warning	Phase sequence is not A-B-C.
10	1# Volt Normal	Indication	1# source voltage is within the setting range.

**Table 6 Display Priority of #2 Status (upper to lower)**

No.	Item	Type	Description
1	2# Gens Alarm	Alarm	When 2# genset occur failure, this will display.
2	2# Fail to Close	Alarm	When 2# breaker occur closing failure, this will display.
3	2# Fail to Open	Alarm	When 2# breaker occur opening failure, this will display.
4	2# Over Volt	Indication	When 2# power supply voltage is higher than the setting value, this will display.
5	2# Miss Phase	Indication	Loss of any phase of A, B and C.
6	2# Over Freq	Indication	When 2# power supply frequency is higher than the setting value, this will display.
7	2# Under Freq	Indication	When 2# power supply frequency is lower than the setting value, this will display.
8	2# Under Volt	Indication	When 2# power supply voltage is lower than the setting value, this will display.
9	2# reverse phase	Warning	Phase sequence is not A-B-C.
10	2# Volt Normal	Indication	2# source voltage is within the setting range.

**Table 7 Display Status of Other Items(upper to lower)**

No.	Item	Type	Description
1	Trip alarm	Alarm	Trip alarm input is active.
2	Breaking compulsorily	Warning	Breaking compulsorily input is active.
3	Overload	Warning	Load current is over the setting limit and exceed the setting delay.
4	Gens Start Output	Indication	Display that engine has been started.
5	Remote start input	Indication	This input is active when start the genset circularly.


**Remark:**



**Alarm:** when alarm occurs, indicators will flash and this alarm signal won't be cut until it is reset by long pressing




**Warning:** when warning occurs, alarm indicator will flash while extinguish when warning alarm is inactive.

**5.2 MAIN MENU INTERFACE**



In the main screen, press  key, and enter the main menu interface.

<div><div>1. Parameters set</div><div>2. History record</div><div>3. Time start</div><div>4. Date &amp; Time Set</div></div> <div><div>3. Time start</div><div>4. Date &amp; Time Set</div><div>5. Language</div><div>6. Information</div></div>	<div>Press  key to cl</div> <div>press  key to c</div>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**COMMISSIONING**

In the main screen, press  to enter into the operation interface and the screen will show as below:

1 Exit
2 Stop to Test
3 Test Off-Load
4 Test On-Load
5 Cycle start

Press  key to select corresponding function, and press  key to confirm.

TEST OFF-LOAD: It will send out a start signal immediately. After generator is normal, if mains is normal, the ATS will not act. The ATS will transfer the load to generator only when mains is abnormal. After mains return to normal, the ATS will transfer the load to mains. Here the start generator signal output will keep.

TEST ON-LOAD: It will send out a start generator signal immediately. After generator voltage is normal, the ATS

will transfer the load to gens immediately regardless the main is normal or not.  
STOP TO TEST: The start generator signal will turn off after pressing this key immediately.  
CYCLE START: When this mode is active, generator start-signal will cyclic output according to mains status. The cyclic time can be set by users. If generator fault occurs, start-signal won't be sent out any more by controller. If in manual mode, controller will keep the current status and cancel cycle start function.  
Conditions and procedures for cycle start mode:

- 1. In automatic mode.
- 2. Output setting: 1# engine start output (N/O Output) and 2 # engine start output (N/O Output).
- 3. Input setting: 1# generator fault input, 2# generator fault input and remote start input.
- 4. Option of <Cycle run times> and <Cycle shutdown times> should be programmed and run.
- 5. Set the system type as 1# Gens & 2# Gens.
- 6. Set the proper <generator start delay> time.



**Remark:** In manual mode, after choosing commissioning stage, generator will output start-signal immediately, but theATS will not transfer to load automatically except for operation manually by pressing key on the front panel.




PARAMETERS CONFIGURATION


7.1 PARAMETER SET DESCRIPTION

In the main interface, press  key, choose 1.Parameters setting and then press  key, to enter the password interface.

Input password value 0-9 by  key, and shift Right by  key. Press the  again to confirm the password when four number is OK. If password is correct, it will enter into the parameter main interface. If it is wrong, it will directly exit and return to main interface. Factory Default Password is 1234.

Press  to shift to next position and set the parameters. Under current parameter set screen, press and  enter current parameter set mode. Current value of the first line screen display was highlighted with black.

Press  key to change the value and press  key to shift position. Press  key again to confirm the settings. If the value number is within the setting range, the value will be saved into the internal memory of the controller; If it is beyond the range, then the parameter settings will not be saved.

Long time pressing  will go back to the main display screen.

7.2 PARAMETER CONFIGURATION TABLE

Table 8 Parameter Configuration Item Table

No.	Item	Range	Default	Description
01	1# Normal Delay	(0-9999)s	10	It is the delay of 1# power from voltage abnormal to voltage normal.
02	1# Abnormal Delay	(0-9999)s	5	It is the delay of 1# power from voltage normal to voltage abnormal.
03	2# Normal Delay	(0-9999)s	10	It is the delay of 2# power from voltage abnormal to voltage normal.
04	2# Abnormal Delay	(0-9999)s	5	It is the delay of 2# power from voltage normal to voltage abnormal.
05	Close Breaker	(0-20)s	5	Closing relay output pulse. If set as zero, it is continuous output.
06	Open Breaker	(1-20)s	5	Opening relay output pulse.
07	Transfer Interval	(0-9999)s	1	It is the delay from 1# power open to 2# power close or from 2# power open to 1# power close.
08	Exceed Transfer	(0-20.0)s	0.0	When module receives a closing signal, closing relay output.
09	Again Close Time	(0-20.0)s	1.0	When the breaker fail to close for the first time, the module will open breaker, and then attempt to close for the second time, if still failed to close the second time, the module will send out closing breaker failure signal.
10	Again Open Time	(0-20.0)s	1.0	When the breaker fail to open for the first time, the module will close breaker, and then attempt to open for the second time, if still failed to close the second time, the module will send out opening breaker failure signal.
11	Start Delay	(0-9999)s	1	When voltage is abnormal, start delay begins and starting signal is initiated. In cycle start, starting signal is initiated, delay begins. After delay ends, if voltage abnormal, send fault alarm and start another genset. Start delay should be higher than total starting time, minimum 30 seconds.
12	Stop Delay	(0-9999)s	5	It is the delay from #1 power is normal to send out stop generator signal.

No.	Item	Range	Default	Description
13	Cycle Run Time	(1-1440)min	720	Gens cycle start run time.
14	Cycle Stop Time	(1-1440)min	720	Gens cycle stop time.
15	Rated Volt	(100-600)V	230	AC system rated voltage.

16	Over Voltage	(100-150)%	120	The settings are used to configure the power over voltage point in the event of the voltage rising above the setting value. This value can be adjusted to suit user requirements.
17	Over Voltage Return	(100-150)%	115	Normal return value of over voltage.
18	Under voltage	(50-100)%	80	The settings are used to configure the power under voltage point in the event of the voltage falling below the setting value.
19	Under Voltage Return	(50-100)%	85	Normal return value of under voltage.
20	Over Frequency	(0.0-75.0)Hz	55.0	When the frequency is over the point, over frequency is active.
21	Over Frequency Return	(0.0-75.0)Hz	52.0	Normal return value of over frequency.
22	Under Frequency	(0.0-75.0)Hz	45.0	When the frequency is under the point, low frequency is active.
23	Under Frequency Return	(0.0-75.0)Hz	48.0	Normal return value of over frequency.
24	CT Ratio	(5-65000)/5	500	Current Transformer ratio.
25	Rated Load Current	(5-6000)A	500	Load rated current.
26	Over Current Value	(50-150)%	120	Load over current value.
27	Over Current Delay	(0-9999)s	1296	Over current alarm delay
28	Module Address	(1-254)	1	RS485 communication address

29	Password		1234	It applies to modify parameters.
30	System Type	(1-4)	1	1.1# Mains 2# Gens 2.1# Gens 2# Mains 3.1# Mains 2# Mains 4.1# Gens 2# Gens
31	Off Position	(1-3)	1	1) two OFF position; 2) one OFF position; 3) no OFF position
32	AC System	(1-4)	1	1. 3-phase 4 wires 2. 3-phase 3 wires 3. Single phase 2 wire 4. 2-phase 3 wires
33	Priority Select	(1-3)	1	1. 1# Priority; 2. 2# Priority; 3. No Priority
34	Aux. Output 1	(1-28)	25	1 Not used 2 Critical failure 3 Fail of Transfer 4 Warning output 5 Alarm output(delay) 6 1# Normal volt 7 1# Abnormal volt 8 2# Normal volt 9 2# Abnormal volt 10 Overcurrent output
35	Aux. Output 2	(1-28)	28	
36	Aux. Output 3	(1-28)	13	
37	Aux. Output 4	(1-28)	16	
38	Aux. Output 5	(1-28)	18	

No.	Item	Range	Default	Description
-----	------	-------	---------	-------------

				11 Auto state output 12 Manual state output 13 Gens Start(N/O) 14 Gens Start(N/C) 15 1# Shut output 16 1# Break Off output 17 2# Shut output 18 2# Break Off output 19 Common Alarm output 20 Time Test Gen Start 21 Shut state 22 2# Shut state 23 1# Gens Start(N/O) 24 2# Gens Start(N/O) 25 ATS Power L1 26 ATS Power L2 27 ATS Power L3 28 ATS Power N
39	Aux. Input 1	(1-14)	02	01. Not used 02. Breaking compulsorily 03. Test off-load 04. Test on-load 05. Test Lamp 06. 1# Gens Alarm 07. 2# Gens Alarm 08. Remote start 09. Trip alarm 10. Reserved 11. Reserved 12. Reserved 13. Reserved 14. Reserved
40	Aux. Input 2	(1-14)	01	
41	Aux. Input 3	(1-14)	01	
42	Aux. Input 4	(1-14)	01	

43	Communication Set	(1-4)	1	1. Enable COM Adj/Ctrl 2. Disable COM Control 3. Disable COM Adjustment 4. Disable COM Adj/Ctrl
----	-------------------	-------	---	----------------------------------------------------------------------------------------------------------

## 7.3 INPUT/OUTPUT FUNCTION DESCRIPTION

**Table 9 Input Port Function Description**

Item	Description
01 Not used	Invalid.
02 Breaking compulsorily	When active, this will force the breaker to transfer the ATS to OFF position. "No ne OFF position" ATS is unavailable
03 Test Off-load	When active, controller will send a genset start signal immediately. When mains is normal, gens will not close the breaker.
04 Test On-Load	When active, controller will send genset start signals immediately. When gens is normal, gens will close the breaker.
05 Test lamp	When active, all Led lights on the front panel of the controller will be bright and the background of the LCD will be black in color.
06 1# Gens Alarm	In Cycle start, if the input is active, 1# Gens will not start
07 2# Gens Alarm	In Cycle start, if the input is active, 2# Gens will not start
08 Remote start	This input is necessary for cycle start generator.
09 Trip alarm	
10 Reserved	
11 Reserved	
12 Reserved	
13 Reserved	
14 Reserved	



**Table 10 Output Port Function Descriptions**



Item	Description
01. Not used	Invalid.
02. Critical failure	Switch transfer failure also belongs to the critical failure alarm.


03.Fail of transfer	1# closed failure, 1# open failure, 2# closed failure, and 2# open failure also belongs to the fail to transfer.
04. Warning output	1# reverse phase sequence; 2# reverse phase sequence, and load over current and compulsory belongs to general warning output.
05. Alarm output (delay)	When there is Serious fault then it will alarm for 60sec.
06. 1# Normal volt	It will output when 1# voltage is normal.
07. 1# Abnormal volt	It will output when 1# voltage is abnormal.
08. 2# Normal volt	It will output when 2# voltages is normal.
09. 2# Abnormal volt	It will output when 2# voltages is abnormal.
10. Over current output	It will output when loaded current exceeds the limit.
11. Auto state output	In will show output in automatic mode.
12. Manual state output	In will show output in manual mode.
13. Gens start (NO)	When generator starts output (Relay closed).
14. Gens start (NC)	When generator starts output (Relay released).
15. 1# close output	1# Switch ON signal output.
16. 1# open output	1# Switch OFF signal output, for one breaking position breaks off output .
17. 2# close output	2# Switch ON signal output.
18. 2# open output	2# Switch OFF signal output.
19. Common alarm output	It is include serious fault alarm and common alarm.
20. Timing Start Gen	Schedulers start generator function.
21. 1# Shut state	1# Switch auxiliary shutdown output.
22. 2# Shut state	2# Switch auxiliary shutdown output.


23. 1#Gens start (NO)	1# Gens start output.
24. 2#Gens start (NO)	2# Gens start output.
25. ATS power L1	ATS power supply.
26. ATS power L2	
27. ATS power L3	
28. ATS power N	

## EVENT LOG

In the main screen, press  key and select 2 Event log, and then press  key, the screen will show the event log interface as below:

Press  key to select the corresponding record, and press  key to enter into detailed information interface.

In the detailed information interface, press  key and it can display the record information circularly, including the temporal voltage of #1 and #2, detailed voltage, current, frequency and date and time.

Press and it will exit the current interface, while pressing  for a long time will return to main screen.

```

1# Close
1# Volt normal
2# Below Volt
2010-02-18    21:15:07

```

```

1# Close
U1(L-N) 220  220  220V
U2(L-N)  0   100  220V
2010-02-18 21:15:07 1/99

```

```

1# Close
AMP  501  502  503A
F1 50.0Hz  F2 50.1Hz
2010-02-18 21:15:07 1/99



```


Event log includes record type, 1# power supply status, 2# power supply status, 1# 3-phase voltage, 2# 3-phase voltage, 3-phase current, 1# frequency, 2# frequency and time-to-event etc.

**Table 11 Event Log Type**

NO.	Type	Description
1	1# Close	1# close signal output
2	2# Close	2# close signal output
3	1# Fail to Close	1# power supply can not connect to load.
4	2# Fail to Close	2# power supply can not connect to load.
5	1# Fail to Open	1# power supply can not disconnect to load.
6	2# Fail to Open	2# power supply can not disconnect to load.
7	Trip alarm	The input is active.
8	Breaking compulsorily	Breaking compulsorily input is active.

## TIMING START

In the main screen, press  key and select 3 Time start, and then press  key, the screen will show the time start interface as below:

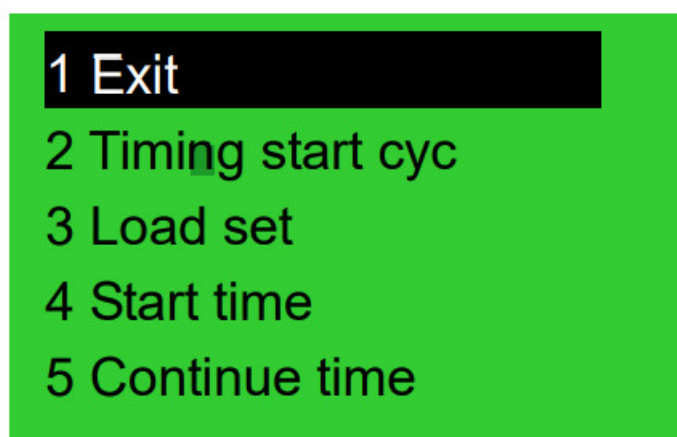



Time start cycle: includes inhibit start; single time, weekly or monthly.


Load set: Starting generator with load or without load.




Start time: Generator start date and time.

Continue time: Generator continuously run time can be set on the duration of maximum time for 99 hours 59 minutes.

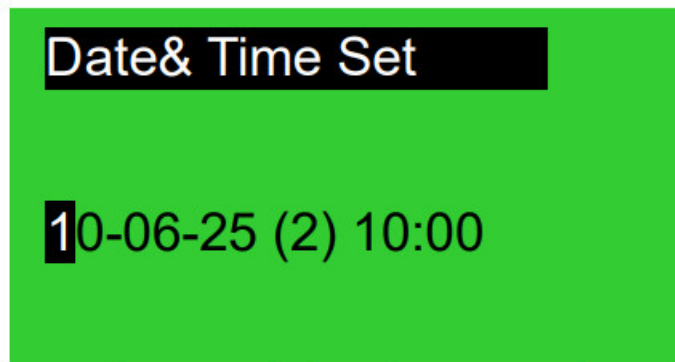

## DATE AND TIME SETTING


In the main screen, press  key and select 4 Date & Time set, and then press  key, the screen will show the Date & Time Set interface as below:





Press  key and input corresponding bit values 0-9, press  key and make bit shift to right. At the last bit press  key, so date and time can be updated. Date and time format set: year-month-date (week) and hour: minute.

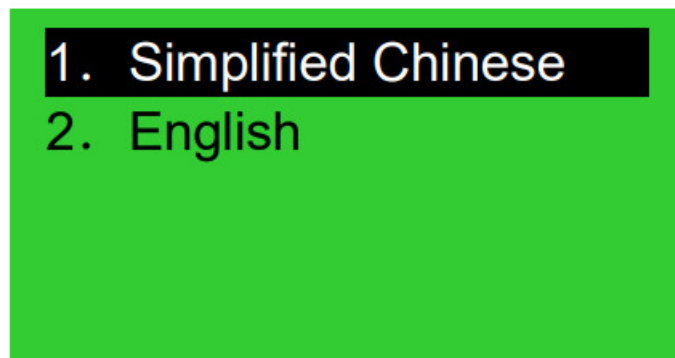

## LANGUAGE SETTING


In the main screen, press  key and select 5 Language, press  again to enter into language setting interface and the screen will show the language interface as follow:




Press  to select the language and press  to confirm the setting. Language option Simplified Chinese/English

## CONTROLLER INFORMATION

In the main screen, press  key and select 6 Controller information, and then press  key, the screen will show the controller information interface as follow:

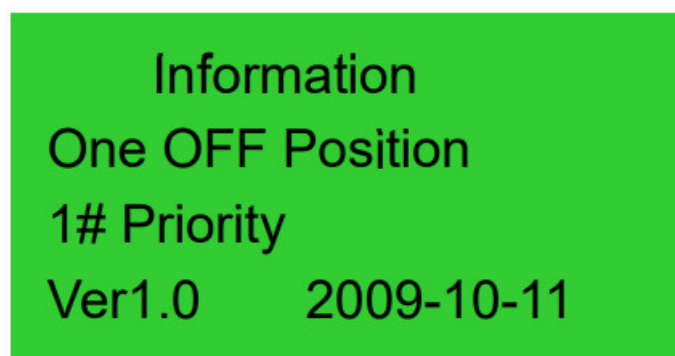





Display contents include off positions setting and switching priority choice and controller version, date.

Long press  key and it will exit and return to main screen.

## ATS OPERATION


### 13.1 MANUAL OPERATION

Press  key and manual operation indicator goes light, and the manual mode is active.

1. Press , 1# close relay outputs immediately, if 1# closing input is active, its indicator lights, and the 1# source connect to load.
2. Press , 2# close relay outputs immediately, if 2# closing input is active, its indicator lights, and the 2# source connect to load.
3. Press , 1# or 2# open relay outputs immediately, if 1# or 2# closing input is inactive, the indicators is black, the 1# or 2# power disconnect with load.

Remark: For the ATS of no OFF position, pressing  key is invalid.


### 13.2 AUTOMATIC OPERATION

Press  and the automatic LED will light. Controller enters AUTO mode and can automatically switch load to 1# or 2#.


### 13.3 ATS POWER SUPPLY

The power of ATS is smartly controlled by controller. As long as one power is normal, it can ensure ATS voltage power supply normally and can be transferred properly.

Users should select power supply voltage (phase voltage or line voltage) based on ATS type. If phase voltage is chosen, connect the phase voltages (e.g. A phase) of #1 and #2 separately to N/C Pin 5 and N/O Pin 7 of auxiliary output 1; and connect N phases of #1 and #2 separately to N/C Pin8 and N/O Pin10 of auxiliary output 2. And then connect the common output of auxiliary output1&2 to ATS power supply. Power on the controller, and enter the parameters set page. Set aux. output 1 to "ATS power L1" and set output 2 to "ATS power N". If the ATS power is supplied by Line Voltage, setting way is the same as above, and it only needs to change phase N to phase voltage. Aux. output 2 also needs to be changed based on the settings. Wiring diagrams are shown as below:

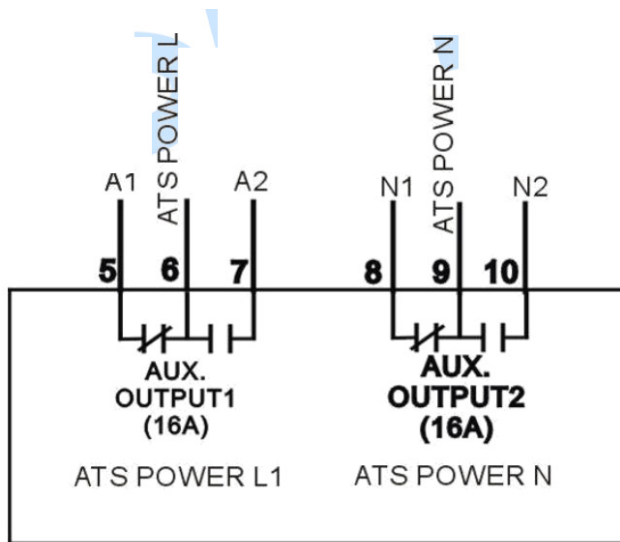

**ATS L-N voltage power supply**

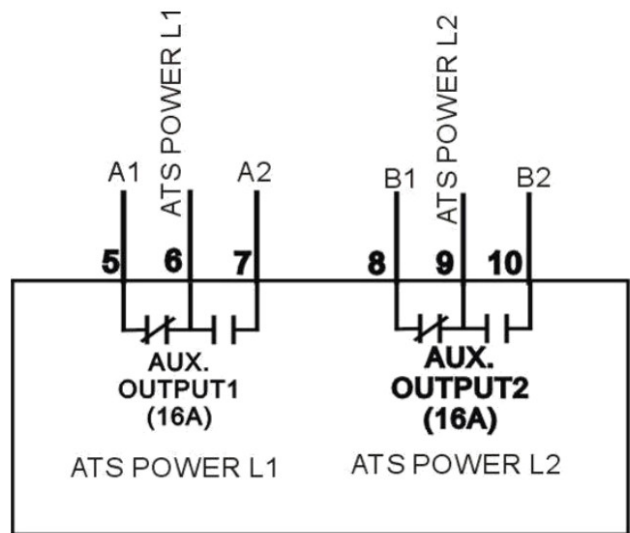

**ATS L-L voltage power supply**

**Note:** Normally Close (NC) input voltage must come from 1# voltage.

## COMMUNICATION CONFIGURATION AND CONNECTION


HAT600N series controller has RS485 serial port, which can connect the local area network openly. It uses Modbus protocol via PC or system software. It can also be applicable to dual power switching management for factories, telecom, industrial and civil buildings, achieving “remote control, remote measuring, remote communication” functions.

More information about communication protocol, please refer to HAT600 Communication Protocol.

### Communication parameters:

Module address	1 (range: 1-254, User can set.)
Baud rate	9600 bps
Data bit	8bit
Parity bit	None
Stop bit	1 bit or 2bits(set via PC)

## DESCRIPTION OF CONNECTING TERMINALS

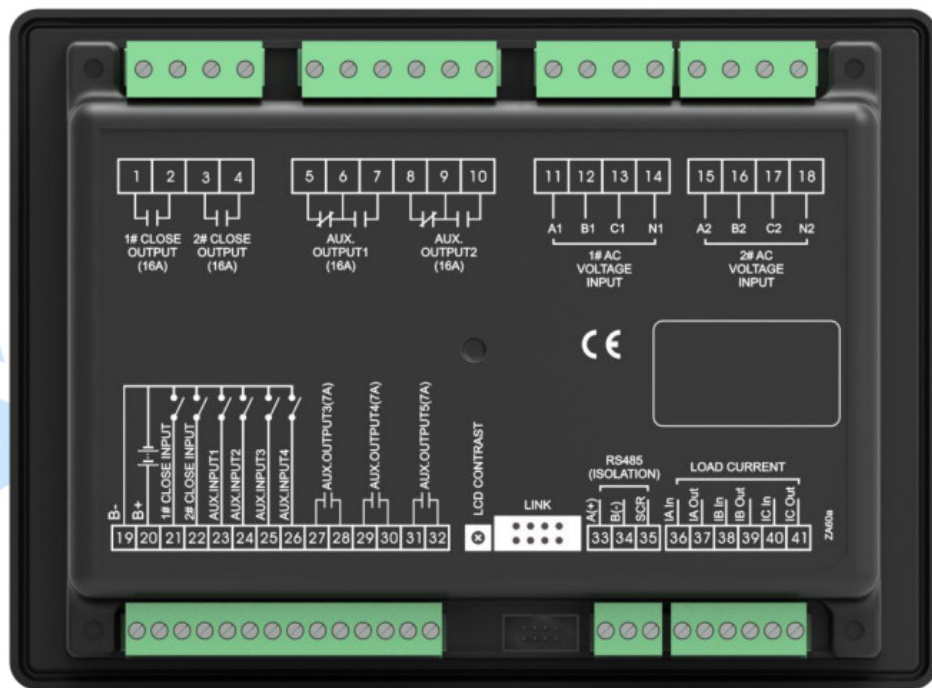

**Fig. 2 Connecting Terminal Description**

**Table 12 Functional Description of Input/Output Ports**

Pin	Items	Description		Notes
1	1# close output	Volt-free relay contact output		250V16A(relay capacity)
2				
3	2# close output	Volt-free relay contact output		250V16A(relay capacity)
4				
5	Aux. output 1	NC	Default: ATS power of L1 output.	Volt-free relay contact output: 250V1 6A
6		Common		
7		NO		
8	Aux. output 2	NC	Default: ATS power of N output.	Volt-free relay contact output: 250V1 6A
9		Common		
10		NO		
11	A1			

12	B1	1# AC 3-phase 4 wire voltage input	For single phase, only connect A1, N1
13	C1		
14	N1		
15	A2	2# AC 3-phase 4 wire voltage input	For single phase, only connect A2, N2
16	B2		
17	C2		
18	N2		
19	B-	Connect battery negative	DC negative input
20	B+	To start engine, connect the terminal to battery positive	DC positive input (8-35)V controller power supply
21	1# close input	Detection of 1# switch closing state , voltage free contact input	connect GND
22	2# close input	Detection of 2# switch closing state, voltage free contact input	connect GND
23	Aux. input 1	connect GND	
24	Aux. input 2		
25	Aux. input 3		
26	Aux. input 4		
27	Aux. output 3	Voltage free relay contact output	250V7A
28			
29	Aux. output 4	Voltage free relay contact output	250V7A
30			
31	Aux. output 5	Voltage free relay contact output	250V7A
32			

33	RS485 A+	RS485 communication port	
34	RS485 B-		
35	RS485 GND		
36	IA Input	Sensing from Secondary phase A current	Only suitable for HAT600NI/HAT600 NBI
37	IA Output		
38	IB Input	Sensing from Secondary phase B current	
39	IB Output		
40	IC Input	Sensing from Secondary phase C current join	
41	IC Output		
LCD Contrast	LCD Display	Adjust the LCD contrast	
LINK	Programming port	Factory update	

## TYPICAL WIRING DIAGRAM

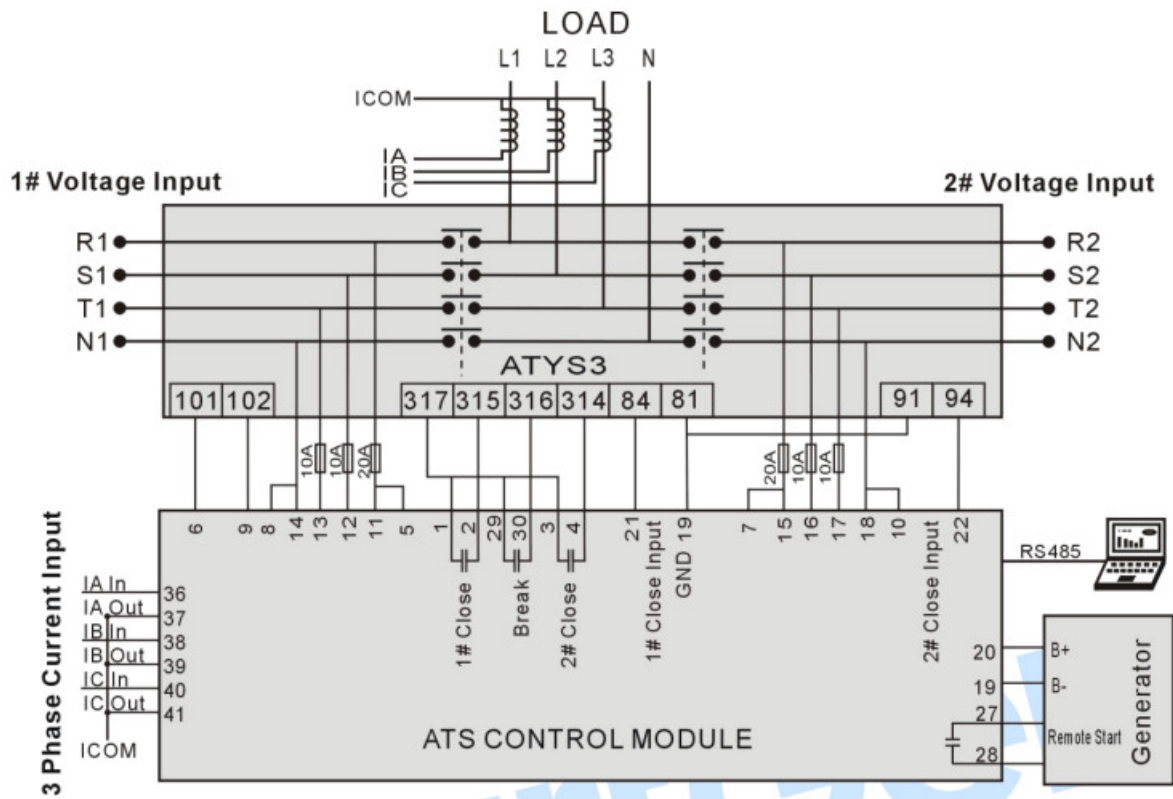


Fig. 3 ATYS3 Wiring Diagram

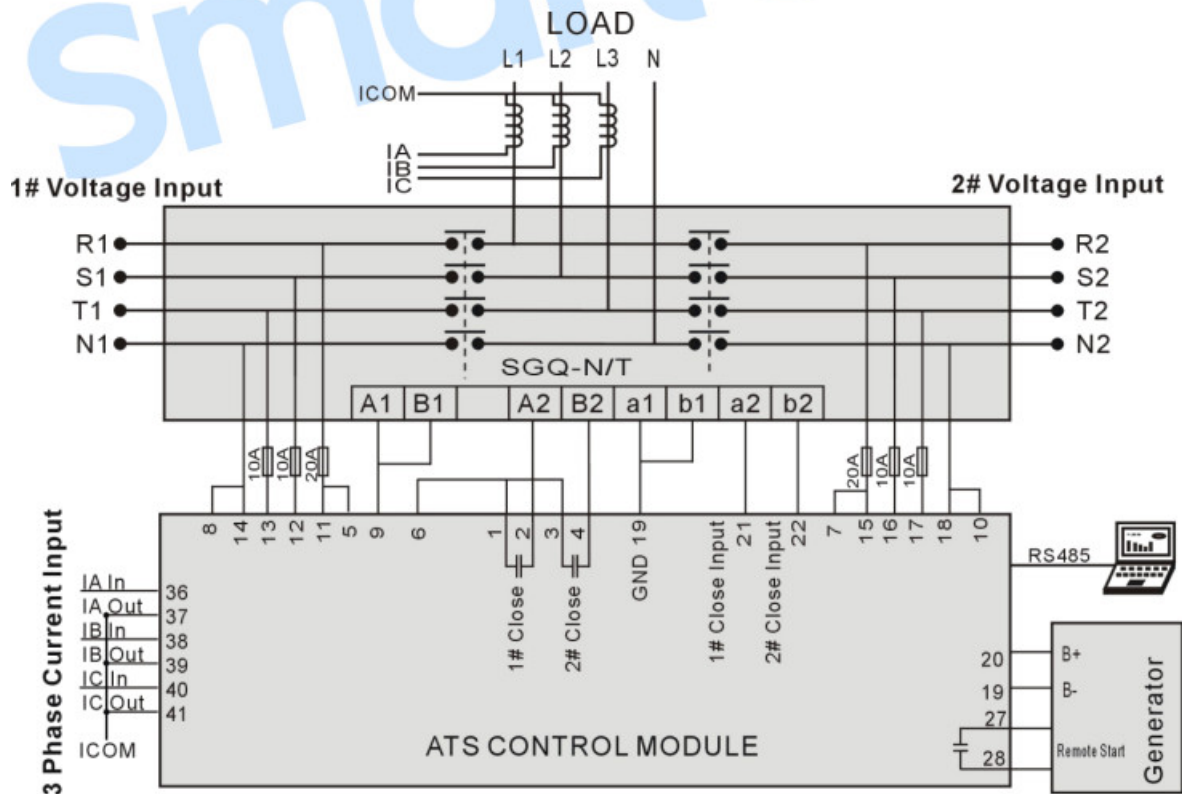


Fig. 4 SGQ-N/T Wiring Diagram

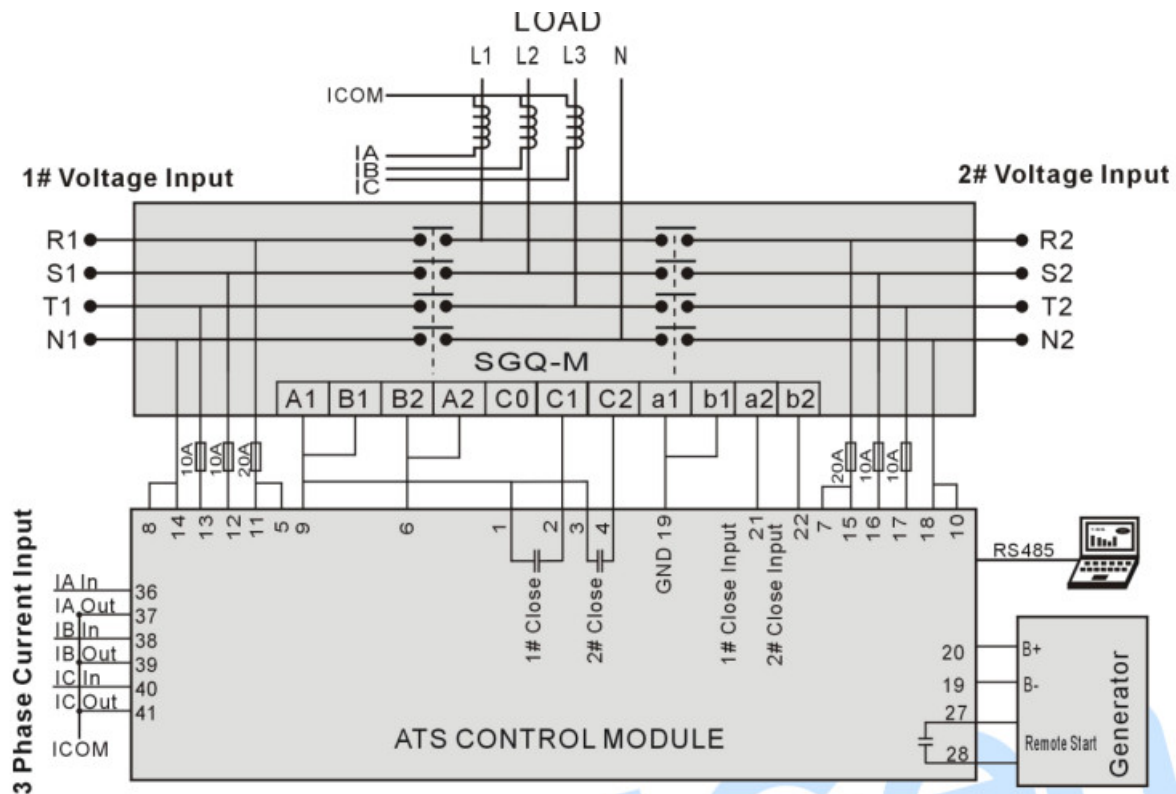


Fig. 5 SGQ-M Wiring Diagram



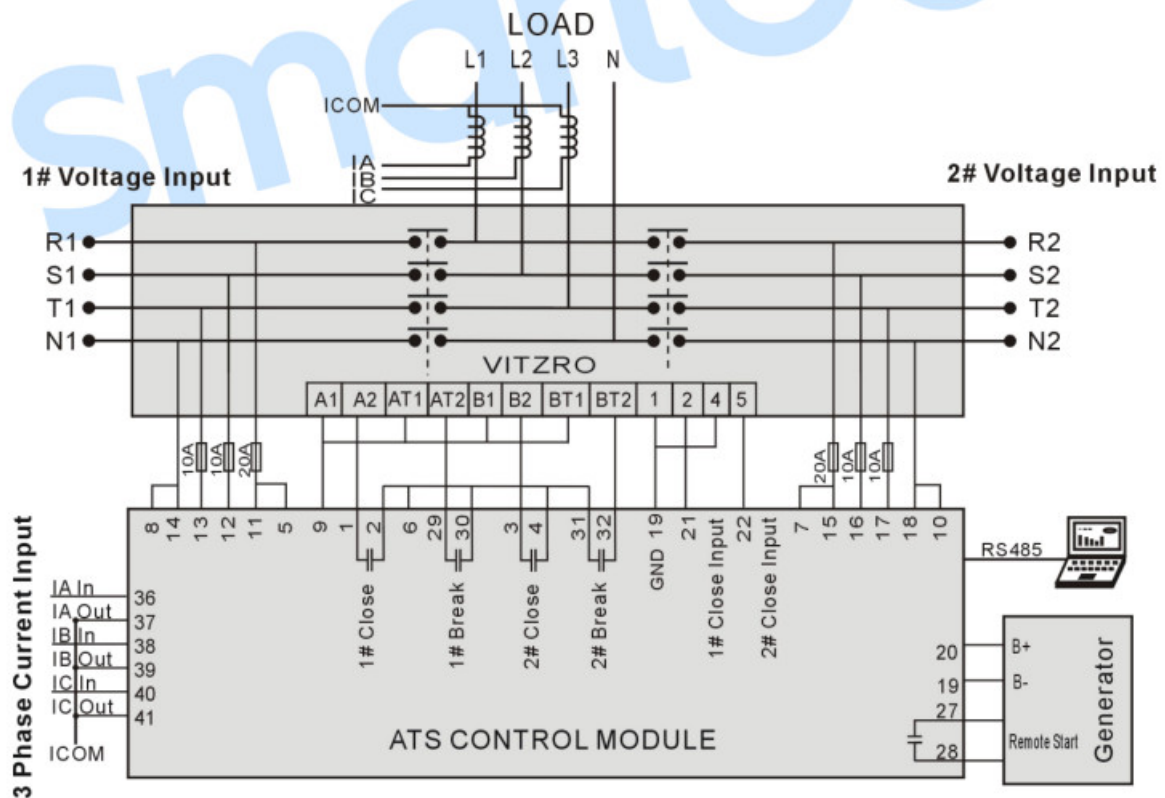



Fig. 6 VITZRO Wiring Diagram

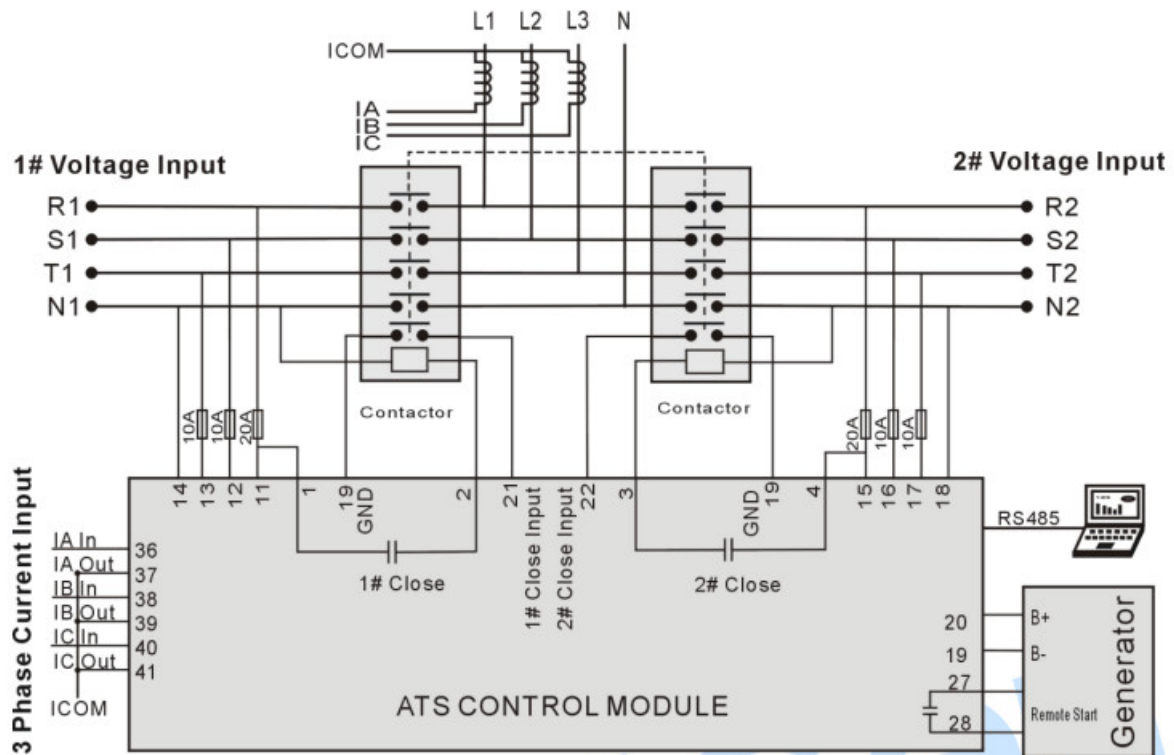

**Fig. 7 Contactor Wiring Diagram**

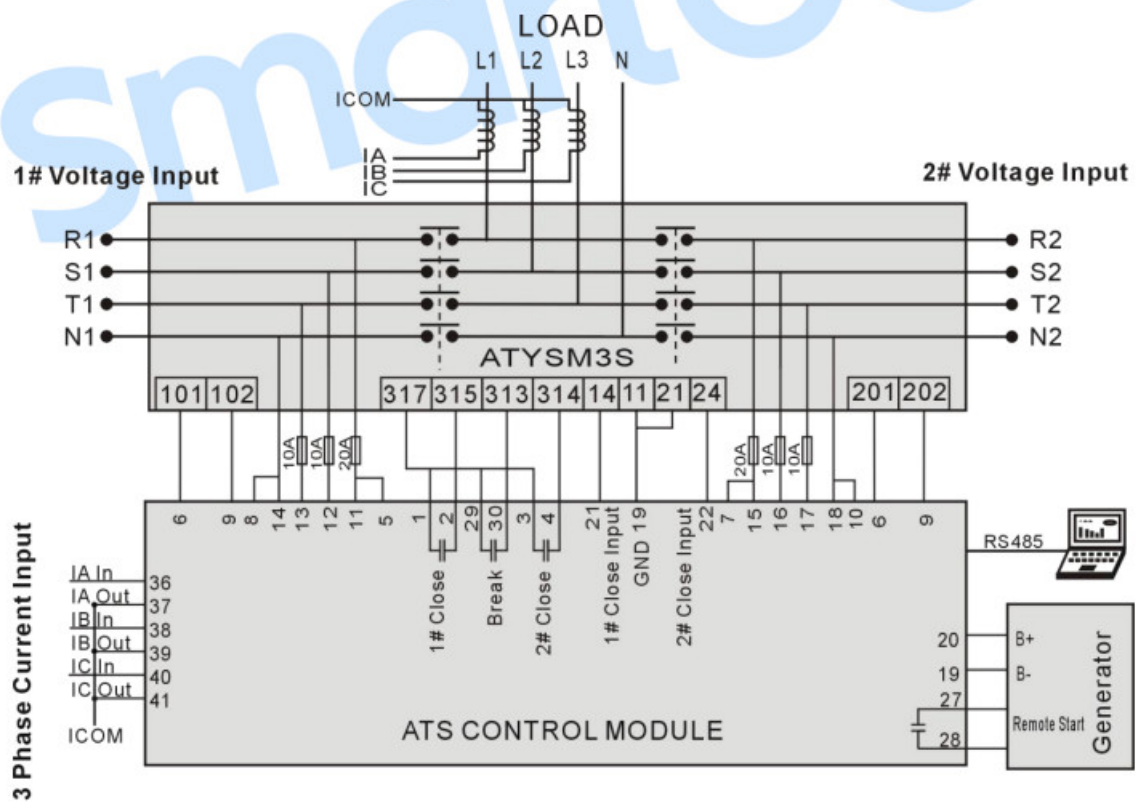


**Fig. 8 ATYSM3S Wiring Diagram**

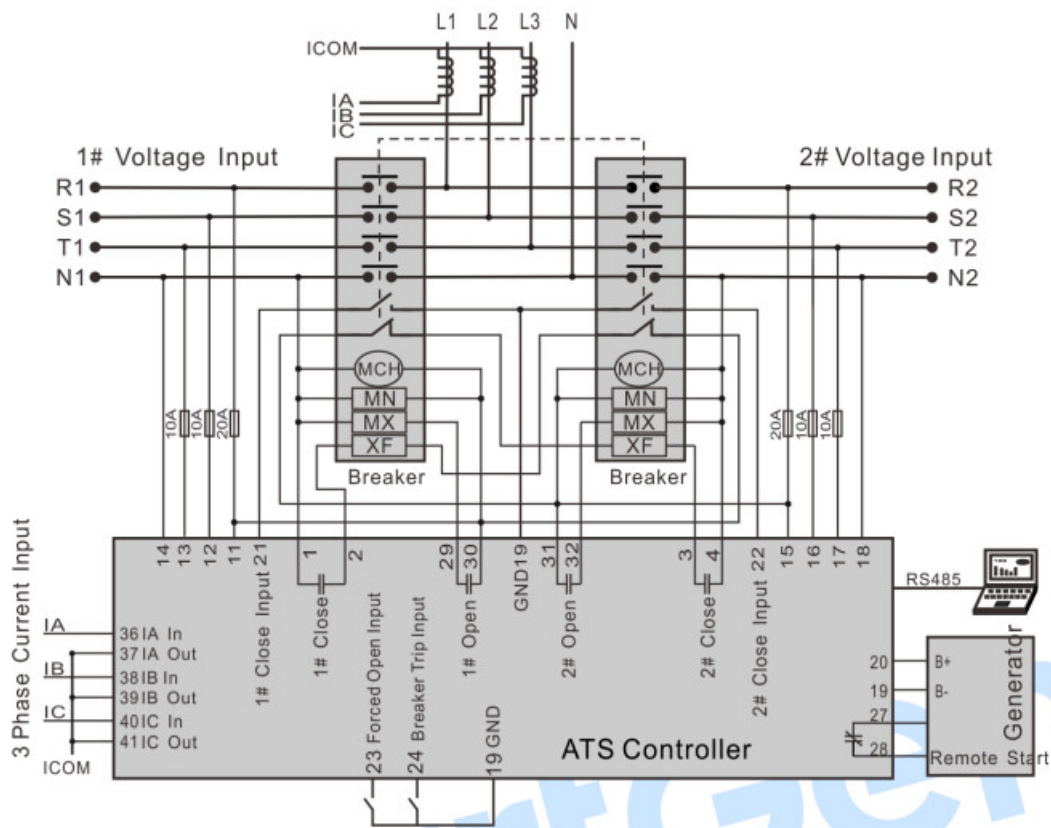

**Fig. 9 Breaker Wiring Diagram**

## INSTALLATION

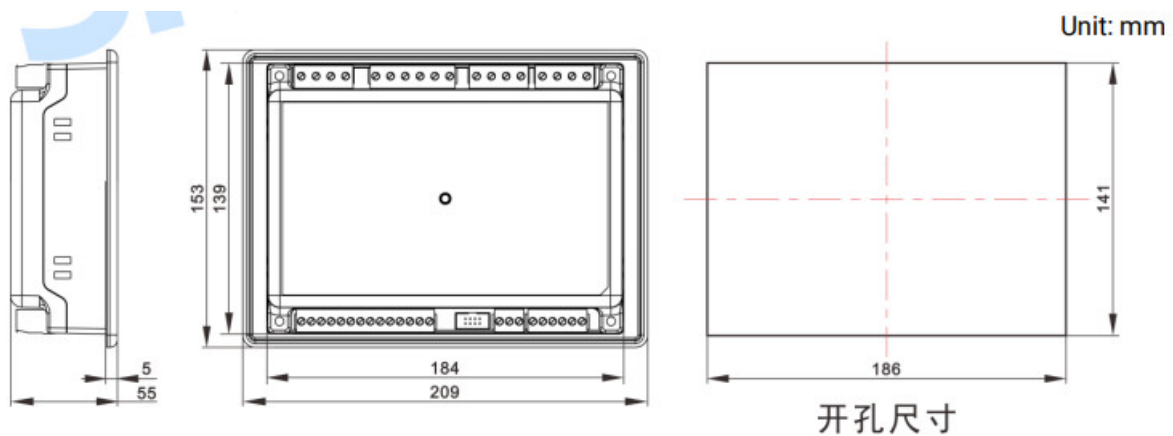

**Fig. 10 Case Dimension and Cutout Size**



**Note:** The torque of 0.27N·m (2.75kgf·cm) is recommended.

## FAULT FINDING


**Table 13 Fault Finding**

Fault Symptom	Possible Remedy
Controller no operation	Check battery voltage Check DC fuse.
RS485 communication failure	Check whether RS485 negative and positive are right connected. Check whether RS 485 converter is abnormal. Check whether module address in the parameter settings is correct. If the above methods are not available, try to short connect GND of controller with R S485 converter GND (or PC GND). It is recommended that a 120Ω resistor is added between A and B of RS485.
Programmable output error	Check programmable output connections, and pay attention to N/O and N/C. Check output settings in parameters settings.
Programmable input abnormal	Check whether the programmable input is connected to GND reliably when it's active, and hung it up when it is inactive. (Note: The input will be possibly destroyed when connected with voltage)
ATS is not work while Generator running	Check ATS. Check the connection wirings between the controller and the ATS. Check whether breaking positions of ATS are in accordance with the set breakings.

# SmartGen

## HAT600N Series ATS Controller User Manual

### Documents / Resources

	<a href="#">SmartGen HAT600N Series ATS Controller</a> [pdf] User Manual HAT600N Series ATS Controller, HAT600N Series, ATS Controller, Controller
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------

### References

- [众智](#)
- [众智](#)
- [众智](#)
- [众智](#)