

SpeedyBee F7 35A BLS Mini Stack Flight Controller Stack User Manual

[Home](#) » [SpeedyBee](#) » SpeedyBee F7 35A BLS Mini Stack Flight Controller Stack User Manual

SpeedyBee F7 35A BLS Mini Stack Flight Controller Stack User Manual

Contents [[hide](#)]


- 1 Part 1 – Overview
 - 1.1 Specs Overview
 - 1.2 Dimensions
- 2 Package
 - 2.1 FC & ESC Connection
- 3 Part 2 – SpeedyBee F7 Mini Flight Controller
 - 3.1 Layout
 - 3.2 FC's Peripheral Connection
 - 3.3 APP
 - 3.4 FC Firmware Update
 - 3.5 Parameters
- 4 Part 3 – SpeedyBee 35A BLS 4-in-1 ESC
 - 4.1 Layout
 - 4.2 Connection with Motors & Power Cable
 - 4.3 ESC Configuration
 - 4.4 ESC Firmware Update
 - 4.5 Parameters
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

Part 1 – Overview

Specs Overview

Product Name	SpeedyBee F7 35A BLS Mini Stack
Flight Controller	SpeedyBee F7 Mini
ESC	SpeedyBee 35A BLS Mini 4-in-1 ESC
Bluetooth	Supported. For FC & ESC parameter setting
Wireless FC Firmware Flashing	Not supported
Wireless Blackbox Download	Not supported
Power Input	3-uS LiPa
Mounting	20 x 20mm 03.5mm hole size, Compatible with M2 and M3 screws/Silicone grommets
Dimension	32mm(L) x 35mm(W) x 13mm(H)
Weight	12.7g


Dimensions

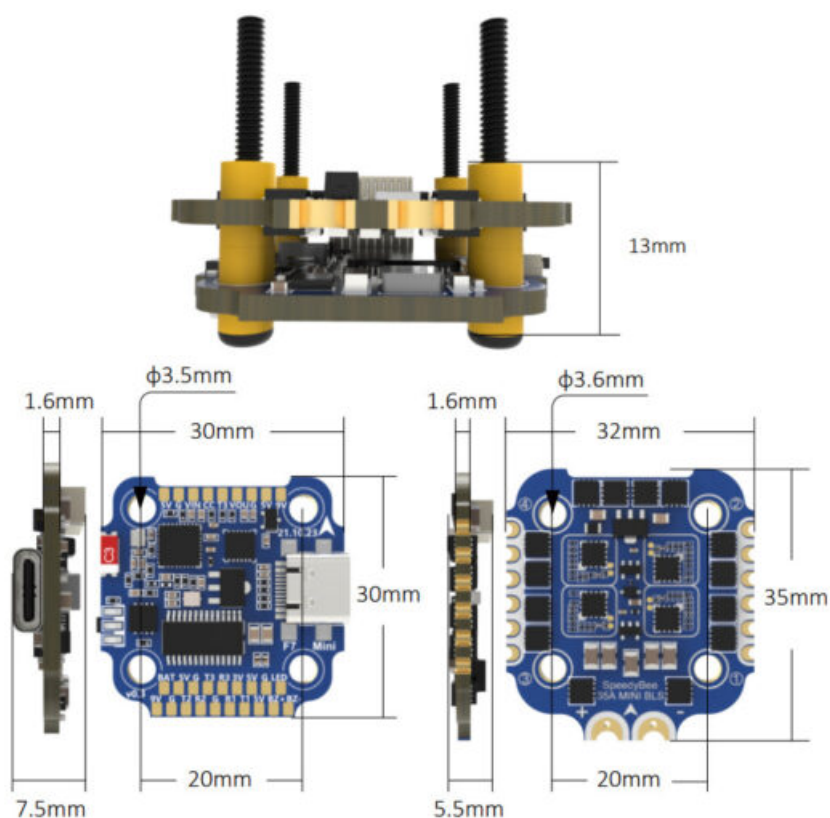

Package


- SpeedyBee F7 Mini Flight Controller x 1
- SpeedyBee 35A BLHeli_S Mini 4-in-1 ESC x 1
- Manual & App Download Card x 1
- XT30 Power Cable(Length: 7cm) x 1
- 8pin JST cable(For FC & ESC Connection x 1

- 35V 470uF Capacitor x 1
- M2 Accessories
 - M2(Diameter) * 20mm(Length) Screw x 4
 - M2(Diameter) * 25mm(Length) Screw x 4
 - M2(Hole Diameter) * 6.6mm(Height) Anti-vibration Silicone Grommets x 9
 - M2 Silicone O-Ring x 5
 - M2 Nylon Hex Nut x 5
- M3 Accessories
 - M3(Diameter) * 20mm(Length) Screw x 4
 - M3(Diameter) * 25mm(Length) Screw x 4
 - M3(Hole Diameter) * 6.6mm(Height) Anti-vibration Silicone Grommets x 9
 - M3 Silicone O-Ring x 5
 - M3 Nylon Hex Nut x 5

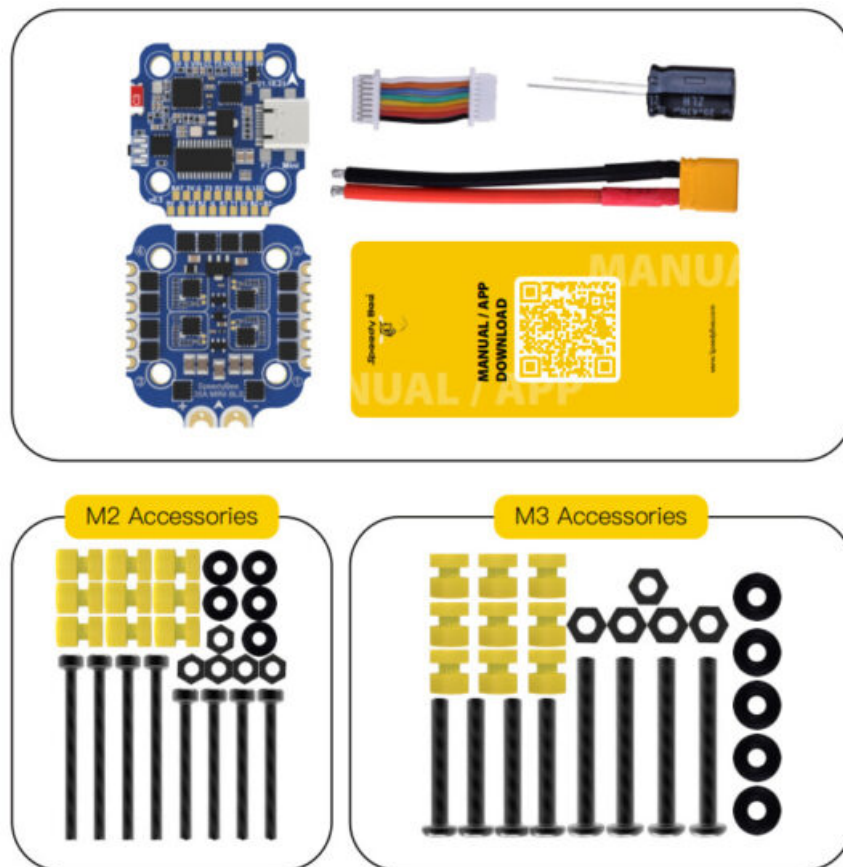


FC & ESC Connection


Use any end of the 8-pin JST cable to connect the FC to the ESC.

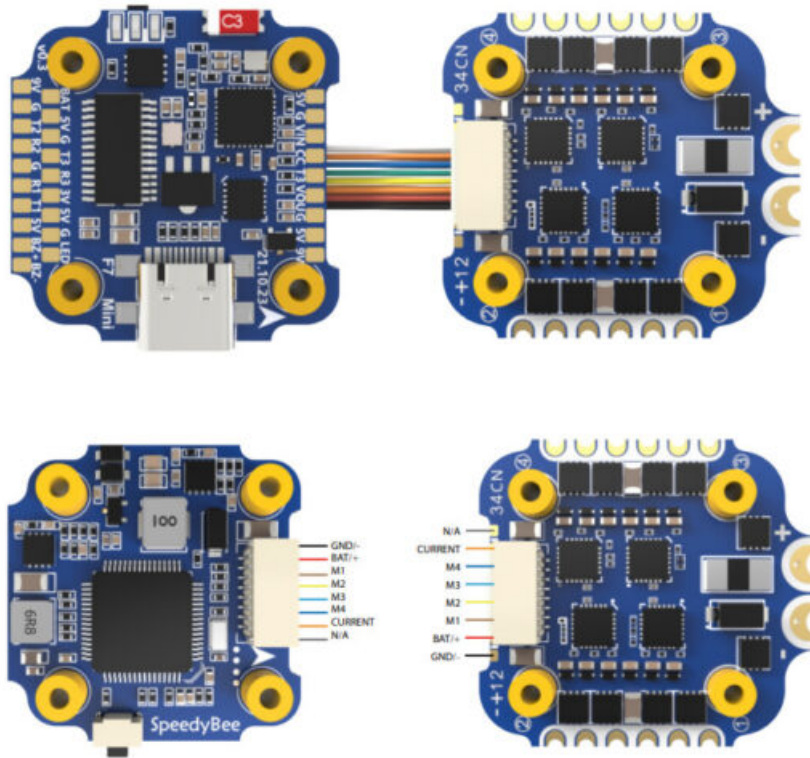

Part 2 – SpeedyBee F7 Mini Flight Controller

Layout

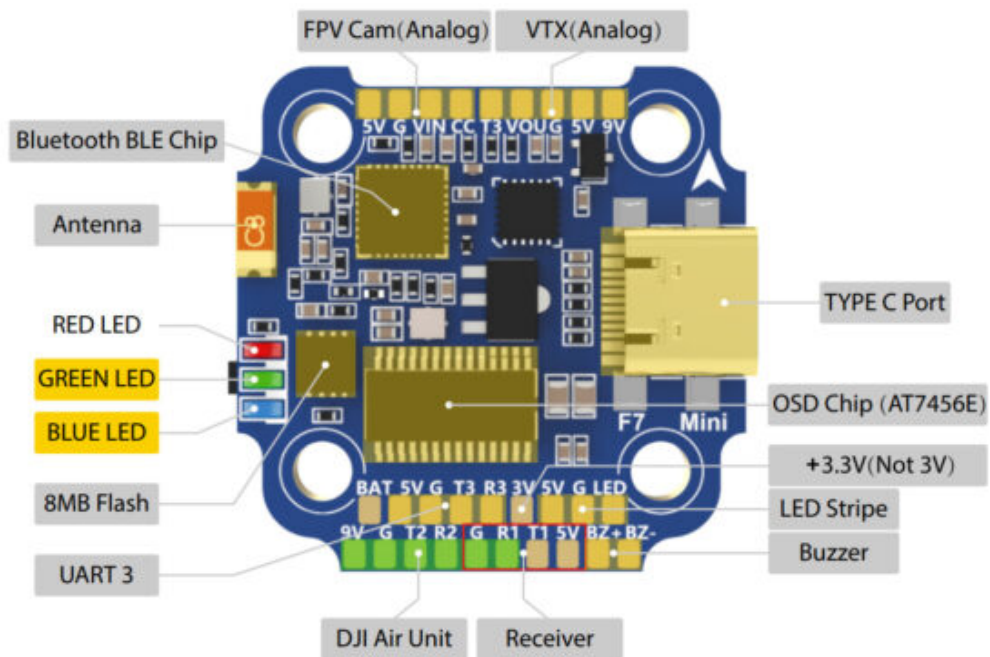

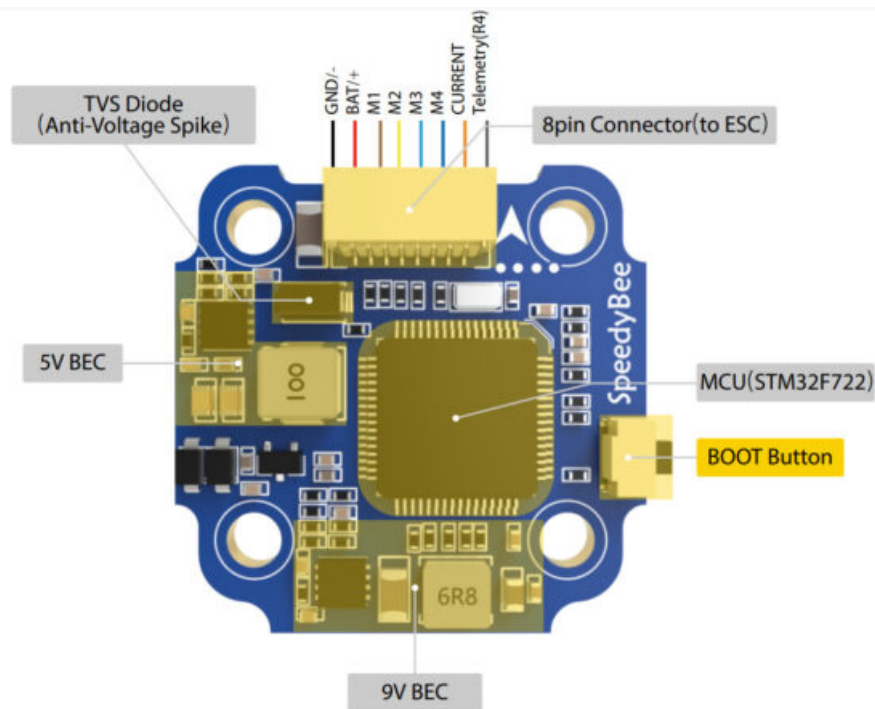

LED Indicator Definition


- **RED LED** – Solid Red after powering up.
- **GREEN LED** – Blinking Green indicates Bluetooth is open and waiting for connection; Solid Green indicates Bluetooth is connected.
- **BLUE LED** – Flight controller status light which is controlled by the flight controller firmware.

BOOT Button

Only if the flight controller gets bricked and can't power up, please follow these steps to re-flash firmware for it:


1. Insert a USB A to TYPE-C cable to your PC.
2. Press and hold the BOOT button, insert the USB cable into the flight controller, then release the BOOT button.
3. Open Betaflight/Emuflight/INAV configurator on the PC, go to the 'Firmware Flashing' page, choose the target 'SPEEDYBEEF7MINI' and flash.

FC's Peripheral Connection

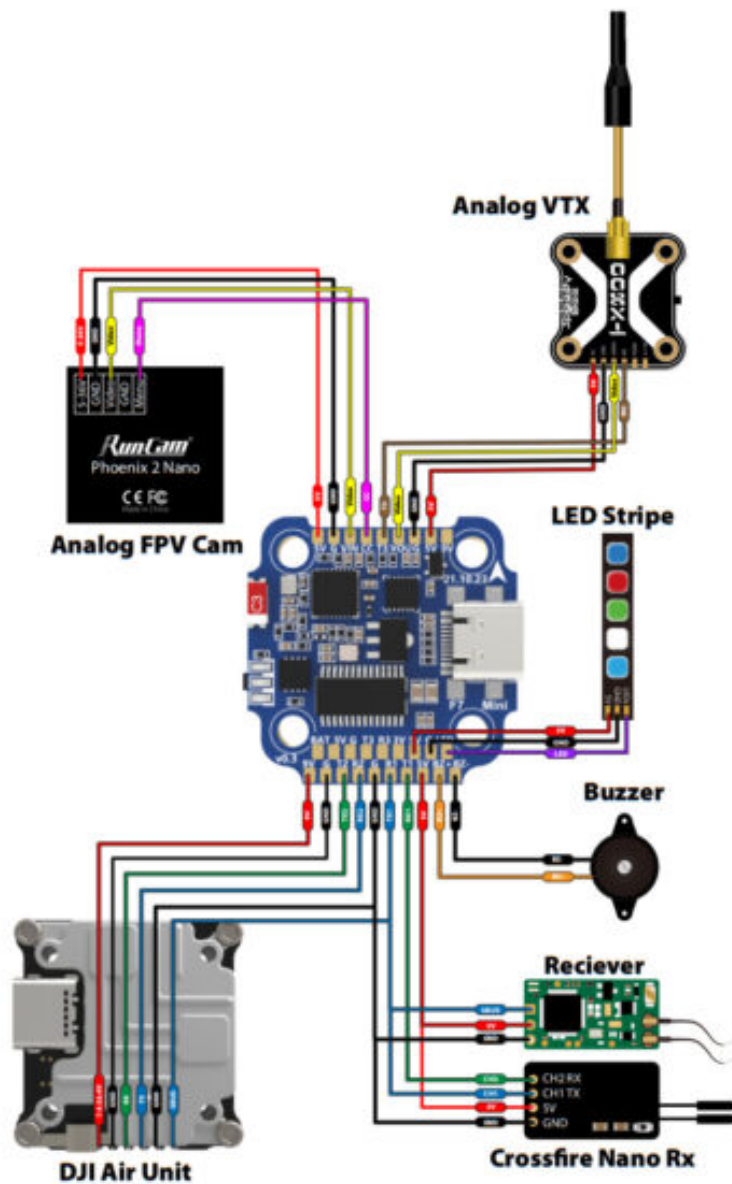

APP

- Get the SpeedyBee App
Search 'SpeedyBee' on Google Play or App Store. Or download the Android .apk file on our website:
<https://www.speedybee.com/download>.
- Connect the App

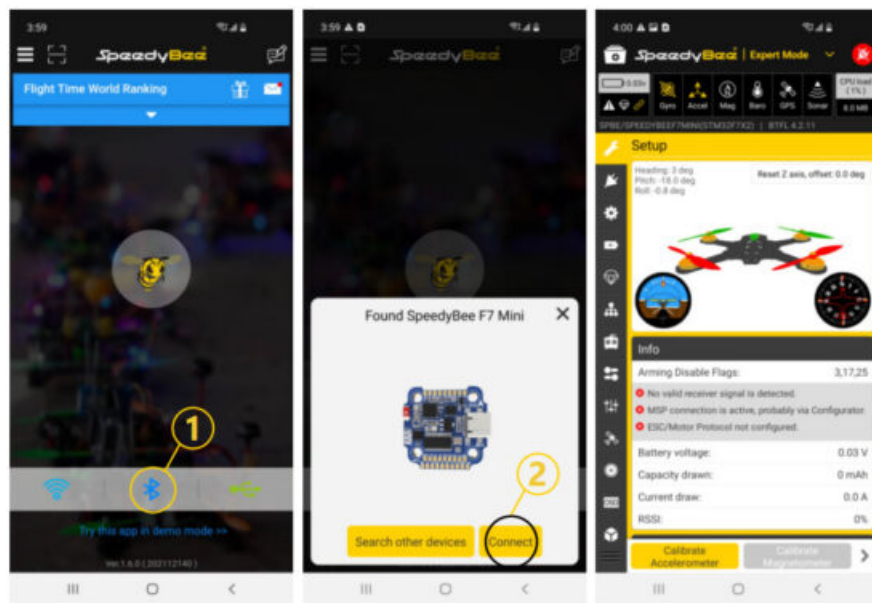

FC Firmware Update

SpeedyBee F7 Mini does not support wireless firmware flashing, so please flash firmware for it on your PC following the steps below:

1. Connect the flight controller to the PC with a USB cable
2. Open Betaflight/Emuflight/INAV configurator on your PC. Take the Betaflight configurator as an example, go to the 'Firmware Flashing' page, choose the target 'SPEEDYBEEF7MINI', and flash.




Parameters


MCU	STM32F722
IMU(Gyro)	MPU6000
USB Port Type	Type-C
Barometer	N/A
OSD Chip	AT7456E chip
BLE Bluetooth	Supported. Used for Flight Controller configuration
Flash FC Firmware Wirelessly	Not supported. Please update firmware for this FC on the PC
Download/Analyze Blackbox	Not supported. Please download and analyze Blackbox data on the PC
QII Air Unit Soldering Pads	Supported
Flash(for BlackBox)	8MB
Current Sensor	Supported, Scale=250 Offset=-500
BetaFlight Camera Control Pad	Yes(CC pad)
Power Input	3S – 6S Lipo
5V Output	6 groups of 5V output, five +5V pads, and 1 BZ+ pad(used for Buzzer). The total current load is 2.5A.
9V Output	2 groups of 9V output, the total current load is 2A.
3.3V Output	Supported. Up to 500mA current load.
ESC Signal Pads	M1 – M4
CART	Full UART * 3(UART1, UART2, UART3)
ESC Telemetry UART	R4(UART4)
12C	Not supported
LED Pad	Used for WS2812 LED
Buzzer	BZ+ and BZ- pad used for 5V Buzzer
BOOT Button	Used to enter DFU mode
RSSI Input	Not supported
SmartPort	Use any TX pad of UART for the SmartPort feature.
Supported Flight Controller Firmware	BetaFlight(Default), EMUFlight, INAV
Firmware Target Name	SPEEDYBEEF7MINI
Mounting	20 x 20mm, 3.5mm hole diameter
Dimension	30 x 30 x 7.5mm
Weight	5.7g

Part 3 – SpeedyBee 35A BLS 4-in-1 ESC

Layout

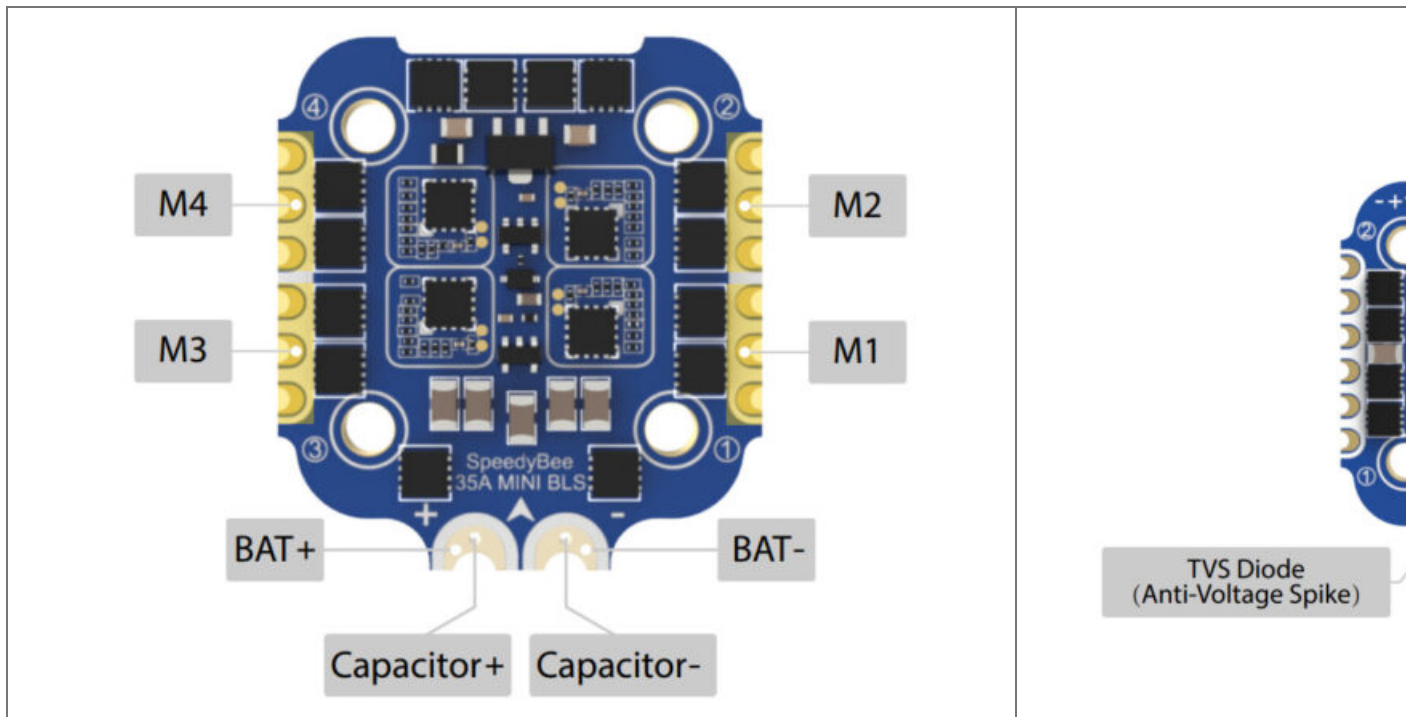


Connection with Motors & Power Cable

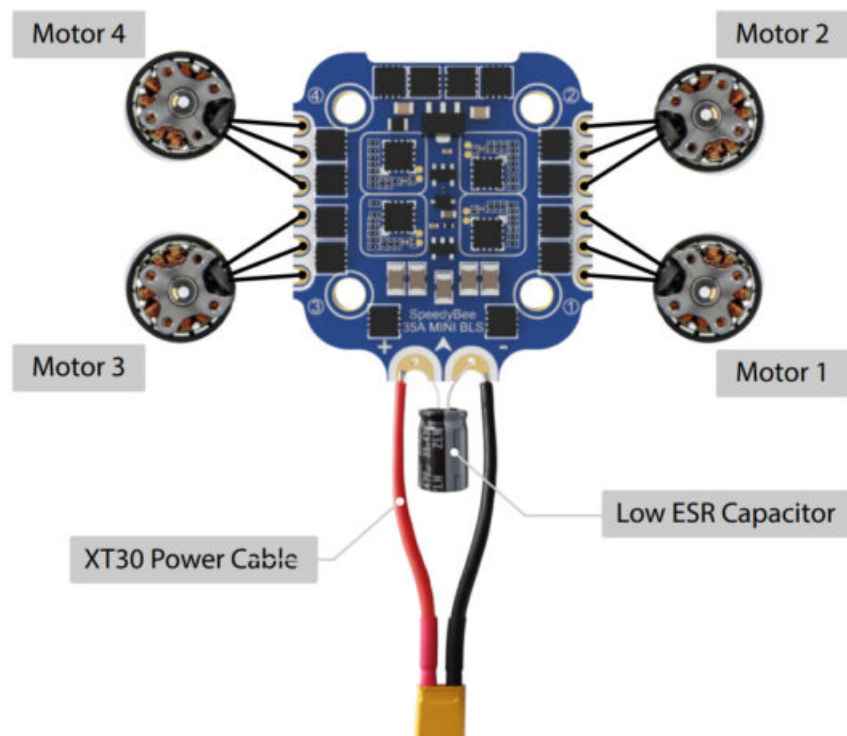


Note: In order to prevent the stack from being burnt out instantaneous voltage spikes on powering up, it is strongly recommended to use the Low ESR capacitor in the package.

ESC Configuration

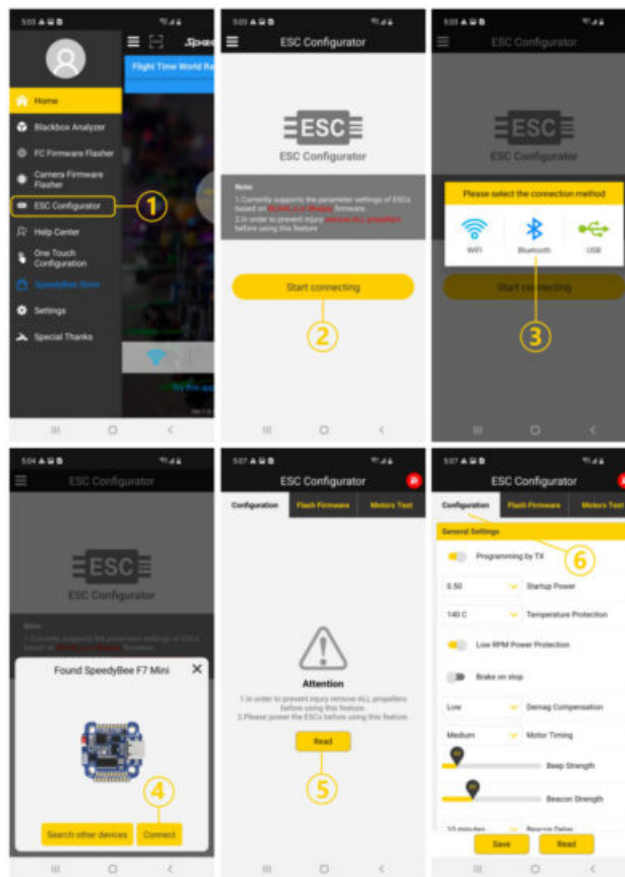

ESC Firmware Update

You could flash both BLHeli_S and Blue Jay firmware for this ESC via Bluetooth. Note: ESC Type should be set as 'J-H-40'.

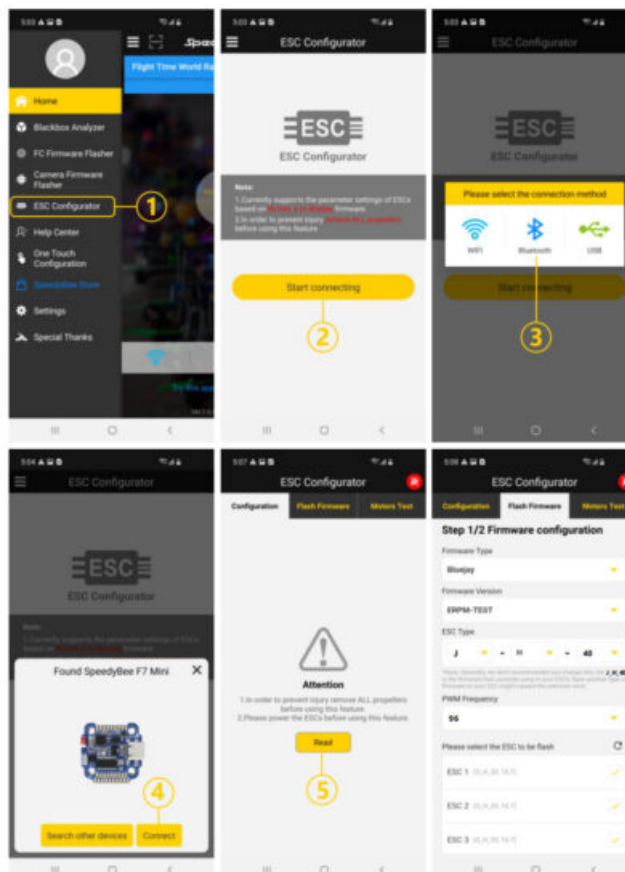


Parameters

Firmware	BLHeli_S JH40
Continuous Current	35A * 4
Burst Current	45A(SS)
ESC Protocol	DSHOT300/600
Power Input	3-6S LiPo
Power Output	VBA
Current Sensor	Support (Scale=250 Offset=-500)
Mounting	20 x 20mm, 3.6mm hole diameter
Dimension	32(L) * 35(W) * 5.5mm(H)
Weight	7g



Documents / Resources

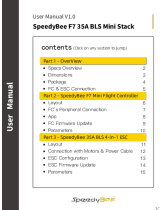	SpeedyBee F7 35A BLS Mini Stack Flight Controller Stack [pdf] User Manual F7 35A BLS, Mini Stack Flight Controller Stack
--	---

References

-  [download](#)