



Standalone Keypad Access Control User Manual

[Home](#) » [Standalone](#) » Standalone Keypad Access Control User Manual

Standalone Keypad Access Control User Manual



Contents [[hide](#)]



- [1 Packing List](#)
- [2 Quick Reference Programming Guide](#)
- [3 Description](#)
- [4 Features](#)
- [5 Specifications](#)
- [6 Installation](#)
- [7 Wiring](#)
- [8 To Reset to Factory Default](#)
- [9 Anti Tamper Alarm](#)
- [10 Sound and Light indication](#)
- [11 Detailed Programming Guide](#)
- [12 The unit operating as a Wiegand Output Reader](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)


Packing List

Name	Quantity	Remarks
Keypad	1	
User manual	1	
Screw driver	1	Φ 20mm×60mm,Special for keypad
Rubber plug	2	Φ 6mm×30 mm, used for fixing
Self tapping screws	2	Φ 4mm×28 mm, used for fixing
Star screws	1	Φ 3mm×6mm, used for fixing

Please ensure that all the above contents are correct. If any are missing please notify the supplier of the unit.

Quick Reference Programming Guide

To enter the programming mode	<div> Master code </div> <p>999999 is the default factory master code</p>
-------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

To exit from the programming mode	
<p><i>Note that to undertake the following programming the master user must be logged in</i></p>	
To change the master code	<div> <div>0</div> <div>New code</div> <div>#</div> <div>New code</div> <div>#</div> </div> <p>The master code can be 6 to 8 digits</p>
To add a PIN user.	<div> <div>1</div> <div>User ID number</div> <div>#</div> <div>PIN</div> <div>#</div> </div> <p>The ID number is any number between 1 & 2000. The PIN is any four digits between 0000 & 9999 with the exception of 1234 which is reserved. can be added continuously without exiting programming mode</p>
To add a card user	<div> <div>1</div> <div>Read Card</div> <div>#</div> </div> <p>Cards can be added continuously without exiting programming mode</p>
To delete a PIN or a card user.	<div> <div>2</div> <div>User ID number</div> <div>#</div> </div> <div> <div>2</div> <div>Read Card</div> <div>#</div> </div> <p>Users can be deleted continuously without exiting programming mode</p>
To unlock the door for a PIN user	<p>Enter the <div>PIN</div> then press <div>#</div></p>

To unlock the door for a card user	Present the card
------------------------------------	------------------

Description

The unit is single door multifunction standalone access controller or a Wiegand output keypad or card reader. It is suitable for mounting either indoor or outdoor in harsh environments. It is housed in a strong, sturdy and vandal proof Zinc Alloy electroplated case which is available in either a bright silver or matt silver finish. The electronics are fully potted so the unit is waterproof and conforms to IP68. This unit supports up to 2000 users in either a Card, 4 digit PIN, or a Card + PIN option. The inbuilt card reader supports 125KHZ EM cards, 13.56MHz Mifare cards. The unit has many extra features including lock output current short circuit protection, Wiegand output, and a backlit keypad. These features make the unit an ideal choice for door access not only for small shops and domestic households but also for commercial and industrial applications such as factories, warehouses, laboratories, banks and prisons.

Features


- Waterproof, conforms to IP68
- Strong Zinc Alloy Electroplated anti-vandal case
- Full programming from the keypad
- 2000 uses, supports Card, PIN, Card + PIN
- Can be used as a stand alone keypad
- Backlight keys
- Wiegand 26 input for connection to external reader
- Wiegand 26 output for connection to a controller
- Adjustable Door Output time, Alarm time, Door Open time
- Very low power consumption (30mA)
- Fast operating speed, <20ms with 2000 users
- Lock output current short circuit protection
- Easy to install and program
- Built in light dependent resistor (LDR) for anti tamper Built in buzzer
- Red, Yellow and Green LEDS display the working status

Specifications

Operating Voltage	DC 12V±10%
User Capacity	2000
Card Reading Distance	3-6 cm
Active Current	60mA
Idle Current	25±5 mA
Lock Output Load	Max 3A
Alarm Output Load	Max 20A
Operating Temperature	-45°C 60°C
Operating Humidity	10%- 90% RH
Waterproof	Conforms to IP68
Adjustable Door Relay time	0 -99 seconds
Adjustable Alarm Time	0- 3 minutes
Wiegand Interface	Wiegand 26 bit
Wiring Connections	Electric Lock, Exit Button, External Alarm,External reader

Installation


- Remove the back cover from the keypad using the supplied special screw driver
- Drill 2 holes on the wall for the Self tapping screws and 1 hole for the cable
- Put the supplied rubber bungs to into the two holes
- Fix the back cover firmly on the wall with 2 Self tapping screws
- Thread the cable through the cable hole
- Attach the keypad to the back cover.

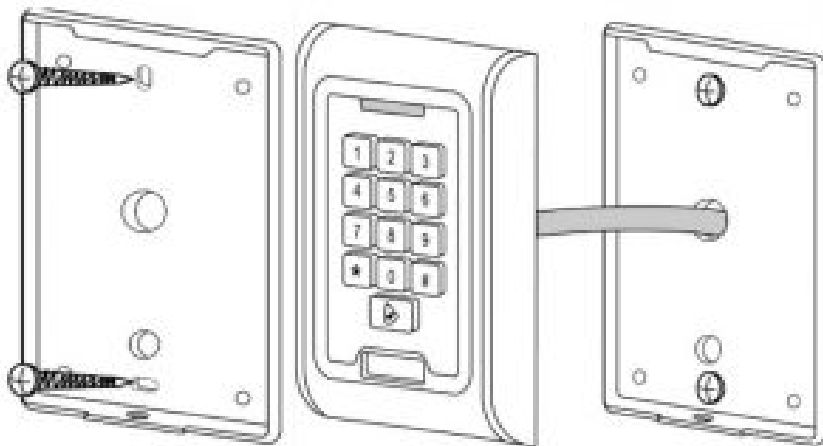


Wiring

Color	Function	Description
Pink	BELL_A	Doorbell button one end
Pale blue	BELL_B	Doorbell button to the other end
Green	D0	WG output D0
White	D1	WG output D1
Grey	ALARM	Alarm negative(alarm positive connected 12 V+)
Yellow	OPEN	Exit button one end(the other end connected GND)
Brown	D_IN	Magnetic switch one end(the other end connected GND)
Red	12V+	12V + DC Regulated Power Input
Black	GND	12V – DC Regulated Power Input
Blue	NO	Relay normally-on end(Connect positive electric lock “-“)
Purple	COM	Relay Public end, connect GND
Orange	NC	Relay Closed end(connect negative electric lock “-“)

Common power supply diagram:

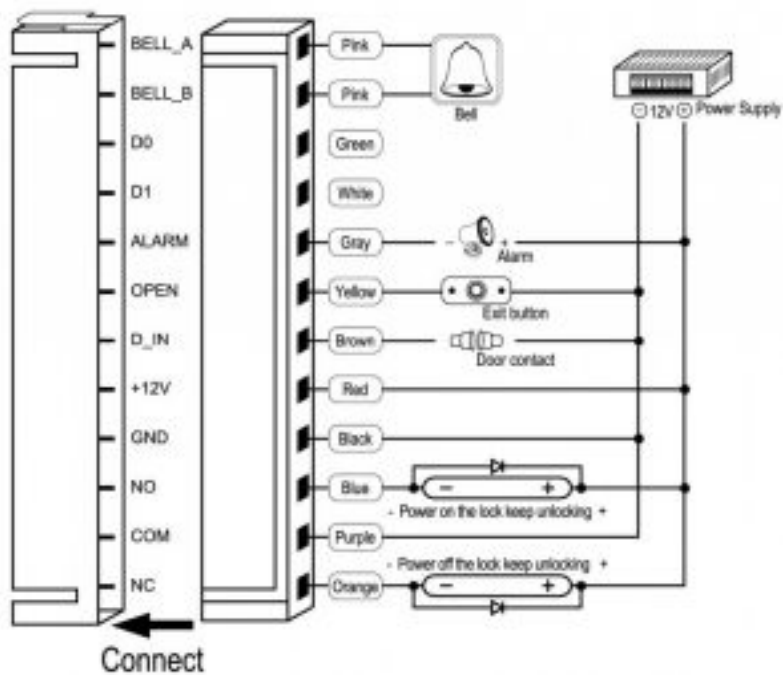

Special power supply diagram:

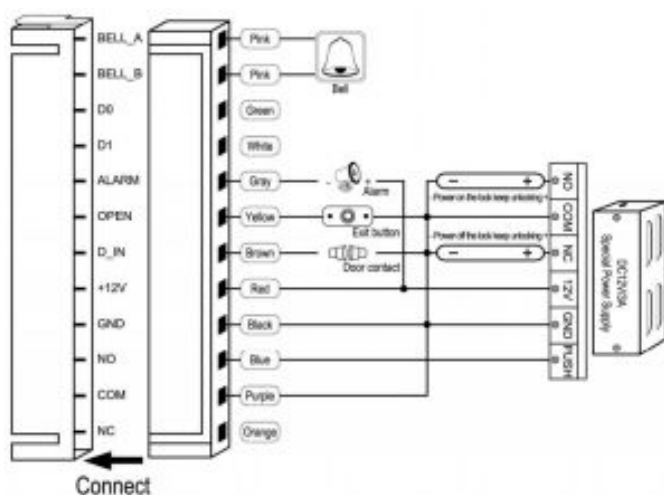

To Reset to Factory Default

- a. Disconnect power from the unit
- b. Press and hold # key whilst powering the unit back up
- c. On hearing two "Di" release # key, system is now back factory settings

Please note only installer data is restored, user data will not be affected





Anti Tamper Alarm

The unit uses a LDR (light dependent resistor) as an anti tamper alarm. If the keypad is removed from the cover then the tamper alarm will operate.

Sound and Light indication

Operation Status	Red Light	Green Light	Yellow Light	Buzzer
Power on	–	Bright	–	Di
Stand by	Bright	–	–	–
Press keypad	–	–	–	Di
Operation successful	–	Bright	–	Di
Operation failed	–	–	–	DiDiDi
Enter into programming mode	Bright	–	–	
In the programming mode	–	–	Bright	Di
Exit from the programming	Bright	–	–	Di

Detailed Programming Guide

11.1 User Settings To enter the programming mode	   999999 is the default factory master code
To exit from the programming mode	
Note that to undertake the following programming the master user must be logged in	

To change the master code	The master code can be 6 to 8 digits long
<p>Setting the working mode:</p> <p>Set valid card only users</p> <p>Set valid card and PIN users Set valid card or PIN users</p>	<div> <div>30#</div> <div>Entry is by card only</div> </div> <div> <div>31#</div> <div>Entry is by card and PIN together</div> </div> <div> <div>32#</div> <div>Entry is by either card or PIN (default)</div> </div>
<p>To add a user in either card or PIN mode, i.e. in the 3 2 # mode. (Default setting)</p>	
To add a PIN user	<div> <div>1</div> <div>User ID number</div> <div>#</div> <div>PIN</div> <div>#</div> </div> <p>The ID number is any number between 1 & 2000. The PIN is any four digits between 0000 & 9999 with the exception of 1234 which is reserved. Users can be added continuously without exiting programming mode as follows:</p> <div> <div>1</div> <div>User ID no 1</div> <div>#</div> <div>PIN</div> <div>#</div> <div>User ID no 2</div> <div>#</div> <div>PIN</div> <div>#</div> </div>
To delete a PIN user	<div> <div>2</div> <div>User ID number</div> <div>#</div> </div> <p>Users can be deleted continuously without exiting programming mode</p>
<p>To change the PIN of a PIN user</p> <p><i>(This step must be done out of programming mode)</i></p>	<div> <div>*</div> <div>ID number</div> <div>#</div> <div>Old PIN</div> <div>#</div> <div>New PIN</div> <div>#</div> <div>New PIN</div> <div>#</div> </div>

<p>To add a card user (Method 1)</p> <p>This is the fastest way to enter cards, use r ID number auto generation.</p>	<div data-bbox="671 136 1165 210"> 1 Read card # </div> <p>Cards can be added continuously without exiting programming mode</p>
<p>To add a card user (Method 2)</p> <p>This is the alternative way to enter cards using User ID Allocation. In this method a User ID is allocated to a card. Only one user ID can be allocated to a single card.</p>	<div data-bbox="665 506 1302 557"> 1 ID number # Read card # </div> <p>User can be added continuously without exiting programming mode</p>
<p>To add a card user (Method 3)</p> <p>Card number is the last 8 digits printed on the back of the card, user ID number auto generation</p>	<div data-bbox="679 887 1219 945"> 2 Card number # </div> <p>User can be added continuously without exiting programming mode</p>
<p>To add a card user (Method 4)</p> <p>In this method a User ID is allocated to a card number. Only one user ID can be allocated to the card number</p>	<div data-bbox="668 1252 1358 1305"> 1 ID number. # Card number. # </div> <p>User can be added continuously without exiting programming mode</p>
<p>To delete a card user by card. Note users can be deleted continuously without exiting programming mode</p>	<div data-bbox="671 1585 1181 1650"> 2 Read Card # </div>
<p>To delete a card user by user ID. This option can be used when a user has lost their card</p>	<div data-bbox="676 1789 1152 1861"> 2 User ID # </div>

<p>To delete a card user by card number.</p> <p>This option can be used when the user want to make the change but the card has lost</p>	<div data-bbox="678 159 1182 215"> <div>2</div> <div>Card number</div> <div>#</div> </div> <p>Note users can be deleted continuously without exiting programming mode</p>
<div data-bbox="754 483 1074 551"> <div>(</div> <div>3</div> <div>1</div> <div>#</div> <div>)</div> </div> <p>To add a card and PIN user in card and PIN mode</p>	
<p>To Add a card and Pin user</p> <p>(The PIN is any four digits between 0000 & 9999 with the exception of 1234 which is reserved.)</p>	<p>Add the card as for a card user</p> <div data-bbox="751 745 857 831"> <div>*</div> </div> <p>Press to exit from the programming mode</p> <p>Then allocate the card a PIN as follows:</p> <div data-bbox="668 956 1382 1016"> <div>*</div> <div>Read card</div> <div>1234 #</div> <div>PIN #</div> <div>PIN #</div> </div>
<p>To change a PIN in card and PIN mode (Method 1) Note that this is done outside programming mode so the user can undertake this themselves</p>	<div data-bbox="671 1202 1463 1240"> <div>*</div> <div>Read Card</div> <div>Old PIN #</div> <div>New PIN #</div> <div>New PIN #</div> </div>
<p>To change a PIN in card and PIN mode (Method 2) Note that this is done outside</p>	<div data-bbox="662 1408 1458 1447"> <div>*</div> <div>ID number #</div> <div>Old PIN #</div> <div>New PIN #</div> <div>New PIN #</div> </div>
<p>programming mode so the user can undertake this themselves</p>	
<p>To delete a Card and PIN user just delete the card</p>	<div data-bbox="681 1742 1153 1818"> <div>2</div> <div>User ID</div> <div>#</div> </div>
<div data-bbox="542 1957 882 2029"> <div>(</div> <div>3</div> <div>0</div> <div>#</div> <div>)</div> </div> <p>To add a card user in card mode</p>	

To Add and Delete a card user	<p>The operating is the same as adding and deleting a card user in</p> <p>3 2 #</p>
To delete All users	
To delete ALL users . Note that this is a dangerous option so use with care	<p>2 0000 #</p>
To unlock the door	
For a PIN user	<p>Enter the PIN then press #</p>
For a card User	<p>Read card</p>
For a card and PIN user	<p>Read card then enter PIN #</p>

Door Settings

Relay Output Delay Time	
To set door relay strike time	<p>* Master code # 4 0~99 # *</p> <p>0-99 is to set the door relay time 0-99 seconds</p>

Door Open Detection

Door Open Too Long (DOTL) warning. When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door and continue for 1 minute before switching off automatically.

Door Forced Open warning. When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is forced open, or if the door is opened after 20 seconds, the inside buzzer and alarm output will both operate. The Alarm Output time is adjustable between 0-3 minutes with the

Default being 1 minute.

To disable door open detection. (Factory default)

6 0 #

To enable door open detection

6 1 #

Alarm output time

To set the alarm output time (0-3 minutes) Factory default is 1 minute

5 0~3 #

Keypad Lockout & Alarm Output options. If there are 10 invalid cards or 10 incorrect PIN numbers in a 10 minute period either the keypad will lockout for 10 minutes or both the alarm and the inside buzzer will operate for 10 minutes, depending on the option selected below.

Normal status: No keypad lockout or alarm (factory default)

7 0 # (Factory default setting)

Keypad Lockout

7 1 #

Alarm and inside buzzer operate


7 2 #

To remove the alarm

To reset the Door Forced Open warning	<div>Read valid card or Master Code #</div>
To reset the Door Open Too Long warning	<div>Close the door or</div> <div>Read valid card or Master Code #</div>

The unit operating as a Wiegand Output Reader

In this mode the unit supports a Wiegand 26 bit output so the Wiegand data lines can be connected to any controller which supports a Wiegand 26 bit input.

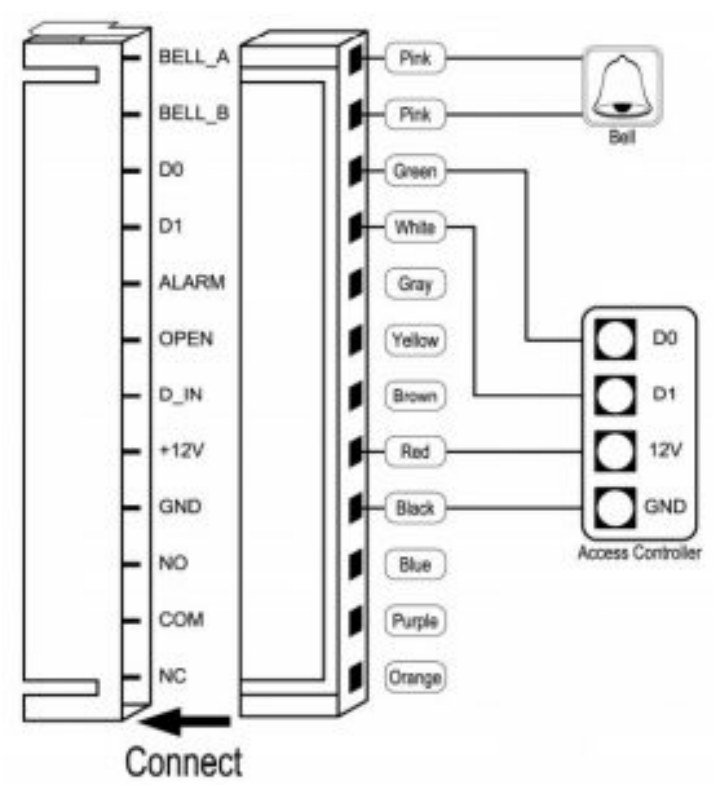

Documents / Resources

<div><div><div>Standalone Keypad Access Control</div><div>User Manual</div><div></div><div><div>1. Packing List</div><table><tr><th>Item</th><th>Quantity</th><th>Access</th></tr><tr><td>1</td><td>1</td><td>1</td></tr><tr><td>2</td><td>1</td><td>1</td></tr><tr><td>3</td><td>1</td><td>1</td></tr><tr><td>4</td><td>1</td><td>1</td></tr><tr><td>5</td><td>1</td><td>1</td></tr><tr><td>6</td><td>1</td><td>1</td></tr><tr><td>7</td><td>1</td><td>1</td></tr><tr><td>8</td><td>1</td><td>1</td></tr><tr><td>9</td><td>1</td><td>1</td></tr><tr><td>10</td><td>1</td><td>1</td></tr><tr><td>11</td><td>1</td><td>1</td></tr><tr><td>12</td><td>1</td><td>1</td></tr><tr><td>13</td><td>1</td><td>1</td></tr><tr><td>14</td><td>1</td><td>1</td></tr><tr><td>15</td><td>1</td><td>1</td></tr><tr><td>16</td><td>1</td><td>1</td></tr><tr><td>17</td><td>1</td><td>1</td></tr><tr><td>18</td><td>1</td><td>1</td></tr><tr><td>19</td><td>1</td><td>1</td></tr><tr><td>20</td><td>1</td><td>1</td></tr><tr><td>21</td><td>1</td><td>1</td></tr><tr><td>22</td><td>1</td><td>1</td></tr><tr><td>23</td><td>1</td><td>1</td></tr><tr><td>24</td><td>1</td><td>1</td></tr><tr><td>25</td><td>1</td><td>1</td></tr><tr><td>26</td><td>1</td><td>1</td></tr></table></div></div></div> <td><div>Standalone Keypad Access Control [pdf] User Manual</div><div>Keypad Access Control</div></td>	Item	Quantity	Access	1	1	1	2	1	1	3	1	1	4	1	1	5	1	1	6	1	1	7	1	1	8	1	1	9	1	1	10	1	1	11	1	1	12	1	1	13	1	1	14	1	1	15	1	1	16	1	1	17	1	1	18	1	1	19	1	1	20	1	1	21	1	1	22	1	1	23	1	1	24	1	1	25	1	1	26	1	1	<div>Standalone Keypad Access Control [pdf] User Manual</div> <div>Keypad Access Control</div>
Item	Quantity	Access																																																																																
1	1	1																																																																																
2	1	1																																																																																
3	1	1																																																																																
4	1	1																																																																																
5	1	1																																																																																
6	1	1																																																																																
7	1	1																																																																																
8	1	1																																																																																
9	1	1																																																																																
10	1	1																																																																																
11	1	1																																																																																
12	1	1																																																																																
13	1	1																																																																																
14	1	1																																																																																
15	1	1																																																																																
16	1	1																																																																																
17	1	1																																																																																
18	1	1																																																																																
19	1	1																																																																																
20	1	1																																																																																
21	1	1																																																																																
22	1	1																																																																																
23	1	1																																																																																
24	1	1																																																																																
25	1	1																																																																																
26	1	1																																																																																