



SWIT CL-60D/CL-120D Bi-Color Studio Panel LED Light User Manual

[Home](#) » [SWIT](#) » SWIT CL-60D/CL-120D Bi-Color Studio Panel LED Light User Manual 

SWIT®

CL-60D/CL-120D
Bi-color Studio Panel LED light
Ver:C



USER MANUAL
SWIT Electronics Co.,Ltd.

Thank you for choosing SWIT products. Please read the instructions before using, and keep it for future reference.

Contents

- [1 Introduction](#)
- [2 Specification](#)
- [3 Cautions](#)
- [4 Maintenance](#)
- [5 Overall dimension](#)
- [6 Appearance](#)
- [7 LCD display information](#)
- [8 Accessories](#)
- [9 Usage](#)
 - [9.1 Install](#)
- [10 Power supply](#)
- [11 Setting and Use of Brightness and Color Temperature](#)
 - [11.1 General adjusting mode](#)
 - [11.2 Fast adjusting mode](#)
- [12 Setting and Use of Communication Address](#)
- [13 Setting and Use of Communication Control Mode](#)
 - [13.1 DMX communication model.](#)
- [14 For example:](#)
 - [14.1 Intercontrol Mode](#)
- [15 USB interface usage](#)
- [16 Packing list](#)
- [17 Documents / Resources](#)
- [18 Related Posts](#)

Introduction

This product is designed and applied to use in film, TV, photography, and studio lighting also can be used in theater, concert, or other entertainment stage lighting.

Specification

Model	CL-60D	CL-120D
LED	900pcs	1800pcs
Color Temperature	2700K-6500K	
Intensity	0%400%	
Illuminance	2000 Lux@1m	3700 Lux@1m
Half beam angle	About 65°	
Beam angle	About 100°	
Half beam angle (with honeycomb)	About 40°	About 45°
CRI	95	
TLCI	99	
Working Voltage	DC 11V-17V	
Output power	Appr. 60W	Appr. 120W
Energy Efficiency Index <G>	Test under this parameter: Dim mer=100% ,CCT=6500k	
Dimension	See Fig.1 /Fig.2 /Fig.3	
Luminous size	310mm x 310mm	600mm x 310mm
Weight	3.2Kg	4.7Kg

Cautions

1. Do not disassemble the panel light or touch the interior with metal objects to avoid damage;
2. Do not store the panel light in a dusty or wet environment to avoid damage;
3. The USB interface is a reserved interface, please use it according to the specified environment of the company's related products, not for other purposes, so as not to cause loss;
4. Do not connect the output device of the DMX signal in the panel light network when using the mutual control function of the panel light, otherwise, the function can not be used normally;
5. Only use the light in the temperature range of -10°C-40°C.

Maintenance

1. Use a soft dry cloth to clean the light and front panel. Can also use a soft cloth dipped slightly in a neutral detergent solution for cleaning, but wipe with a soft dry cloth after cleaning.
2. Do not use a wet cloth, absolute alcohol, benzene to wipe the light panel or soft panel, otherwise will damage the soft panel.

Overall dimension

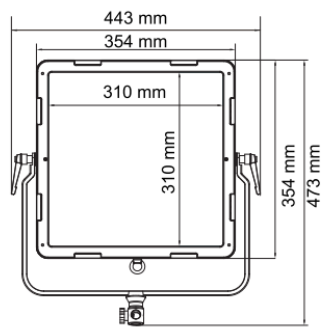


Fig.1 CL-60D

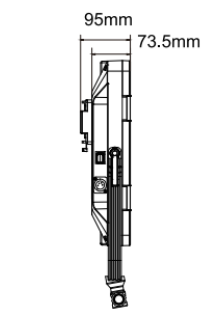


Fig.2 CL-60D/CL-120D

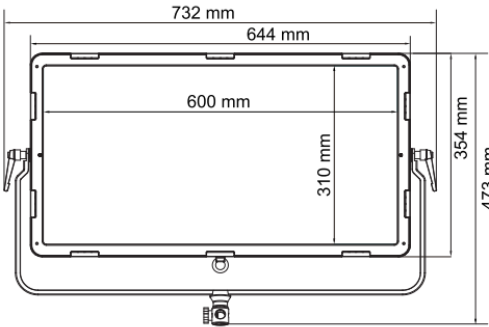


Fig.3 CL-120D

Appearance

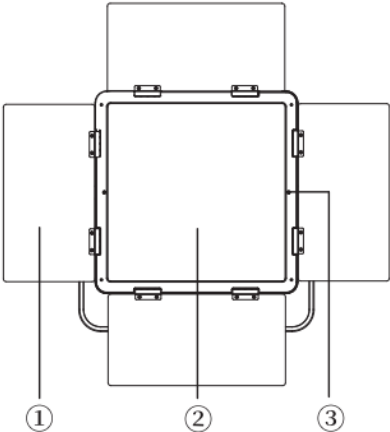


Fig.4 CL-60D

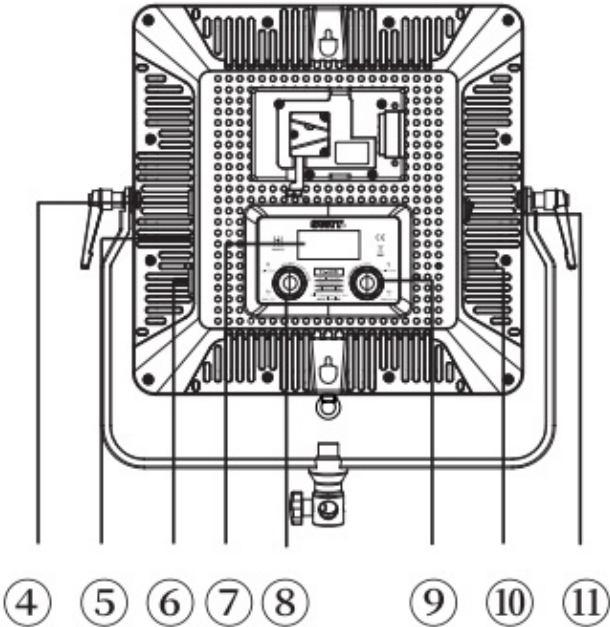


Fig.6 CL-60D

Barndoor
Diffuser
Mounting hole

DMX OUT
USB interface
DMX IN
LCD screen


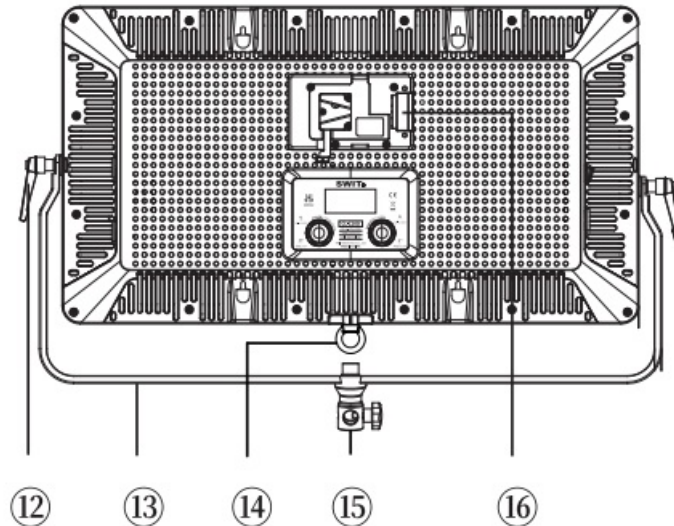


Fig.7 CL-120D

Adjust knob
U-shape bracket
The ring is a Bracket adaptor
Battery plate

LCD display information

Take the “color temperature 5600 k, brightness 100%, battery full power supply, DMX communication mode, communication address 008” as an example:

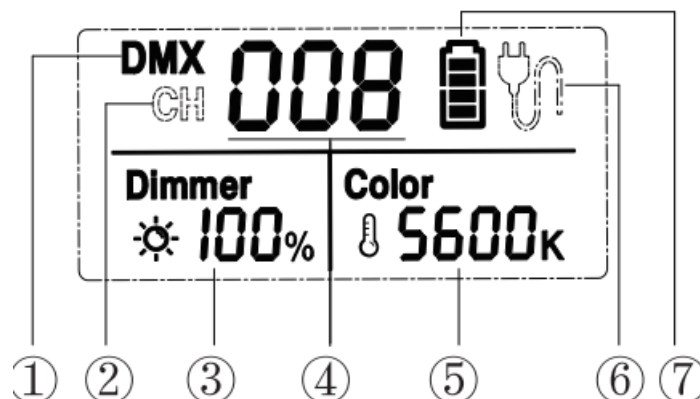

1. Current Support Communication Control
Mode for Light – DMX Communication Mode
2. The communication control mode is currently supported by light – Inter control mode between lamps and lanterns
3. Brightness display


4. Communication address
5. Color temperature
6. Power supply display (Adaptor)
7. Power supply display (Battery)

The power display when using the battery:

Four cells	About 80%-100%
Three cells	About 60%-80%
Two cells	About 40%-60%
One cell	About 20%-40%
Blank	Below 20%, Power warning

Accessories

Fig.9–Fig.10 shown as to how to assembly the honeycomb, CL-60D is the same as CL-120D.

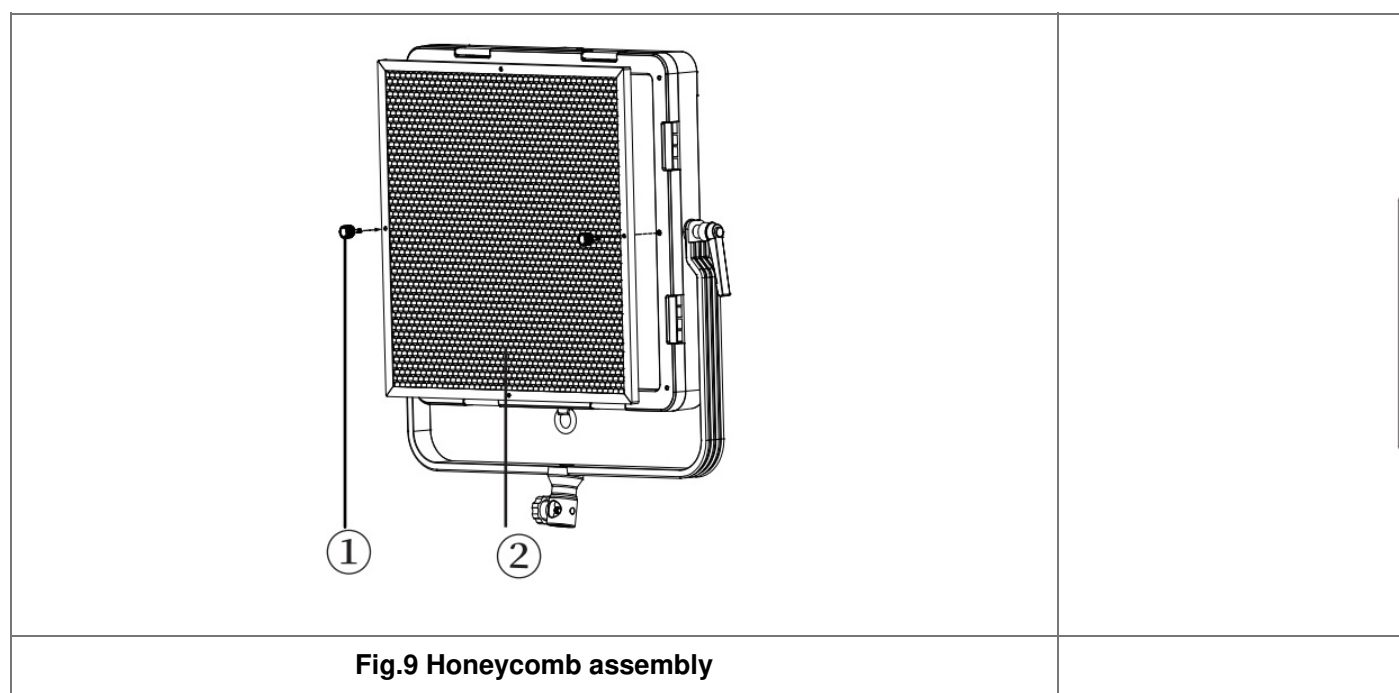

1. M3*16 Screws
2. Honeycomb

Usage

Install

1.1 Accessories

Honeycomb (fig.9, fig.10) installation method detailed see **[Accessories]** 1.2 Install this product on the light bracket according to the requirement of use, adjust the illumination angle of light through the adjustable handle.

Power supply

This product support battery and adaptor power supply, switch on the light (Fig.6 (1)), set the required light parameter by brightness adjusting knob(Fig.6 0), color temperature adjusting knob (Fig.6 0), then use normally.

Tips: The connection and disconnection of power adaptor XLR.

1. Connection

Align the hump of output male XLR to the gap of the DC socket,connect XLR, and DC socket, the adaptor will connect with the light when you hear the crack sound.

2. Disconnection

Hold the hump of the DC output female XLR and pull out, the power adaptor and the light will be disconnected.

Setting and Use of Brightness and Color Temperature

This product support two-color temperature and brightness adjusting mode: General adjusting mode, Fast adjusting mode. Press the brightness/color temperature adjusting knob (Fig.6 0/0) to change the adjusting mode the user can set the brightness/ color temperature quickly by combining the two adjustment modes according to the user demand.

General adjusting mode

1. Color temperature adjusting

Range: 2700K-6500K, adjusting step length:50K

2. Brightness adjusting

Range: 0%400%, adjusting step length:1%

Fast adjusting mode

1. Color temperature adjusting In this mode, you can quickly select common color temperature:

2700K, 3200K, 4500K, 5600K, 6500K

2. Brightness adjusting

Range:0%-100%, adjusting step length:10%

Setting and Use of Communication Address

Long pressing the brightness adjusting button (Fig.6 ®) about 2s to enter in communication address setting interface, communication address range:001-512.

LCD digital tube field (Fig.8 ®) flashing indicates that the current bit is selected, rotate the brightness adjustment knob (Fig.6 ®) to set the current bit, press the brightness adjustment knob (Fig.6 ®) to determine the setting of the current bit and go to the next bit, when the setting of the last bit is completed, press the brightness adjustment knob (Fig.6 ®) or wait for about 5 s, to exit the setting of the communication address.

Setting and Use of Communication Control Mode

Through the DMX line of the lamp network, long-press color temperature adjustment knob (Fig.6 C)) about 2 s, to complete the lamp communication control mode setting.

DMX communication model.

LCD upper left corner shows “DMX” (Fig.8 ⑥) indicates that the currently supported communication control mode of the light is DMX communication mode. in this mode, the DMX signal output equipment is connected to the lamp network, and the communication address is set up, which can be used normally.

One panel light takes up 2 DMX control channels. The current set DMX address (N) is the brightness control, and the next set address (N+1) is the color temperature control.

For example:

DMX Communication address	DMX Control channel	Function
005	005	Brightness 0%-100%
	006	Color temperature 2700K-6500K

Intercontrol Mode

LCD upper left corner shows “CH” (Fig.8 ⑦) indicates that the communication control mode currently supported by the light is mutual control mode. In this working mode, the target lamp can be set to the same communication address for normal use without distinguishing between master and slave.

Attention: when using the mutual control function of lamps and lanterns, do not connect the output equipment of DMX signal in the network of lamps and lanterns, otherwise this function can not be used normally;

USB interface usage

The USB interface is a reserved interface, please use according to the designated environment of the company's related products, can not be used for other purposes, so as not to cause losses.

Packing list

Number	Packing list	Portable bag	Engineering package	Three lights kit(CL-60D)
1	CL-60D/CL-120D	x 1	x 1	x 3
2	Power cable	x 1	x 1	x 3
3	Warranty card	x 1	x 1	x 3
4	Light bag	x 1	/	/
5	User manual	x 1	x 1	x 3
6	Adaptor	x 1	x 1	x 3
7	V-mount fastener velcro	X1(CL-60D)	X1(CL-60D)	X 3
8	Tripod	/	/	x 3
9	Trolley case	/	/	x 1
10	Ring(Optional)	x 1 (CL-120D)	x 1	/
11	Safety rope (Optional)	x 2 (CL-120D)	x 2	/
12	DMX cable (Optional)	Customers can purchase separately on demand		
13	Honeycomb (Optional)			

Tips: The adaptor and LED PCB board can be changed, the parameters of recommended adaptor are below:

No.	Specification	Parameter
1	DC output socket	4Pin XLR
2	Adapter output power polarity	Pin 1"-","Pin 4"+"
3	Working voltage	AC 100-240V, 50/60Hz
4	Output voltage	DC 12-17V
5	Voltage accuracy	±5%
6	Rated Power (Max.)	>150W
7	Power factor	>0.9
8	Working temperature	-10°C-40°C


Tel:+86-25-85805753

Fax:+86-25-85805296

<http://www.swit.cc>

E-mail: contact@swit.cc

Documents / Resources

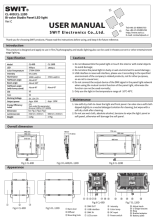

[SWIT CL-60D/CL-120D Bi-Color Studio Panel LED Light](#) [pdf] User Manual
CL-60D, CL-120D, Bi-Color Studio Panel LED Light, CL-60D CL-120D Bi-Color Studio Panel LED Light